



HP LaserJet 9000 Series Maintenance Kit Instructions Page 1

LJ 9000 Series Maintenance Kit Includes:

- 1 HP RG5-5750, Fusing Assembly
- 7 HP RF5-3338, Feed / Separation Rollers
- 2 HP RF5-3340, Pick-up Rollers
- 1 HP RF5-3319, Transfer Roller

WARNING, Turn the printer off, unplug it, and allow it to sit for 30 minutes before performing these maintenance procedures.



Fuser Installation:

- 1) Open the left door. If the duplexer assembly is installed; remove it by pushing down on the green release lever and pulling it towards you and sliding it out of the printer.
- 2) Locate the fuser's left and right blue locking levers. Turn each one downwards 90 degrees to unlock the fuser.
- 3) Lift up on the handle slightly and pull it towards you until it is out of the printer.
- 4) With the blue locking levers facing downward, slide the new fuser into the printer and drop it into place.
- 5) Turn the blue locking levers upward 90 degrees until they snap into place.
- 6) Reinstall the duplex unit if it was removed in step 1.
- 7) Close the left door.
- 8) While pressing the v turn the printer on, when the three LEDs light depress the ?, and then press v again.



Feed / Separation and Pick-up Roller Replacement:

- 1) Pull tray 2 open until it stops.
- 2) Lift the outer edge of the tray, and pull the tray from the printer. Repeat with tray 3.
- 3) Locate the two feed/separation rollers and one pick-up roller. Pinch the tab and pull the rollers off of the shafts.
- 4) Remove the 2 new feed / separation rollers (PN: RF5-3338) and the Pick-up roller (PN: RF5-3340) from the bag. Install the new rollers by sliding them onto each shaft until they snap into place. It may be necessary to turn them while doing this.
- 5) Reinstall trays 2 and 3 in reverse fashion

HP LaserJet 9000 Series Maintenance Kit Instructions Page 2



Feed / Separation and Pick-up Roller Replacement (2000 Sheet Input Tray):

- 1) Open the tray and remove the paper.
- 2) Pull the tray forward until it stops, then find the blue release buttons on each side of the tray; pull them forward and while removing the tray from the printer.
- 3) To get access to the separation rollers, you must first slide the roller shield towards the back of the tray.
- 4) Locate the 3 feed / separation rollers. Pinch the tab and pull the rollers off of the shafts.
- 5) Remove the three new feed/separation rollers (PN: RF5-3338). Install the new rollers by sliding them onto each shaft until they snap into place. It may be necessary to turn them while doing this.
- 6) Reinstall the 2000 sheet tray.



Transfer Roller Replacement:

Use Gloves When Replacing The Transfer Roller Assembly, Oils From The Skin Can Damage The Assembly

- 1) Open the front door.
- 2) Rotate the large green lever downward.
- 3) Locate the blue tab on the transfer roller assembly; depress the tab and pull the assembly out of the printer.
- 4) Remove the replacement transfer roller from the packaging.
- 5) Insert the transfer roller assembly; until it locks into place.
- 6) Depress the white button on the large green lever to rotate the lever and lock it into place.
- 7) Close the front door.