



**Color LaserJet Pro M153-M154**  
**Color LaserJet Pro MFP M178-M181**  
**Color LaserJet Pro M253-M254**  
**Color LaserJet Pro MFP M278-M281**

Repair Manual



M153-M154



M178-M181



M253-M254



M278-M281



[www.hp.com/support/ljM153](http://www.hp.com/support/ljM153)  
[www.hp.com/support/ljM178MFP](http://www.hp.com/support/ljM178MFP)  
[www.hp.com/support/ljM253](http://www.hp.com/support/ljM253)  
[www.hp.com/support/ljM278MFP](http://www.hp.com/support/ljM278MFP)

For printer theory and troubleshooting information, see the Troubleshooting Manual.





HP Color LaserJet Pro M153-M154, M253-  
M254, MFP M178-M181, M278-M281

Repair Manual

## Copyright and License

© Copyright 2017 HP Development Company, L.P.

Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

The information contained herein is subject to change without notice.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Edition 1, 10/2017

## Conventions used in this guide

---

 **TIP:** Helpful hints or shortcuts.

 **NOTE:** Information that explains a concept or how to complete a task.

 **Reinstallation tip:** Reinstallation helpful hints, shortcuts, or considerations.

 **IMPORTANT:** Information that help the user to avoid potential printer error conditions.

 **CAUTION:** Procedures that the user must follow to avoid losing data or damaging the printer.

 **WARNING!** Procedures that the user must follow to avoid personal injury, catastrophic loss of data, or extensive damage to the printer.

---



## For additional service and support information

HP service personnel, go to one of the following Web-based Interactive Search Engines (WISE) sites:

### AMS

- <https://support.hp.com/wise/home/ams-en>
- <https://support.hp.com/wise/home/ams-es>
- <https://support.hp.com/wise/home/ams-pt>

### APJ

- <https://support.hp.com/wise/home/apj-en>
- <https://support.hp.com/wise/home/apj-ja>
- <https://support.hp.com/wise/home/apj-ko>
- <https://support.hp.com/wise/home/apj-zh-Hans>
- <https://support.hp.com/wise/home/apj-zh-Hant>

### EMEA

- <https://support.hp.com/wise/home/emea-en>

Channel partners, go to HP Channel Services Network (CSN) at [www.hp.com/partners/csn](http://www.hp.com/partners/csn).

At these locations, find information on the following topics:

- Install and configure
- Printer specifications
- Up-to-date control panel message (CPMD) troubleshooting
- Solutions for printer issues and emerging issues
- Remove and replace part instructions and videos
- Service advisories
- Warranty and regulatory information

Channel partners, access training materials in the HP University and Partner Learning Center at <https://content.ext.hp.com/sites/LMS/HPU.page>.

To access HP PartSurfer information from any mobile device, go to <http://partsurfermobile.hp.com/> or scan the Quick Response (QR) code below.





---

# Table of contents

<b>1 Removal and replacement .....</b>	<b>1</b>
For additional service and support .....	2
Removal and replacement strategy .....	3
Introduction .....	3
Considerations during removal and replacement .....	3
Electrostatic discharge .....	4
Required tools .....	4
Fasteners used in this printer .....	5
Service approach .....	6
Before performing service .....	6
After performing service .....	6
Post service tests .....	6
Print quality test .....	6
Copy-quality test (M178-M181 and M278-M281 models) .....	6
Fax-quality test (M181 and M281 models) .....	7
Parts removal orientation .....	7
Removal and replacement procedures .....	8
Customer self-repair (CSR) A parts and assemblies .....	8
Removal and replacement: Toner cartridges .....	9
Introduction .....	9
Step 1: Remove a toner cartridge .....	10
Step 2: Unpack a replacement toner cartridge .....	12
Step 3: Install a toner cartridge .....	14
Removal and replacement: Priority feed slot tray (M253-M254 and M278-M281) .....	17
Introduction .....	17
Step 1: Remove the cassette tray .....	17
Step 2: Remove the priority feed slot tray .....	18
Step 3: Unpack the replacement assembly .....	18
Step 4: Install the priority feed slot tray .....	19
Step 5: Install the cassette tray .....	19
Removal and replacement: Cassette tray .....	21
Introduction .....	21

Step 1: Remove the cassette tray .....	21
Step 2: Unpack the replacement assembly .....	22
Step 3: Install the cassette tray .....	22
Field replaceable units (FRUs) .....	24
Removal and replacement: Rollers .....	24
Removal and replacement: Cassette tray pickup roller and feed roller .....	25
Removal and replacement: Cassette tray separation roller .....	29
Removal and replacement: Secondary transfer roller .....	33
Removal and replacement: External panels, covers, and doors .....	37
Identification and location .....	38
Removal and replacement: Right cover .....	42
Removal and replacement: Left cover .....	50
Removal and replacement: Rear cover (simplex models) .....	58
Removal and replacement: Top cover (M153-M154 and M253-M254) .....	69
Removal and replacement: Top cover (M178-M181) .....	83
Removal and replacement: Top cover (M278-M281) .....	101
Removal and replacement: Duplexer door (duplex models) .....	117
Removal and replacement: Rear lower cover (simplex models) .....	122
Removal and replacement: Rear lower cover (duplex models) .....	129
Removal and replacement: Rear door assembly (simplex models) .....	141
Removal and replacement: Rear door assembly (duplex models) .....	150
Removal and replacement: Front door assembly .....	167
Removal and replacement: Control panel (M153-M154) .....	170
Removal and replacement: Control panel (M178-M181) .....	180
Removal and replacement: Control panel (M254nw/dn 2-line) .....	196
Removal and replacement: Control panel (M254dw touchscreen) .....	206
Removal and replacement: Control panel (M278-M281 models) .....	217
Removal and replacement: Flatbed image scanner assemblies (M180n model) .....	222
Removal and replacement: Document lid (M180n) .....	223
Removal and replacement: Image scanner (M180n) .....	225
Removal and replacement: Document feeder and image scanner assemblies (M180nw and M181fw models) .....	234
Removal and replacement: Document feeder (M180nw, M181fw) .....	235
Removal and replacement: Document feeder input tray (M180nw, M181fw) .....	244
Removal and replacement: Document feeder top cover (M180nw, M181fw) .....	247
Removal and replacement: Document feeder pre-pick arm (M180nw, M181fw) .....	250
Removal and replacement: Document feeder core assembly (M180nw, M181fw) .....	254

Removal and replacement: Document feeder base assembly (M180nw, M181fw) .....	265
Removal and replacement: Image scanner (M180nw, M181fw) .....	276
Removal and replacement: Document feeder and image scanner assemblies (M278-M281 models) .....	285
Removal and replacement: Document feeder and image scanner assembly (M278-M281) .....	286
Removal and replacement: Document feeder (M278-M281) .....	295
Removal and replacement: Document feeder hinge (M278-M281) .....	306
Removal and replacement: Image scanner (M278-M281) .....	317
Removal and replacement: Image scanner lift assembly and slider pin (M278-M281) .....	328
Removal and replacement: Document feeder front cover (M278-M281) ...	333
Removal and replacement: Document feeder input tray (M278-M281) .....	337
Removal and replacement: Document feeder inner cover or outer cover (M278-M281) .....	342
Removal and replacement: Document feeder pick extension shaft (M278-M281) .....	347
Removal and replacement: Document feeder extension bearing (M278-M281) .....	351
Removal and replacement: Document feeder pick assembly (M278-M281) .....	357
Removal and replacement: Document feeder separation pad, support, and spring (M278-M281) .....	362
Removal and replacement: Document feeder core (M278-M281) .....	367
Removal and replacement: Document feeder base (M278-M281) .....	374
Removal and replacement: Document feeder flat cable (M278-M281) .....	392
Removal and replacement: Internal parts and assemblies .....	410
Removal and replacement: Wireless PCA (M153-M154, M253-M254, and M278-M281) .....	411
Removal and replacement: Wireless PCA (M178-M181) .....	419
Removal and replacement: Fax PCA (M181 and M281) .....	425
Removal and replacement: Formatter PCA (M153-M154 and M253-M254) .....	431
Removal and replacement: Formatter PCA (M178-M181 and M278-M281) .....	438
Removal and replacement: Engine controller unit (M153-M154 and M253-M254) .....	446
Removal and replacement: Engine controller unit (M178-M181 and M278-M281) .....	453
Removal and replacement: Intermediate transfer belt (ITB) .....	463
Removal and replacement: Density detect sensor assembly .....	486
Removal and replacement: Duplexing drive assembly (duplex models) .....	510

Removal and replacement: Output sensor assembly (M178-M181) .....	534
Removal and replacement: Power supply switch assembly .....	552
Removal and replacement: Low-voltage power supply (LVPS) .....	560
Removal and replacement: Fuser .....	570
Removal and replacement: Main motor .....	608
Removal and replacement: Fuser motor .....	616
Removal and replacement: Pickup motor .....	624
Removal and replacement: Main fan (M153-M154 and M253-M254) .....	634
Removal and replacement: Main fan (M178-M181 and M278-M281) .....	644

<b>2 Parts and diagrams .....</b>	<b>675</b>
For additional service and support .....	676
Assembly locations .....	677
Product front view (M153-M154 models) .....	678
Product back view (M153-M154 models) .....	678
Product front view (M178-M181 models) .....	679
Product back view (M178-M181 models) .....	679
Product front view (M253-M254 models) .....	680
Product back view (M253-M254 models) .....	680
Product front view (M278-M281 models) .....	681
Product back view (M278-M281 models) .....	681
How to use the parts lists and diagrams .....	682
Parts and diagrams: Image scanners and document feeders .....	684
Flatbed image scanner (M180n model only) .....	684
Image scanner and document feeder (M180nw and M181fw models only) .....	686
Image scanner and document feeder (M278-M281 models only) .....	688
Parts and diagrams: Covers .....	690
Covers (M153-M154) .....	690
Covers (M178-M181) .....	692
Covers (M253-M254) .....	694
Covers (M278-M281) .....	696
Parts and diagrams: Internal components .....	698
Internal components (1 of 4) .....	698
Internal components (2 of 4) .....	700
Internal components (3 of 4) .....	702
Internal components (4 of 4) .....	704
Alphabetical parts list .....	706
Numerical parts list .....	713
<b>Index .....</b>	<b>721</b>

---

# List of tables

Table 2-1	Image scanner (flatbed) .....	685
Table 2-2	Image scanner and document feeder .....	687
Table 2-3	Image scanner and document feeder (M278-M281) .....	689
Table 2-4	Covers (M153-M154) .....	691
Table 2-5	Covers (M178-M181) .....	693
Table 2-6	Covers (M253-M254) .....	695
Table 2-7	Covers (M278-M281) .....	697
Table 2-8	Internal components (1 of 4) .....	699
Table 2-9	Internal components (2 of 4) .....	701
Table 2-10	Internal components (3 of 4) .....	703
Table 2-11	Internal components (4 of 4) .....	705



---

# List of figures

Figure 1-1	Screwdrivers .....	4
Figure 1-2	Screw size chart .....	5
Figure 1-3	Remove the cassette tray .....	18
Figure 1-4	Remove the priority feed slot tray .....	18
Figure 1-5	Install the priority feed slot tray .....	19
Figure 1-6	Install the cassette tray .....	20
Figure 1-7	Remove the cassette tray .....	22
Figure 1-8	Install the cassette tray .....	23
Figure 1-9	Remove the cassette tray .....	26
Figure 1-10	Release one tab .....	26
Figure 1-11	Remove the roller holder .....	27
Figure 1-12	Remove the rollers .....	27
Figure 1-13	Remove the cassette tray .....	30
Figure 1-14	Remove the separation roller cover .....	30
Figure 1-15	Remove the separation roller .....	31
Figure 1-16	Install the separation roller .....	32
Figure 1-17	Open the rear door .....	34
Figure 1-18	Open the duplexer door .....	34
Figure 1-19	Release the left side of the secondary transfer roller .....	35
Figure 1-20	Remove the secondary transfer roller .....	35
Figure 1-21	Front view, M153-M154 .....	38
Figure 1-22	Back view, M153-M154 .....	38
Figure 1-23	Front view: M178-M181 .....	39
Figure 1-24	Back view: M178-M181 .....	39
Figure 1-25	Front view, M253-M254 .....	40
Figure 1-26	Back view, M253-M254 .....	40
Figure 1-27	Front view: M278-M281 .....	41
Figure 1-28	Back view: M278-M281 .....	41
Figure 1-29	Remove the cassette tray .....	43
Figure 1-30	Open the front door .....	43
Figure 1-31	Open the rear door .....	44
Figure 1-32	Open the duplexer door .....	44

Figure 1-33	Tab locations .....	45
Figure 1-34	Remove one screw and release tabs .....	45
Figure 1-35	Remove the right cover .....	46
Figure 1-36	Tab locations .....	47
Figure 1-37	Remove one screw and release tabs .....	47
Figure 1-38	Remove the right cover .....	48
Figure 1-39	Remove the cassette tray .....	51
Figure 1-40	Open the front door .....	51
Figure 1-41	Open the rear door .....	52
Figure 1-42	Open the duplexer door .....	52
Figure 1-43	Tab locations .....	53
Figure 1-44	Remove one screw and release tabs .....	53
Figure 1-45	Remove the left cover .....	54
Figure 1-46	Tab locations .....	55
Figure 1-47	Remove one screw and release tab .....	55
Figure 1-48	Remove the left cover .....	56
Figure 1-49	Remove the cassette tray .....	59
Figure 1-50	Open the front door .....	59
Figure 1-51	Open the rear door .....	60
Figure 1-52	Tab locations .....	60
Figure 1-53	Remove one screw and release tabs .....	61
Figure 1-54	Remove the right cover .....	61
Figure 1-55	Tab locations .....	62
Figure 1-56	Remove one screw and release tabs .....	62
Figure 1-57	Remove the left cover .....	63
Figure 1-58	Tab locations .....	64
Figure 1-59	Remove one screw and release tabs .....	64
Figure 1-60	Remove the right cover .....	65
Figure 1-61	Tab locations .....	66
Figure 1-62	Remove one screw and release tab .....	66
Figure 1-63	Remove the left cover .....	67
Figure 1-64	Remove the rear cover .....	68
Figure 1-65	Remove the cassette tray .....	70
Figure 1-66	Open the front door .....	71
Figure 1-67	Open the rear door .....	71
Figure 1-68	Open the duplexer door .....	72
Figure 1-69	Tab locations .....	72
Figure 1-70	Remove one screw and release tabs .....	73
Figure 1-71	Remove the right cover .....	73
Figure 1-72	Tab locations .....	74
Figure 1-73	Remove one screw and release tabs .....	74

Figure 1-74	Remove the left cover .....	75
Figure 1-75	Remove the rear cover .....	76
Figure 1-76	Disconnect one connector .....	76
Figure 1-77	Remove two screws and the guide .....	77
Figure 1-78	Remove two screws .....	77
Figure 1-79	Remove three screws and the top cover .....	78
Figure 1-80	Remove two screws and the cover .....	79
Figure 1-81	Disconnect one cable and remove the control panel .....	79
Figure 1-82	Release the flat cable .....	80
Figure 1-83	Remove three screws and release the cable .....	80
Figure 1-84	Remove the bracket .....	81
Figure 1-85	Remove the control panel .....	81
Figure 1-86	Remove the cassette tray .....	84
Figure 1-87	Open the front door .....	85
Figure 1-88	Open the rear door .....	85
Figure 1-89	Tab locations .....	86
Figure 1-90	Remove one screw and release tabs .....	86
Figure 1-91	Remove the right cover .....	87
Figure 1-92	Tab locations .....	87
Figure 1-93	Remove one screw and release tab .....	88
Figure 1-94	Remove the left cover .....	88
Figure 1-95	Remove the rear cover .....	89
Figure 1-96	Disconnect one flat cable .....	89
Figure 1-97	Release one tab and rotate the slider pin .....	90
Figure 1-98	Remove the slider pin .....	90
Figure 1-99	Rotate the hinge arm .....	91
Figure 1-100	Remove the scanner cable cover .....	91
Figure 1-101	Release the flat cable .....	92
Figure 1-102	Remove the scanner assembly .....	92
Figure 1-103	Disconnect two cables and remove one screw .....	93
Figure 1-104	Release one tab and rotate the slider pin .....	93
Figure 1-105	Remove the slider pin .....	94
Figure 1-106	Rotate the hinge arm down .....	94
Figure 1-107	Remove the scanner cable cover .....	95
Figure 1-108	Release the flat cable .....	95
Figure 1-109	Remove the scanner assembly .....	96
Figure 1-110	Remove one screw .....	96
Figure 1-111	Rotate the hinge arm up .....	97
Figure 1-112	Remove the cover .....	97
Figure 1-113	Remove the control panel .....	98
Figure 1-114	Disconnect one connector .....	98

Figure 1-115	Disconnect one cable .....	99
Figure 1-116	Remove seven screws and the top cover .....	99
Figure 1-117	Remove the cassette tray .....	102
Figure 1-118	Open the front door .....	102
Figure 1-119	Open the rear door .....	103
Figure 1-120	Open the duplexer door .....	103
Figure 1-121	Tab locations .....	104
Figure 1-122	Remove one screw and release tabs .....	104
Figure 1-123	Remove the right cover .....	105
Figure 1-124	Tab locations .....	105
Figure 1-125	Remove one screw and release tab .....	106
Figure 1-126	Remove the left cover .....	106
Figure 1-127	Remove the rear cover .....	107
Figure 1-128	Open the scanner .....	107
Figure 1-129	Remove one screw and the cover .....	108
Figure 1-130	Remove three screws .....	108
Figure 1-131	Rotate the control panel .....	109
Figure 1-132	Release two tabs .....	109
Figure 1-133	Release the control panel .....	110
Figure 1-134	Disconnect the flat cable .....	110
Figure 1-135	Disconnect two cables and remove one screw .....	111
Figure 1-136	Release one tab and rotate the slider pin .....	111
Figure 1-137	Remove the slider pin .....	112
Figure 1-138	Rotate the hinge arm down .....	112
Figure 1-139	Remove the scanner cable cover .....	113
Figure 1-140	Release the flat cable .....	113
Figure 1-141	Remove the scanner assembly .....	114
Figure 1-142	Disconnect two cables .....	114
Figure 1-143	Remove one screw .....	115
Figure 1-144	Remove one screw .....	115
Figure 1-145	Remove seven screws and the top cover .....	116
Figure 1-146	Open the duplexer door .....	118
Figure 1-147	Remove two screws and holders .....	118
Figure 1-148	Rotate the shaft .....	119
Figure 1-149	Remove the shaft .....	120
Figure 1-150	Remove the duplexer door .....	120
Figure 1-151	Remove the cassette tray .....	123
Figure 1-152	Open the front door .....	123
Figure 1-153	Open the rear door .....	124
Figure 1-154	Tab locations .....	124
Figure 1-155	Remove one screw and release tabs .....	125

Figure 1-156	Remove the left cover .....	125
Figure 1-157	Tab locations .....	126
Figure 1-158	Remove one screw and release tab .....	126
Figure 1-159	Remove the left cover .....	127
Figure 1-160	Close the rear door .....	127
Figure 1-161	Remove the rear lower cover (simplex models) .....	128
Figure 1-162	Remove the cassette tray .....	130
Figure 1-163	Open the front door .....	130
Figure 1-164	Open the duplexer door .....	131
Figure 1-165	Tab locations .....	131
Figure 1-166	Remove one screw and release tabs .....	132
Figure 1-167	Remove the right cover .....	132
Figure 1-168	Tab locations .....	133
Figure 1-169	Remove one screw and release tabs .....	133
Figure 1-170	Remove the left cover .....	134
Figure 1-171	Tab locations .....	135
Figure 1-172	Remove one screw and release tabs .....	135
Figure 1-173	Remove the right cover .....	136
Figure 1-174	Tab locations .....	137
Figure 1-175	Remove one screw and release tab .....	137
Figure 1-176	Remove the left cover .....	138
Figure 1-177	Close the duplexer door .....	138
Figure 1-178	Release one tab .....	139
Figure 1-179	Release three tabs and remove the cover .....	139
Figure 1-180	Remove the cassette tray .....	142
Figure 1-181	Open the front door .....	142
Figure 1-182	Open the rear door .....	143
Figure 1-183	Tab locations .....	143
Figure 1-184	Remove one screw and release tabs .....	144
Figure 1-185	Remove the left cover .....	144
Figure 1-186	Tab locations .....	145
Figure 1-187	Remove one screw and release tab .....	145
Figure 1-188	Remove the left cover .....	146
Figure 1-189	Close the rear door .....	146
Figure 1-190	Remove the rear lower cover (simplex models) .....	147
Figure 1-191	Remove two screws .....	147
Figure 1-192	Remove the shaft holder .....	148
Figure 1-193	Remove the rear door assembly .....	148
Figure 1-194	Remove the cassette tray .....	151
Figure 1-195	Open the front door .....	152
Figure 1-196	Open the duplexer door .....	152

Figure 1-197	Tab locations .....	153
Figure 1-198	Remove one screw and release tabs .....	153
Figure 1-199	Remove the right cover .....	154
Figure 1-200	Tab locations .....	155
Figure 1-201	Remove one screw and release tabs .....	155
Figure 1-202	Remove the left cover .....	156
Figure 1-203	Tab locations .....	157
Figure 1-204	Remove one screw and release tabs .....	157
Figure 1-205	Remove the right cover .....	158
Figure 1-206	Tab locations .....	159
Figure 1-207	Remove one screw and release tab .....	159
Figure 1-208	Remove the left cover .....	160
Figure 1-209	Close the duplexer door .....	160
Figure 1-210	Release one tab .....	161
Figure 1-211	Release three tabs and remove the cover .....	161
Figure 1-212	Remove two screws and holders .....	162
Figure 1-213	Rotate the shaft .....	163
Figure 1-214	Remove the shaft .....	164
Figure 1-215	Remove the duplexer door .....	164
Figure 1-216	Remove three screws and the cover .....	165
Figure 1-217	Remove the rear door assembly .....	165
Figure 1-218	Remove the cassette tray .....	168
Figure 1-219	Release the right support arm bracket .....	168
Figure 1-220	Release the left support arm bracket .....	169
Figure 1-221	Remove the cassette tray .....	171
Figure 1-222	Open the front door .....	171
Figure 1-223	Open the rear door .....	172
Figure 1-224	Tab locations .....	172
Figure 1-225	Remove one screw and release tabs .....	173
Figure 1-226	Remove the right cover .....	173
Figure 1-227	Tab locations .....	174
Figure 1-228	Remove one screw and release tabs .....	174
Figure 1-229	Remove the left cover .....	175
Figure 1-230	Remove the rear cover .....	176
Figure 1-231	Disconnect one connector .....	176
Figure 1-232	Remove two screws and the guide .....	177
Figure 1-233	Remove two screws .....	177
Figure 1-234	Remove three screws and the top cover .....	178
Figure 1-235	Remove two screws and the cover .....	178
Figure 1-236	Disconnect one cable and remove the control panel .....	179
Figure 1-237	Remove the cassette tray .....	181

Figure 1-238	Open the front door .....	181
Figure 1-239	Open the rear door .....	182
Figure 1-240	Tab locations .....	182
Figure 1-241	Remove one screw and release tabs .....	183
Figure 1-242	Remove the right cover .....	183
Figure 1-243	Tab locations .....	184
Figure 1-244	Remove one screw and release tab .....	184
Figure 1-245	Remove the left cover .....	185
Figure 1-246	Disconnect one flat cable .....	186
Figure 1-247	Release one tab and rotate the slider pin .....	186
Figure 1-248	Remove the slider pin .....	187
Figure 1-249	Rotate the hinge arm .....	187
Figure 1-250	Remove the scanner cable cover .....	188
Figure 1-251	Release the flat cable .....	188
Figure 1-252	Remove the scanner assembly .....	189
Figure 1-253	Disconnect two cables and remove one screw .....	189
Figure 1-254	Release one tab and rotate the slider pin .....	190
Figure 1-255	Remove the slider pin .....	190
Figure 1-256	Rotate the hinge arm down .....	191
Figure 1-257	Remove the scanner cable cover .....	191
Figure 1-258	Release the flat cable .....	192
Figure 1-259	Remove the scanner assembly .....	192
Figure 1-260	Remove one screw .....	193
Figure 1-261	Rotate the hinge arm up .....	193
Figure 1-262	Remove the cover .....	194
Figure 1-263	Remove the control panel .....	194
Figure 1-264	Disconnect one connector .....	195
Figure 1-265	Remove the cassette tray .....	197
Figure 1-266	Open the front door .....	197
Figure 1-267	Open the rear door .....	198
Figure 1-268	Open the duplexer door .....	198
Figure 1-269	Tab locations .....	199
Figure 1-270	Remove one screw and release tabs .....	199
Figure 1-271	Remove the right cover .....	200
Figure 1-272	Tab locations .....	200
Figure 1-273	Remove one screw and release tabs .....	201
Figure 1-274	Remove the left cover .....	201
Figure 1-275	Remove the rear cover .....	202
Figure 1-276	Disconnect one connector .....	202
Figure 1-277	Remove two screws and the guide .....	203
Figure 1-278	Remove two screws .....	203

Figure 1-279	Remove three screws and the top cover .....	204
Figure 1-280	Remove two screws and the cover .....	204
Figure 1-281	Disconnect one cable and remove one screw .....	205
Figure 1-282	Remove the cassette tray .....	207
Figure 1-283	Open the front door .....	207
Figure 1-284	Open the duplexer door .....	208
Figure 1-285	Tab locations .....	208
Figure 1-286	Remove one screw and release tabs .....	209
Figure 1-287	Remove the right cover .....	209
Figure 1-288	Tab locations .....	210
Figure 1-289	Remove one screw and release tabs .....	210
Figure 1-290	Remove the left cover .....	211
Figure 1-291	Remove the rear cover .....	212
Figure 1-292	Disconnect one connector .....	212
Figure 1-293	Remove two screws and the guide .....	213
Figure 1-294	Remove two screws .....	213
Figure 1-295	Remove three screws and the top cover .....	214
Figure 1-296	Release the flat cable .....	214
Figure 1-297	Remove three screws and release the cable .....	215
Figure 1-298	Remove the bracket .....	215
Figure 1-299	Remove the control panel .....	216
Figure 1-300	Open the scanner .....	218
Figure 1-301	Remove one screw and the cover .....	218
Figure 1-302	Remove three screws .....	219
Figure 1-303	Rotate the control panel .....	219
Figure 1-304	Release two tabs .....	220
Figure 1-305	Release the control panel .....	220
Figure 1-306	Disconnect the flat cable .....	221
Figure 1-307	Remove the document lid .....	224
Figure 1-308	Remove the cassette tray .....	226
Figure 1-309	Open the front door .....	226
Figure 1-310	Open the rear door .....	227
Figure 1-311	Tab locations .....	227
Figure 1-312	Remove one screw and release tab .....	228
Figure 1-313	Remove the left cover .....	228
Figure 1-314	Remove the document lid .....	229
Figure 1-315	Disconnect one flat cable .....	229
Figure 1-316	Release one tab and rotate the slider pin .....	230
Figure 1-317	Remove the slider pin .....	230
Figure 1-318	Rotate the hinge arm .....	231
Figure 1-319	Remove the scanner cable cover .....	231

Figure 1-320	Release the flat cable .....	232
Figure 1-321	Remove the scanner assembly .....	232
Figure 1-322	Remove the cassette tray .....	236
Figure 1-323	Open the front door .....	236
Figure 1-324	Open the rear door .....	237
Figure 1-325	Tab locations .....	237
Figure 1-326	Remove one screw and release tab .....	238
Figure 1-327	Remove the left cover .....	238
Figure 1-328	Disconnect two cables and remove one screw .....	239
Figure 1-329	Release one tab and rotate the slider pin .....	239
Figure 1-330	Remove the slider pin .....	240
Figure 1-331	Rotate the hinge arm down .....	240
Figure 1-332	Remove the scanner cable cover .....	241
Figure 1-333	Release the flat cable .....	241
Figure 1-334	Remove the scanner assembly .....	242
Figure 1-335	Release two tabs .....	242
Figure 1-336	Remove the document feeder .....	243
Figure 1-337	Open the document feeder top cover .....	245
Figure 1-338	Raise the input tray .....	245
Figure 1-339	Remove the document feeder input tray .....	246
Figure 1-340	Open the document feeder top cover .....	248
Figure 1-341	Release one tab .....	248
Figure 1-342	Remove the document feeder top cover .....	249
Figure 1-343	Open the document feeder top cover .....	251
Figure 1-344	Release one tab .....	251
Figure 1-345	Remove the document feeder top cover .....	252
Figure 1-346	Note the pre-pick arm drive gear .....	252
Figure 1-347	Remove the document feeder pre-pick arm .....	253
Figure 1-348	Remove the cassette tray .....	255
Figure 1-349	Open the front door .....	255
Figure 1-350	Open the rear door .....	256
Figure 1-351	Tab locations .....	256
Figure 1-352	Remove one screw and release tab .....	257
Figure 1-353	Remove the left cover .....	257
Figure 1-354	Disconnect two cables and remove one screw .....	258
Figure 1-355	Release one tab and rotate the slider pin .....	258
Figure 1-356	Remove the slider pin .....	259
Figure 1-357	Rotate the hinge arm down .....	259
Figure 1-358	Remove the scanner cable cover .....	260
Figure 1-359	Release the flat cable .....	260
Figure 1-360	Remove the scanner assembly .....	261

Figure 1-361	Open the document feeder top cover .....	261
Figure 1-362	Release one tab .....	262
Figure 1-363	Remove the document feeder top cover .....	262
Figure 1-364	Release the document feeder core assembly .....	263
Figure 1-365	Remove the document feeder core assembly .....	263
Figure 1-366	Remove the cassette tray .....	266
Figure 1-367	Open the front door .....	266
Figure 1-368	Open the rear door .....	267
Figure 1-369	Tab locations .....	267
Figure 1-370	Remove one screw and release tab .....	268
Figure 1-371	Remove the left cover .....	268
Figure 1-372	Disconnect two cables and remove one screw .....	269
Figure 1-373	Release one tab and rotate the slider pin .....	269
Figure 1-374	Remove the slider pin .....	270
Figure 1-375	Rotate the hinge arm down .....	270
Figure 1-376	Remove the scanner cable cover .....	271
Figure 1-377	Release the flat cable .....	271
Figure 1-378	Remove the scanner assembly .....	272
Figure 1-379	Open the document feeder top cover .....	272
Figure 1-380	Release one tab .....	273
Figure 1-381	Remove the document feeder top cover .....	273
Figure 1-382	Release the document feeder core assembly .....	274
Figure 1-383	Remove the document feeder core assembly .....	274
Figure 1-384	Release two tabs .....	275
Figure 1-385	Remove the cassette tray .....	277
Figure 1-386	Open the front door .....	277
Figure 1-387	Open the rear door .....	278
Figure 1-388	Tab locations .....	278
Figure 1-389	Remove one screw and release tab .....	279
Figure 1-390	Remove the left cover .....	279
Figure 1-391	Disconnect two cables and remove one screw .....	280
Figure 1-392	Release one tab and rotate the slider pin .....	280
Figure 1-393	Remove the slider pin .....	281
Figure 1-394	Rotate the hinge arm down .....	281
Figure 1-395	Remove the scanner cable cover .....	282
Figure 1-396	Release the flat cable .....	282
Figure 1-397	Remove the scanner assembly .....	283
Figure 1-398	Release two tabs .....	283
Figure 1-399	Remove the document feeder .....	284
Figure 1-400	Remove the cassette tray .....	287
Figure 1-401	Open the front door .....	287

Figure 1-402	Open the rear door .....	288
Figure 1-403	Open the duplexer door .....	288
Figure 1-404	Tab locations .....	289
Figure 1-405	Remove one screw and release tab .....	289
Figure 1-406	Remove the left cover .....	290
Figure 1-407	Disconnect two cables and remove one screw .....	290
Figure 1-408	Release one tab and rotate the slider pin .....	291
Figure 1-409	Remove the slider pin .....	291
Figure 1-410	Rotate the hinge arm down .....	292
Figure 1-411	Remove the scanner cable cover .....	292
Figure 1-412	Release the flat cable .....	293
Figure 1-413	Remove the scanner assembly .....	293
Figure 1-414	Remove the cassette tray .....	296
Figure 1-415	Open the front door .....	296
Figure 1-416	Open the rear door .....	297
Figure 1-417	Open the duplexer door .....	297
Figure 1-418	Tab locations .....	298
Figure 1-419	Remove one screw and release tab .....	298
Figure 1-420	Remove the left cover .....	299
Figure 1-421	Disconnect two cables and remove one screw .....	299
Figure 1-422	Release one tab and rotate the slider pin .....	300
Figure 1-423	Remove the slider pin .....	300
Figure 1-424	Rotate the hinge arm down .....	301
Figure 1-425	Remove the scanner cable cover .....	301
Figure 1-426	Release the flat cable .....	302
Figure 1-427	Remove the scanner assembly .....	302
Figure 1-428	Remove one screw .....	303
Figure 1-429	Open the top cover .....	303
Figure 1-430	Remove one screw .....	304
Figure 1-431	Remove the document feeder .....	304
Figure 1-432	Remove the cassette tray .....	307
Figure 1-433	Open the front door .....	307
Figure 1-434	Open the rear door .....	308
Figure 1-435	Open the duplexer door .....	308
Figure 1-436	Tab locations .....	309
Figure 1-437	Remove one screw and release tab .....	309
Figure 1-438	Remove the left cover .....	310
Figure 1-439	Disconnect two cables and remove one screw .....	310
Figure 1-440	Release one tab and rotate the slider pin .....	311
Figure 1-441	Remove the slider pin .....	311
Figure 1-442	Rotate the hinge arm down .....	312

Figure 1-443	Remove the scanner cable cover .....	312
Figure 1-444	Release the flat cable .....	313
Figure 1-445	Remove the scanner assembly .....	313
Figure 1-446	Remove one screw .....	314
Figure 1-447	Open the top cover .....	314
Figure 1-448	Remove one screw .....	315
Figure 1-449	Remove the document feeder .....	315
Figure 1-450	Remove the hinge .....	316
Figure 1-451	Remove the cassette tray .....	318
Figure 1-452	Open the front door .....	318
Figure 1-453	Open the rear door .....	319
Figure 1-454	Open the duplexer door .....	319
Figure 1-455	Tab locations .....	320
Figure 1-456	Remove one screw and release tab .....	320
Figure 1-457	Remove the left cover .....	321
Figure 1-458	Disconnect two cables and remove one screw .....	321
Figure 1-459	Release one tab and rotate the slider pin .....	322
Figure 1-460	Remove the slider pin .....	322
Figure 1-461	Rotate the hinge arm down .....	323
Figure 1-462	Remove the scanner cable cover .....	323
Figure 1-463	Release the flat cable .....	324
Figure 1-464	Remove the scanner assembly .....	324
Figure 1-465	Remove one screw .....	325
Figure 1-466	Open the top cover .....	325
Figure 1-467	Remove one screw .....	326
Figure 1-468	Remove the document feeder .....	326
Figure 1-469	Release one tab and rotate the slider pin .....	329
Figure 1-470	Remove the slider pin .....	329
Figure 1-471	Lower the support arm .....	330
Figure 1-472	Before proceeding take note .....	330
Figure 1-473	Remove one screw .....	331
Figure 1-474	Remove the support arm .....	331
Figure 1-475	Open the document feeder top cover .....	334
Figure 1-476	Release the hinge .....	334
Figure 1-477	Remove two screws .....	335
Figure 1-478	Remove the front cover .....	335
Figure 1-479	Open the document feeder top cover .....	338
Figure 1-480	Release the hinge .....	338
Figure 1-481	Remove two screws .....	339
Figure 1-482	Remove the front cover .....	339
Figure 1-483	Remove four screws .....	340

Figure 1-484	Remove the input tray .....	340
Figure 1-485	Open the document feeder top cover .....	343
Figure 1-486	Release the hinge .....	343
Figure 1-487	Release the front hinge .....	344
Figure 1-488	Release the back hinge .....	344
Figure 1-489	Release three tabs .....	345
Figure 1-490	Remove the inner cover .....	345
Figure 1-491	Open the document feeder top cover .....	348
Figure 1-492	Release the hinge .....	348
Figure 1-493	Release the front hinge .....	349
Figure 1-494	Release the back hinge .....	349
Figure 1-495	Remove the pick extension shaft .....	350
Figure 1-496	Open the document feeder top cover .....	352
Figure 1-497	Release the hinge .....	352
Figure 1-498	Release the front hinge .....	353
Figure 1-499	Release the back hinge .....	353
Figure 1-500	Remove the pick extension shaft .....	354
Figure 1-501	Locate the extension bearing .....	354
Figure 1-502	Release two tabs .....	355
Figure 1-503	Remove the bearing .....	355
Figure 1-504	Open the document feeder top cover .....	358
Figure 1-505	Release the hinge .....	358
Figure 1-506	Release the front hinge .....	359
Figure 1-507	Release the back hinge .....	359
Figure 1-508	Remove the pick extension shaft .....	360
Figure 1-509	Note the gear and spring locations .....	360
Figure 1-510	Remove the pick assembly .....	361
Figure 1-511	Open the document feeder top cover .....	363
Figure 1-512	Release the hinge .....	363
Figure 1-513	Release the separation pad support .....	364
Figure 1-514	Remove the separation pad and support .....	364
Figure 1-515	Remove the separation pad .....	365
Figure 1-516	Remove the separation pad spring .....	365
Figure 1-517	Open the document feeder top cover .....	368
Figure 1-518	Release the hinge .....	368
Figure 1-519	Remove two screws .....	369
Figure 1-520	Remove the front cover .....	369
Figure 1-521	Remove four screws .....	370
Figure 1-522	Remove the input tray .....	370
Figure 1-523	Disconnect two connectors .....	371
Figure 1-524	Release the hinge .....	371

Figure 1-525	Rotate the core assembly .....	372
Figure 1-526	Remove the core assembly .....	372
Figure 1-527	Remove the cassette tray .....	375
Figure 1-528	Open the front door .....	375
Figure 1-529	Open the rear door .....	376
Figure 1-530	Open the duplexer door .....	376
Figure 1-531	Tab locations .....	377
Figure 1-532	Remove one screw and release tab .....	377
Figure 1-533	Remove the left cover .....	378
Figure 1-534	Disconnect two cables and remove one screw .....	378
Figure 1-535	Release one tab and rotate the slider pin .....	379
Figure 1-536	Remove the slider pin .....	379
Figure 1-537	Rotate the hinge arm down .....	380
Figure 1-538	Remove the scanner cable cover .....	380
Figure 1-539	Release the flat cable .....	381
Figure 1-540	Remove the scanner assembly .....	381
Figure 1-541	Open the document feeder top cover .....	382
Figure 1-542	Release the hinge .....	382
Figure 1-543	Remove two screws .....	383
Figure 1-544	Remove the front cover .....	383
Figure 1-545	Remove four screws .....	384
Figure 1-546	Remove the input tray .....	384
Figure 1-547	Disconnect two connectors .....	385
Figure 1-548	Release the hinge .....	385
Figure 1-549	Rotate the core assembly .....	386
Figure 1-550	Remove the core assembly .....	386
Figure 1-551	Release the front hinge .....	387
Figure 1-552	Release the back hinge .....	387
Figure 1-553	Remove one screw .....	388
Figure 1-554	Remove one screw .....	388
Figure 1-555	Remove the document feeder base .....	389
Figure 1-556	Locate the connector holder .....	389
Figure 1-557	Remove one screw .....	390
Figure 1-558	Remove the connector holder .....	390
Figure 1-559	Remove the cassette tray .....	393
Figure 1-560	Open the front door .....	393
Figure 1-561	Open the rear door .....	394
Figure 1-562	Open the duplexer door .....	394
Figure 1-563	Tab locations .....	395
Figure 1-564	Remove one screw and release tab .....	395
Figure 1-565	Remove the left cover .....	396

Figure 1-566	Disconnect two cables and remove one screw .....	396
Figure 1-567	Release one tab and rotate the slider pin .....	397
Figure 1-568	Remove the slider pin .....	397
Figure 1-569	Rotate the hinge arm down .....	398
Figure 1-570	Remove the scanner cable cover .....	398
Figure 1-571	Release the flat cable .....	399
Figure 1-572	Remove the scanner assembly .....	399
Figure 1-573	Open the document feeder top cover .....	400
Figure 1-574	Release the hinge .....	400
Figure 1-575	Remove two screws .....	401
Figure 1-576	Remove the front cover .....	401
Figure 1-577	Remove four screws .....	402
Figure 1-578	Remove the input tray .....	402
Figure 1-579	Disconnect two connectors .....	403
Figure 1-580	Release the hinge .....	403
Figure 1-581	Rotate the core assembly .....	404
Figure 1-582	Remove the core assembly .....	404
Figure 1-583	Release the front hinge .....	405
Figure 1-584	Release the back hinge .....	405
Figure 1-585	Remove one screw .....	406
Figure 1-586	Remove one screw .....	406
Figure 1-587	Remove the document feeder base .....	407
Figure 1-588	Locate the connector holder .....	407
Figure 1-589	Remove one screw .....	408
Figure 1-590	Remove the connector holder .....	408
Figure 1-591	Remove the flat cable .....	409
Figure 1-592	Remove the cassette tray .....	412
Figure 1-593	Open the front door .....	412
Figure 1-594	Open the rear door .....	413
Figure 1-595	Open the duplexer door .....	413
Figure 1-596	Tab locations .....	414
Figure 1-597	Remove one screw and release tabs .....	414
Figure 1-598	Remove the left cover .....	415
Figure 1-599	Tab locations .....	416
Figure 1-600	Remove one screw and release tab .....	416
Figure 1-601	Remove the left cover .....	417
Figure 1-602	Remove the wireless PCA .....	418
Figure 1-603	Remove the cassette tray .....	420
Figure 1-604	Open the front door .....	420
Figure 1-605	Open the rear door .....	421
Figure 1-606	Tab locations .....	421

Figure 1-607	Remove one screw and release tab .....	422
Figure 1-608	Remove the left cover .....	422
Figure 1-609	Remove the wireless PCA .....	423
Figure 1-610	Remove the cassette tray .....	426
Figure 1-611	Open the front door .....	426
Figure 1-612	Open the rear door .....	427
Figure 1-613	Open the duplexer door .....	427
Figure 1-614	Tab locations .....	428
Figure 1-615	Remove one screw and release tab .....	428
Figure 1-616	Remove the left cover .....	429
Figure 1-617	Remove the M277 fax PCA .....	430
Figure 1-618	Remove the cassette tray .....	432
Figure 1-619	Open the front door .....	432
Figure 1-620	Open the rear door .....	433
Figure 1-621	Open the duplexer door .....	433
Figure 1-622	Tab locations .....	434
Figure 1-623	Remove one screw and release tabs .....	434
Figure 1-624	Remove the left cover .....	435
Figure 1-625	Remove the wireless PCA .....	436
Figure 1-626	Disconnect all connectors .....	436
Figure 1-627	Remove the formatter PCA (2 of 2) .....	437
Figure 1-628	Remove the cassette tray .....	439
Figure 1-629	Open the front door .....	440
Figure 1-630	Open the rear door .....	440
Figure 1-631	Open the duplexer door .....	441
Figure 1-632	Tab locations .....	441
Figure 1-633	Remove one screw and release tab .....	442
Figure 1-634	Remove the left cover .....	442
Figure 1-635	Remove the wireless PCA .....	443
Figure 1-636	Remove the wireless PCA .....	444
Figure 1-637	Disconnect all connectors .....	444
Figure 1-638	Remove four screws .....	445
Figure 1-639	Remove the cassette tray .....	447
Figure 1-640	Open the front door .....	447
Figure 1-641	Open the rear door .....	448
Figure 1-642	Open the duplexer door .....	448
Figure 1-643	Tab locations .....	449
Figure 1-644	Remove one screw and release tabs .....	449
Figure 1-645	Remove the left cover .....	450
Figure 1-646	Disconnect all connectors .....	451
Figure 1-647	Remove five screws and release four tabs .....	451

Figure 1-648	Remove the cassette tray .....	454
Figure 1-649	Open the front door .....	455
Figure 1-650	Open the rear door .....	455
Figure 1-651	Open the duplexer door .....	456
Figure 1-652	Tab locations .....	456
Figure 1-653	Remove one screw and release tab .....	457
Figure 1-654	Remove the left cover .....	457
Figure 1-655	Remove the wireless PCA .....	458
Figure 1-656	Remove the wireless PCA .....	459
Figure 1-657	Disconnect all connectors .....	459
Figure 1-658	Remove four screws .....	460
Figure 1-659	Disconnect one connector and remove nine screws .....	460
Figure 1-660	Disconnect all connectors .....	461
Figure 1-661	Remove four screws and release four tabs .....	461
Figure 1-662	Remove the cassette tray .....	466
Figure 1-663	Remove the priority feed slot tray .....	466
Figure 1-664	Open the front door .....	467
Figure 1-665	Open the rear door .....	467
Figure 1-666	Open the duplexer door .....	468
Figure 1-667	Tab locations .....	468
Figure 1-668	Remove one screw and release tabs .....	469
Figure 1-669	Remove the right cover .....	469
Figure 1-670	Tab locations .....	470
Figure 1-671	Remove one screw and release tabs .....	470
Figure 1-672	Remove the left cover .....	471
Figure 1-673	Tab locations .....	472
Figure 1-674	Remove one screw and release tabs .....	472
Figure 1-675	Remove the right cover .....	473
Figure 1-676	Tab locations .....	474
Figure 1-677	Remove one screw and release tab .....	474
Figure 1-678	Remove the left cover .....	475
Figure 1-679	Remove two screws and holders .....	476
Figure 1-680	Rotate the shaft .....	477
Figure 1-681	Remove the shaft .....	478
Figure 1-682	Remove the duplexer door .....	478
Figure 1-683	Remove three screws and the cover .....	479
Figure 1-684	Remove the rear door assembly .....	479
Figure 1-685	Remove two screws .....	480
Figure 1-686	Remove the shaft holder .....	480
Figure 1-687	Remove the rear door assembly .....	481
Figure 1-688	Release one tab .....	481

Figure 1-689	Release one tab .....	482
Figure 1-690	Release and rotate one tab .....	482
Figure 1-691	Loosen the shaft .....	483
Figure 1-692	Remove the ITB (4 of 8) .....	483
Figure 1-693	Remove the ITB (5 of 8) .....	484
Figure 1-694	Remove two screws .....	484
Figure 1-695	Remove the ITB .....	485
Figure 1-696	Remove the cassette tray .....	489
Figure 1-697	Remove the priority feed slot tray .....	489
Figure 1-698	Open the front door .....	490
Figure 1-699	Open the rear door .....	490
Figure 1-700	Open the duplexer door .....	491
Figure 1-701	Tab locations .....	491
Figure 1-702	Remove one screw and release tabs .....	492
Figure 1-703	Remove the right cover .....	492
Figure 1-704	Tab locations .....	493
Figure 1-705	Remove one screw and release tabs .....	493
Figure 1-706	Remove the left cover .....	494
Figure 1-707	Tab locations .....	495
Figure 1-708	Remove one screw and release tabs .....	495
Figure 1-709	Remove the right cover .....	496
Figure 1-710	Tab locations .....	497
Figure 1-711	Remove one screw and release tab .....	497
Figure 1-712	Remove the left cover .....	498
Figure 1-713	Remove two screws and holders .....	499
Figure 1-714	Rotate the shaft .....	500
Figure 1-715	Remove the shaft .....	501
Figure 1-716	Remove the duplexer door .....	501
Figure 1-717	Remove three screws and the cover .....	502
Figure 1-718	Remove the rear door assembly .....	502
Figure 1-719	Remove two screws .....	503
Figure 1-720	Remove the shaft holder .....	503
Figure 1-721	Remove the rear door assembly .....	504
Figure 1-722	Release one tab .....	504
Figure 1-723	Release one tab .....	505
Figure 1-724	Release and rotate one tab .....	505
Figure 1-725	Loosen the shaft .....	506
Figure 1-726	Remove the ITB (4 of 8) .....	506
Figure 1-727	Remove the ITB (5 of 8) .....	507
Figure 1-728	Remove two screws .....	507
Figure 1-729	Remove the ITB .....	508

Figure 1-730	Disconnect one connector .....	508
Figure 1-731	Remove the registration density sensor .....	509
Figure 1-732	Remove the cassette tray .....	511
Figure 1-733	Open the front door .....	512
Figure 1-734	Open the duplexer door .....	512
Figure 1-735	Tab locations .....	513
Figure 1-736	Remove one screw and release tabs .....	513
Figure 1-737	Remove the right cover .....	514
Figure 1-738	Tab locations .....	515
Figure 1-739	Remove one screw and release tabs .....	515
Figure 1-740	Remove the left cover .....	516
Figure 1-741	Tab locations .....	517
Figure 1-742	Remove one screw and release tabs .....	517
Figure 1-743	Remove the right cover .....	518
Figure 1-744	Tab locations .....	519
Figure 1-745	Remove one screw and release tab .....	519
Figure 1-746	Remove the left cover .....	520
Figure 1-747	Open the scanner .....	521
Figure 1-748	Remove one screw and the cover .....	521
Figure 1-749	Remove three screws .....	522
Figure 1-750	Rotate the control panel .....	522
Figure 1-751	Release two tabs .....	523
Figure 1-752	Release the control panel .....	523
Figure 1-753	Disconnect the flat cable .....	524
Figure 1-754	Disconnect two cables and remove one screw .....	524
Figure 1-755	Release one tab and rotate the slider pin .....	525
Figure 1-756	Remove the slider pin .....	525
Figure 1-757	Rotate the hinge arm down .....	526
Figure 1-758	Remove the scanner cable cover .....	526
Figure 1-759	Release the flat cable .....	527
Figure 1-760	Remove the scanner assembly .....	527
Figure 1-761	Disconnect one cable .....	528
Figure 1-762	Remove seven screws and the top cover .....	528
Figure 1-763	Disconnect one connector .....	529
Figure 1-764	Remove two screws and the guide .....	529
Figure 1-765	Remove two screws .....	530
Figure 1-766	Remove three screws and the top cover .....	530
Figure 1-767	Remove the cover .....	531
Figure 1-768	Remove two screws .....	531
Figure 1-769	Disconnect two connectors .....	532
Figure 1-770	Remove the duplex drive assembly .....	532

Figure 1-771	Remove the cassette tray .....	535
Figure 1-772	Open the front door .....	536
Figure 1-773	Open the rear door .....	536
Figure 1-774	Tab locations .....	537
Figure 1-775	Remove one screw and release tabs .....	537
Figure 1-776	Remove the right cover .....	538
Figure 1-777	Tab locations .....	538
Figure 1-778	Remove one screw and release tab .....	539
Figure 1-779	Remove the left cover .....	539
Figure 1-780	Disconnect one flat cable .....	540
Figure 1-781	Release one tab and rotate the slider pin .....	540
Figure 1-782	Remove the slider pin .....	541
Figure 1-783	Rotate the hinge arm .....	541
Figure 1-784	Remove the scanner cable cover .....	542
Figure 1-785	Release the flat cable .....	542
Figure 1-786	Remove the scanner assembly .....	543
Figure 1-787	Disconnect two cables and remove one screw .....	543
Figure 1-788	Release one tab and rotate the slider pin .....	544
Figure 1-789	Remove the slider pin .....	544
Figure 1-790	Rotate the hinge arm down .....	545
Figure 1-791	Remove the scanner cable cover .....	545
Figure 1-792	Release the flat cable .....	546
Figure 1-793	Remove the scanner assembly .....	546
Figure 1-794	Remove one screw .....	547
Figure 1-795	Rotate the hinge arm up .....	547
Figure 1-796	Remove the cover .....	548
Figure 1-797	Remove the control panel .....	548
Figure 1-798	Disconnect one connector .....	549
Figure 1-799	Disconnect one cable .....	549
Figure 1-800	Remove seven screws and the top cover .....	550
Figure 1-801	Remove the output sensor assembly .....	550
Figure 1-802	Remove the cassette tray .....	553
Figure 1-803	Open the front door .....	553
Figure 1-804	Open the rear door .....	554
Figure 1-805	Open the duplexer door .....	554
Figure 1-806	Tab locations .....	555
Figure 1-807	Remove one screw and release tabs .....	555
Figure 1-808	Remove the right cover .....	556
Figure 1-809	Tab locations .....	557
Figure 1-810	Remove one screw and release tabs .....	557
Figure 1-811	Remove the right cover .....	558

Figure 1-812	Remove the power supply switch .....	559
Figure 1-813	Remove the cassette tray .....	561
Figure 1-814	Open the front door .....	561
Figure 1-815	Open the rear door .....	562
Figure 1-816	Open the duplexer door .....	562
Figure 1-817	Tab locations .....	563
Figure 1-818	Remove one screw and release tabs .....	563
Figure 1-819	Remove the right cover .....	564
Figure 1-820	Tab locations .....	565
Figure 1-821	Remove one screw and release tabs .....	565
Figure 1-822	Remove the right cover .....	566
Figure 1-823	Release one tab .....	566
Figure 1-824	Remove the duct cover .....	567
Figure 1-825	Remove two screws .....	567
Figure 1-826	Remove three screws .....	568
Figure 1-827	Disconnect four connectors and remove the LVPS .....	568
Figure 1-828	Remove the cassette tray .....	571
Figure 1-829	Open the front door .....	572
Figure 1-830	Open the rear door .....	572
Figure 1-831	Open the duplexer door .....	573
Figure 1-832	Tab locations .....	573
Figure 1-833	Remove one screw and release tabs .....	574
Figure 1-834	Remove the right cover .....	574
Figure 1-835	Tab locations .....	575
Figure 1-836	Remove one screw and release tabs .....	575
Figure 1-837	Remove the left cover .....	576
Figure 1-838	Tab locations .....	577
Figure 1-839	Remove one screw and release tabs .....	577
Figure 1-840	Remove the right cover .....	578
Figure 1-841	Tab locations .....	579
Figure 1-842	Remove one screw and release tab .....	579
Figure 1-843	Remove the left cover .....	580
Figure 1-844	Remove the rear cover .....	581
Figure 1-845	Disconnect one flat cable .....	581
Figure 1-846	Release one tab and rotate the slider pin .....	582
Figure 1-847	Remove the slider pin .....	582
Figure 1-848	Rotate the hinge arm .....	583
Figure 1-849	Remove the scanner cable cover .....	583
Figure 1-850	Release the flat cable .....	584
Figure 1-851	Remove the scanner assembly .....	584
Figure 1-852	Disconnect two cables and remove one screw .....	585

Figure 1-853	Release one tab and rotate the slider pin .....	585
Figure 1-854	Remove the slider pin .....	586
Figure 1-855	Rotate the hinge arm down .....	586
Figure 1-856	Remove the scanner cable cover .....	587
Figure 1-857	Release the flat cable .....	587
Figure 1-858	Remove the scanner assembly .....	588
Figure 1-859	Remove one screw .....	588
Figure 1-860	Rotate the hinge arm up .....	589
Figure 1-861	Remove the cover .....	589
Figure 1-862	Remove the control panel .....	590
Figure 1-863	Disconnect one connector .....	590
Figure 1-864	Disconnect one cable .....	591
Figure 1-865	Remove seven screws and the top cover .....	591
Figure 1-866	Remove the output sensor assembly .....	592
Figure 1-867	Open the scanner .....	592
Figure 1-868	Remove one screw and the cover .....	593
Figure 1-869	Remove three screws .....	593
Figure 1-870	Rotate the control panel .....	594
Figure 1-871	Release two tabs .....	594
Figure 1-872	Release the control panel .....	595
Figure 1-873	Disconnect the flat cable .....	595
Figure 1-874	Disconnect two cables and remove one screw .....	596
Figure 1-875	Release one tab and rotate the slider pin .....	596
Figure 1-876	Remove the slider pin .....	597
Figure 1-877	Rotate the hinge arm down .....	597
Figure 1-878	Remove the scanner cable cover .....	598
Figure 1-879	Release the flat cable .....	598
Figure 1-880	Remove the scanner assembly .....	599
Figure 1-881	Disconnect two cables .....	599
Figure 1-882	Remove one screw .....	600
Figure 1-883	Remove one screw .....	600
Figure 1-884	Remove seven screws and the top cover .....	601
Figure 1-885	Disconnect one connector .....	601
Figure 1-886	Remove two screws and the guide .....	602
Figure 1-887	Remove two screws .....	602
Figure 1-888	Remove three screws and the top cover .....	603
Figure 1-889	Remove the cover .....	603
Figure 1-890	Remove two screws .....	604
Figure 1-891	Disconnect two connectors .....	604
Figure 1-892	Remove the duplex drive assembly .....	605
Figure 1-893	Release the LVPS cable .....	605

Figure 1-894	Disconnect five connectors .....	606
Figure 1-895	Release the cables .....	606
Figure 1-896	Remove four screws and the fuser .....	607
Figure 1-897	Remove the cassette tray .....	609
Figure 1-898	Open the front door .....	609
Figure 1-899	Open the rear door .....	610
Figure 1-900	Open the duplexer door .....	610
Figure 1-901	Tab locations .....	611
Figure 1-902	Remove one screw and release tabs .....	611
Figure 1-903	Remove the right cover .....	612
Figure 1-904	Tab locations .....	613
Figure 1-905	Remove one screw and release tabs .....	613
Figure 1-906	Remove the right cover .....	614
Figure 1-907	Remove the main motor .....	615
Figure 1-908	Remove the cassette tray .....	617
Figure 1-909	Open the front door .....	617
Figure 1-910	Open the rear door .....	618
Figure 1-911	Open the duplexer door .....	618
Figure 1-912	Tab locations .....	619
Figure 1-913	Remove one screw and release tabs .....	619
Figure 1-914	Remove the right cover .....	620
Figure 1-915	Tab locations .....	621
Figure 1-916	Remove one screw and release tabs .....	621
Figure 1-917	Remove the right cover .....	622
Figure 1-918	Remove the fuser motor .....	623
Figure 1-919	Remove the cassette tray .....	625
Figure 1-920	Open the front door .....	626
Figure 1-921	Open the rear door .....	626
Figure 1-922	Open the duplexer door .....	627
Figure 1-923	Tab locations .....	627
Figure 1-924	Remove one screw and release tabs .....	628
Figure 1-925	Remove the right cover .....	628
Figure 1-926	Tab locations .....	629
Figure 1-927	Remove one screw and release tabs .....	629
Figure 1-928	Remove the right cover .....	630
Figure 1-929	Release one tab .....	630
Figure 1-930	Remove the duct cover .....	631
Figure 1-931	Remove two screws .....	631
Figure 1-932	Remove three screws .....	632
Figure 1-933	Disconnect four connectors and remove the LVPS .....	632
Figure 1-934	Remove the pickup motor .....	633

Figure 1-935	Remove the cassette tray .....	635
Figure 1-936	Open the front door .....	635
Figure 1-937	Open the rear door .....	636
Figure 1-938	Open the duplexer door .....	636
Figure 1-939	Tab locations .....	637
Figure 1-940	Remove one screw and release tabs .....	637
Figure 1-941	Remove the right cover .....	638
Figure 1-942	Release one tab .....	638
Figure 1-943	Remove the duct cover .....	639
Figure 1-944	Remove two screws .....	639
Figure 1-945	Remove three screws .....	640
Figure 1-946	Disconnect four connectors and remove the LVPS .....	640
Figure 1-947	Disconnect three connectors and release the cables .....	641
Figure 1-948	Remove the cover .....	641
Figure 1-949	Release the main fan and fan guide .....	642
Figure 1-950	Remove the main fan .....	642
Figure 1-951	Remove the cassette tray .....	645
Figure 1-952	Open the front door .....	646
Figure 1-953	Open the rear door .....	646
Figure 1-954	Open the duplexer door .....	647
Figure 1-955	Tab locations .....	647
Figure 1-956	Remove one screw and release tabs .....	648
Figure 1-957	Remove the right cover .....	648
Figure 1-958	Tab locations .....	649
Figure 1-959	Remove one screw and release tab .....	649
Figure 1-960	Remove the left cover .....	650
Figure 1-961	Remove the rear cover .....	651
Figure 1-962	Disconnect one flat cable .....	651
Figure 1-963	Release one tab and rotate the slider pin .....	652
Figure 1-964	Remove the slider pin .....	652
Figure 1-965	Rotate the hinge arm .....	653
Figure 1-966	Remove the scanner cable cover .....	653
Figure 1-967	Release the flat cable .....	654
Figure 1-968	Remove the scanner assembly .....	654
Figure 1-969	Disconnect two cables and remove one screw .....	655
Figure 1-970	Release one tab and rotate the slider pin .....	655
Figure 1-971	Remove the slider pin .....	656
Figure 1-972	Rotate the hinge arm down .....	656
Figure 1-973	Remove the scanner cable cover .....	657
Figure 1-974	Release the flat cable .....	657
Figure 1-975	Remove the scanner assembly .....	658

Figure 1-976	Remove one screw .....	658
Figure 1-977	Rotate the hinge arm up .....	659
Figure 1-978	Remove the cover .....	659
Figure 1-979	Remove the control panel .....	660
Figure 1-980	Disconnect one connector .....	660
Figure 1-981	Open the scanner .....	661
Figure 1-982	Remove one screw and the cover .....	661
Figure 1-983	Remove three screws .....	662
Figure 1-984	Rotate the control panel .....	662
Figure 1-985	Release two tabs .....	663
Figure 1-986	Release the control panel .....	663
Figure 1-987	Disconnect the flat cable .....	664
Figure 1-988	Disconnect two cables and remove one screw .....	664
Figure 1-989	Release one tab and rotate the slider pin .....	665
Figure 1-990	Remove the slider pin .....	665
Figure 1-991	Rotate the hinge arm down .....	666
Figure 1-992	Remove the scanner cable cover .....	666
Figure 1-993	Release the flat cable .....	667
Figure 1-994	Remove the scanner assembly .....	667
Figure 1-995	Disconnect one cable .....	668
Figure 1-996	Remove seven screws and the top cover .....	668
Figure 1-997	Release one tab .....	669
Figure 1-998	Remove the duct cover .....	669
Figure 1-999	Remove two screws .....	670
Figure 1-1000	Remove three screws .....	670
Figure 1-1001	Disconnect four connectors and remove the LVPS .....	671
Figure 1-1002	Remove the fan duct .....	671
Figure 1-1003	Remove the cover .....	672
Figure 1-1004	Disconnect three connectors and release the cables .....	672
Figure 1-1005	Release the main fan and fan guide .....	673
Figure 1-1006	Remove the main fan .....	673
Figure 2-1	Flatbed image scanner (M180n) .....	684
Figure 2-2	Image scanner and document feeder (M180nw and M181fw) .....	686
Figure 2-3	Image scanner and document feeder (M278-M281) .....	688
Figure 2-4	Covers (M153-M154) .....	690
Figure 2-5	Covers (M178-M181) .....	692
Figure 2-6	Covers (M253-M254) .....	694
Figure 2-7	Covers (M278-M281) .....	696
Figure 2-8	Internal components (1 of 4) .....	698
Figure 2-9	Internal components (2 of 4) .....	700
Figure 2-10	Internal components (3 of 4) .....	702

Figure 2-11 Internal components (4 of 4) ..... 704

---

# 1 Removal and replacement

- [For additional service and support](#)
- [Removal and replacement strategy](#)
- [Service approach](#)
- [Removal and replacement procedures](#)

## For additional service and support

HP service personnel, go to one of the following Web-based Interactive Search Engines (WISE) sites:

### AMS

- <https://support.hp.com/wise/home/ams-en>
- <https://support.hp.com/wise/home/ams-es>
- <https://support.hp.com/wise/home/ams-pt>

### APJ

- <https://support.hp.com/wise/home/apj-en>
- <https://support.hp.com/wise/home/apj-ja>
- <https://support.hp.com/wise/home/apj-ko>
- <https://support.hp.com/wise/home/apj-zh-Hans>
- <https://support.hp.com/wise/home/apj-zh-Hant>

### EMEA

- <https://support.hp.com/wise/home/emea-en>

Channel partners, go to HP Channel Services Network (CSN) at [www.hp.com/partners/csn](http://www.hp.com/partners/csn).

At these locations, find information on the following topics:

- Install and configure
- Printer specifications
- Up-to-date control panel message (CPMD) troubleshooting
- Solutions for printer issues and emerging issues
- Remove and replace part instructions and videos
- Service advisories
- Warranty and regulatory information

Channel partners, access training materials in the HP University and Partner Learning Center at <https://content.ext.hp.com/sites/LMS/HPU.page>.

To access HP PartSurfer information from any mobile device, go to <http://partsurfermobile.hp.com/> or scan the Quick Response (QR) code below.



# Removal and replacement strategy

## Introduction

The printer uses a field repair strategy. Defective parts are diagnosed and replaced at the Field Replaceable Unit (FRU) assembly level. Repair normally begins by using the printer internal diagnostics and the following two-step process:

1. Isolate the problem to the major system (for example, the network, server, or printer).
2. Identify the cause of failures according to the printer troubleshooting service manual and follow the disassembly procedures to replace the defective parts or the consumable parts.

After locating a faulty part, the printer can usually be repaired at the assembly level by replacing FRUs. Some mechanical assemblies might need to be repaired at the subassembly level. HP does not support replacement of components on the printed circuit assemblies.

The user replaces toner cartridges as they are depleted. Additional instructions about other user-replaceable parts are provided in this section.

The printer tracks the amount of use on the user-replaceable supplies by keeping a page count. The printer prompts the user to replace certain items when a supply is depleted or a specific number of pages has been printed.

Swapping toner cartridges between products might cause a misrepresentation of supply life values and is not recommended.

## Considerations during removal and replacement

This chapter describes the FRUs only.

Replacing FRUs is generally the reverse of removal. Notes are included to provide directions for difficult or critical replacement procedures.

HP does not support repairing individual subassemblies or troubleshooting to the printed-circuit assembly (PCA) component level.

---

**⚠ WARNING!** Never operate or service the printer with the protective cover removed from the laser scanner assembly. The reflected beam, although invisible, can cause damage to the eyes.

The sheet-metal parts can have sharp edges. Be careful when handling sheet-metal parts.

Turn the printer off, wait 5 seconds, and then remove the power cord before attempting to service the printer. *If this warning is not followed, severe injury can result as well as damage to the printer.* The power must be on for certain functional checks during troubleshooting. However, the power cord must be disconnected during parts removal. AC voltage is still present inside the printer when the power switch is in the off position. The power cord must be *disconnected* before servicing the printer.

**⚠ CAUTION:** Incorrectly routed or loose wire harnesses might interfere with other internal components or assemblies and be damaged, pinched, or frayed. Make sure that wire harnesses are correctly routed and retained when installing assemblies.

Do not bend or fold the flat flexible cables (FFCs) during removal or installation.

Do not expose the toner cartridge, or cartridges, to strong light even for a short time.

 **IMPORTANT:** When an assembly is removed that includes a rating plate or tag (or a printer code label), make sure to transfer the plate or tag (or code label) to the replacement assembly.

Do not replace the formatter, DC controller, memory PCA (island of data), and eMMC PCA or hard-disk drive simultaneously during a single printer servicing. Doing so might cause the printer to become unstable or inoperable.

 **NOTE:** During assembly removal and replacement, or if the printer is moved, remove the toner cartridge or cartridges.

Toner is a non-poisonous substance composed of plastic and a small number of colored components. If toner gets on the skin or clothing, wipe it off with dry tissue paper and wash in cold water. Hot water sets toner and it might be difficult, or impossible, to remove. Toner easily breaks down vinyl materials, so avoid letting toner contact vinyl.

 **TIP:** Some figures might show assemblies removed or installed that have not yet been removed or installed at that specific step. However, the procedures are correct for this printer and the target assembly. Always thoroughly read the instructions that accompany each figure.

---

## Electrostatic discharge

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Look for the ESD reminder when removing printer parts. Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground *before* touching an ESD-sensitive assembly.

Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

---


## Required tools

- #2 Phillips screwdriver with a magnetic tip and a 152-mm (6-in) shaft length
- Torx T10 screwdriver (for some of the image scanner assemblies)
- Small, flat-blade screwdriver
- Needle-nose pliers
- ESD strap (if one is available)
- Penlight

 **CAUTION:** Always use a #2 Phillips screwdriver (callout 1). Do not use a Pozidriv screwdriver (callout 2) or any motorized screwdriver. These can damage screws or screw threads.

---

Figure 1-1 Screwdrivers

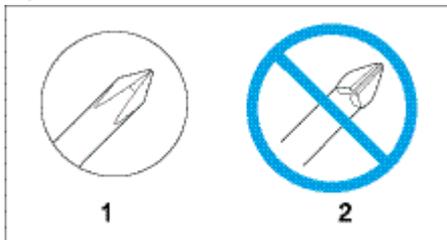

## Fasteners used in this printer

**⚠ WARNING!** Make sure that assemblies are replaced with the correct screw type. Using the incorrect screw (for example, substituting a long screw for the correct shorter screw) can cause damage to the printer or interfere with printer operation. Do not intermix screws that are removed from one assembly with the screws that are removed from another assembly.

**📝 NOTE:** To install a self-tapping screw, first turn it counterclockwise to align it with the existing thread pattern, and then carefully turn it clockwise to tighten. Do not overtighten. If a self-tapping screw hole becomes stripped, repair the screw hole or replace the affected assembly.

Always take note of the length, diameter, color, type, and location of each removed screw. Make sure that screws are installed in their original location during reinstallation.

### Fasteners used in the printer

- Screw, D M3X8 N
- Screw, D M3X6
- Screw, tapping, truss head, M4X10 N

Figure 1-2 Screw size chart



# Service approach

## Before performing service

---

 **WARNING!** Turn the printer off, wait 30 seconds, and then remove the power cord before attempting to service the printer. *If this warning is not followed, severe injury and damage to the printer can result.* The power must be on for certain functional checks during troubleshooting. However, the power to the printer should be disconnected during parts removal.

---

1. Remove all paper.
2. Place the printer on an ESD mat (if available). If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground *before* touching an ESD-sensitive assembly.
3. Remove the toner cartridge or toner cartridges and place a sheet of paper over the exposed drums to protect them from excessive light exposure.
4. Remove the trays.

## After performing service

1. Reinstall the toner cartridge or toner cartridges.
2. Reinstall the trays.
3. Return all paper to the trays.
4. Plug in the power cable and turn on the printer.
5. Perform print-quality tests by printing from a host computer or by printing internal configuration and demo pages.

## Post service tests

### Print quality test

---

 **NOTE:** To get further assistance in print quality troubleshooting, go to [www.hp.com/support/ljM153](http://www.hp.com/support/ljM153), [www.hp.com/support/ljM178MFP](http://www.hp.com/support/ljM178MFP), [www.hp.com/support/ljM253](http://www.hp.com/support/ljM253) or [www.hp.com/support/ljM278MFP](http://www.hp.com/support/ljM278MFP). Select **Troubleshooting**, select **Print**, and then select **Print Quality**.

---

1. Verify that you have completed the necessary reassembly steps.
2. Ensure that the input tray contains clean, unmarked paper.
3. With the power cord attached, turn on the printer.
4. Verify that the expected start up sounds occur.
5. Send a print job from the host computer, and then verify that the output meets expectations.

### Copy-quality test (M178-M181 and M278-M281 models)

1. Verify that you have completed the necessary reassembly steps.
2. Ensure that the input tray contains clean, unmarked paper.
3. With the power cord attached, turn on the printer.

4. Verify that the expected start up sounds occur.
5. Print a configuration page, and then verify that the expected printing sounds occur.
6. **Document feeder models only:** Place the configuration page in the document feeder, print a copy job, and then verify the results.
7. Place the configuration page on the flatbed glass, print a copy job, and then verify the results.

### Fax-quality test (M181 and M281 models)

1. Verify that you have completed the necessary reassembly steps.
2. Ensure that the input tray contains clean, unmarked paper.
3. With the power cord attached, turn on the printer.
4. Verify that the expected start up sounds occur.
5. Print a configuration page, and then verify that the expected printing sounds occur.
6. Place the configuration page in the document feeder.
7. Type a valid fax number, and send the fax job.
8. Verify that the send quality and the receive quality meet expectations.

### Parts removal orientation

For procedures and/or steps that require identifying the right, left, or rear side of the printer, face the front of the printer for correct orientation.

# Removal and replacement procedures

## Customer self-repair (CSR) A parts and assemblies

- [Removal and replacement: Toner cartridges](#)
- [Removal and replacement: Priority feed slot tray \(M253-M254 and M278-M281\)](#)
- [Removal and replacement: Cassette tray](#)

The CSR level indicates the expected difficulty the customer will experience when removing and replacing an assembly. The CSR A assemblies in this section are easy for the customer to remove and replace.

## Removal and replacement: Toner cartridges

- [Introduction](#)
- [Step 1: Remove a toner cartridge](#)
- [Step 2: Unpack a replacement toner cartridge](#)
- [Step 3: Install a toner cartridge](#)

### Introduction

This document provides the procedures to remove and replace the toner cartridges.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off.



**CAUTION:** To prevent damage to the toner cartridge, do not expose it to light for more than a few minutes. Cover the green imaging drum if the toner cartridge must be removed from the printer for an extended period of time.

If toner gets on clothing, wipe it off by using a dry cloth and wash the clothes in cold water. Hot water sets toner into fabric.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Toner cartridge part numbers	
<b>M153-M154, M178-M181 (North America, Latin America, Asia Pacific Countries/Regions, and Japan only):</b>	
CF510A	HP 204A Black LaserJet Toner Cartridge
CF511A	HP 204A Cyan LaserJet Toner Cartridge
CF512A	HP 204A Yellow LaserJet Toner Cartridge
CF513A	HP 204A Magenta LaserJet Toner Cartridge
<b>M153-M154, M178-M181 (Europe, Russia, CIS, Middle East, and Africa only):</b>	
CF530A	HP 205A Black LaserJet Toner Cartridge
CF531A	HP 205A Cyan LaserJet Toner Cartridge
CF532A	HP 205A Yellow LaserJet Toner Cartridge
CF533A	HP 205A Magenta LaserJet Toner Cartridge
<b>M253-M254, M278-M281 (North America, Latin America, Asia Pacific Countries/Regions, and Japan only):</b>	

Toner cartridge part numbers	
CF500A	HP 202A Black LaserJet Toner Cartridge
CF501A	HP 202A Cyan LaserJet Toner Cartridge
CF502A	HP 202A Yellow LaserJet Toner Cartridge
CF503A	HP 202A Magenta LaserJet Toner Cartridge
CF500X	HP 202X High Yield Black LaserJet Toner Cartridge
CF501X	HP 202X High Yield Cyan LaserJet Toner Cartridge
CF502X	HP 202X High Yield Yellow LaserJet Toner Cartridge
CF503X	HP 202X High Yield Magenta LaserJet Toner Cartridge
M253-M254, M278-M281 (Europe, Russia, CIS, Middle East, and Africa only):	
CF540A	HP 203A Black LaserJet Toner Cartridge
CF541A	HP 203A Cyan LaserJet Toner Cartridge
CF542A	HP 203A Yellow LaserJet Toner Cartridge
CF543A	HP 203A Magenta LaserJet Toner Cartridge
CF540X	HP 203X High Yield Black LaserJet Toner Cartridge
CF541X	HP 203X High Yield Cyan LaserJet Toner Cartridge
CF542X	HP 203X High Yield Yellow LaserJet Toner Cartridge
CF543X	HP 203X High Yield Magenta LaserJet Toner Cartridge

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

- Make sure that the front door is fully closed after replacing a toner cartridge.
- Turn the printer power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove a toner cartridge


1. Open the front door.



2. Grasp the blue handle on the toner cartridge drawer, and then pull out the drawer.




3. Grasp the handle on the toner cartridge, and then pull the toner cartridge straight up to remove it.

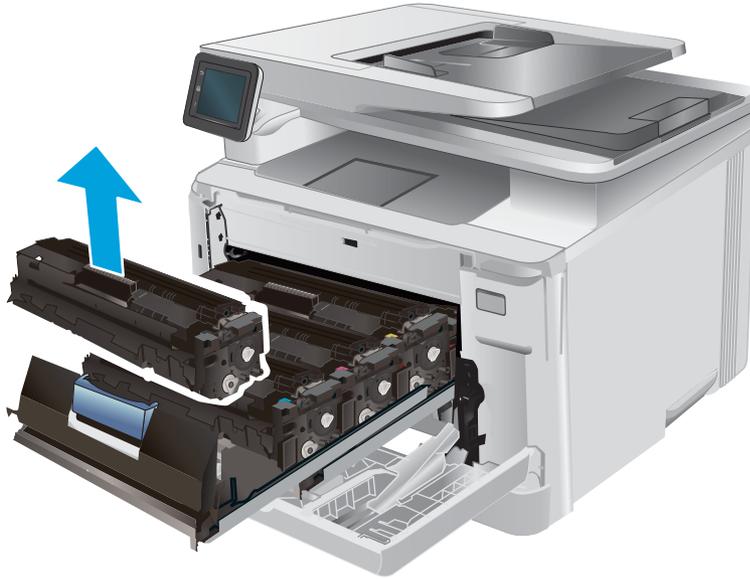


### Step 2: Unpack a replacement toner cartridge


1. Remove the new toner cartridge package from the box, and then pull the release tab on the packaging.

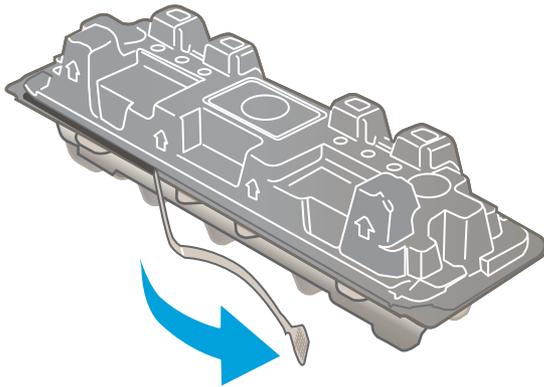

2. Remove the toner cartridge from the opened packaging shell.

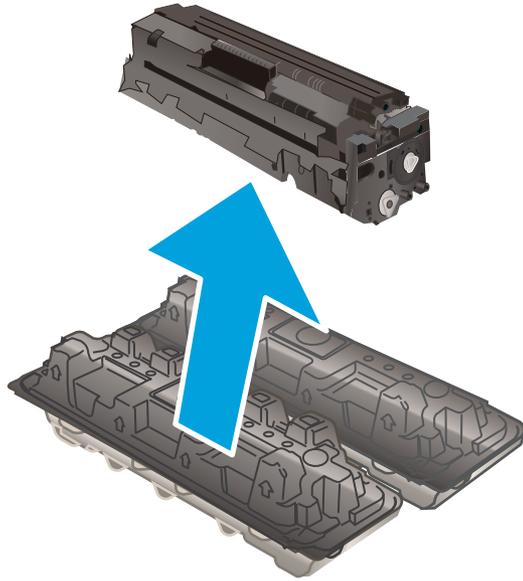


3. Place the used toner cartridge in the packaging from the new cartridge.

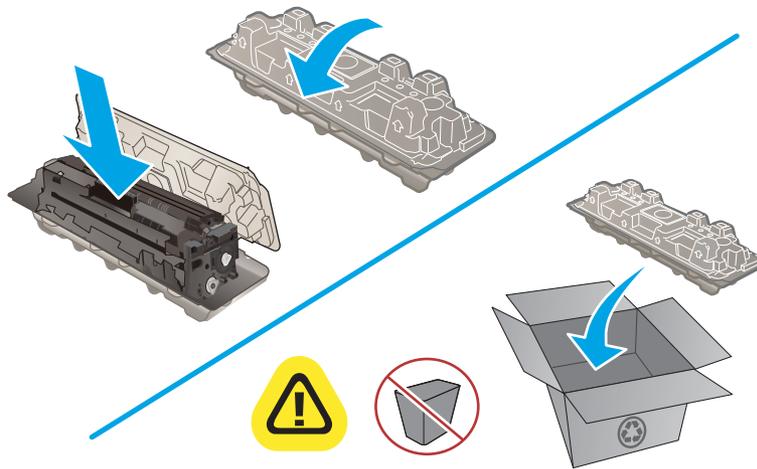


<http://www.hp.com/recycle>

4. Use the pre-paid self-addressed label to return the used cartridge to HP for recycling (where available).

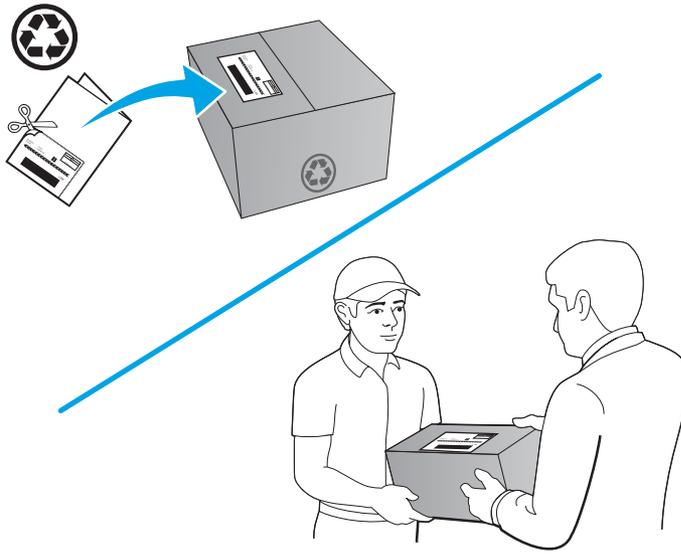


### Step 3: Install a toner cartridge

1. Gently rock the toner cartridge from front to back to distribute the toner evenly inside the cartridge.

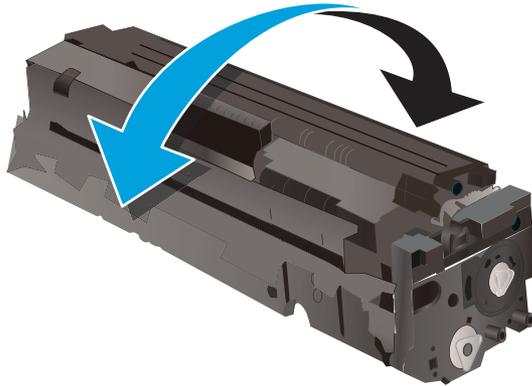

2. Do not touch the imaging drum on the bottom of the toner cartridge. Fingerprints on the imaging drum can cause print-quality problems.

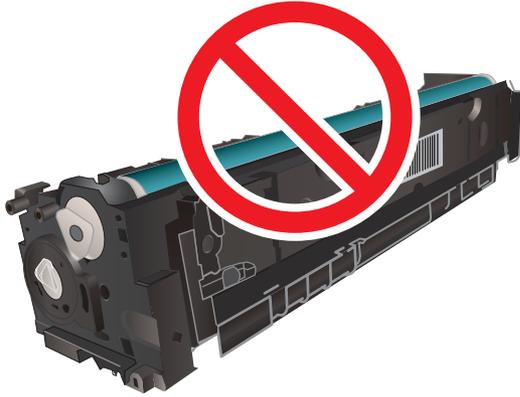

3. Insert the new toner cartridge into the drawer. Make sure that the color chip on the cartridge matches the color chip on the drawer.



4. Close the toner cartridge drawer.



5. Close the front door.



## Removal and replacement: Priority feed slot tray (M253-M254 and M278-M281)

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Remove the priority feed slot tray](#)
- [Step 3: Unpack the replacement assembly](#)
- [Step 4: Install the priority feed slot tray](#)
- [Step 5: Install the cassette tray](#)

### Introduction

This document provides the procedures to remove and replace the priority feed slot tray.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Priority feed slot tray part number	
RM2-1693-000CN	Priority feed slot tray

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

- Make sure that the priority feed slot tray is fully seated in the slot after replacing it.
- Turn the printer power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.


Figure 1-3 Remove the cassette tray



Step 2: Remove the priority feed slot tray

- ▲ At the front of the printer, gently push down on the single-sheet priority feed slot tray, and then pull out the feed slot tray.

Figure 1-4 Remove the priority feed slot tray

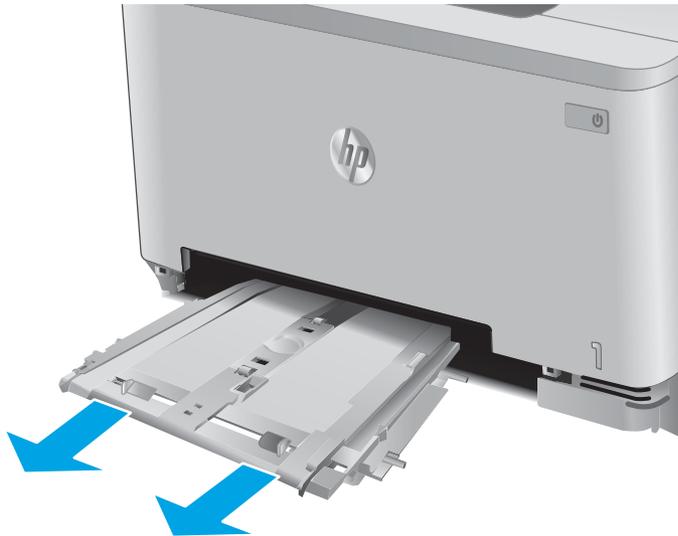

Step 3: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

#### Step 4: Install the priority feed slot tray

▲ Gently push the single-sheet priority feed slot tray into the feed slot.

Figure 1-5 Install the priority feed slot tray



#### Step 5: Install the cassette tray

▲ Align the cassette tray with the tray cavity, and then push the tray into the printer.

Figure 1-6 Install the cassette tray



## Removal and replacement: Cassette tray

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Unpack the replacement assembly](#)
- [Step 3: Install the cassette tray](#)

### Introduction

This document provides the procedures to remove and replace the cassette tray.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Cassette tray part numbers	
RM2-1684-000CN	Cassette tray (M153-M154)
RM2-1688-000CN	Cassette tray (M178-M181)
RM2-1679-000CN	Cassette tray (M253-M254)
RM2-1683-000CN	Cassette tray (M278-M281)

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

- Make sure that the cassette tray is fully closed after replacing it.
- Turn the printer power on.


### Post service test

No post service test is available for this assembly.

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-7 Remove the cassette tray

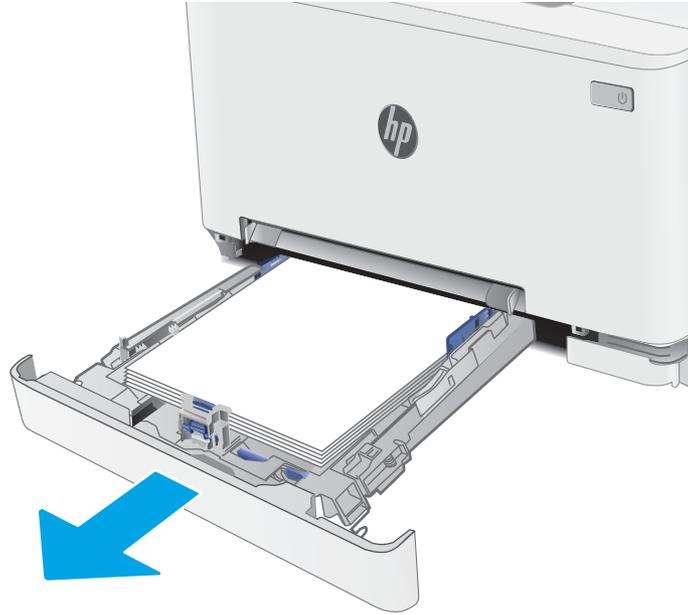

### Step 2: Unpack the replacement assembly

1. Dispose of the defective part.



**NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

2. Unpack the replacement part from the packaging.



**CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.



**IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.



**NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Step 3: Install the cassette tray

- ▲ Align the cassette tray with the tray cavity, and then push the tray into the printer.

Figure 1-8 Install the cassette tray



## Field replaceable units (FRUs)

### Removal and replacement: Rollers

- [Removal and replacement: Cassette tray pickup roller and feed roller](#)
- [Removal and replacement: Cassette tray separation roller](#)
- [Removal and replacement: Secondary transfer roller](#)

## Removal and replacement: Cassette tray pickup roller and feed roller

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Remove the cassette tray pickup roller and feed roller assembly](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the cassette tray pickup and feed rollers.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.

 **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.

- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Cassette tray pickup and feed rollers part numbers	
RM2-5576-000CN	Paper pickup roller assembly
RM2-5577-000CN	Feed roller assembly

### Required tools

- #2 Phillips screwdriver with a magnetic tip.

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

No post service test is available for this assembly.

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.


Figure 1-9 Remove the cassette tray

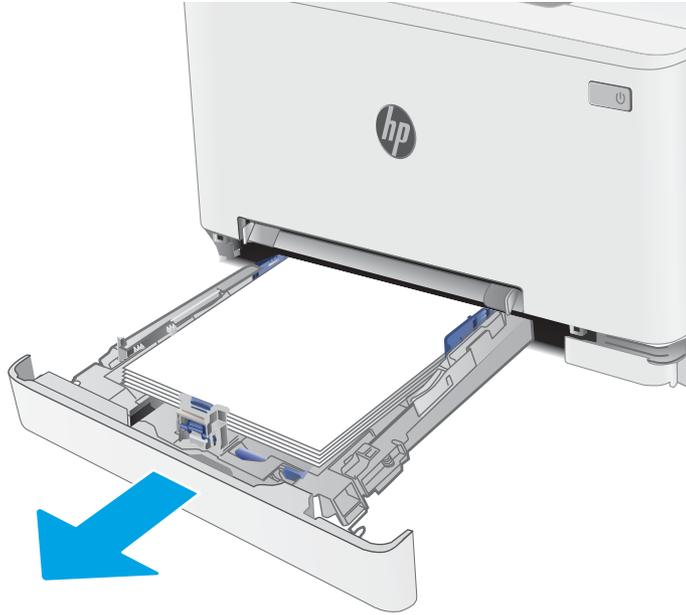

Step 2: Remove the cassette tray pickup roller and feed roller assembly

1. Turn the printer front side up, so that it is resting on the rear door or duplexer. Lift the flag (callout 1), and then release the tab (callout 2).


Figure 1-10 Release one tab

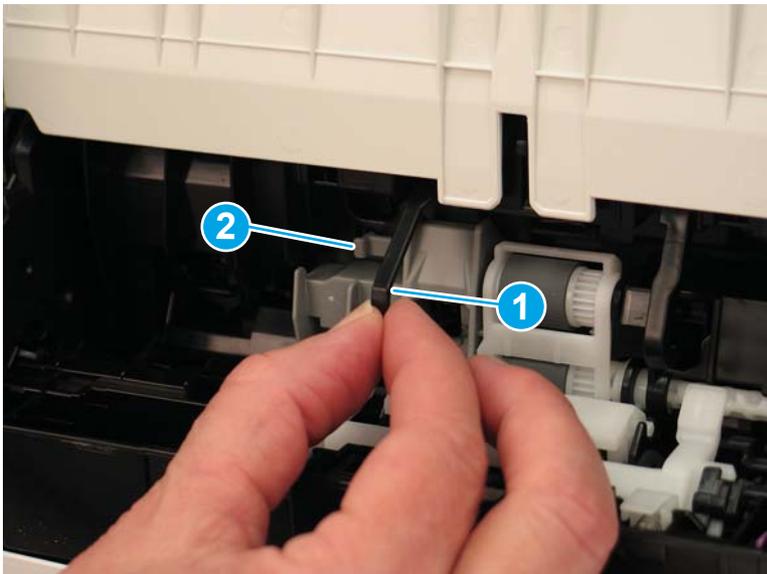

2. Slide the roller holder (callout 1) to the left to release it, and then remove the roller holder.

**CAUTION:** Be careful not to damage the flag when releasing the holder.


Figure 1-11 Remove the roller holder

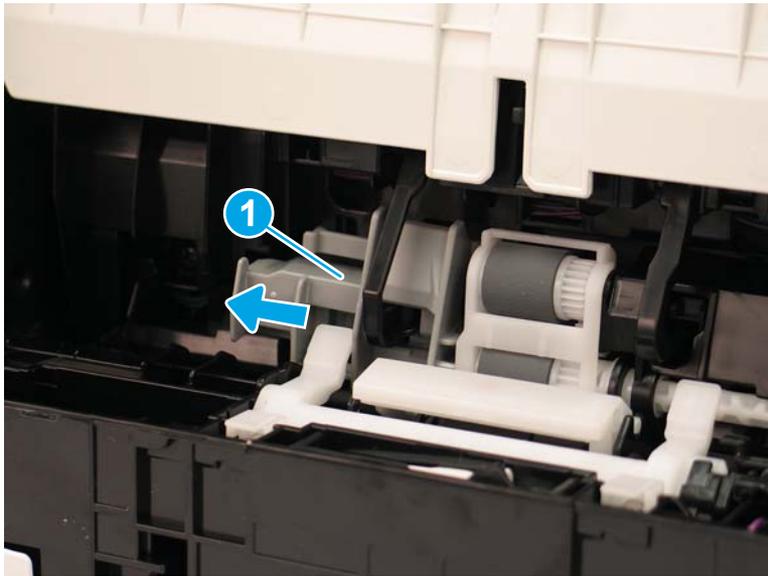

3. Slide the roller assembly to the left to remove the pickup roller (callout 1) and the feed roller (callout 2).

**Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-12 Remove the rollers

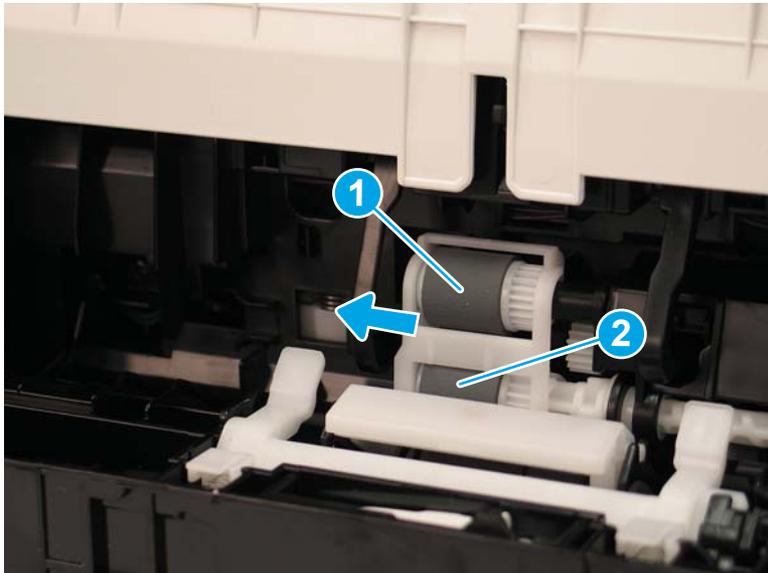

### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Cassette tray separation roller

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Remove the cassette tray separation roller assembly](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the cassette tray separation rollers.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.



**WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.

- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Cassette tray separation roller kit part number	
RM2-5881-000CN	Separation roller assembly

### Required tools

- #2 Phillips screwdriver with a magnetic tip.

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

No post service test is available for this assembly.

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-13 Remove the cassette tray

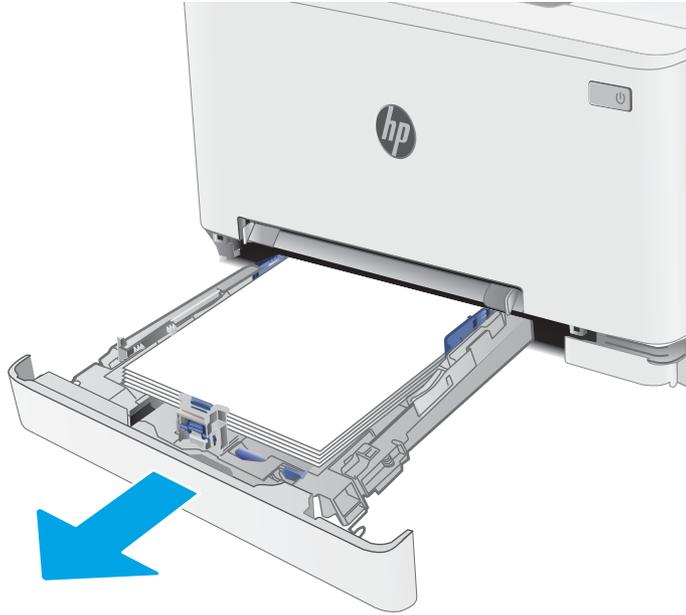


### Step 2: Remove the cassette tray separation roller assembly

1. Turn the printer front side up, so that it is resting on the rear door or duplexer. Remove the separation roller cover (callout 1).


 **TIP:** Use a small, flat-blade screwdriver to release the cover.

Figure 1-14 Remove the separation roller cover

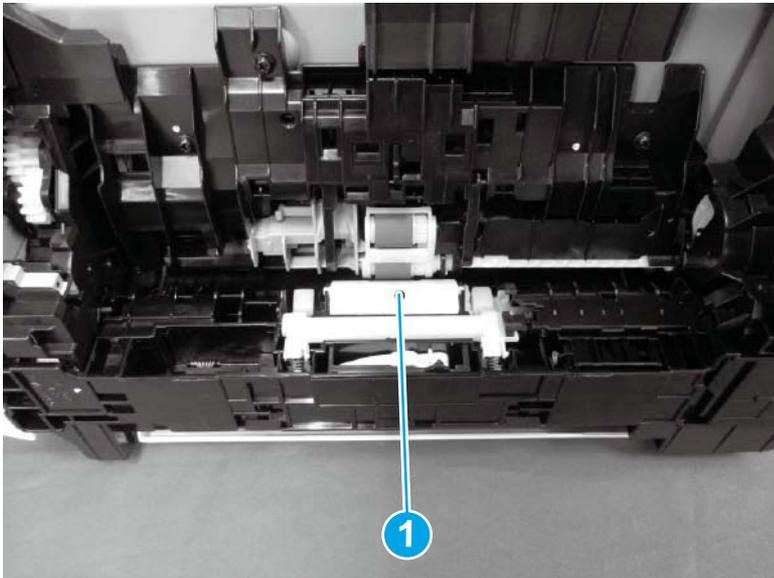

2. Release one tab (callout 1), and then remove the separation roller (callout 2).

**Figure 1-15** Remove the separation roller

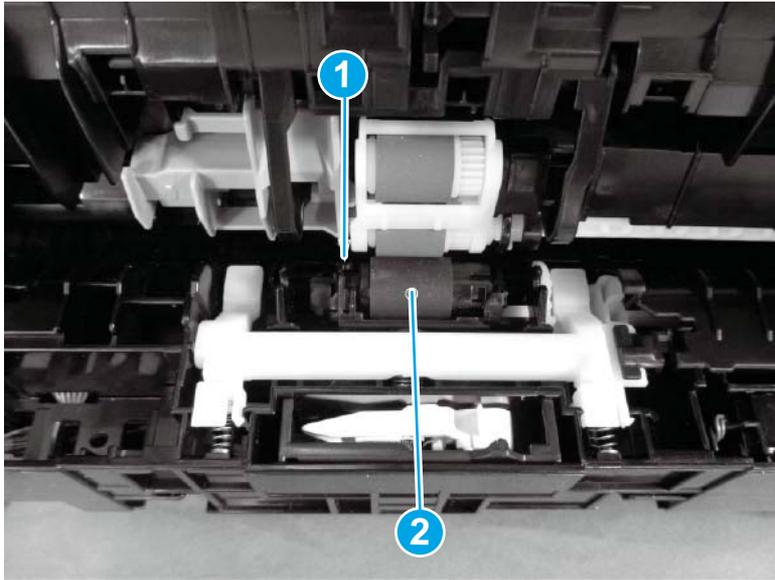

3. Reverse the removal steps to install the assembly. Also use the following special installation instructions.




**NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Cassette tray separation roller

- ▲ When installing the separation roller (callout 1), position the D-shaped locator on the end of the roller into the D-shaped opening on the guide (callout 2).

Figure 1-16 Install the separation roller

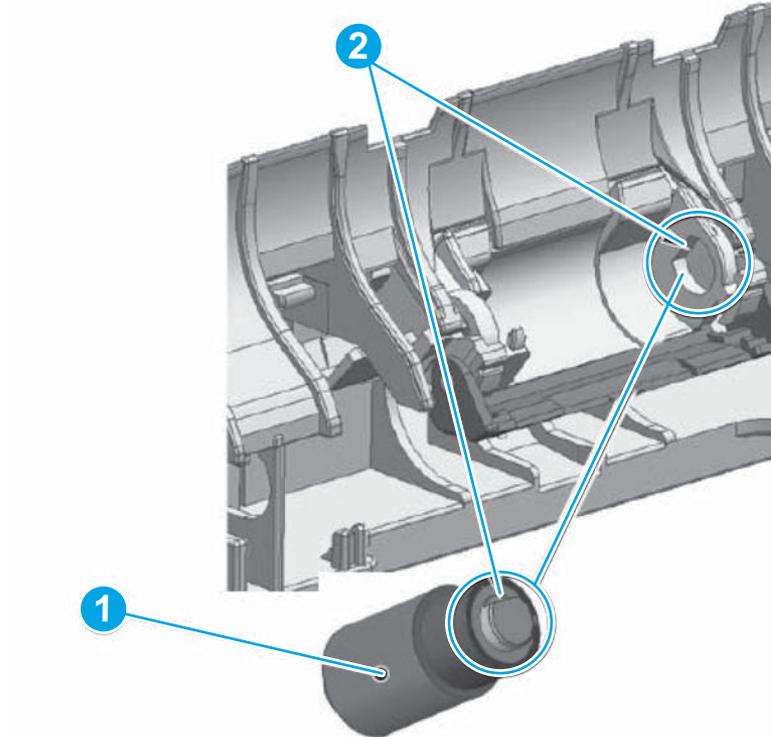

### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Secondary transfer roller

- [Introduction](#)
- [Step 1: Open the rear door or duplexer door](#)
- [Step 2: Remove the secondary transfer roller](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the secondary transfer roller.

### Before you begin

- Turn off the printer.
- Disconnect the power cable.

---

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cord before attempting to service the printer.

---

- Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts) to order the part.

---

Secondary transfer roller kit part number	
RM2-5906-000CN	Secondary transfer roller

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip


### After performing service

- Connect the power cable.
- Use the power switch to turn the power on.

### Step 1: Open the rear door or duplexer door


1. **Simplex models only:** Open the rear door.

Figure 1-17 Open the rear door

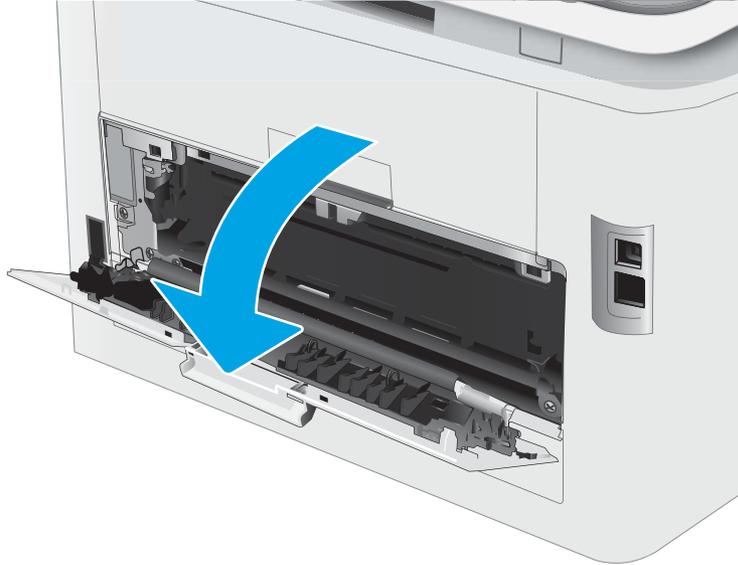

2. **Duplex models only:** Open the duplexer door.

Figure 1-18 Open the duplexer door

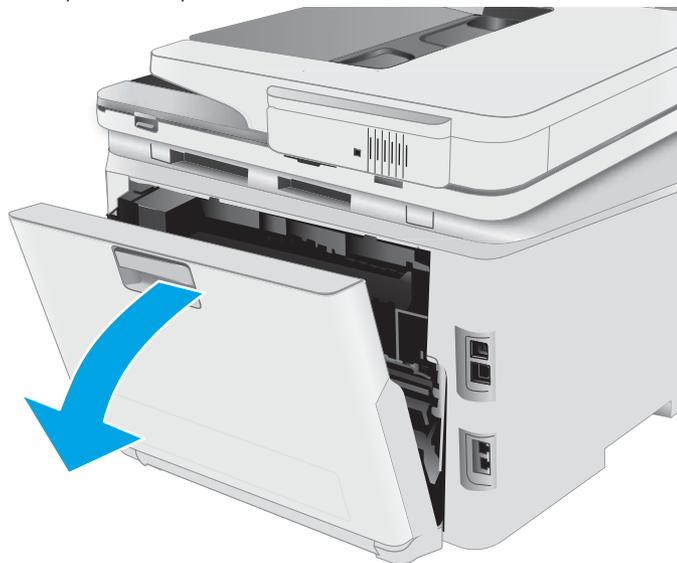

### Step 2: Remove the secondary transfer roller


1. Release two tabs (callout 1) on the left side of the transfer roller.

---

 **TIP:** Use a small, flat-blade screwdriver to release the tabs.

---


Figure 1-19 Release the left side of the secondary transfer roller

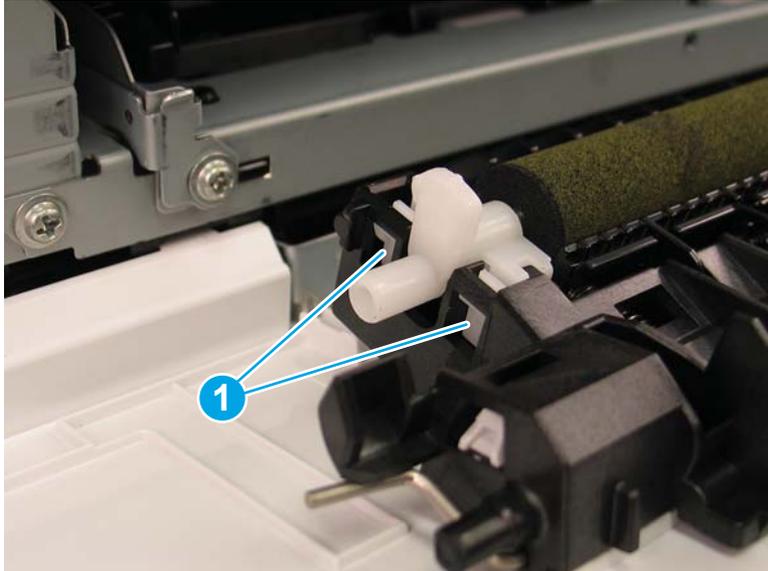

2. Remove one bushing (callout 1), and then slide the secondary transfer roller (callout 2) to the left to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-20 Remove the secondary transfer roller

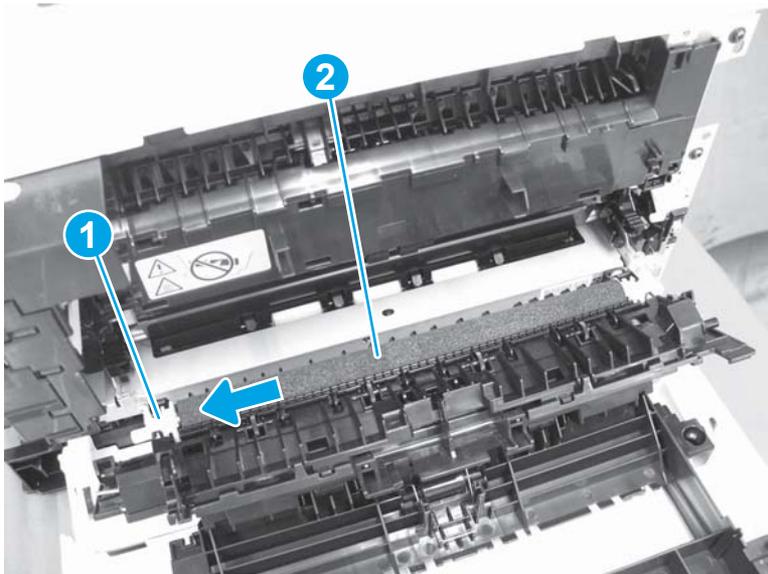

### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: External panels, covers, and doors

- [Identification and location](#)
- [Removal and replacement: Right cover](#)
- [Removal and replacement: Left cover](#)
- [Removal and replacement: Rear cover \(simplex models\)](#)
- [Removal and replacement: Top cover \(M153-M154 and M253-M254\)](#)
- [Removal and replacement: Top cover \(M178-M181\)](#)
- [Removal and replacement: Top cover \(M278-M281\)](#)
- [Removal and replacement: Duplexer door \(duplex models\)](#)
- [Removal and replacement: Rear lower cover \(simplex models\)](#)
- [Removal and replacement: Rear lower cover \(duplex models\)](#)
- [Removal and replacement: Rear door assembly \(simplex models\)](#)
- [Removal and replacement: Rear door assembly \(duplex models\)](#)
- [Removal and replacement: Front door assembly](#)
- [Removal and replacement: Control panel \(M153-M154\)](#)
- [Removal and replacement: Control panel \(M178-M181\)](#)
- [Removal and replacement: Control panel \(M254nw/dn 2-line\)](#)
- [Removal and replacement: Control panel \(M254dw touchscreen\)](#)
- [Removal and replacement: Control panel \(M278-M281 models\)](#)


## Identification and location

Figure 1-21 Front view, M153-M154



1	Top cover
2	Front door
3	Right cover
4	Control panel

Figure 1-22 Back view, M153-M154

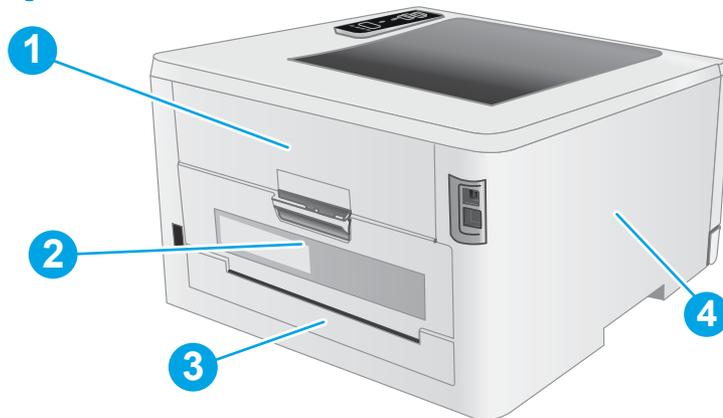


1	Rear cover
2	Rear door
3	Rear lower cover
4	Left cover

Figure 1-23 Front view: M178-M181




1	Icon LCD control panel (n models only)
2	Top cover
3	Front door
4	Right cover
5	2-line LCD control panel (fw and nw models only)

Figure 1-24 Back view: M178-M181

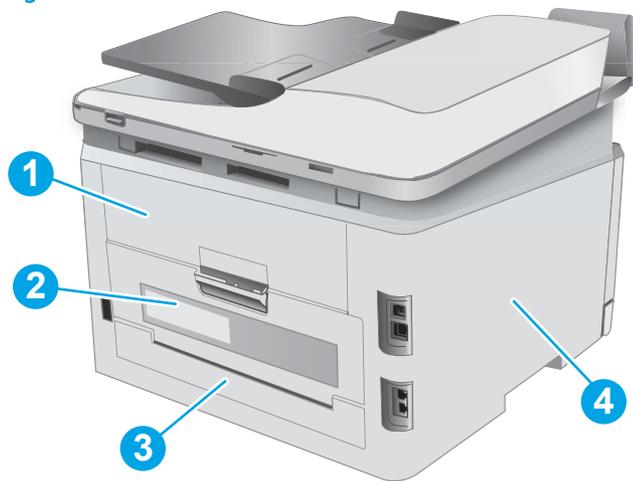


1	Rear cover
2	Rear door
3	Rear lower cover
4	Left cover

Figure 1-25 Front view, M253-M254

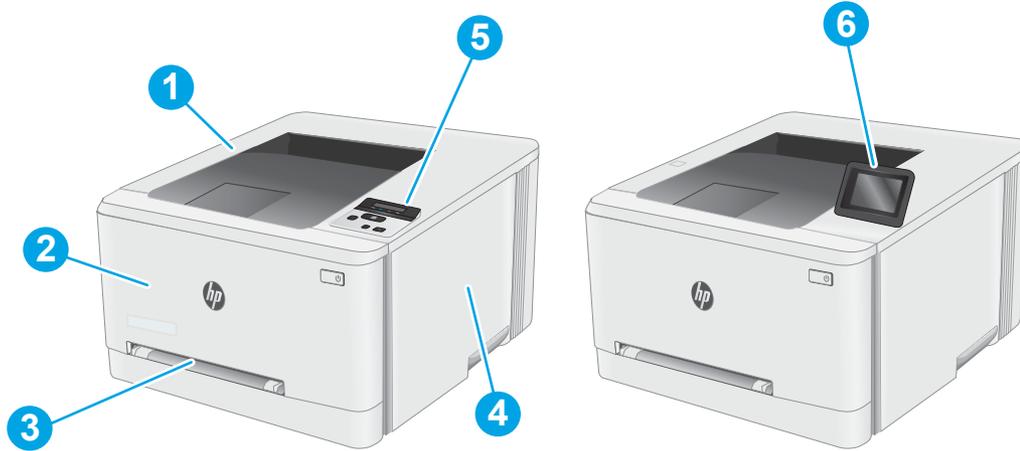

1	Top cover
2	Front door
3	Priority feed slot tray
4	Right door
5	2-line backlit control panel (nw and dn models only)
6	Touchscreen control panel (dw models only)

Figure 1-26 Back view, M253-M254

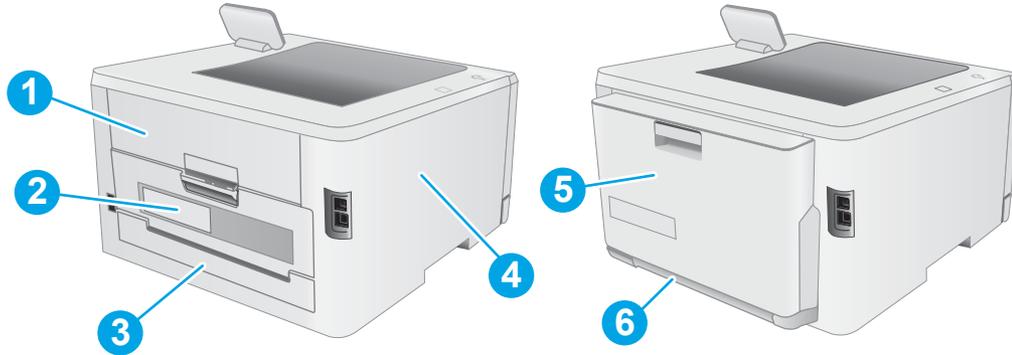


1	Rear cover (simplex models)
2	Rear door (simplex models)
3	Rear lower cover (simplex models)
4	Left cover
5	Duplex door (duplex models)
6	Rear lower cover (duplex models)

Figure 1-27 Front view: M278-M281



1	Touchscreen control panel
2	Top cover
3	Front door
4	Priority feed slot tray
5	Right cover

Figure 1-28 Back view: M278-M281

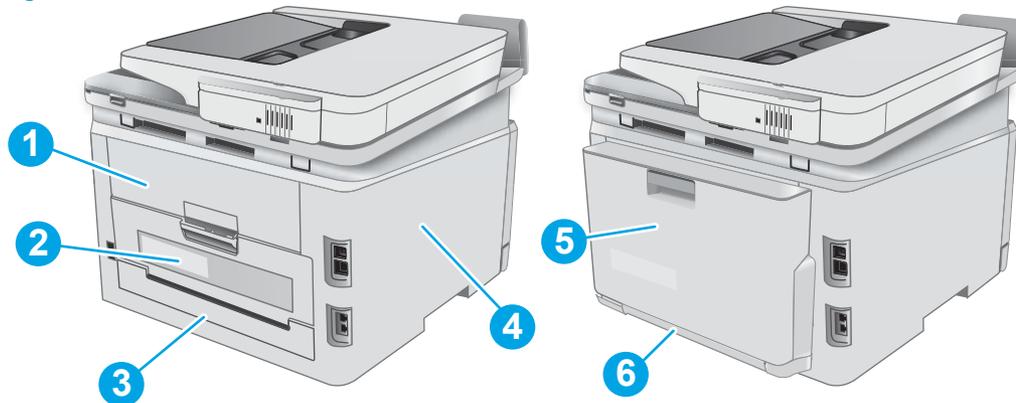

1	Rear cover (simplex models)
2	Rear door (simplex models)
3	Rear lower cover (simplex models)
4	Left cover
5	Duplex door (duplex models)
6	Rear lower cover (duplex models)

## Removal and replacement: Right cover

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and rear doors](#)
- [Step 3: Remove the right cover \(M153-M154 and M253-M254\)](#)
- [Step 4: Remove the right cover \(M178-M181 and M278-M281\)](#)
- [Step 5: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the right cover.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Right cover part number	
RC5-2029-000CN	Right cover

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

No post service test is available for this assembly.

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-29 Remove the cassette tray

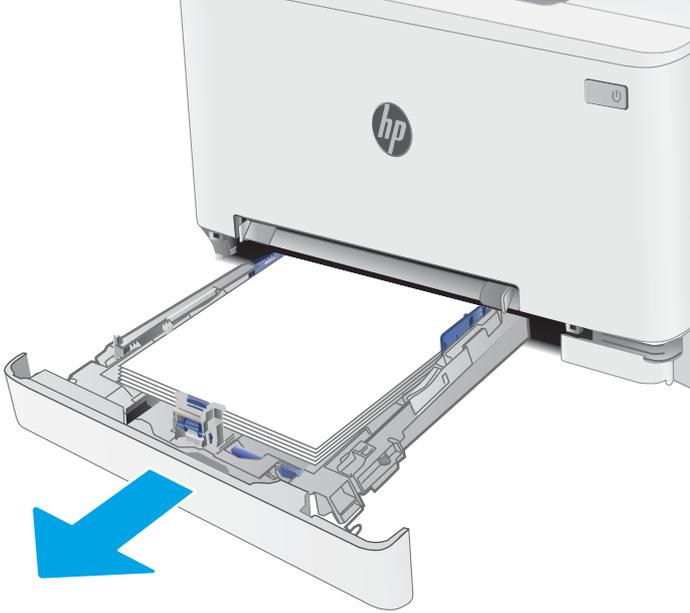

Step 2: Open the front and rear doors


- 1. Open the front door.

Figure 1-30 Open the front door




2. **Simplex models only:** Open the rear door.

**Figure 1-31** Open the rear door

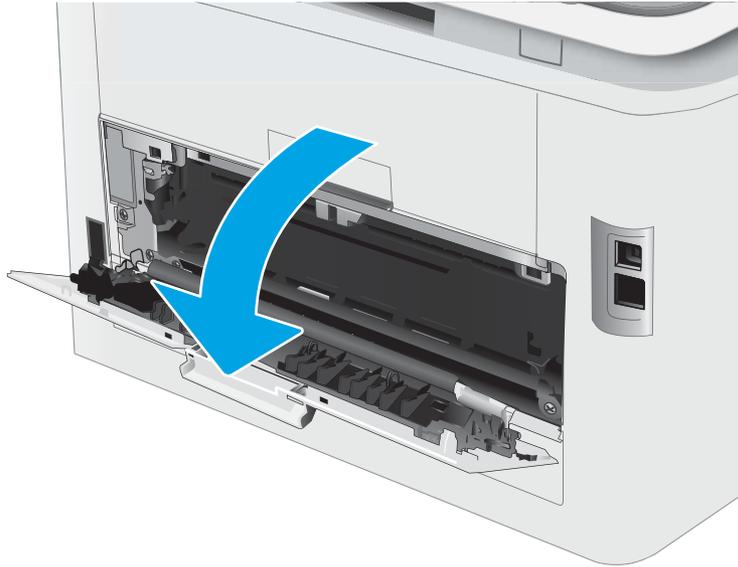

3. **Duplex models only:** Open the duplexer door.

**Figure 1-32** Open the duplexer door

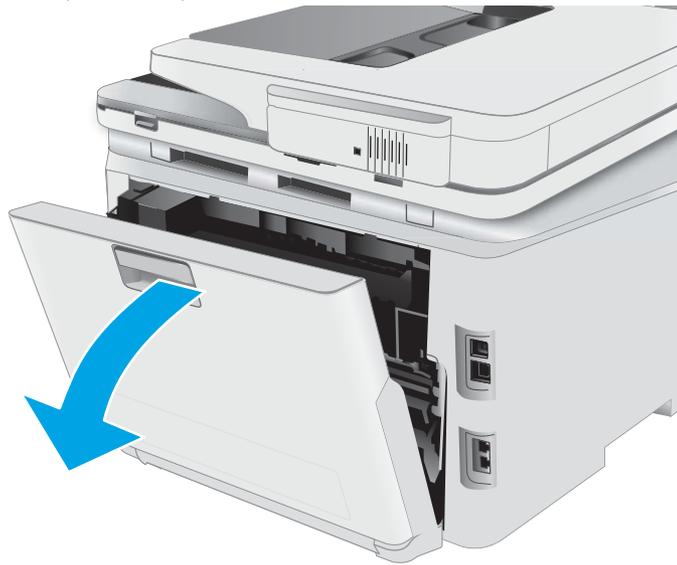


### Step 3: Remove the right cover (M153-M154 and M253-M254)

 **NOTE:** This step is for the M153-M154 and M253-M254 printers. For the M178-M181 and M278-M281 printers, skip this step and go to [Step 4: Remove the right cover \(M178-M181 and M278-M281\) on page 46.](#)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-33 Tab locations

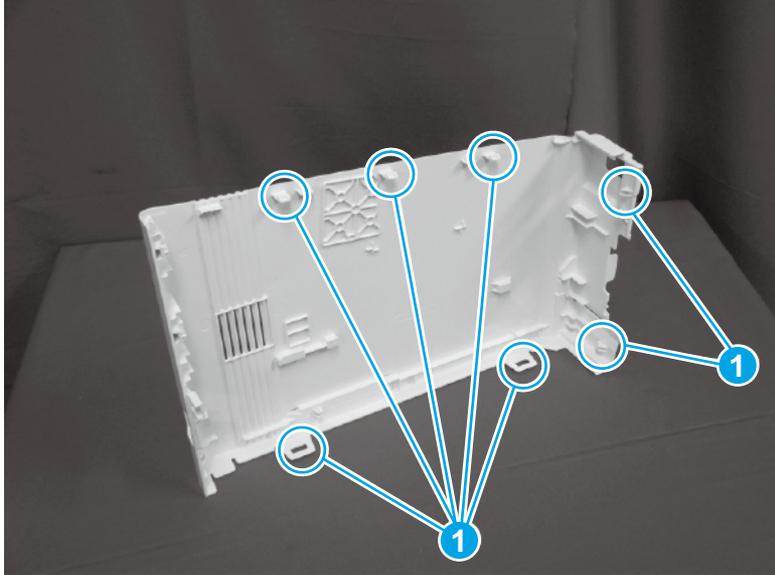


2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

---

Figure 1-34 Remove one screw and release tabs

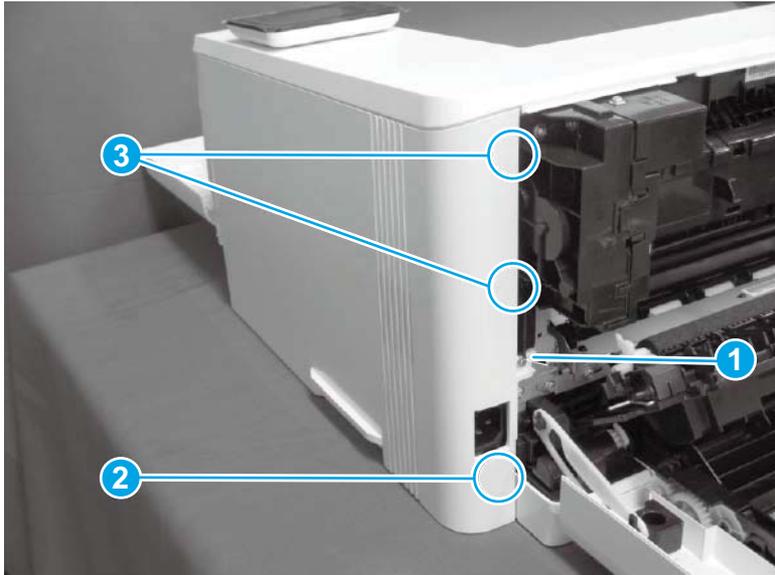

3. Release seven tabs (callout 1) along the top, bottom, and front of the cover. Pull the cover (callout 2) away from the printer to remove it.

---


 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-35** Remove the right cover

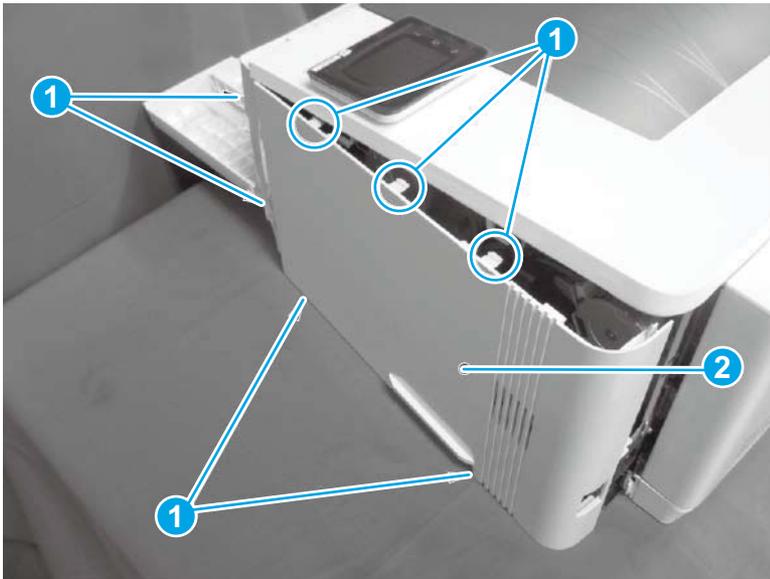

#### Step 4: Remove the right cover (M178-M181 and M278-M281)


---

 **NOTE:** This step is for the M178-M181 and M278-M281 printers. For the M153-M154 and M253-M254 printers, skip this step and go to [Step 5: Unpack the replacement assembly on page 48](#).

---

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-36 Tab locations

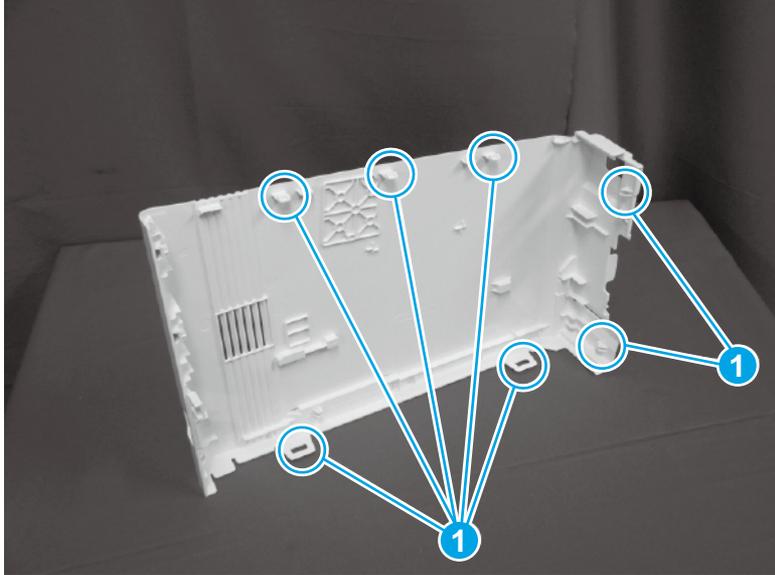


2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

---

Figure 1-37 Remove one screw and release tabs

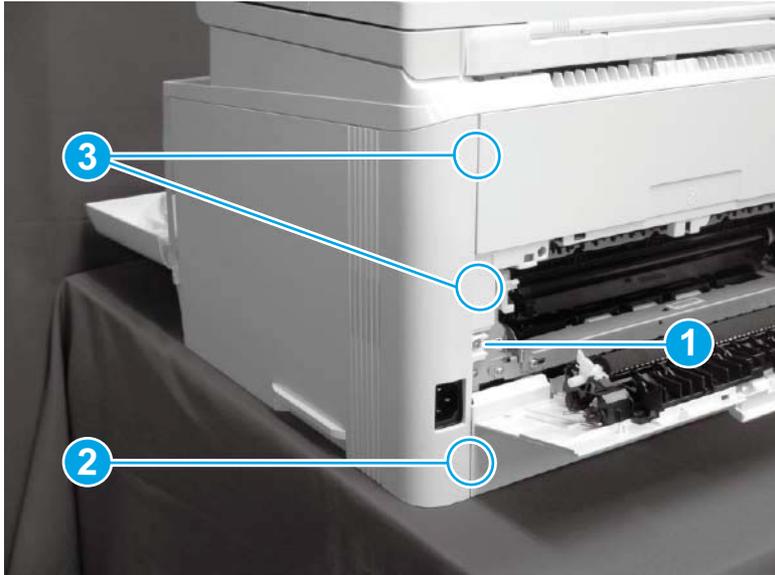


3. Release seven tabs (callout 1) along the top, bottom, and front of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-38** Remove the right cover

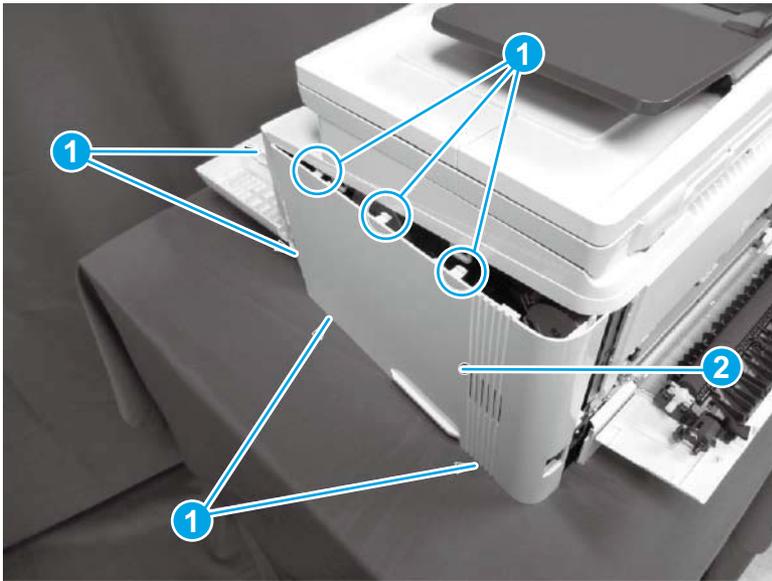

### Step 5: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Left cover

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and rear doors](#)
- [Step 3: Remove the left cover \(M153-M154 and M253-M254\)](#)
- [Step 4: Remove the left cover \(M178-M181 and M278-M281\)](#)
- [Step 5: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the left cover.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Left cover part numbers	
RC5-2028-000CN	Left cover (M153-M154 wireless models and M253-M254 models)
RL2-3224-000CN	Left cover (M153-M154 non-wireless models)
RC5-2034-000CN	Left cover (M178-M181 4-in-1 model and M278-M281 models)
RL2-3189-000CN	Left cover (M178-M181 3-in-1 and 3-in-1 network wireless models)

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-39 Remove the cassette tray



### Step 2: Open the front and rear doors


1. Open the front door.

Figure 1-40 Open the front door



2. **Simplex models only:** Open the rear door.

**Figure 1-41** Open the rear door

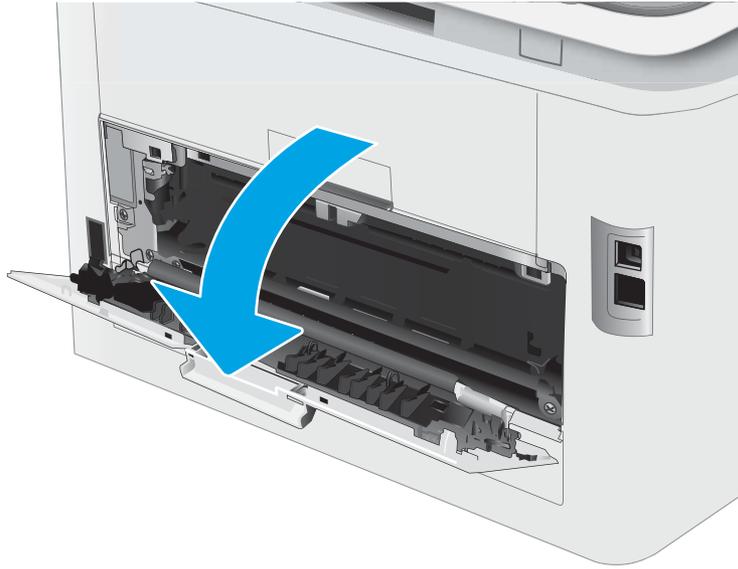

3. **Duplex models only:** Open the duplexer door.

**Figure 1-42** Open the duplexer door




### Step 3: Remove the left cover (M153-M154 and M253-M254)

 **NOTE:** This step is for the M153-M154 and M253-M254 printers. For the M178-M181 and M278-M281 printers, skip this step and go to [Step 4: Remove the left cover \(M178-M181 and M278-M281\) on page 54.](#)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-43 Tab locations

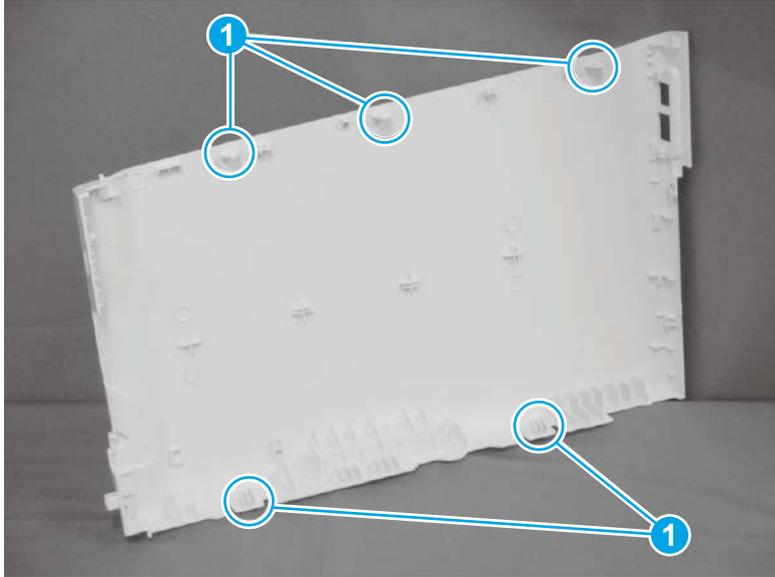


2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

---

Figure 1-44 Remove one screw and release tabs

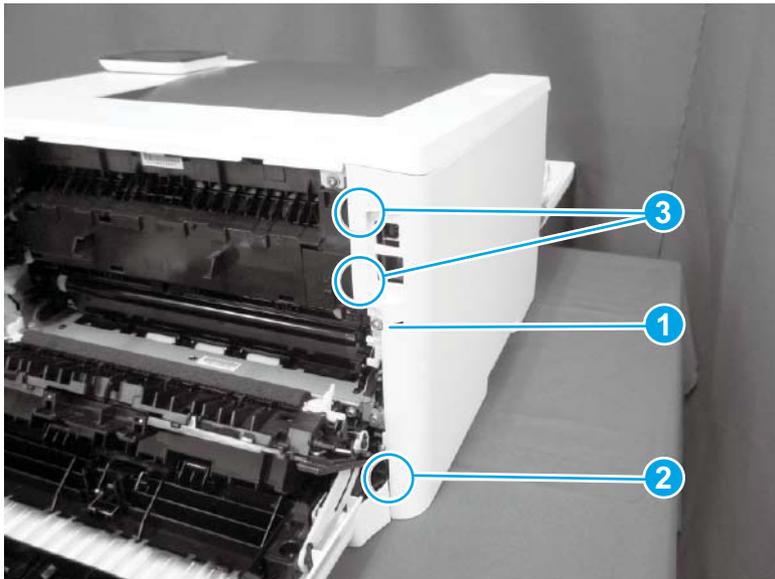

3. Release five tabs (callout 1) along the top and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

---


 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-45** Remove the left cover

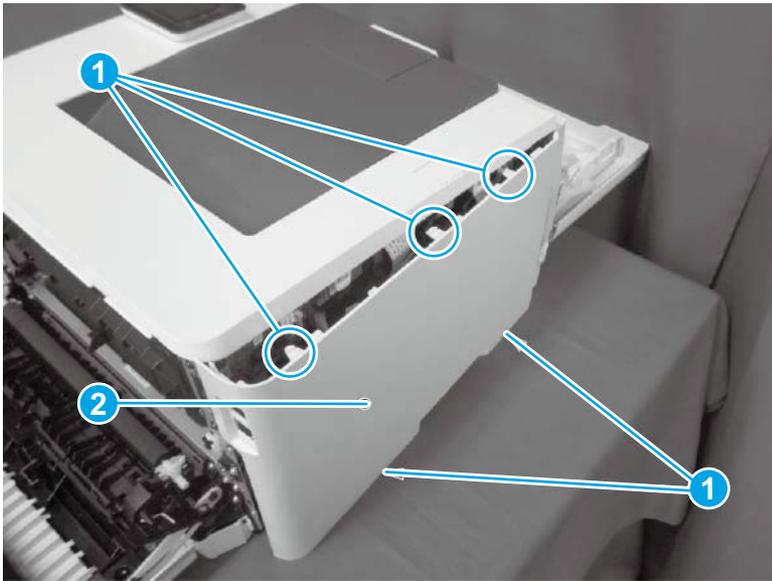

#### Step 4: Remove the left cover (M178-M181 and M278-M281)


---

 **NOTE:** This step is for the M178-M181 and M278-M281 printers. For the M153-M154 and M253-M254 printers, skip this step and go to [Step 5: Unpack the replacement assembly on page 56](#).

---

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


Figure 1-46 Tab locations

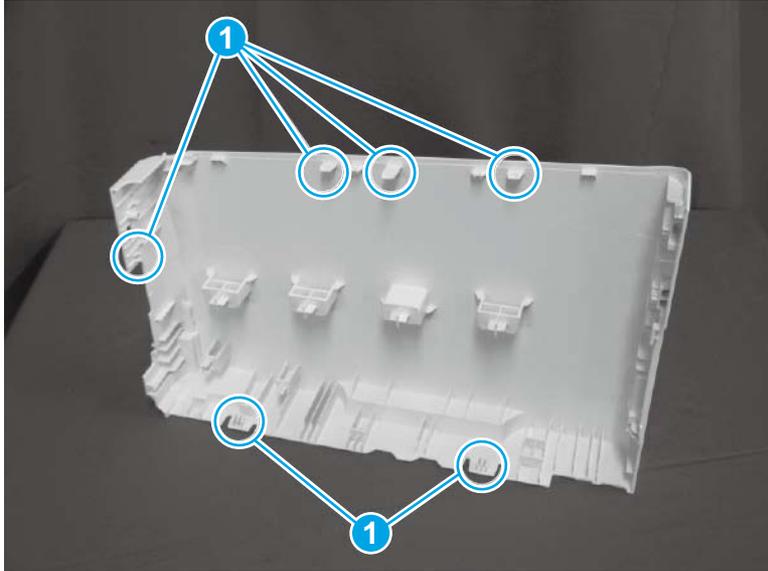

2. At the rear of the printer, remove one screw (callout 1), and then release one tab (callout 2).

 **TIP:** Use a small, flat-blade screwdriver to release the tab.

Figure 1-47 Remove one screw and release tab

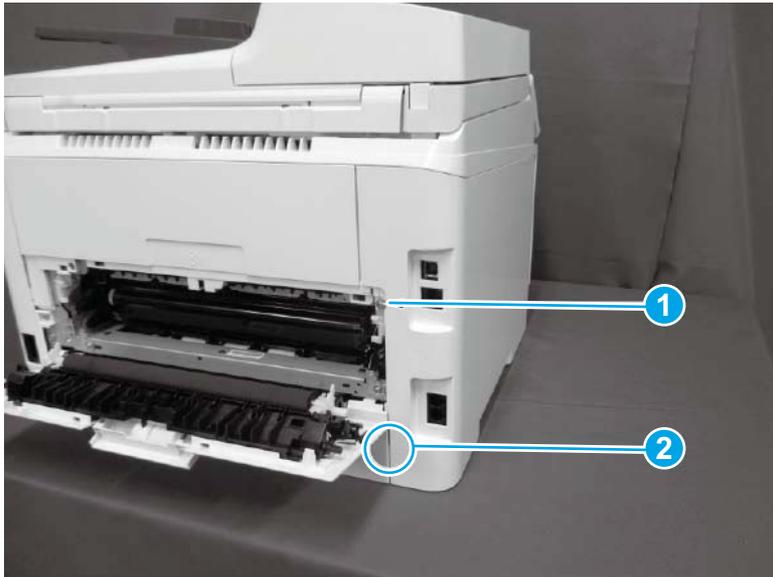


3. Release six tabs (callout 1) along the top, front, and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-48** Remove the left cover

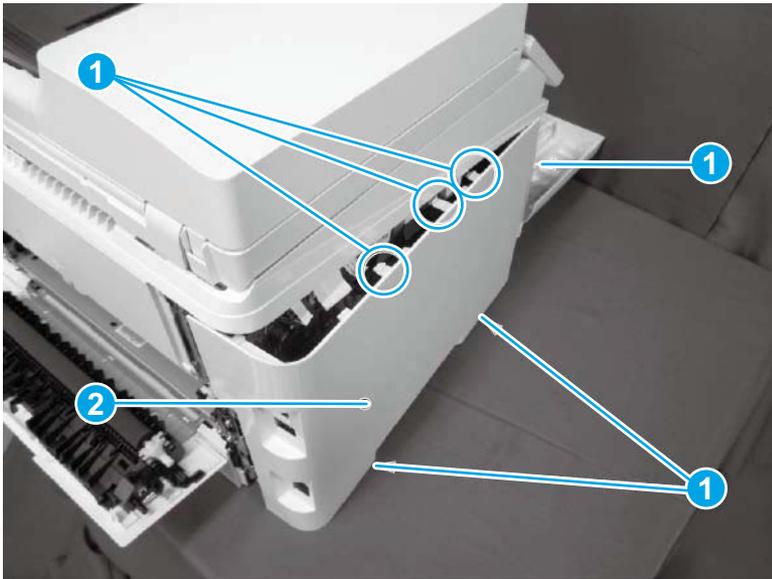

### Step 5: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Rear cover (simplex models)

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and rear doors](#)
- [Step 3: Remove the right cover \(M153-M154 and M253-M254\)](#)
- [Step 4: Remove the left cover \(M153-M154 and M253-M254\)](#)
- [Step 5: Remove the right cover \(M178-M181 and M278-M281\)](#)
- [Step 6: Remove the left cover \(M178-M181 and M278-M281\)](#)
- [Step 7: Remove the rear cover](#)
- [Step 8: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the rear cover on simplex models.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### Rear cover (simplex models) part number

RC4-3817-000CN

Rear cover (simplex models)

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

## Post service test

No post service test is available for this assembly.

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-49 Remove the cassette tray



### Step 2: Open the front and rear doors


1. Open the front door.

Figure 1-50 Open the front door



2. Open the rear door.

**Figure 1-51** Open the rear door

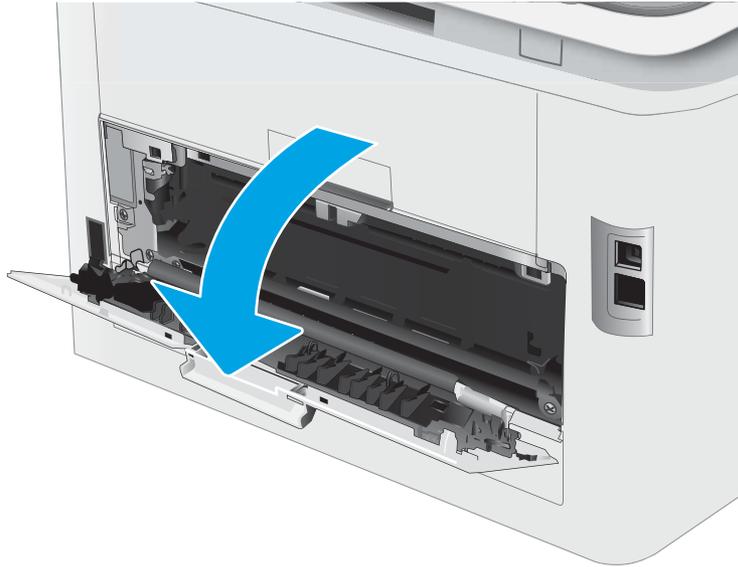


### Step 3: Remove the right cover (M153-M154 and M253-M254)

 **NOTE:** This step is for the M153-M154 and M253-M254 printers. For the M178-M181 and M278-M281 printers, skip this step and go to [Step 5: Remove the right cover \(M178-M181 and M278-M281\) on page 63.](#)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


**Figure 1-52** Tab locations

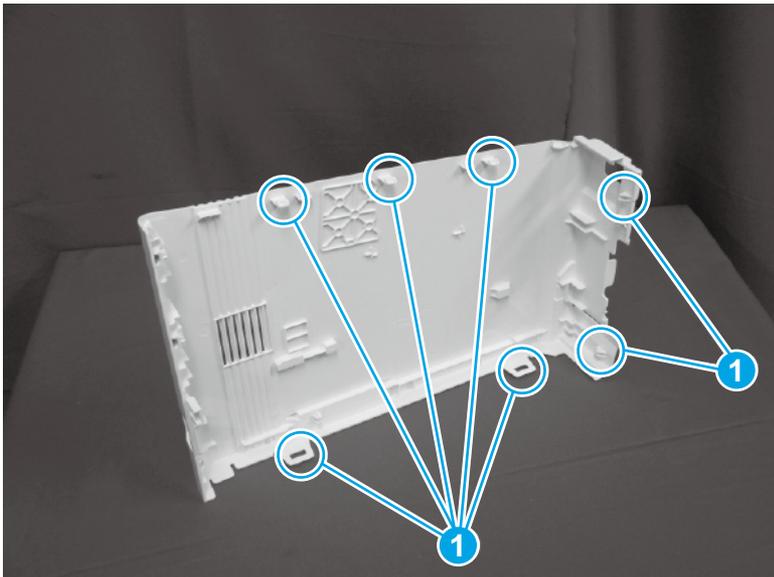

2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

**Figure 1-53** Remove one screw and release tabs

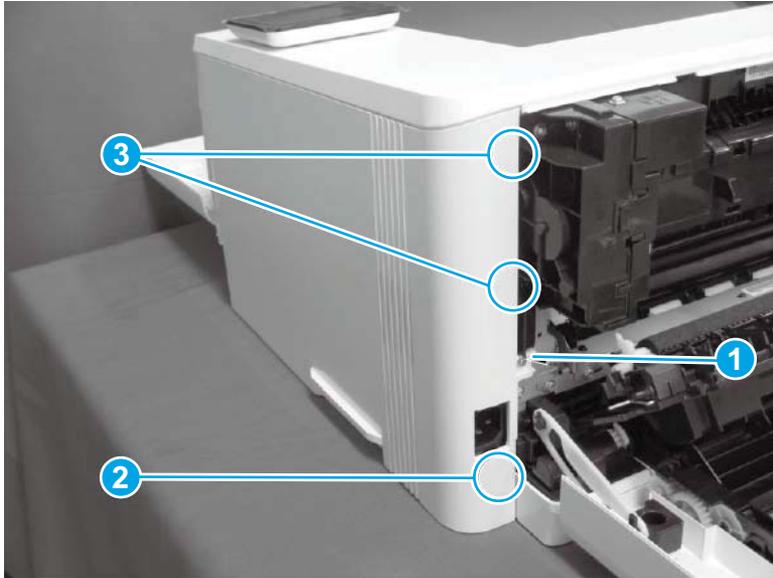


3. Release seven tabs (callout 1) along the top, bottom, and front of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-54** Remove the right cover

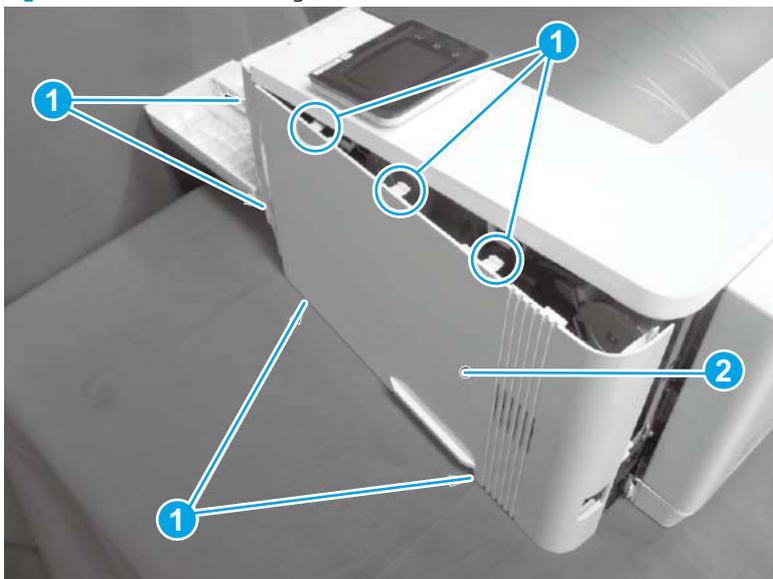


#### Step 4: Remove the left cover (M153-M154 and M253-M254)

 **NOTE:** This step is for the M153-M154 and M253-M254 printers. For the M178-M181 and M278-M281 printers, skip this step and go to [Step 5: Remove the right cover \(M178-M181 and M278-M281\) on page 63](#).

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


**Figure 1-55** Tab locations

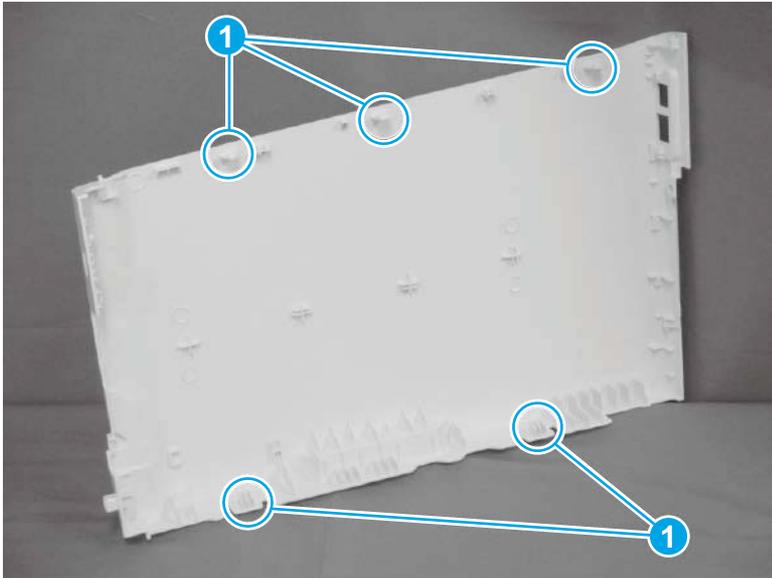

2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

**Figure 1-56** Remove one screw and release tabs

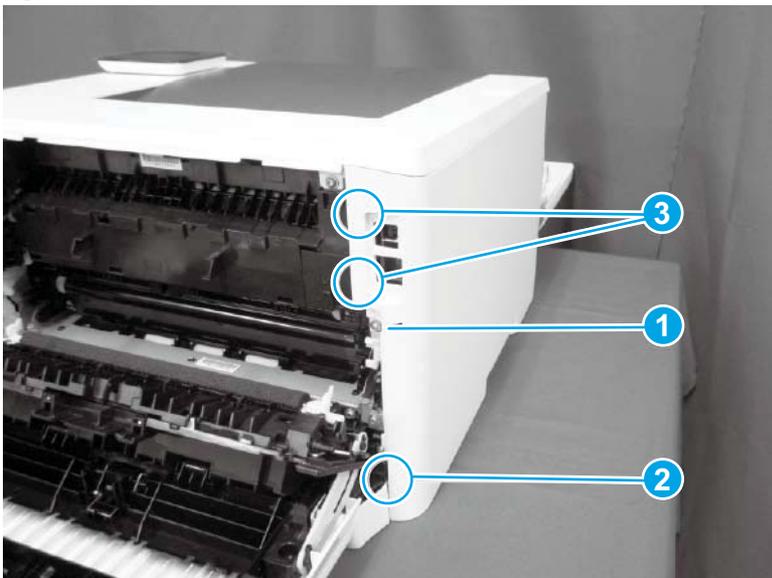

3. Release five tabs (callout 1) along the top and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

---


 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-57** Remove the left cover

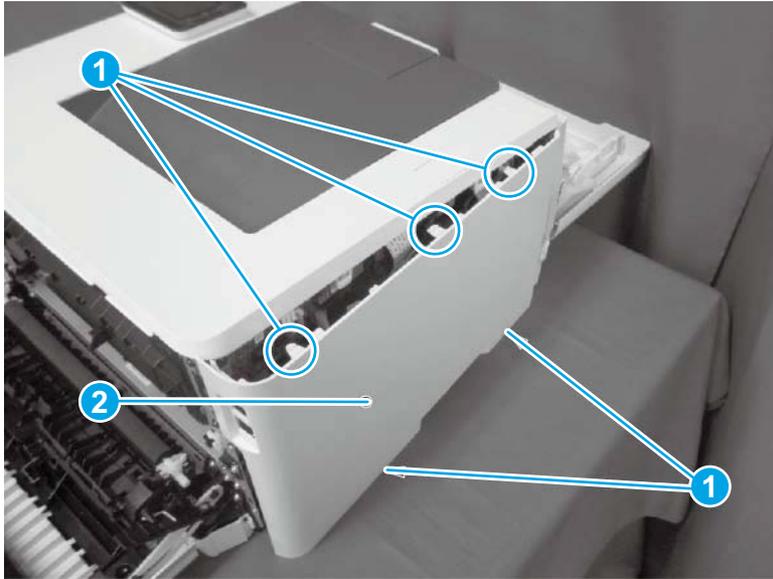

#### Step 5: Remove the right cover (M178-M181 and M278-M281)


---

 **NOTE:** This step is for the M178-M181 and M278-M281 printers. For the M153-M154 and M253-M254 printers, skip this step and go to [Step 7: Remove the rear cover on page 67](#).

---

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-58 Tab locations

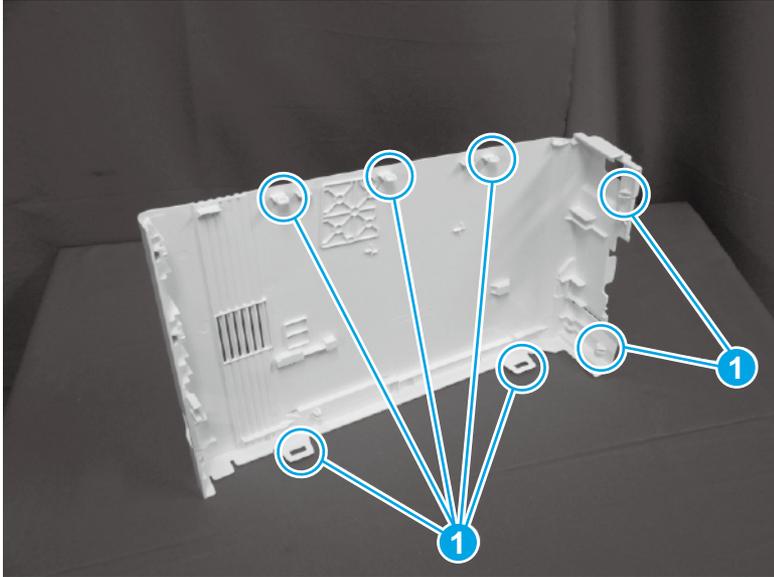


2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

---

Figure 1-59 Remove one screw and release tabs

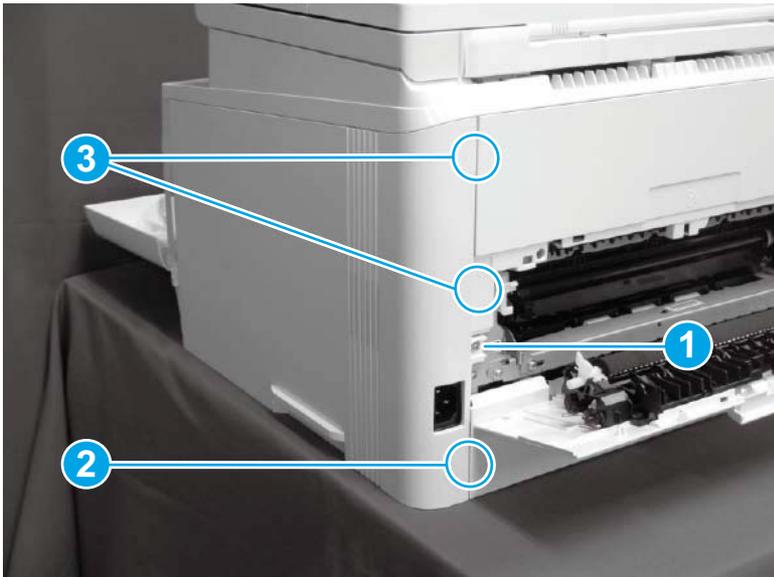

3. Release seven tabs (callout 1) along the top, bottom, and front of the cover. Pull the cover (callout 2) away from the printer to remove it.

---


 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-60** Remove the right cover

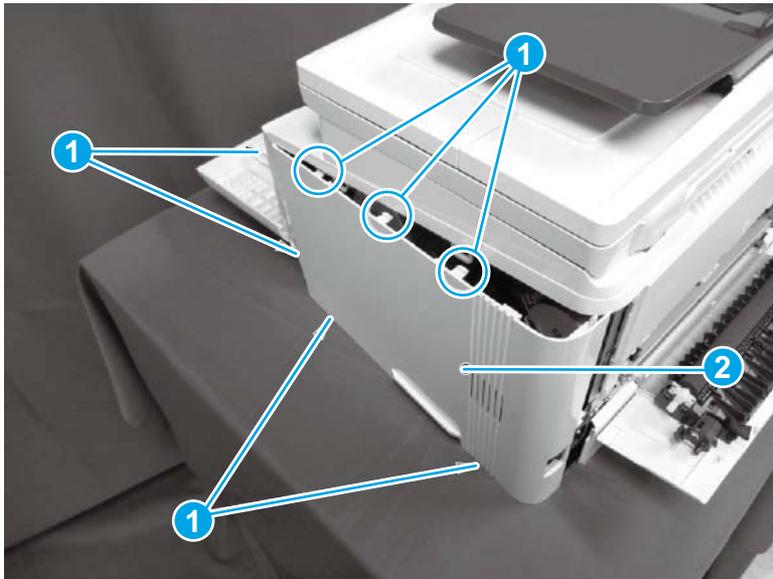

#### Step 6: Remove the left cover (M178-M181 and M278-M281)


---

 **NOTE:** This step is for the M178-M181 and M278-M281 printers. For the M153-M154 and M253-M254 printers, skip this step and go to [Step 7: Remove the rear cover on page 67](#).

---

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


Figure 1-61 Tab locations

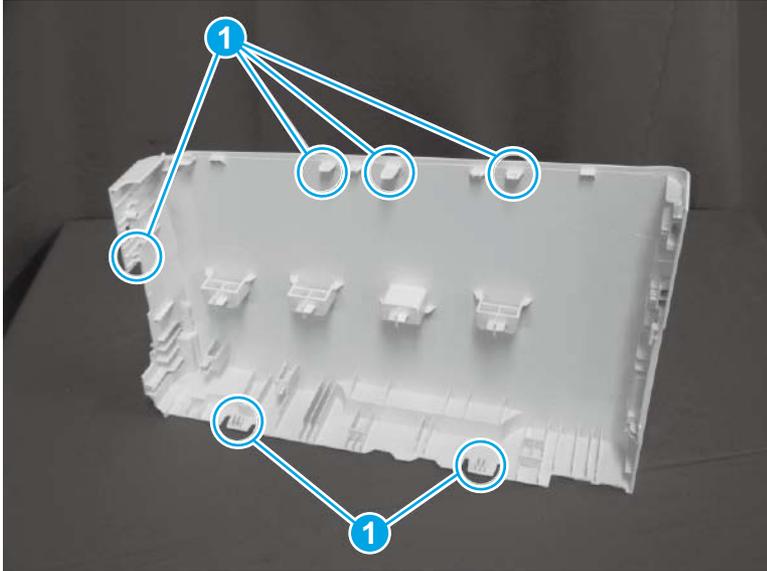

2. At the rear of the printer, remove one screw (callout 1), and then release one tab (callout 2).

 **TIP:** Use a small, flat-blade screwdriver to release the tab.

Figure 1-62 Remove one screw and release tab

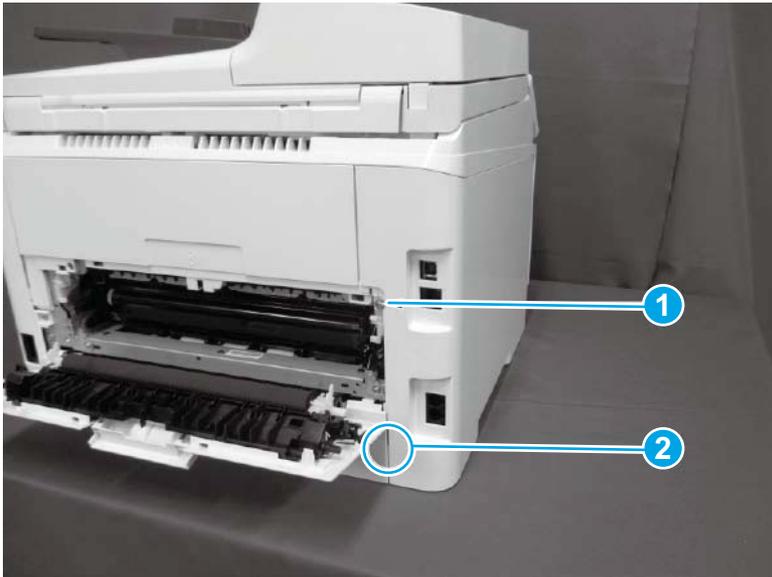

3. Release six tabs (callout 1) along the top, front, and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

---


 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-63** Remove the left cover

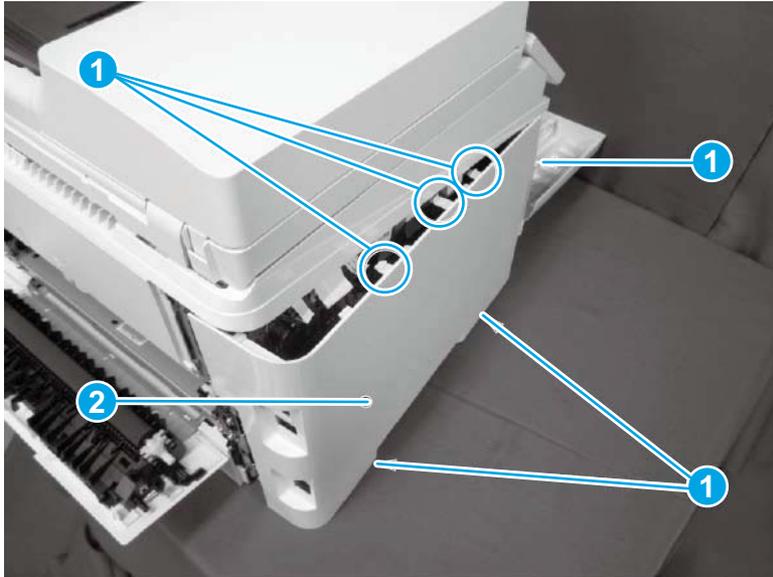

#### Step 7: Remove the rear cover


- ▲ At the back of the printer, use a small flat-blade screwdriver to release three tabs (callout 1) at the bottom of the cover, and then pull the cover down and away from the printer to remove it.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-64 Remove the rear cover

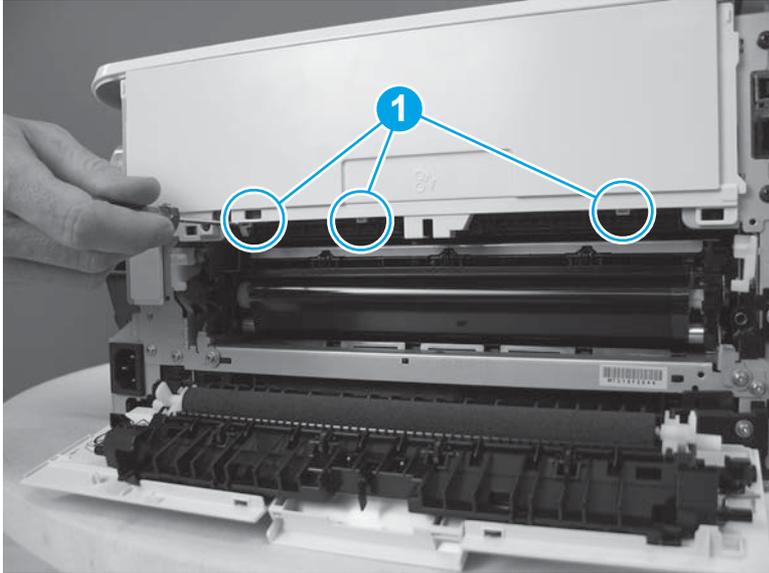

### Step 8: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Top cover (M153-M154 and M253-M254)

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and rear doors](#)
- [Step 3: Remove the right cover \(M153-M154 and M253-M254\)](#)
- [Step 4: Remove the left cover \(M153-M154 and M253-M254\)](#)
- [Step 5: Remove the rear cover \(simplex models only\)](#)
- [Step 6: Remove the top cover \(M153-M154 and M253-M254\)](#)
- [Step 7: Remove the control panel \(M153-M154 only\)](#)
- [Step 8: Remove the control panel \(M254dw touchscreen only\)](#)
- [Step 9: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the top cover for the M153-M154 and M253-M254 models.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Top cover (M153-M154 and M253-M254) part numbers	
RM2-2424-000CN	Top cover (M153-M154 wireless model)
RM2-2405-000CN	Top cover (M153-M154 non-wireless model)
RM2-2421-000CN	Top cover (M253-M254 simplex models)
RM2-2491-000CN	Top cover (M253-M254 duplex network models)
RM2-2496-000CN	Top cover (M253-M254 duplex wireless models)

## Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

## After performing service

- Connect the printer power cable.
- Turn the printer power on.


## Post service test

No post service test is available for this assembly.

## Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

**Figure 1-65** Remove the cassette tray

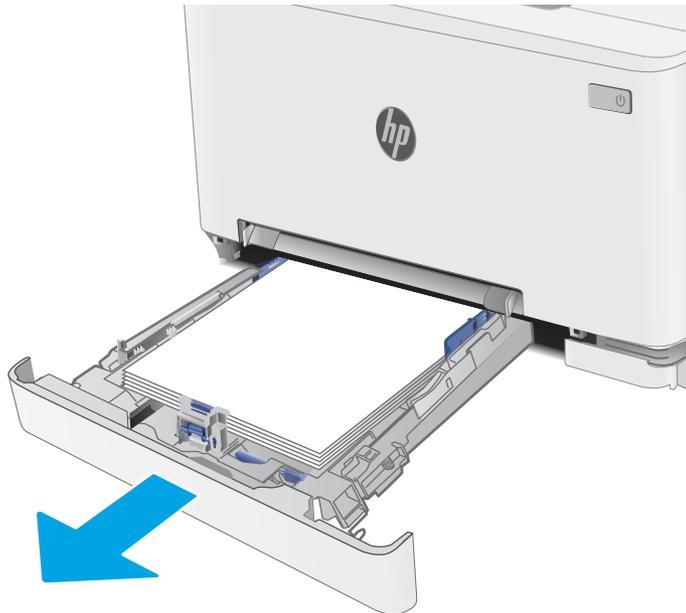

## Step 2: Open the front and rear doors


1. Open the front door.

Figure 1-66 Open the front door




2. **Simplex models only:** Open the rear door.

Figure 1-67 Open the rear door

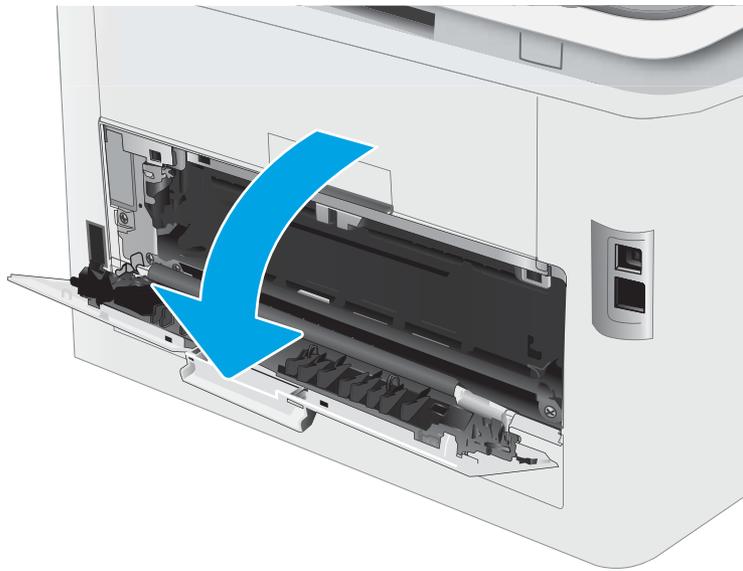

3. **Duplex models only:** Open the duplexer door.


Figure 1-68 Open the duplexer door

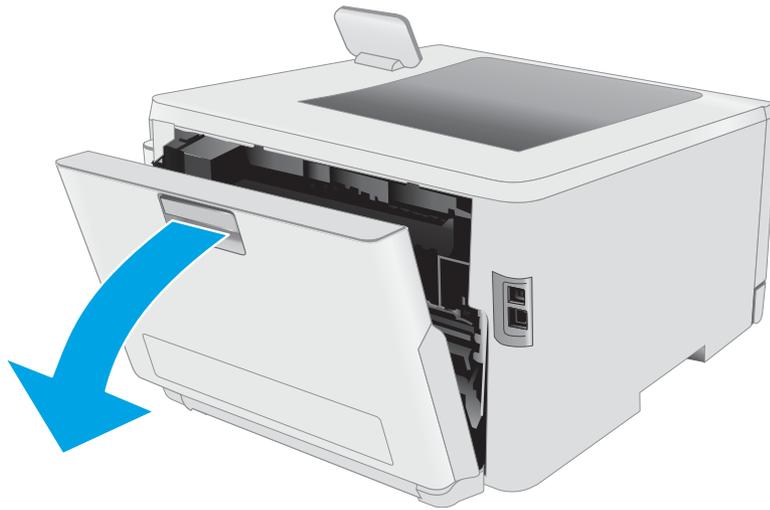

**Step 3: Remove the right cover (M153-M154 and M253-M254)**

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


Figure 1-69 Tab locations

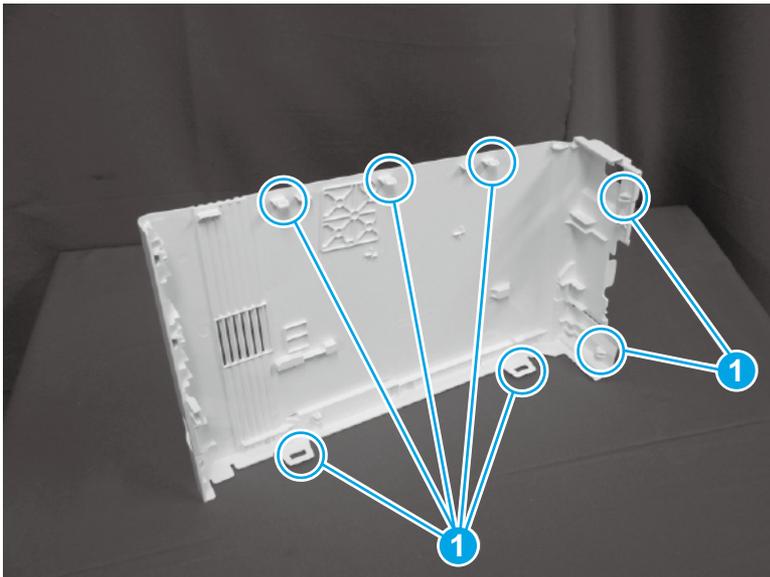

2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

**Figure 1-70** Remove one screw and release tabs

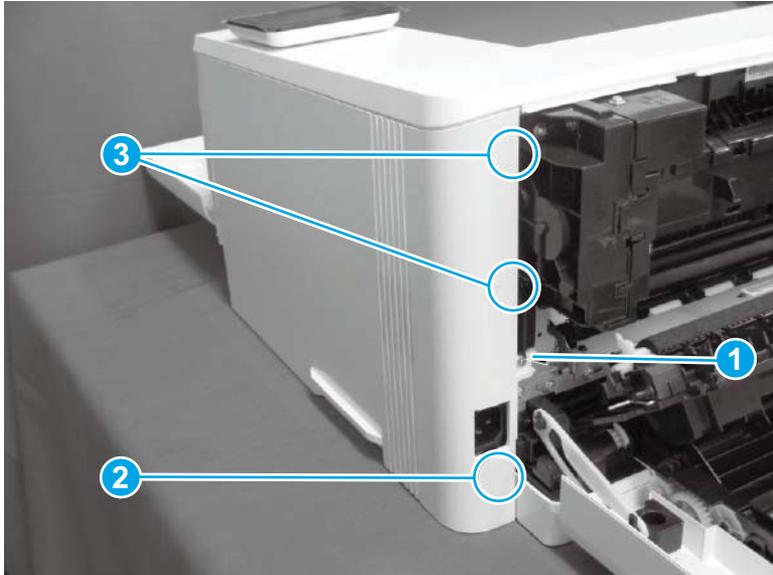


3. Release seven tabs (callout 1) along the top, bottom, and front of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-71** Remove the right cover

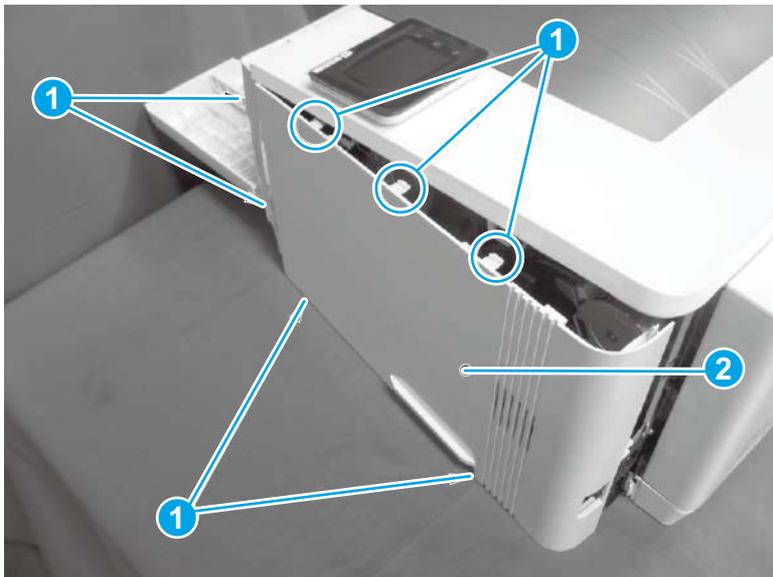

#### Step 4: Remove the left cover (M153-M154 and M253-M254)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-72 Tab locations

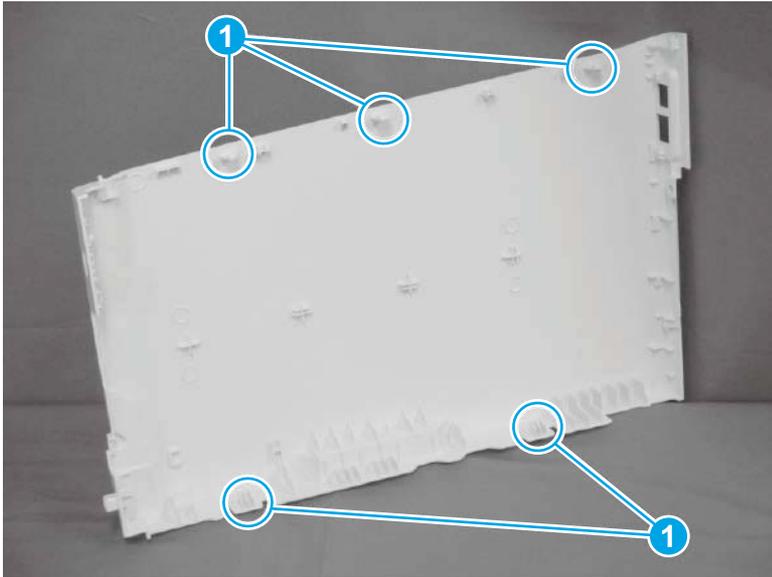


2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

---

Figure 1-73 Remove one screw and release tabs

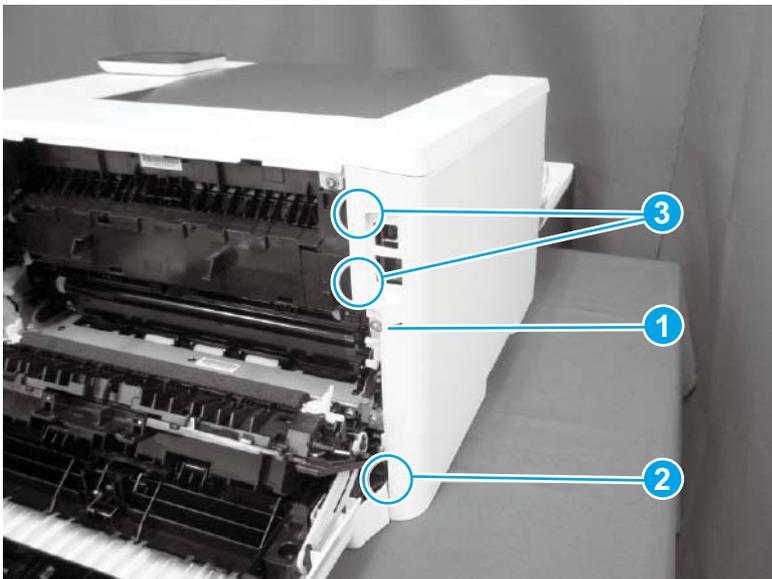

3. Release five tabs (callout 1) along the top and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

---


 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-74** Remove the left cover

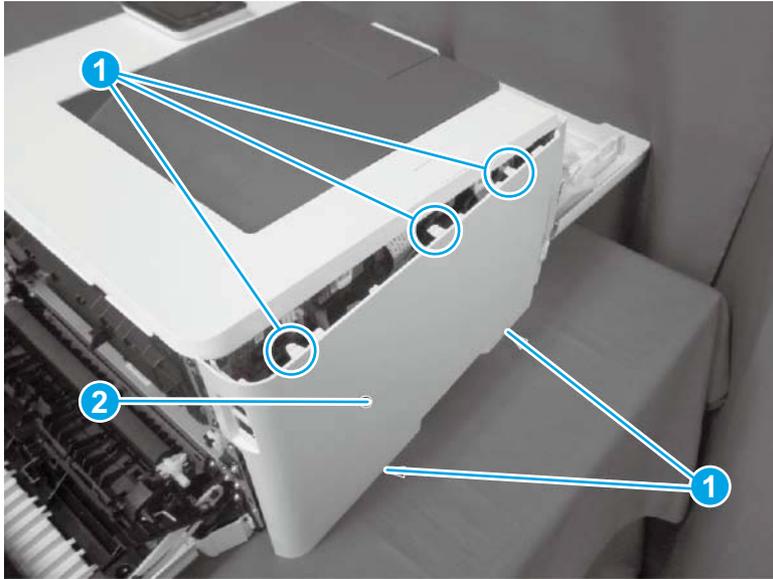

#### Step 5: Remove the rear cover (simplex models only)

---

 **NOTE:** This step is for simplex printers. For duplex printers, skip this step and go to [Step 6: Remove the top cover \(M153-M154 and M253-M254\) on page 76](#).

---


- ▲ At the back of the printer, use a small flat-blade screwdriver to release three tabs (callout 1) at the bottom of the cover, and then pull the cover down and away from the printer to remove it.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-75 Remove the rear cover

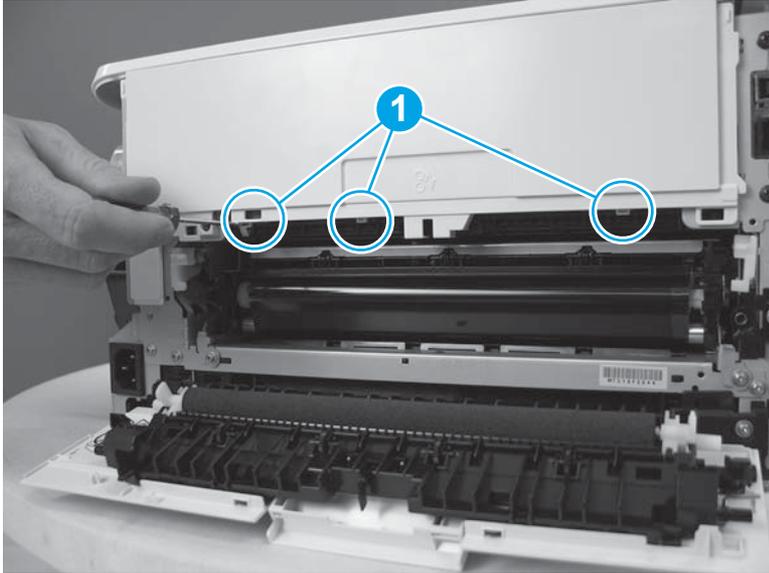


Step 6: Remove the top cover (M153-M154 and M253-M254)

 **NOTE:** The M254dw model is shown in the figures below.


1. On the left side of the printer, on the formatter, disconnect one flat cable (callout 1).

Figure 1-76 Disconnect one connector

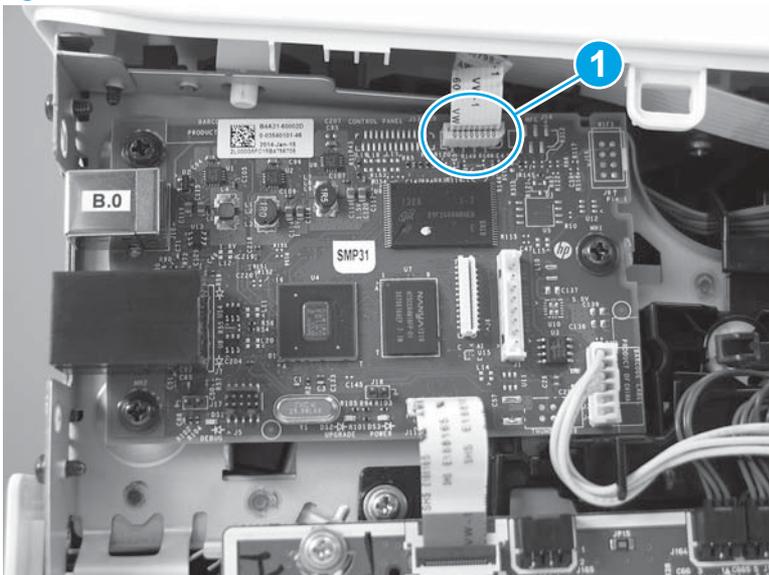


2. **Duplex models only:** Remove one screw (callout 1), and then release the grounding cable. Remove one M4 tapping screw (callout 2), and then pull the guide (callout 3) toward the front of the printer to remove it.

Figure 1-77 Remove two screws and the guide

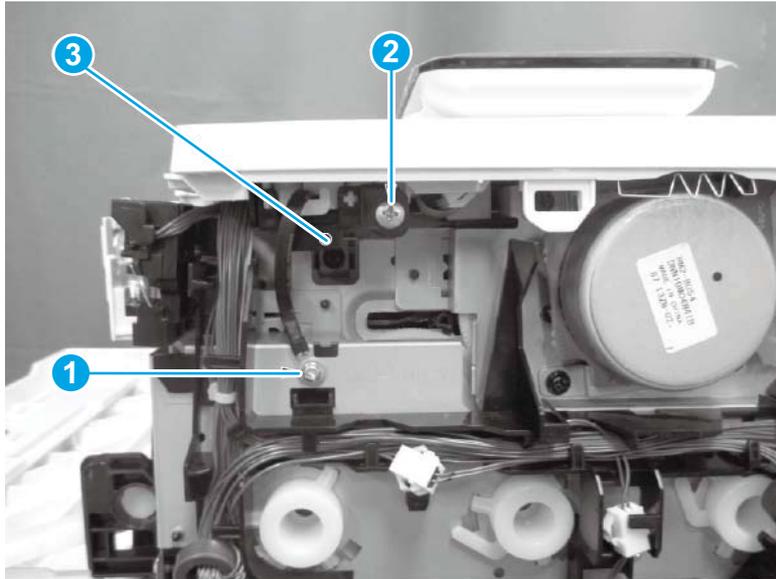

3. Remove two screws (callout 1), and then release one tab (callout 2).

Figure 1-78 Remove two screws

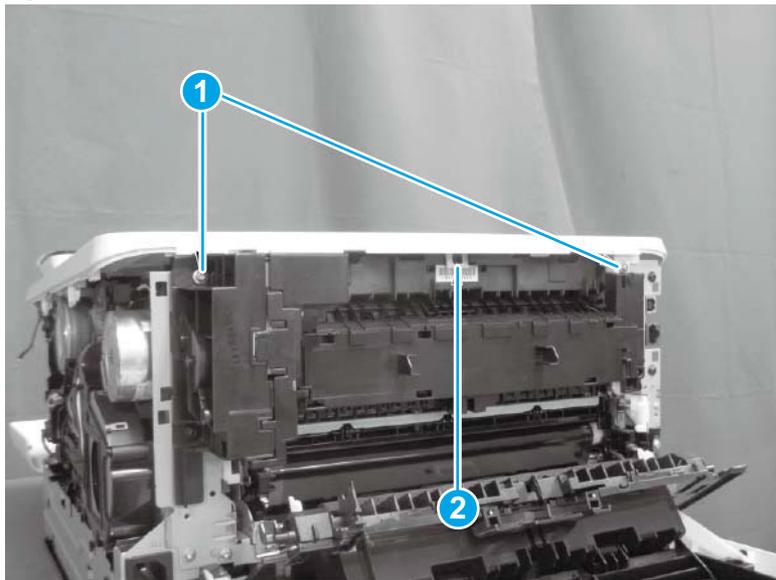

4. Remove three screws (callout 1), and then remove the top cover (callout 2).

---


 **NOTE:** Do not touch the parts around the main motor when removing the top cover.

 **NOTE:** **M153-M154 and M254dw only:** If replacing the top cover, remove the control panel and install it on the replacement top cover. The 2-line control panel is already installed on the M254nw and M254dn top cover.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-79** Remove three screws and the top cover

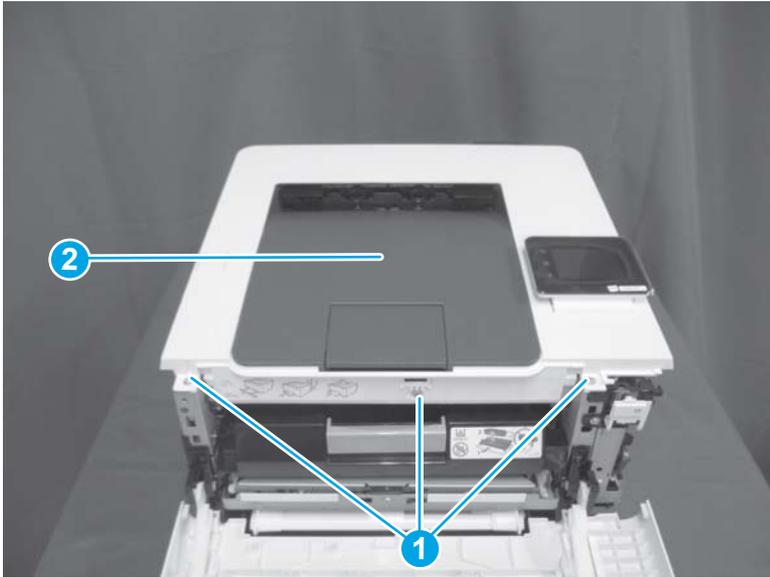

#### Step 7: Remove the control panel (M153-M154 only)


---

 **NOTE:** This step is for the M153-M154 models only. For the M254dw model, skip this step and go to [Step 8: Remove the control panel \(M254dw touchscreen only\) on page 79](#). For the M254nw and M254dn models, skip this step and go to [Step 9: Unpack the replacement assembly on page 81](#).

---

1. On the underside of the top cover, remove two screws (callout 1), and then remove the cover (callout 2).

Figure 1-80 Remove two screws and the cover

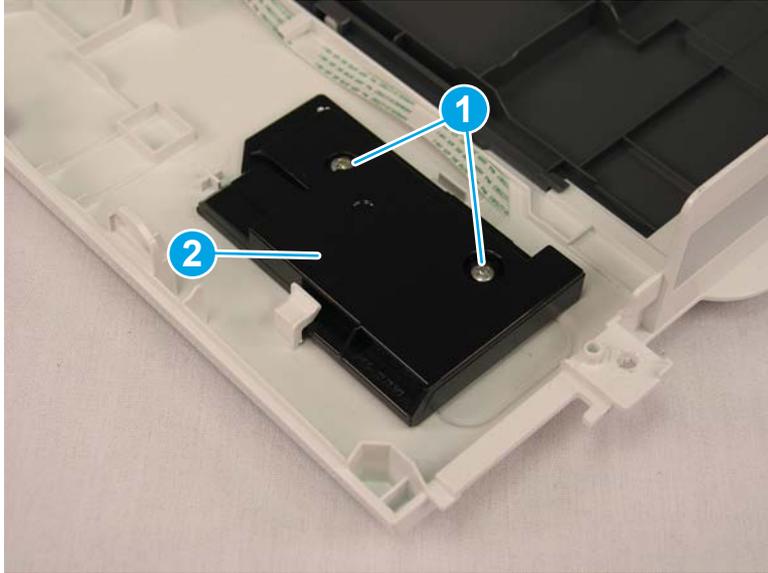


2. Disconnect one flat cable (callout 1), and then lift the control panel up to remove it.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-81 Disconnect one cable and remove the control panel

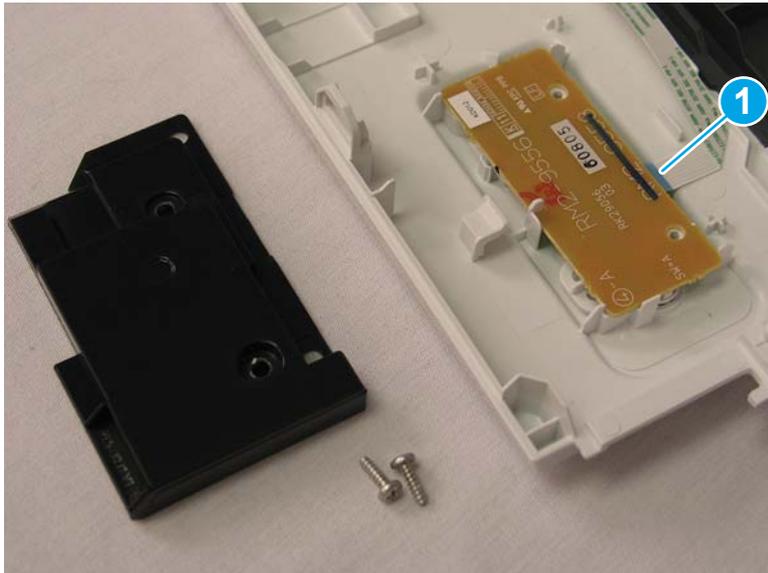

### Step 8: Remove the control panel (M254dw touchscreen only)

---

 **NOTE:** This step is for the M254dw model only. For all other M153-M154 and M253-M254 models, skip this step and go to [Step 9: Unpack the replacement assembly on page 81](#).

---


1. Lay the top cover face down. Release the flat cable (callout 1) from the underside of the cover.

---

 **NOTE:** Do not lose the two pieces of black tape (callout 2). These will be used to secure the flat cable when the control panel is reinstalled.


---

Figure 1-82 Release the flat cable

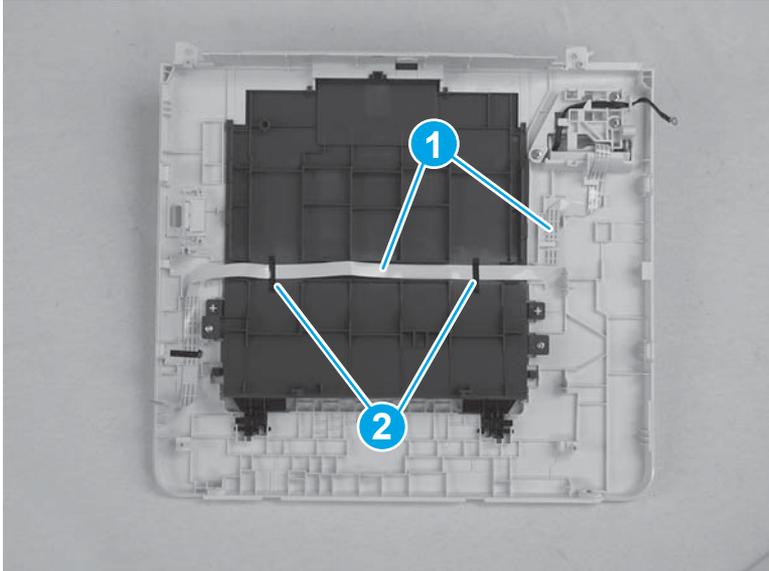


2. Remove the cable (callout 1) from the guides (callout 2), and then remove three screws (callout 3).

Figure 1-83 Remove three screws and release the cable

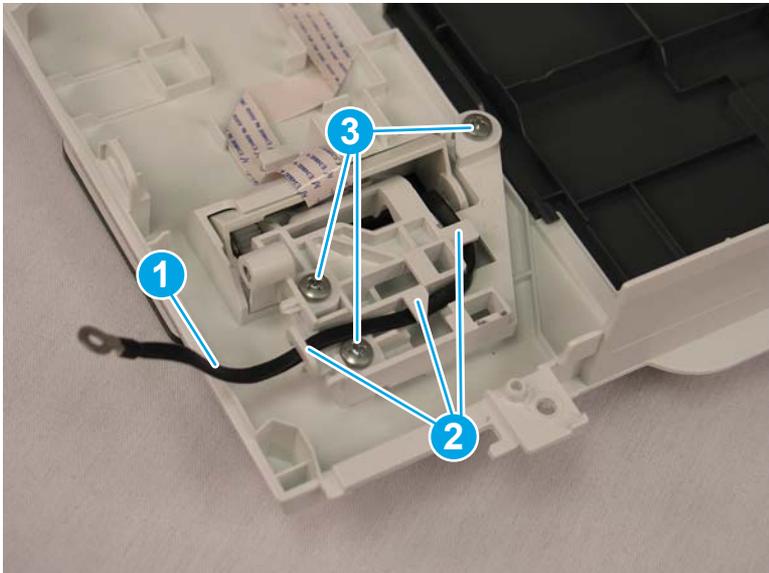

3. Slide the control panel bracket toward the center of the cover to release the hinge pins (callout 1), and then remove the bracket.


**Figure 1-84** Remove the bracket

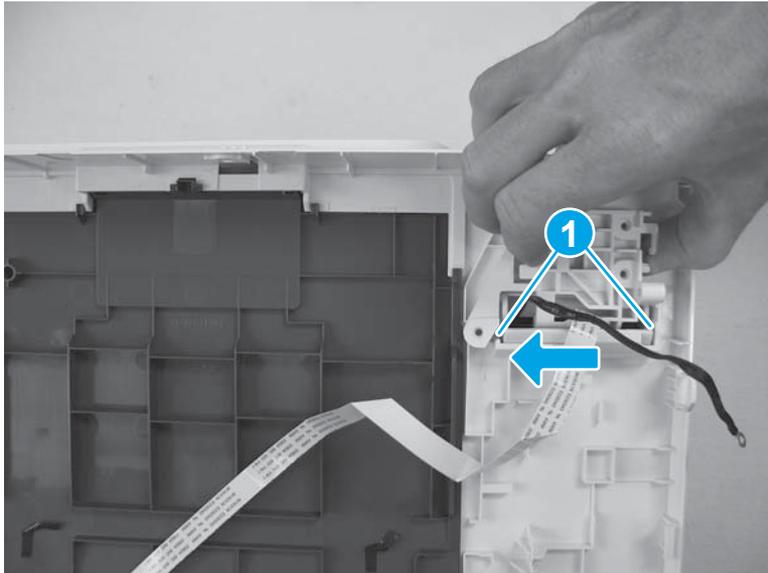

4. Pull the assembly away from the top side of the top cover to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-85** Remove the control panel

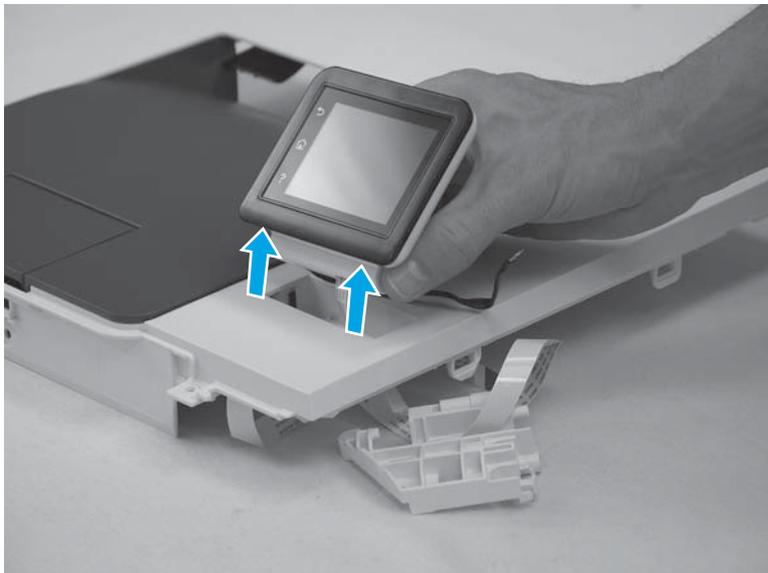

### Step 9: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Top cover (M178-M181)

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front door and rear door](#)
- [Step 3: Remove the right cover \(M178-M181\)](#)
- [Step 4: Remove the left cover \(M178-M181\)](#)
- [Step 5: Remove the rear cover](#)
- [Step 6: Remove the flatbed scanner assembly \(M180n\)](#)
- [Step 7: Remove the document feeder and scanner assembly \(M180nw and M181fw\)](#)
- [Step 8: Remove the control panel \(M178-M181\)](#)
- [Step 9: Remove the top cover \(M178-M181\)](#)
- [Step 10: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the top cover for the M178-M181 and M278-M281 models.

---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Top cover (M178-M181) part number	
RM2-2482-000CN	Top cover (M178-M181)

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

**Figure 1-86** Remove the cassette tray



### Step 2: Open the front door and rear door


1. Open the front door.

Figure 1-87 Open the front door



2. Open the rear door.


Figure 1-88 Open the rear door

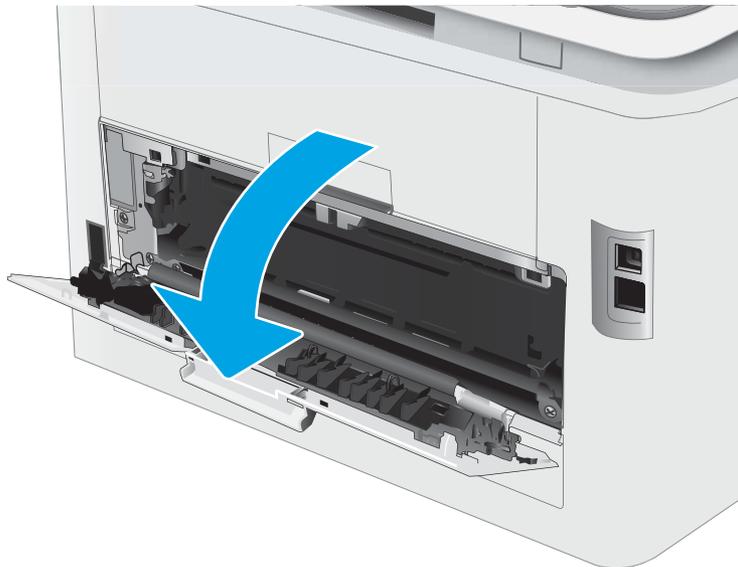

### Step 3: Remove the right cover (M178-M181)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-89 Tab locations

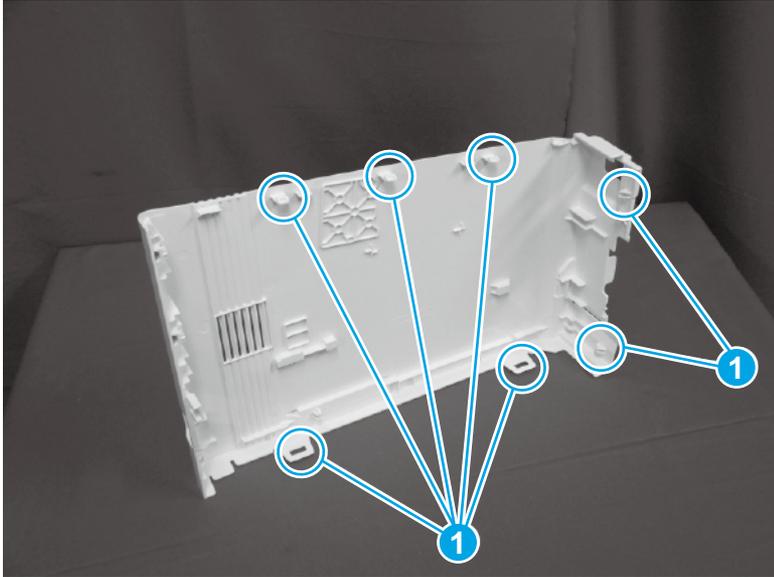


2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

---

Figure 1-90 Remove one screw and release tabs

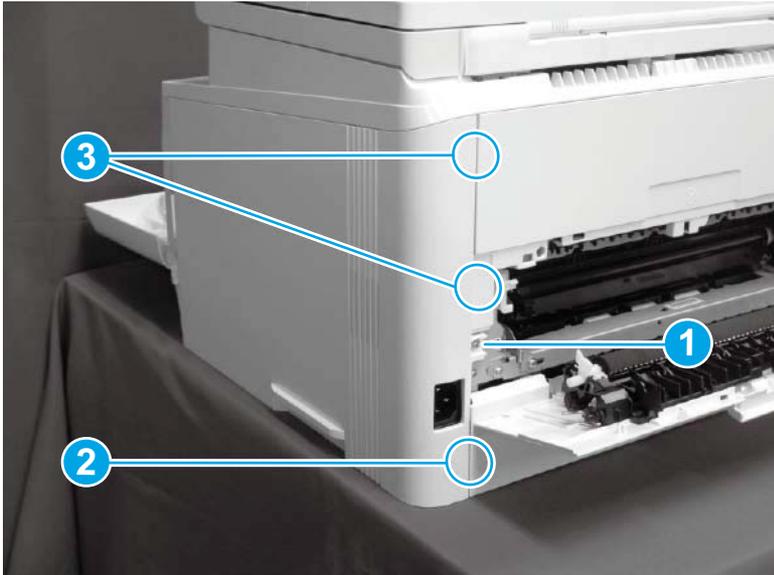


3. Release seven tabs (callout 1) along the top, bottom, and front of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-91 Remove the right cover

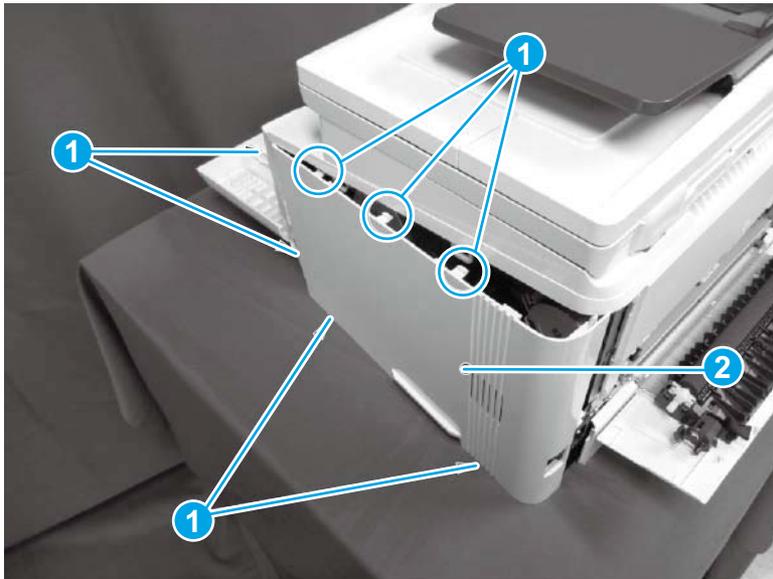

#### Step 4: Remove the left cover (M178-M181)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


Figure 1-92 Tab locations

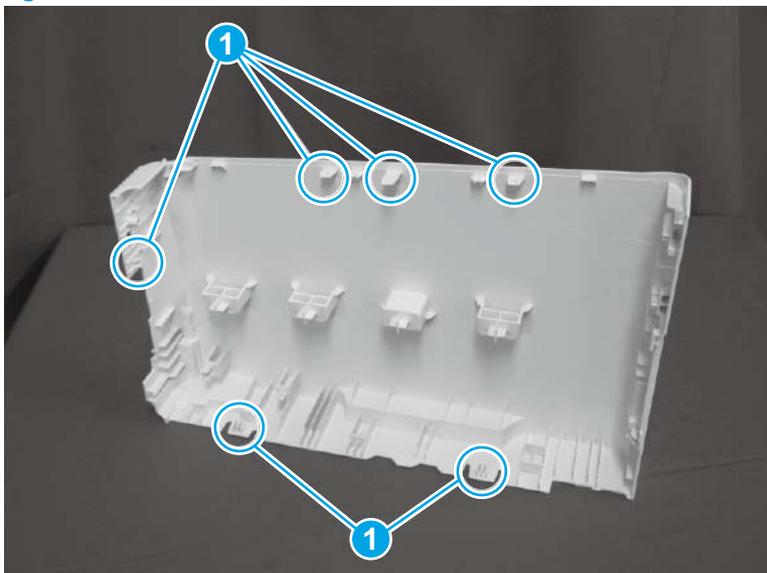

- At the rear of the printer, remove one screw (callout 1), and then release one tab (callout 2).

 **TIP:** Use a small, flat-blade screwdriver to release the tab.

**Figure 1-93** Remove one screw and release tab

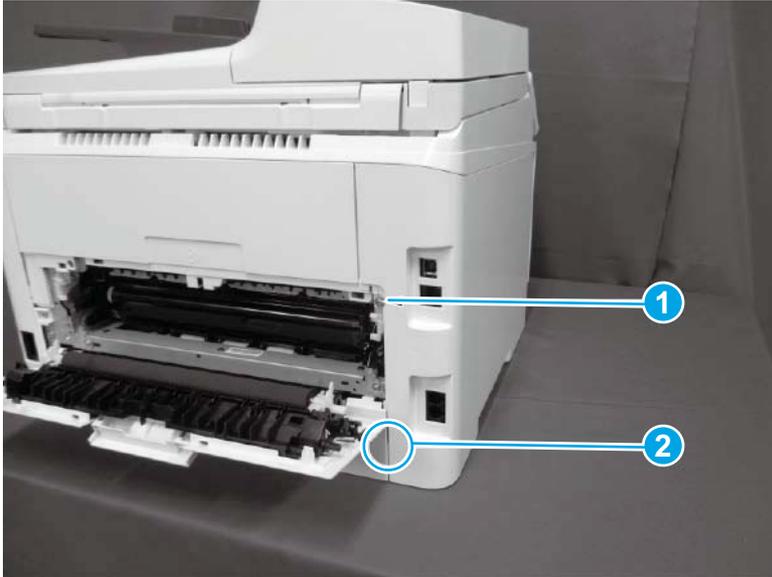


- Release six tabs (callout 1) along the top, front, and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-94** Remove the left cover

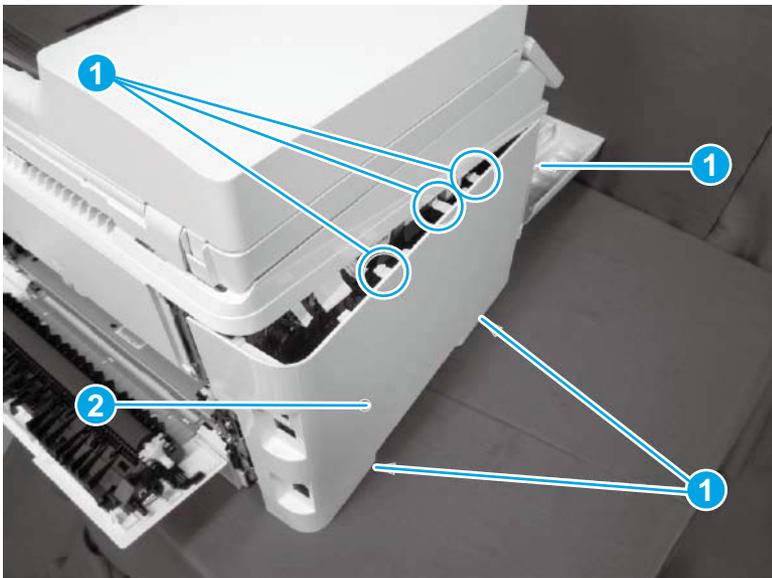


## Step 5: Remove the rear cover

- ▲ At the back of the printer, use a small flat-blade screwdriver to release three tabs (callout 1) at the bottom of the cover, and then pull the cover down and away from the printer to remove it.

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-95 Remove the rear cover

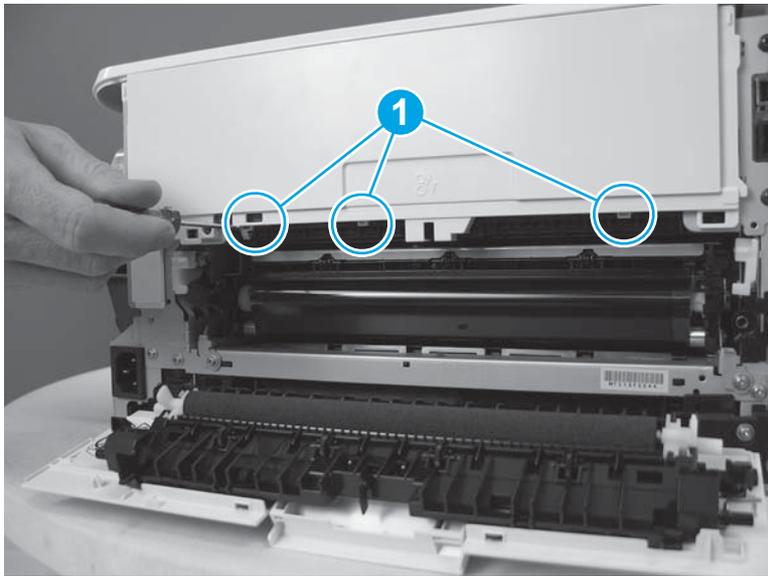


## Step 6: Remove the flatbed scanner assembly (M180n)

📝 **NOTE:** This step is for the M180n printer. For the M180nw and M181fw printers, skip this step and go to [Step 7: Remove the document feeder and scanner assembly \(M180nw and M181fw\) on page 92](#).

1. Disconnect one flat cable (callout 1) from the formatter.


Figure 1-96 Disconnect one flat cable

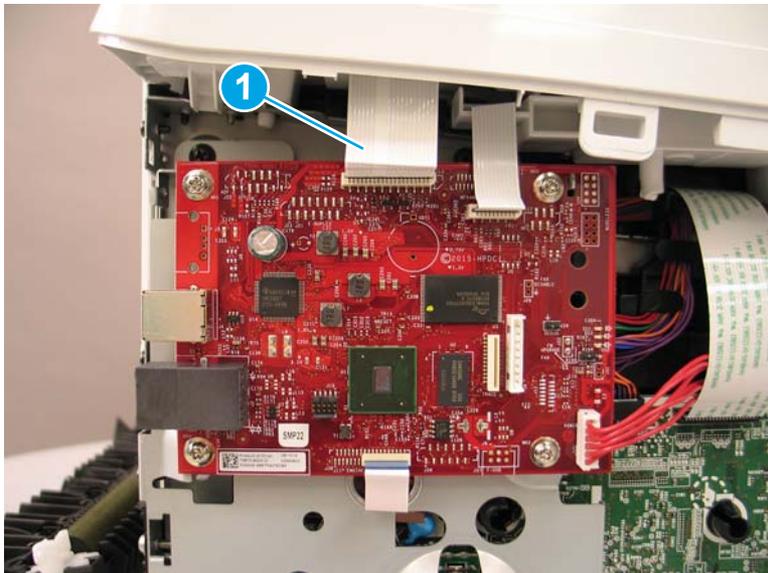

2. Open the scanner. Release one tab (callout 1), and then rotate the slider pin (callout 2) towards the front of the printer to release it.


 **TIP:** Use a Phillips head screwdriver in the end of the slider pin to rotate it.

**Figure 1-97** Release one tab and rotate the slider pin

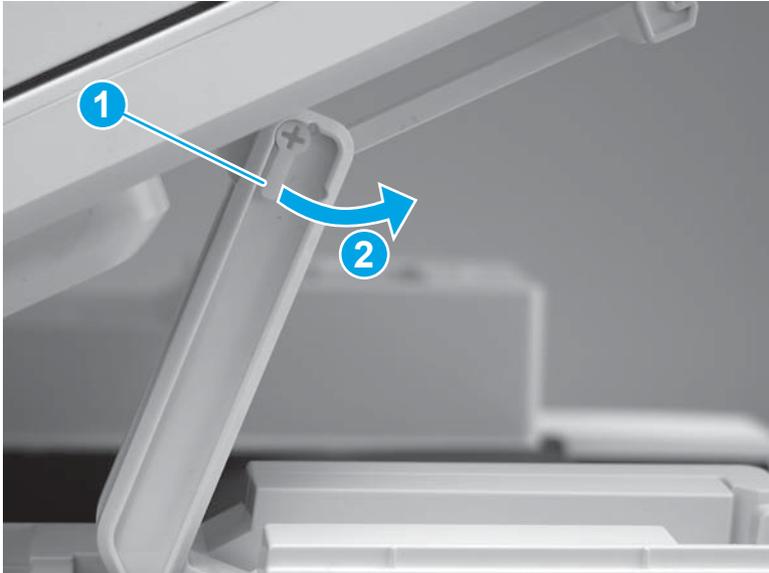

3. Remove the slider pin.

**Figure 1-98** Remove the slider pin

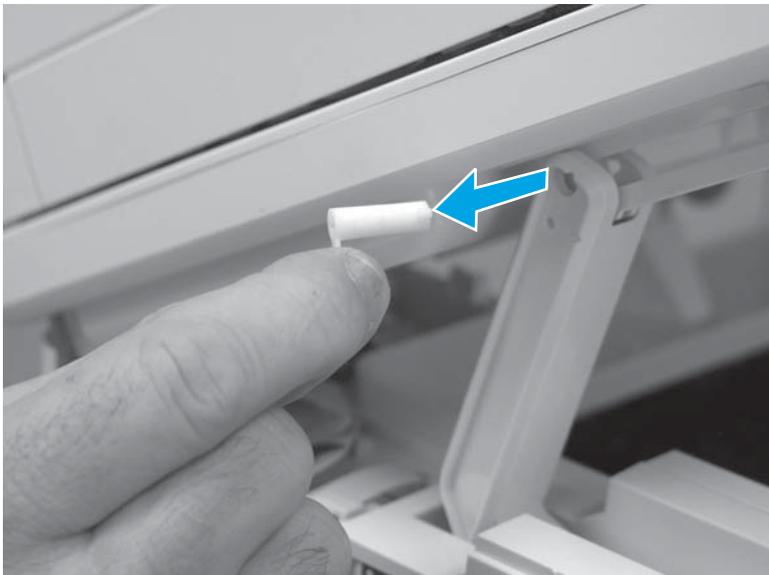

4. Rotate the hinge arm down.


**⚠ WARNING!** The hinge arm is spring-loaded by a strong spring and might snap down suddenly. Be careful not to pinch your fingers between the hinge arm and the top of the printer.

Figure 1-99 Rotate the hinge arm




5. On the scanner bed, use a small, flat-blade screwdriver to release one tab (callout 1), and then remove the scanner cable cover (callout 2).

Figure 1-100 Remove the scanner cable cover

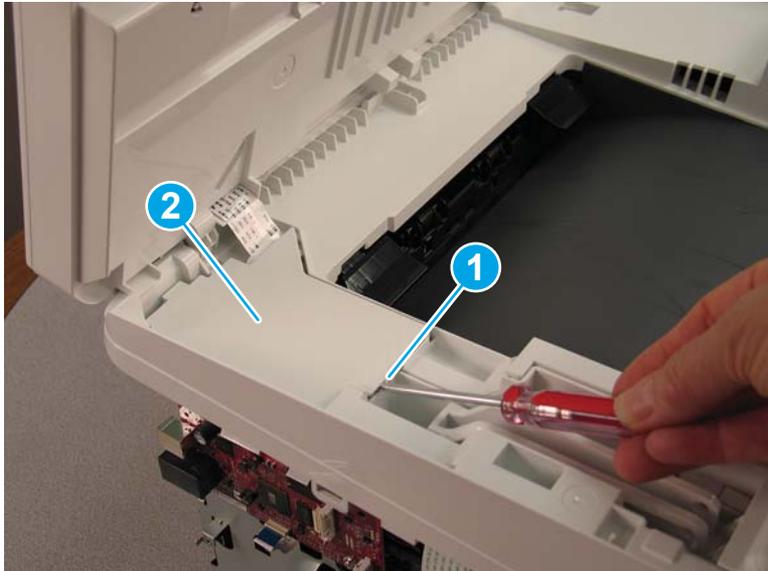

6. Release the flat cable (callout 1) from the guides (callout 2), and then release the flat cable (callout 3) through the opening in the cover.

Figure 1-101 Release the flat cable

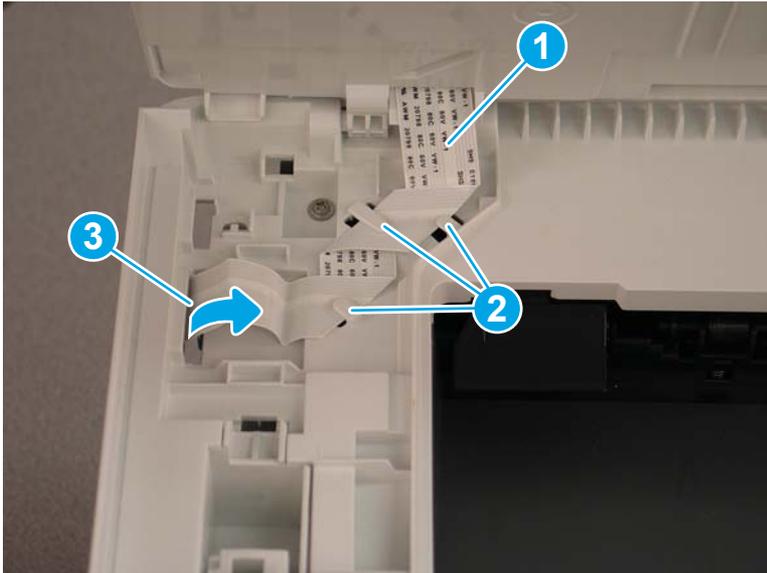


7. Open the scanner assembly fully, slide the assembly to the right (callout 1), and then lift the assembly off of the chassis (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

 **NOTE:** The figure below shows the document feeder scanner. The procedure is also correct for the flatbed scanner.

Figure 1-102 Remove the scanner assembly

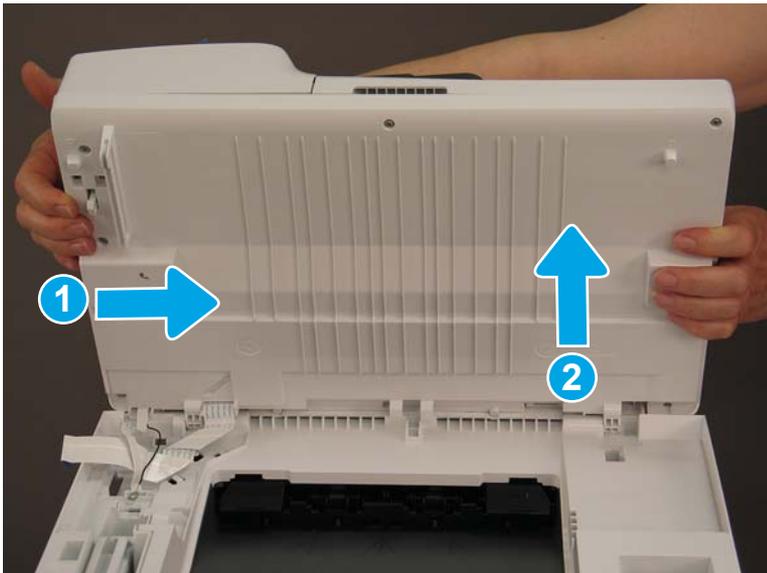


### Step 7: Remove the document feeder and scanner assembly (M180nw and M181fw)

 **NOTE:** This step is for the M180nw and M181fw printers. For the M180n printer, skip this step and go to [Step 8: Remove the control panel \(M178-M181\) on page 96.](#)

1. Disconnect two flat cables (callout 1) from the formatter, and then remove one screw (callout 2) to release the grounding wire.

**Figure 1-103** Disconnect two cables and remove one screw

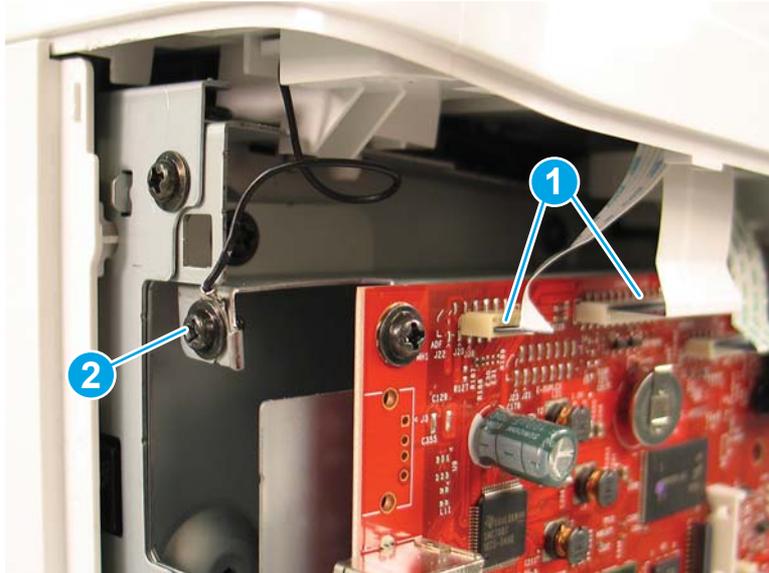


2. Open the scanner. Release one tab (callout 1), and then rotate the ISA slider pin (callout 2) towards the front of the printer to release it.

---

 **TIP:** Use a Phillips head screwdriver in the end of the slider pin to rotate it.


---

**Figure 1-104** Release one tab and rotate the slider pin

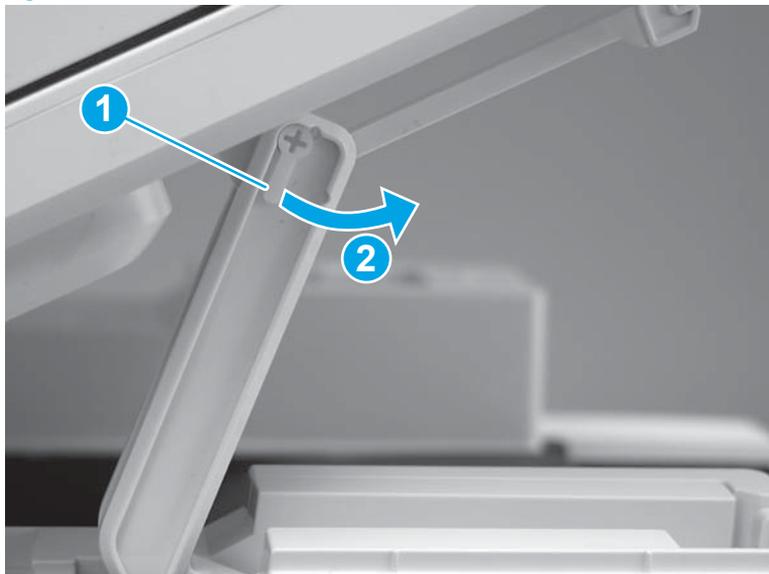

3. Remove the slider pin.


Figure 1-105 Remove the slider pin

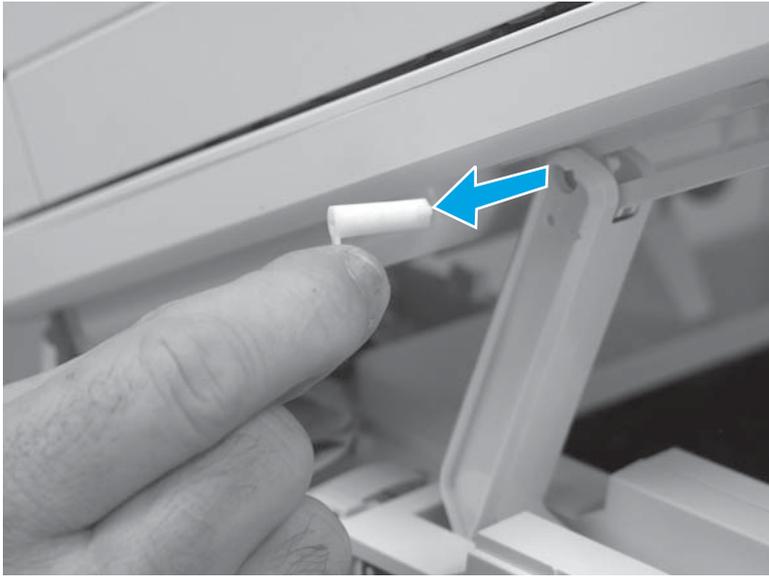

4. Rotate the hinge arm down.


**⚠ WARNING!** The hinge arm is spring-loaded by a strong spring and might snap down suddenly. Be careful not to pinch your fingers between the hinge arm and the top of the printer.

Figure 1-106 Rotate the hinge arm down

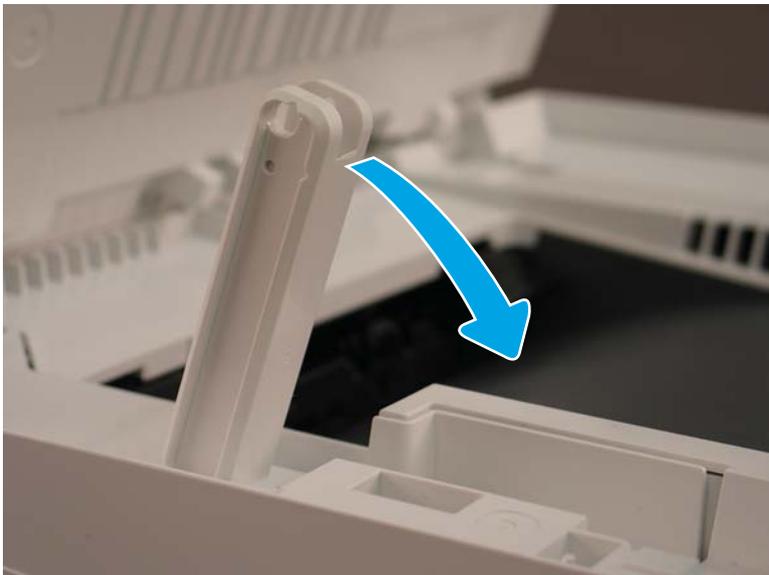


5. On the scanner bed, use a small, flat-blade screwdriver to release one tab (callout 1), and then remove the scanner cable cover (callout 2).

Figure 1-107 Remove the scanner cable cover

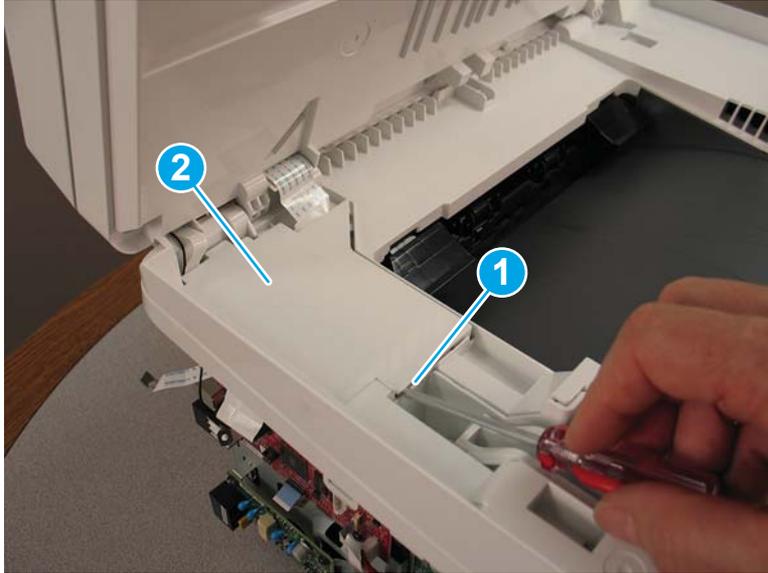

6. Release the flat cable (callout 1) from the guides (callout 2), and then feed the two flat cables (callout 3) through the openings in the scanner.


Figure 1-108 Release the flat cable

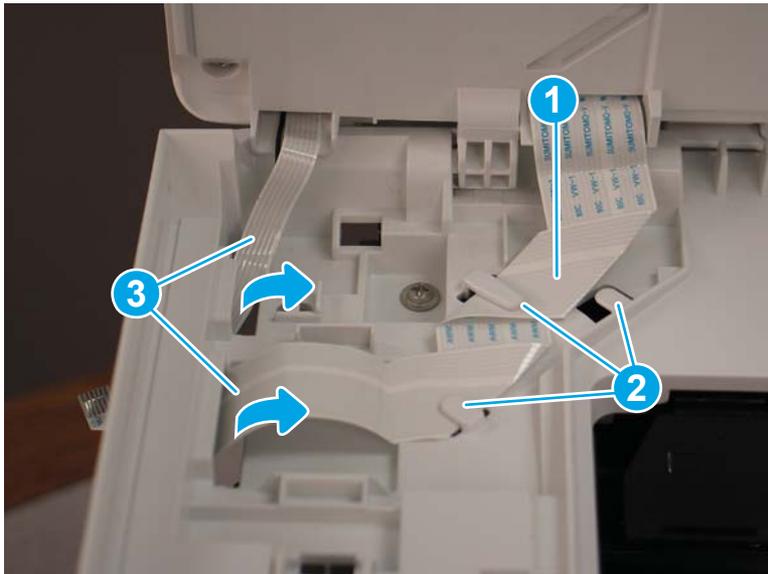

7. Open the scanner assembly fully, slide the assembly to the right (callout 1), and then lift the assembly off of the chassis (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-109** Remove the scanner assembly

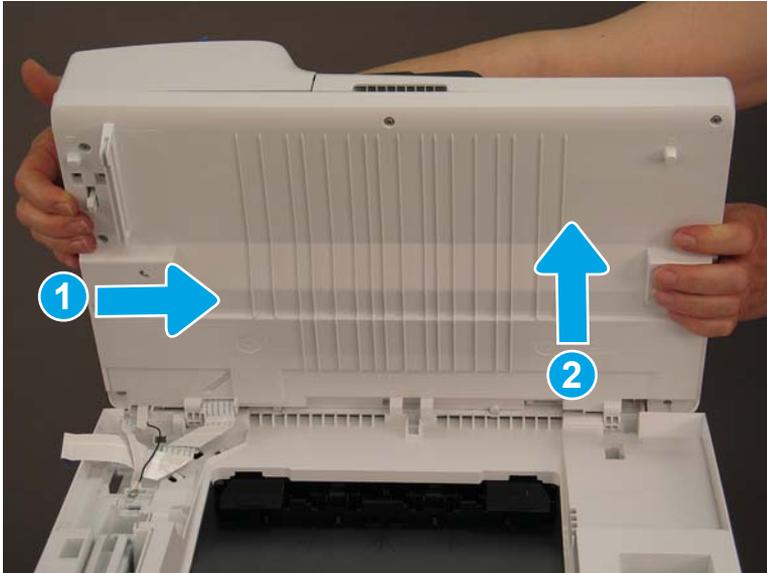

#### Step 8: Remove the control panel (M178-M181)

1. Remove one screw (callout 1) to release the grounding wire.


**Figure 1-110** Remove one screw

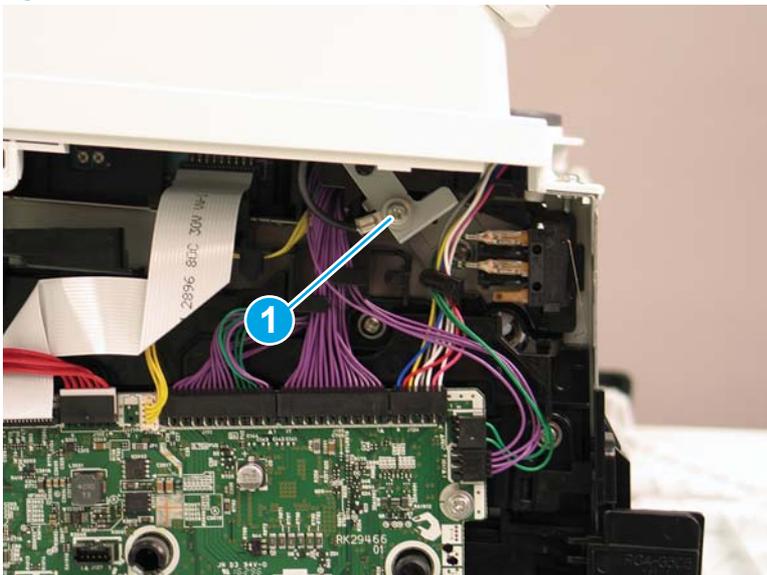

2. Raise the hinge arm.


**⚠ WARNING!** The hinge arm is spring-loaded by a strong spring and might spring up. Be careful not to pinch your fingers between the hinge arm and the top of the printer.

Figure 1-111 Rotate the hinge arm up

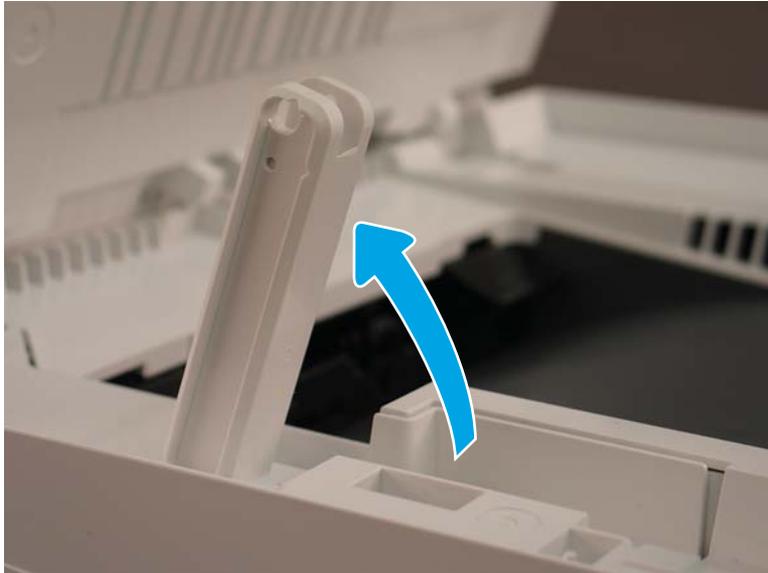

3. Release two tabs (callout 1), and then slide the cover (callout 2) away from the control panel to remove it.


Figure 1-112 Remove the cover

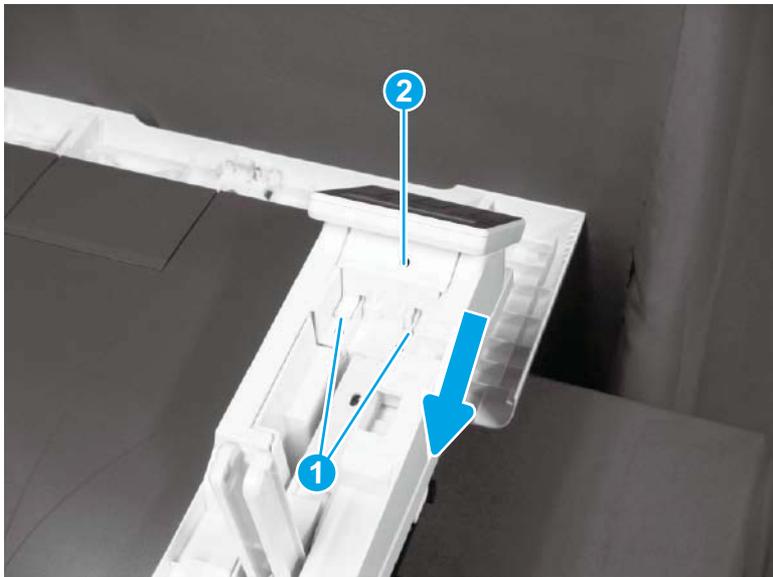

4. Release two tabs (callout 1), and then slide the control panel (callout 2) up to remove it.

**⚠ CAUTION:** The control panel is still attached to the printer. Do not remove it completely.


**Figure 1-113** Remove the control panel

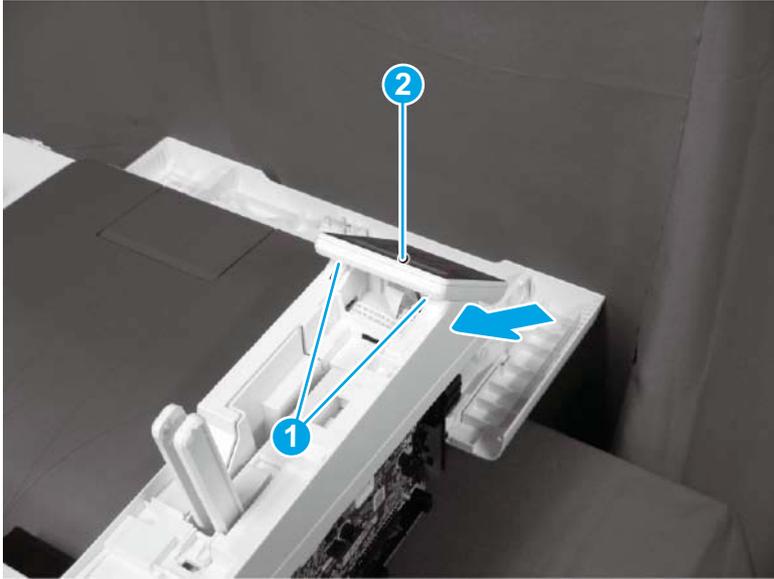

5. On the back of the control panel (callout 1), disconnect one connector (callout 2).

**💡 Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-114** Disconnect one connector

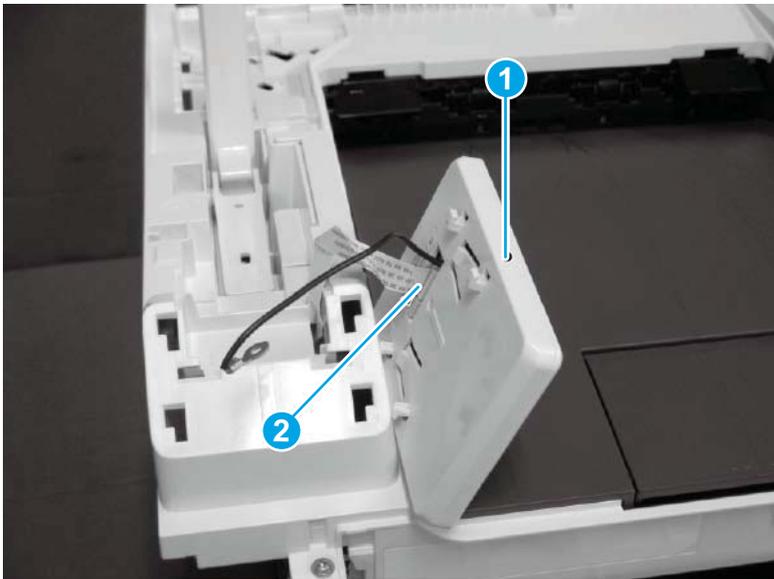

#### Step 9: Remove the top cover (M178-M181)

1. Disconnect one flat cable (callout 1) from the formatter.


Figure 1-115 Disconnect one cable

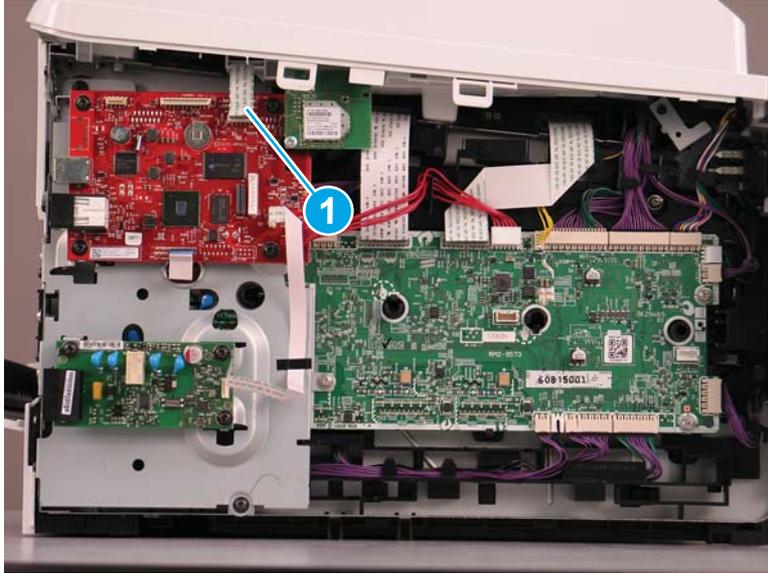

2. Remove seven screws (callout 1), and then remove the top cover (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-116 Remove seven screws and the top cover

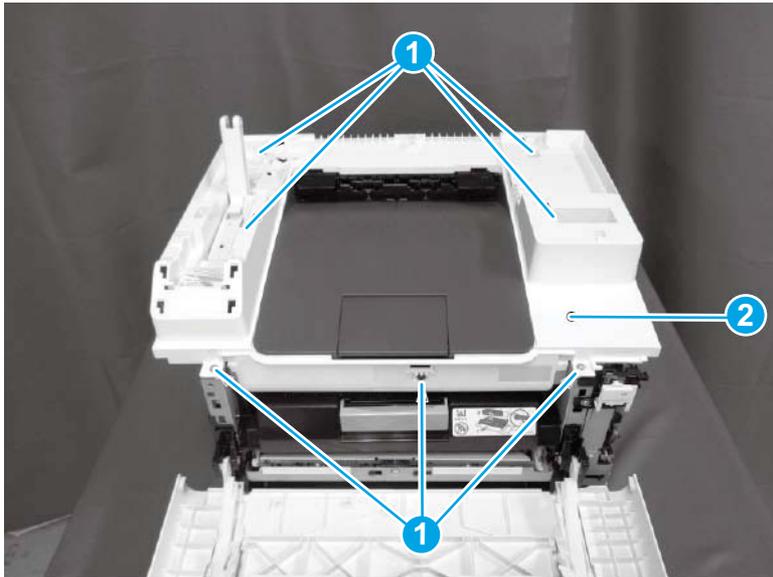

#### Step 10: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Top cover (M278-M281)

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front door and rear doors](#)
- [Step 3: Remove the right cover \(M278-M281\)](#)
- [Step 4: Remove the left cover \(M278-M281\)](#)
- [Step 5: Remove the rear cover \(simplex models only\)](#)
- [Step 6: Remove the control panel \(M278-M281\)](#)
- [Step 7: Remove the document feeder and scanner assembly \(M278-M281\)](#)
- [Step 8: Remove the top cover \(M278-M281\)](#)
- [Step 9: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the top cover for the M178-M181 and M278-M281 models.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Top cover (M278-M281) part numbers	
RM2-2403-000CN	Top cover (M278-MM281)

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


## Post service test

No post service test is available for this assembly.

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-117 Remove the cassette tray

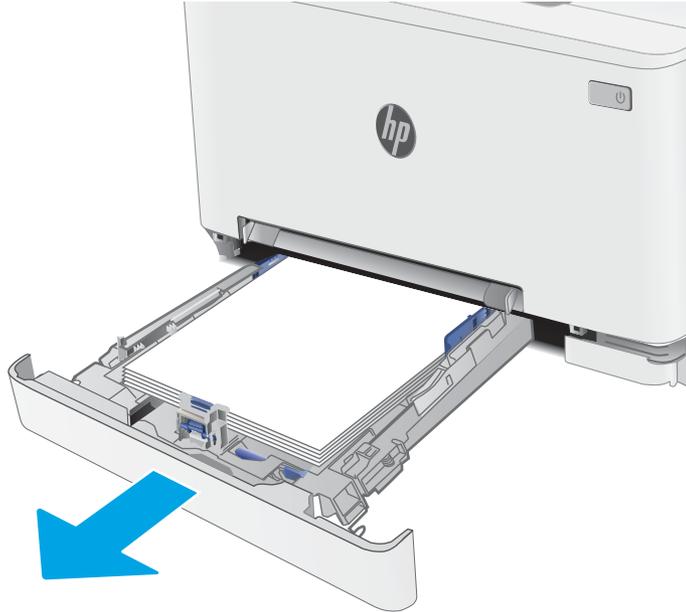

### Step 2: Open the front door and rear doors


1. Open the front door.

Figure 1-118 Open the front door




2. **Simplex models only:** Open the rear door.

Figure 1-119 Open the rear door

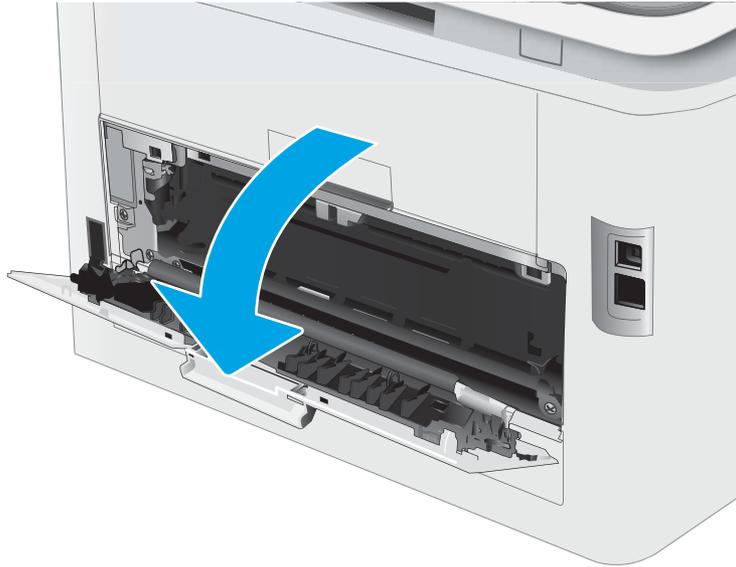

3. **Duplex models only:** Open the duplexer door.


Figure 1-120 Open the duplexer door

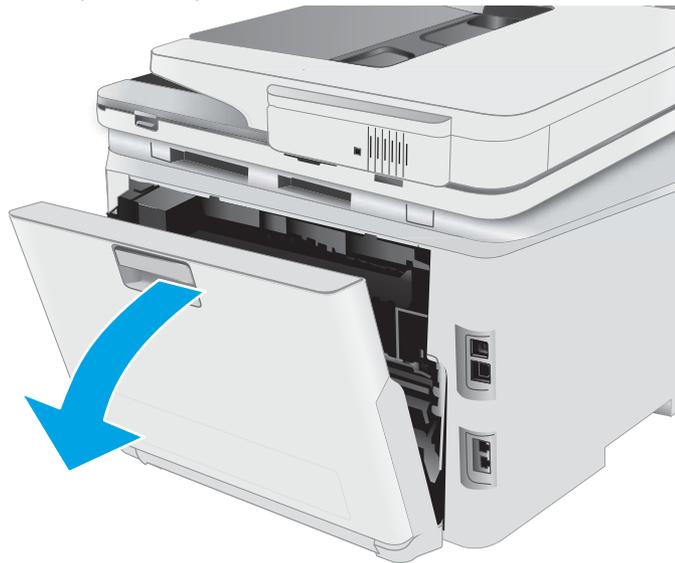

### Step 3: Remove the right cover (M278-M281)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-121 Tab locations

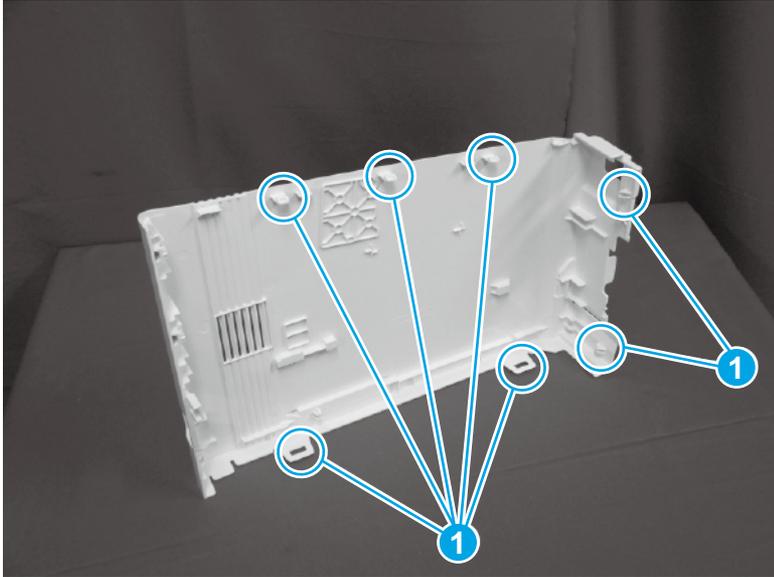


2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

---

Figure 1-122 Remove one screw and release tabs

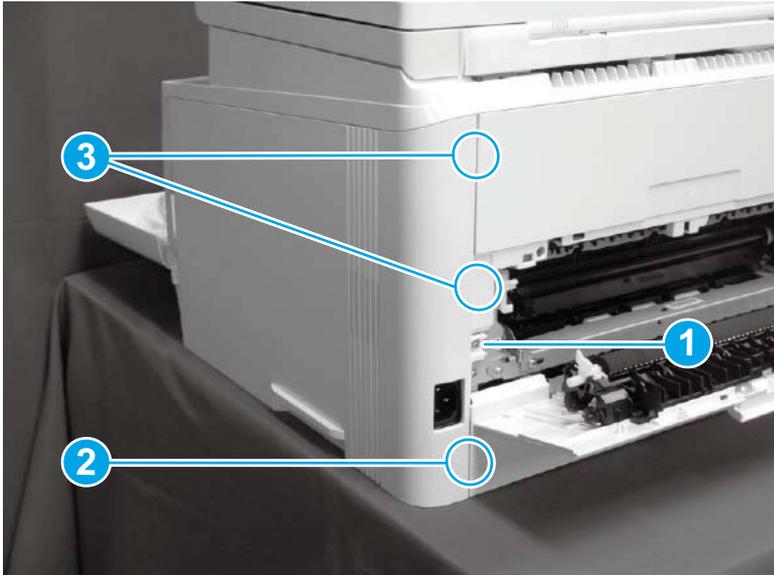


3. Release seven tabs (callout 1) along the top, bottom, and front of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-123 Remove the right cover

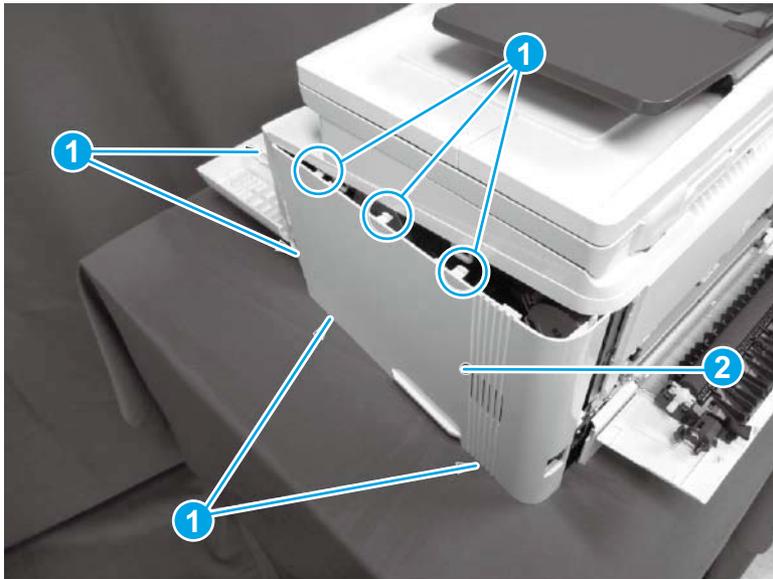

#### Step 4: Remove the left cover (M278-M281)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


Figure 1-124 Tab locations

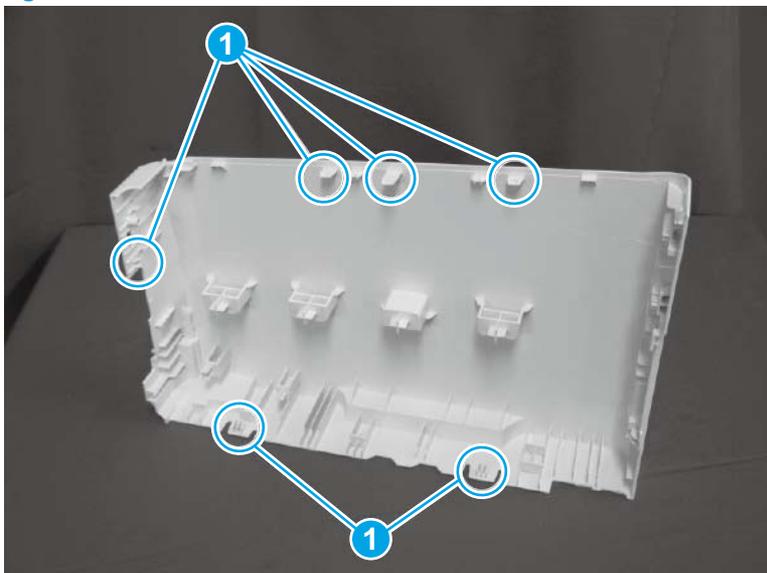

2. At the rear of the printer, remove one screw (callout 1), and then release one tab (callout 2).

 **TIP:** Use a small, flat-blade screwdriver to release the tab.

**Figure 1-125** Remove one screw and release tab

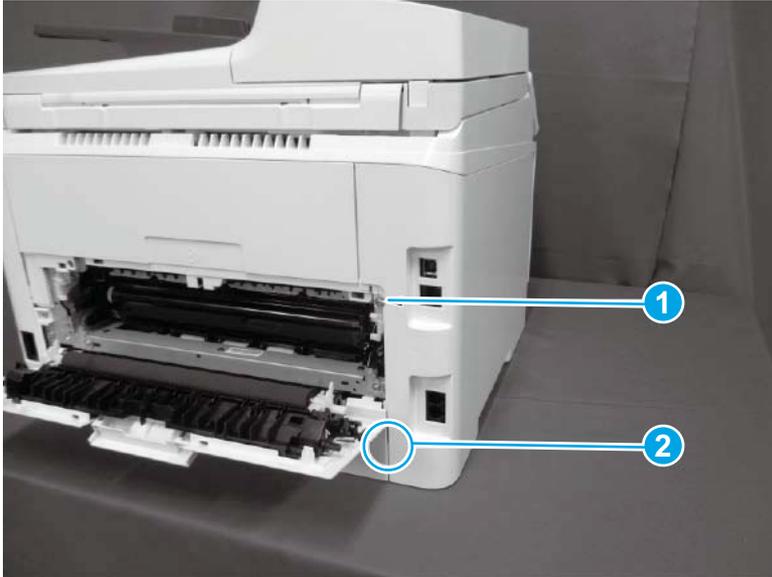


3. Release six tabs (callout 1) along the top, front, and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-126** Remove the left cover

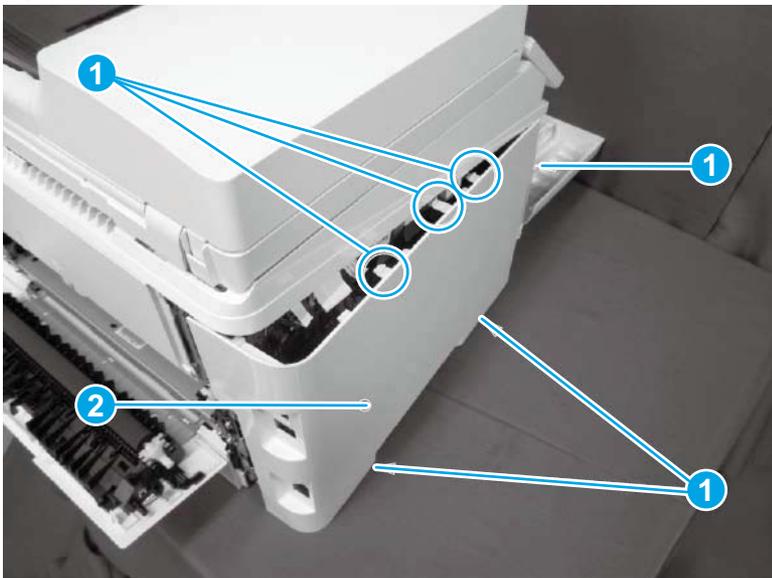


### Step 5: Remove the rear cover (simplex models only)

 **NOTE:** This step is for simplex printers. For duplex printers, skip this step and go to [Step 7: Remove the document feeder and scanner assembly \(M278-M281\) on page 110](#).

- ▲ At the back of the printer, use a small flat-blade screwdriver to release three tabs (callout 1) at the bottom of the cover, and then pull the cover down and away from the printer to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-127 Remove the rear cover

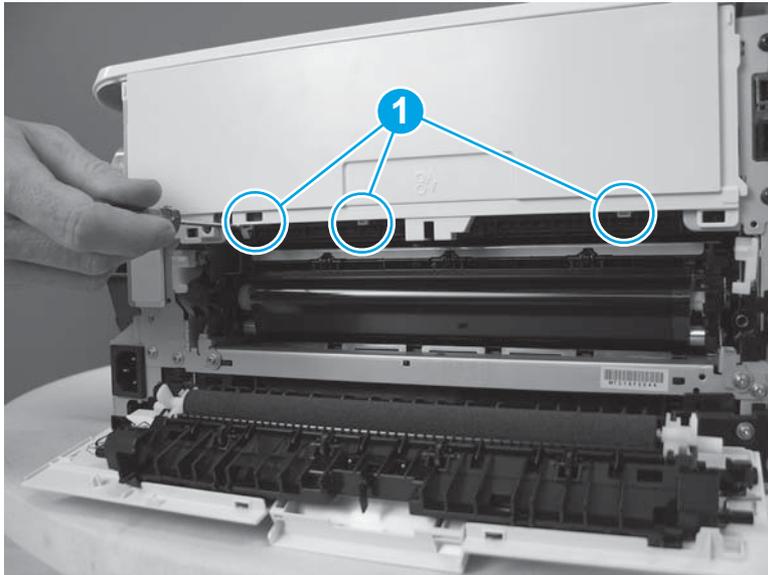

### Step 6: Remove the control panel (M278-M281)


1. Open the scanner

Figure 1-128 Open the scanner




2. At the back of the control panel, remove one screw (callout 1), and then use a small flat-blade screwdriver in the two pry points (callout 2) to remove the cover.

Figure 1-129 Remove one screw and the cover

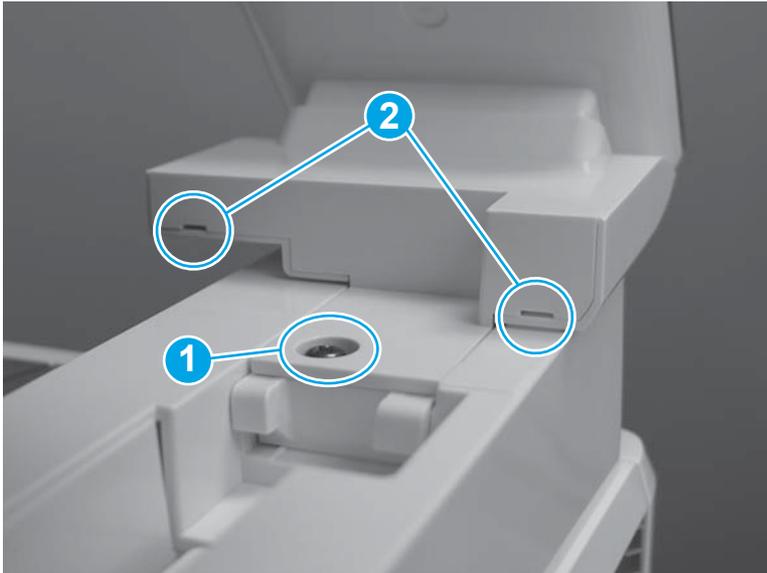


3. Remove the flat cable (callout 1) from the guides, and then remove three screws (callout 2).

Figure 1-130 Remove three screws

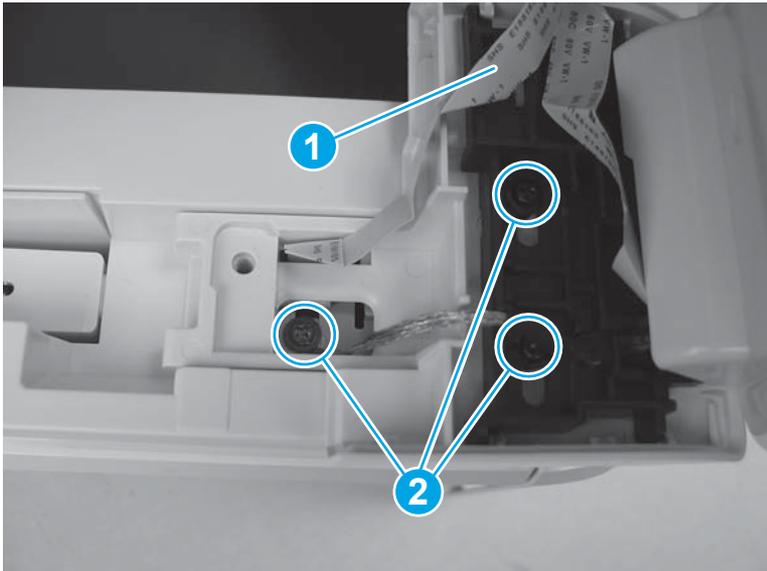

4. Move the control panel to the fully opened position (callout 1), and then rotate it back about 20 degrees (callout 2).

Figure 1-131 Rotate the control panel

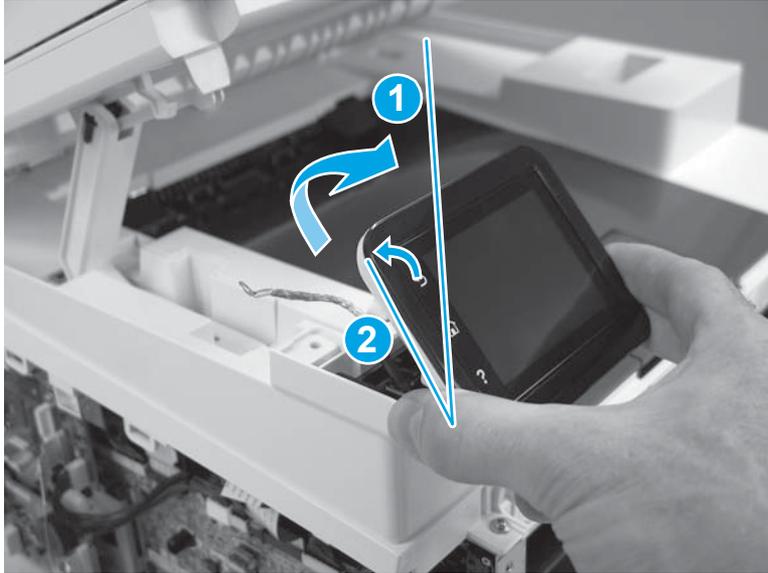

5. Firmly move the assembly to the right 7-8 mm (0.26-0.31 in) (callout 1) to release two tabs from the posts at the base of the control panel.

Figure 1-132 Release two tabs



6. Rotate the control panel forward to release it (callout 1), and then lift it slightly away from the printer.

**⚠ CAUTION:** The control panel is still attached to the printer. Do not remove it completely.


**Figure 1-133** Release the control panel



7. Use a small, flat-blade screw driver to unclasp the flat cable connector in the control panel.

**💡 Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-134** Disconnect the flat cable

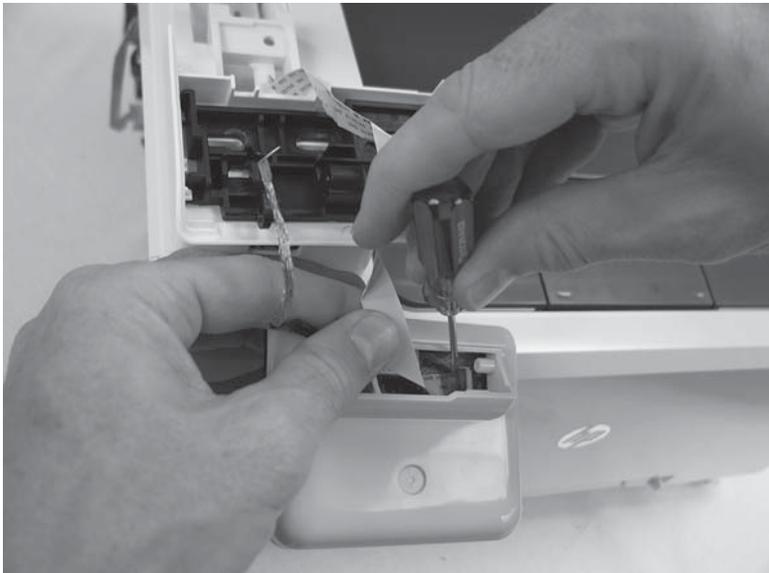

### Step 7: Remove the document feeder and scanner assembly (M278-M281)

1. Disconnect two flat cables (callout 1) from the formatter, and then remove one screw (callout 2) to release the grounding wire.

Figure 1-135 Disconnect two cables and remove one screw

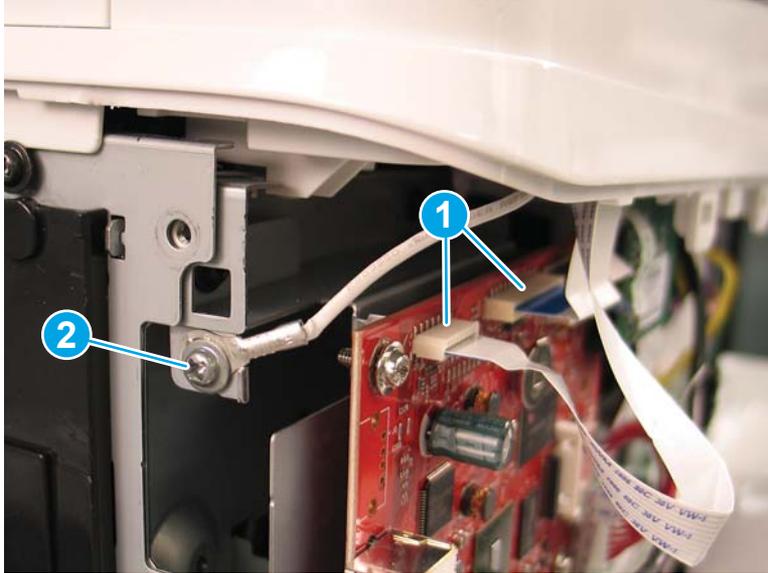


2. Open the scanner. Release one tab (callout 1), and then rotate the slider pin (callout 2) towards the front of the printer to release it.

---

 **TIP:** Use a Phillips head screwdriver in the end of the slider pin to rotate it.


---

Figure 1-136 Release one tab and rotate the slider pin

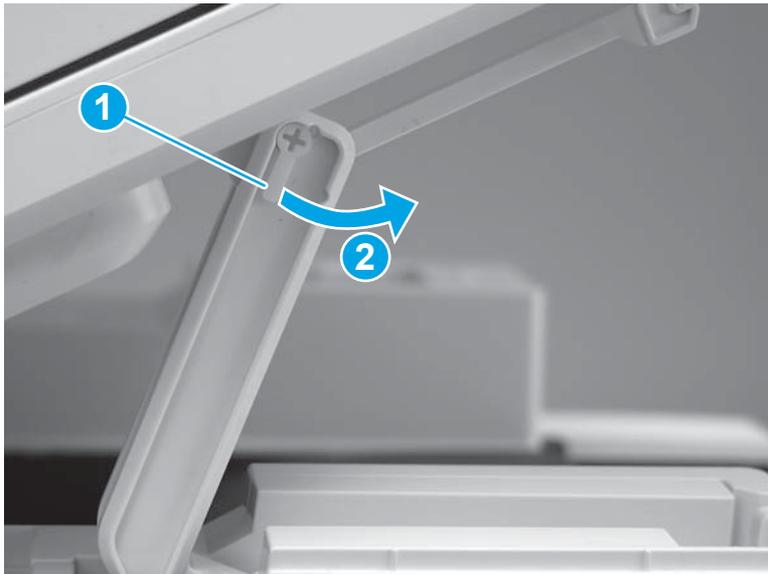

3. Remove the slider pin.

Figure 1-137 Remove the slider pin

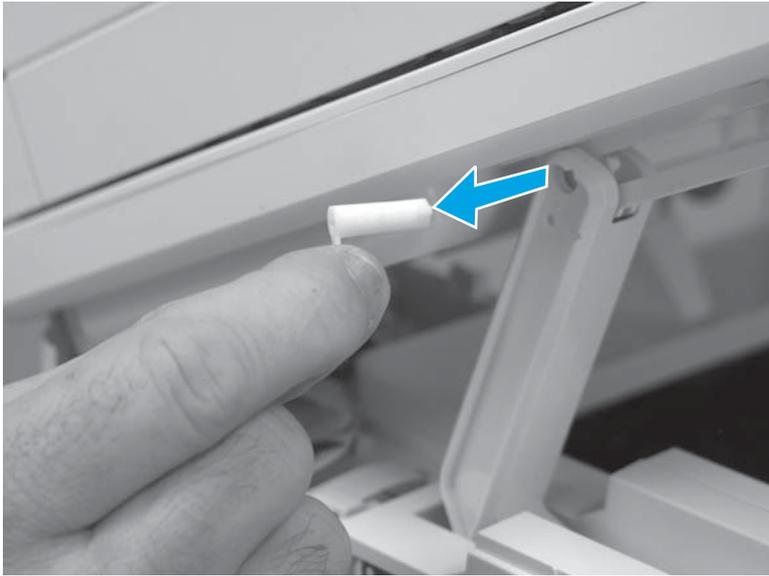


4. Rotate the hinge arm down.

---

**⚠ WARNING!** The hinge arm is spring-loaded by a strong spring and might snap down suddenly. Be careful not to pinch your fingers between the hinge arm and the top of the printer.


---

Figure 1-138 Rotate the hinge arm down

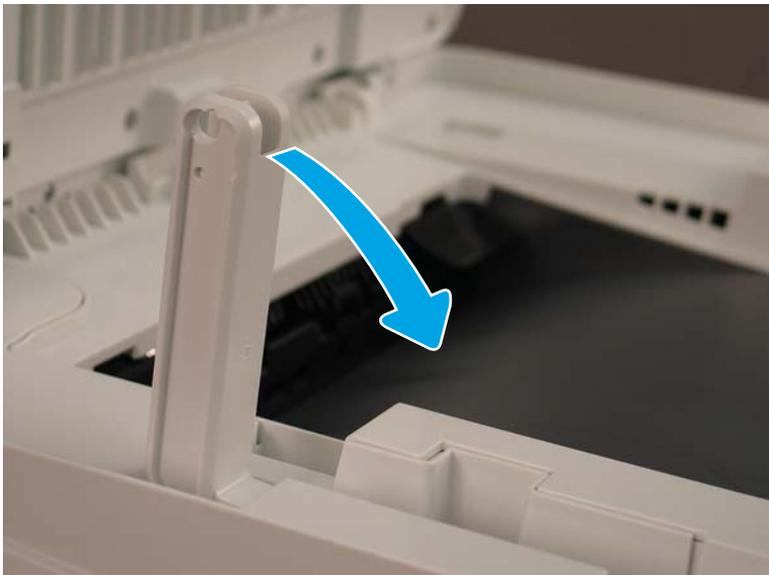


5. On the scanner bed, use a small, flat-blade screwdriver to release one tab (callout 1), and then remove the scanner cable cover (callout 2).

Figure 1-139 Remove the scanner cable cover

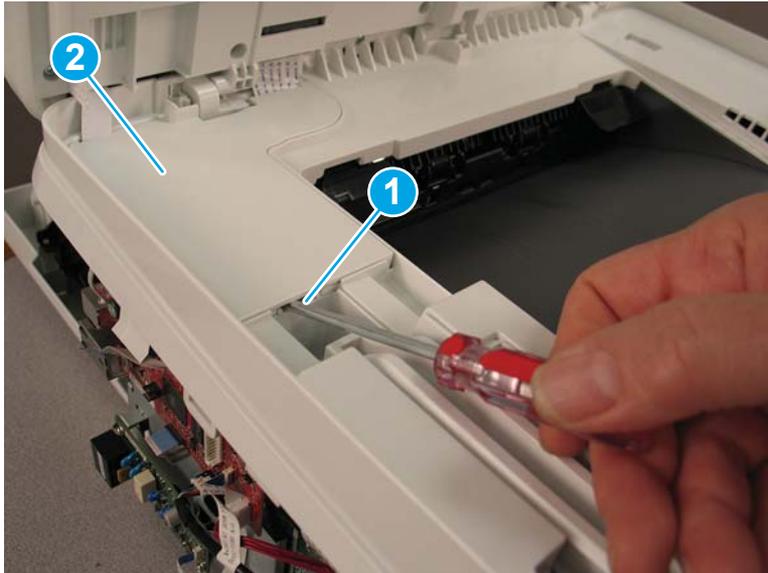

6. Release the flat cable (callout 1) from the guides (callout 2), and then feed the cables (callout 3) through the opening in the scanner.


Figure 1-140 Release the flat cable

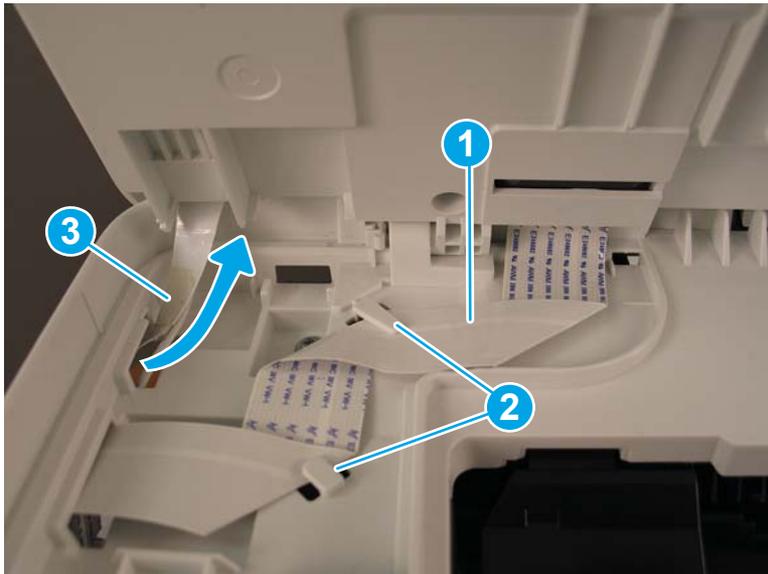

7. Open the scanner assembly fully, slide the assembly to the right (callout 1), and then lift the assembly off of the chassis (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-141** Remove the scanner assembly

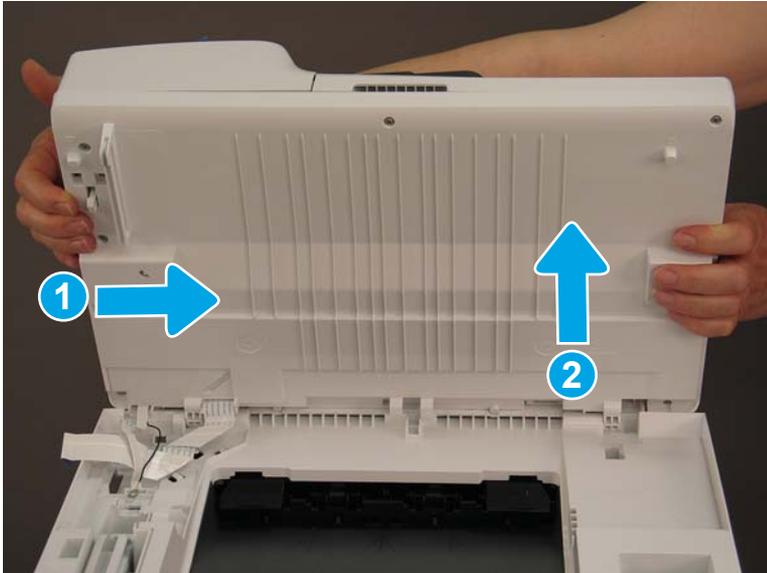

#### Step 8: Remove the top cover (M278-M281)

1. Disconnect two cables (callout 1) from the formatter.


**Figure 1-142** Disconnect two cables

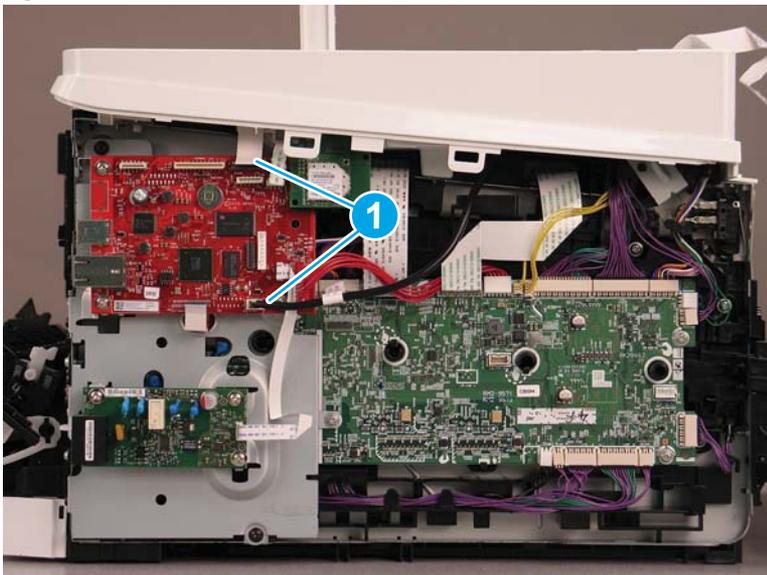

2. At the top of the printer, remove one screw (callout 1) close to the control panel location.


 **Reinstallation tip:** When reinstalling the screw, make sure that the screw opening in the sheet metal bracket under the top cover is aligned with the screw opening in the top cover.

Figure 1-143 Remove one screw

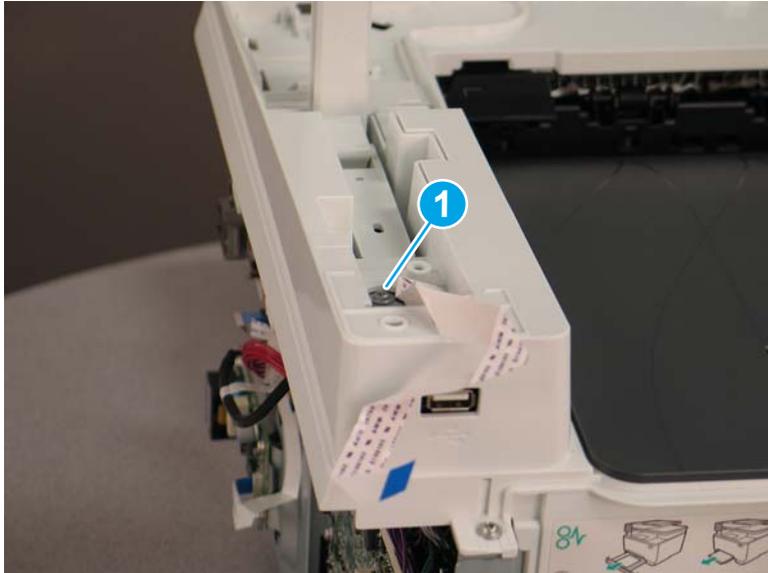

3. At the back of the printer, remove one screw (callout 1).


Figure 1-144 Remove one screw

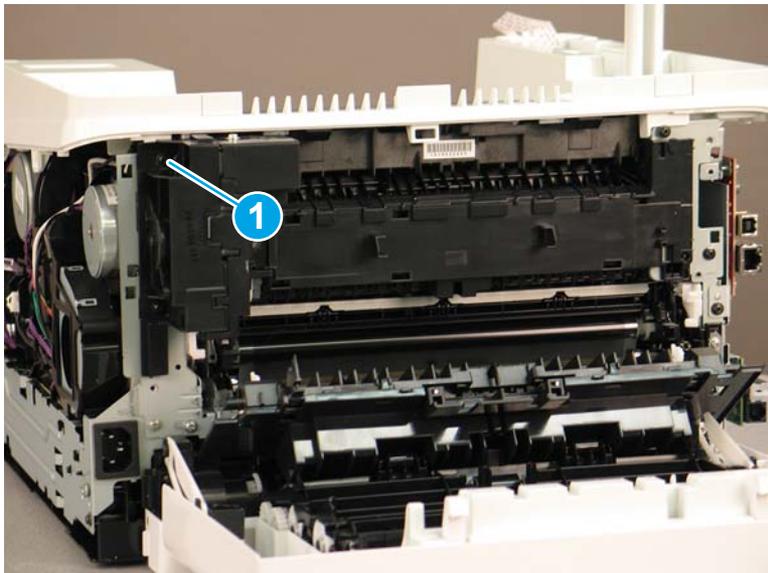

4. Remove seven screws (callout 1), and then remove the top cover (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-145** Remove seven screws and the top cover

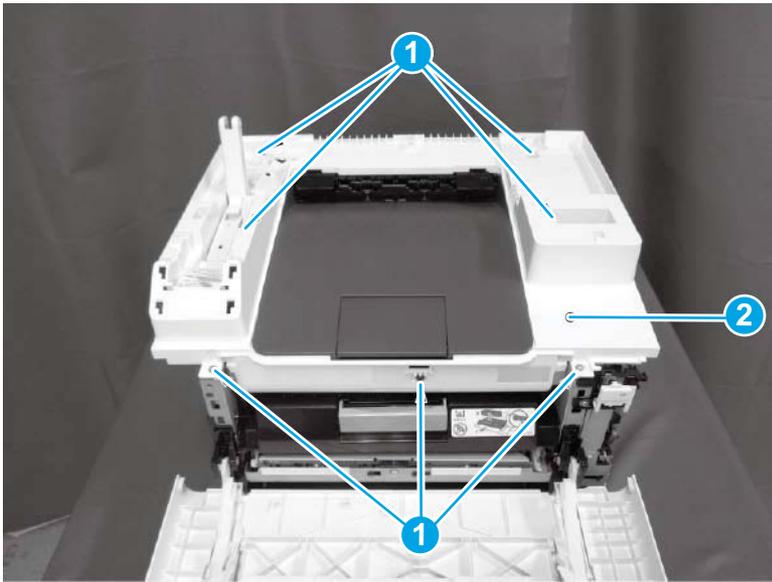

### Step 9: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Duplexer door (duplex models)

- [Introduction](#)
- [Step 1: Open the duplexer door](#)
- [Step 2: Remove the duplexer door assembly](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the duplexer door for duplex models.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.

 **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.

- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Duplexer door part number	
RM2-5867-000CN	Duplexing door assembly

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Open the duplexer door

- ▲ Open the duplexer door.


Figure 1-146 Open the duplexer door



Step 2: Remove the duplexer door assembly


1. At the rear of the printer, at the bottom of the duplexer door, remove two larger M4 tapping screws (callout 1), and then remove the two holders (callout 2) from the door.

Figure 1-147 Remove two screws and holders

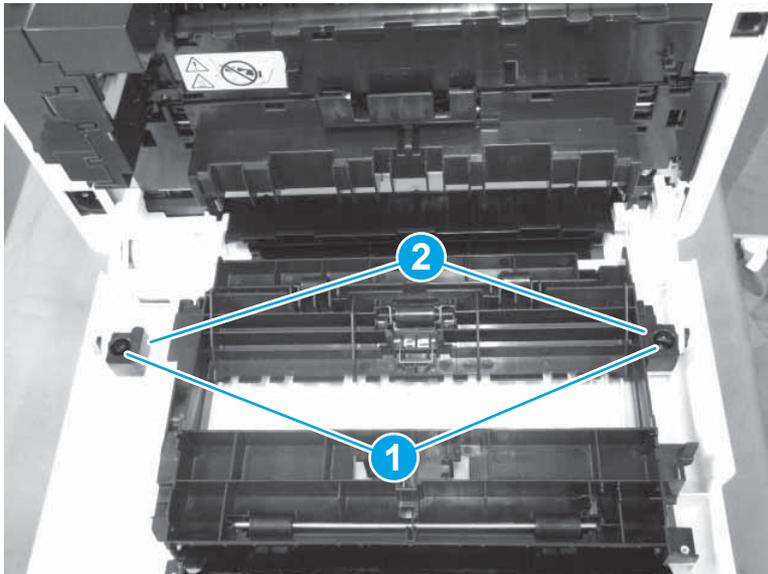


2. Rotate the shaft (callout 1) toward the printer to release it.

Figure 1-148 Rotate the shaft

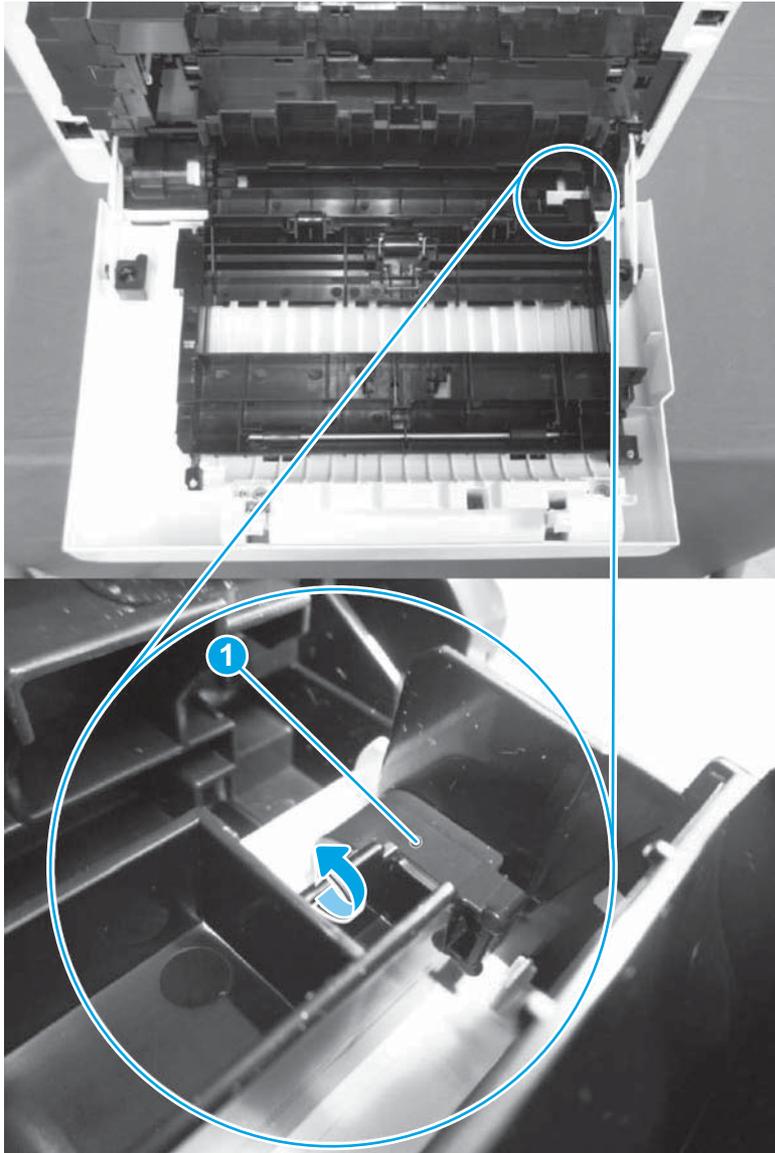

3. Slide the shaft (callout 1) to the left to remove it.

**Figure 1-149** Remove the shaft

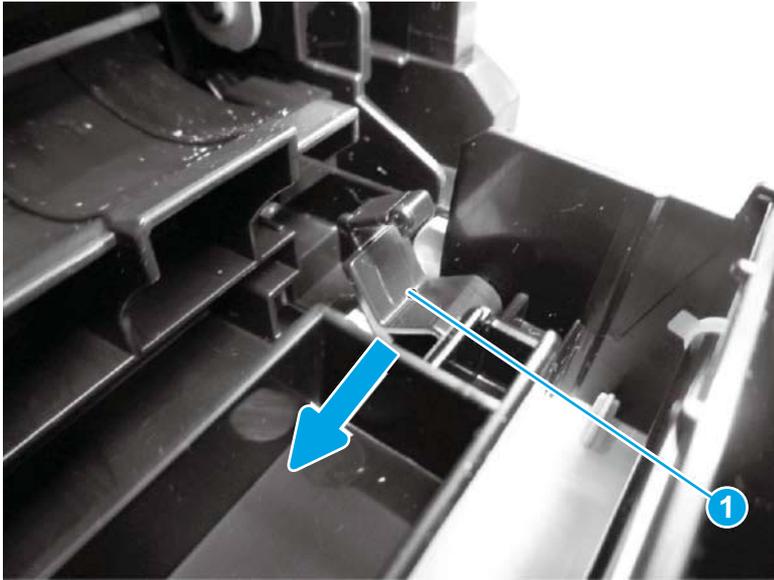


4. Rotate the right side of the door away from the printer, and then release the left shaft (callout 1) to remove the door.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-150** Remove the duplexer door

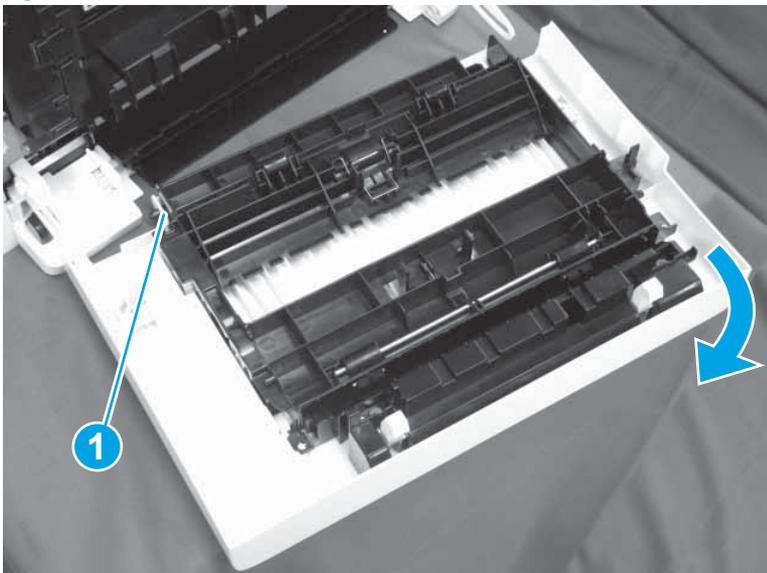

### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Rear lower cover (simplex models)

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and rear doors](#)
- [Step 3: Remove the left cover \(M153-M154 and M253-M254\)](#)
- [Step 4: Remove the left cover \(M178-M181 and M278-M281\)](#)
- [Step 5: Remove the rear lower cover \(simplex models\)](#)
- [Step 6: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the rear lower cover for simplex models.

---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.

---

 **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.

---

- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### Rear lower cover (simplex models) part number

---

**RC5-3022-000CN**

Cover, bottom, rear (simplex)

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-151 Remove the cassette tray



### Step 2: Open the front and rear doors


1. Open the front door.

Figure 1-152 Open the front door



2. Open the rear door.

Figure 1-153 Open the rear door

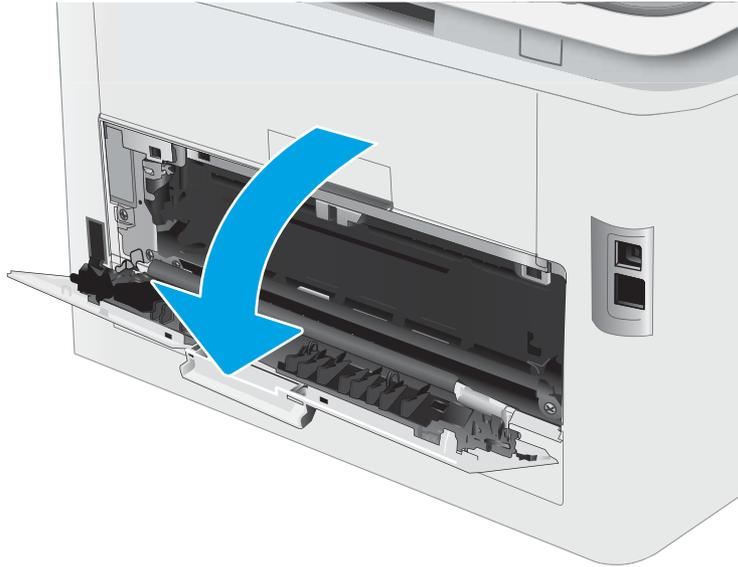


### Step 3: Remove the left cover (M153-M154 and M253-M254)

 **NOTE:** This step is for the M153-M154 and M253-M254 printers. For the M178-M181 and M278-M281 printers, skip this step and go to [Step 4: Remove the left cover \(M178-M181 and M278-M281\) on page 126.](#)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


Figure 1-154 Tab locations

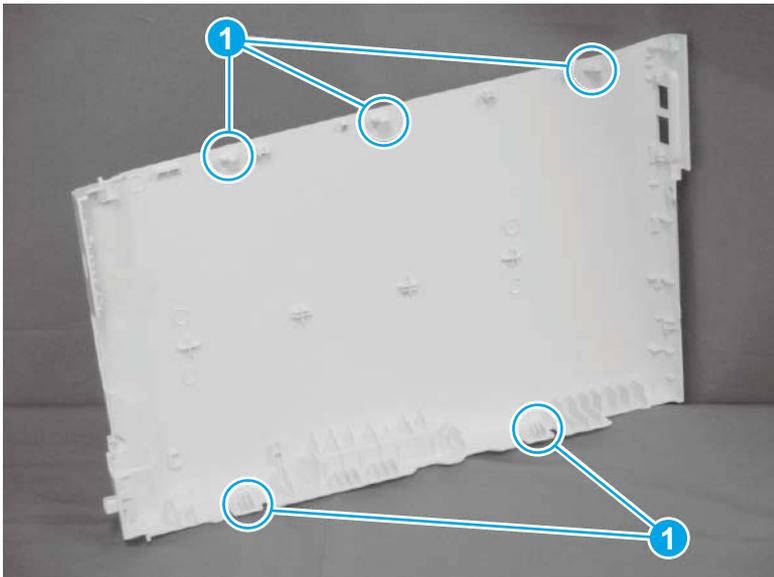

2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

**Figure 1-155** Remove one screw and release tabs

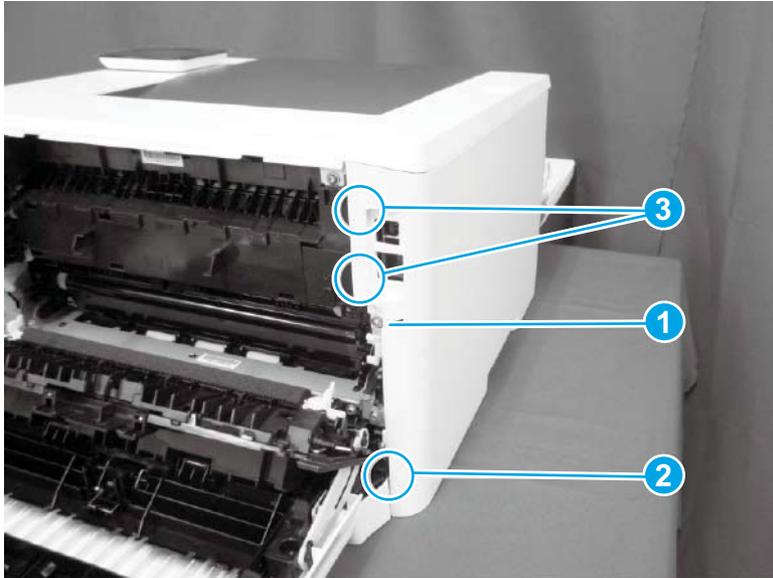


3. Release five tabs (callout 1) along the top and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-156** Remove the left cover

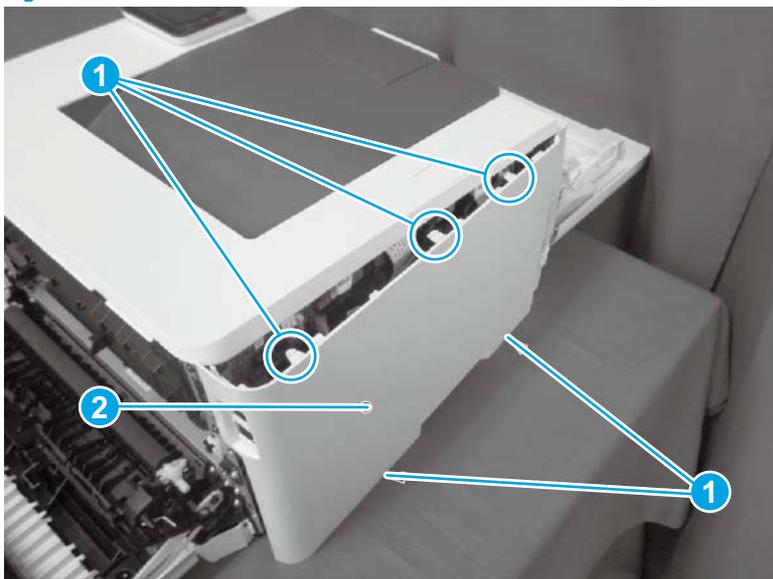


#### Step 4: Remove the left cover (M178-M181 and M278-M281)

 **NOTE:** This step is for the M178-M181 and M278-M281 printers. For the M153-M154 and M253-M254 printers, skip this step and go to [Step 5: Remove the rear lower cover \(simplex models\) on page 127](#).

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


**Figure 1-157** Tab locations

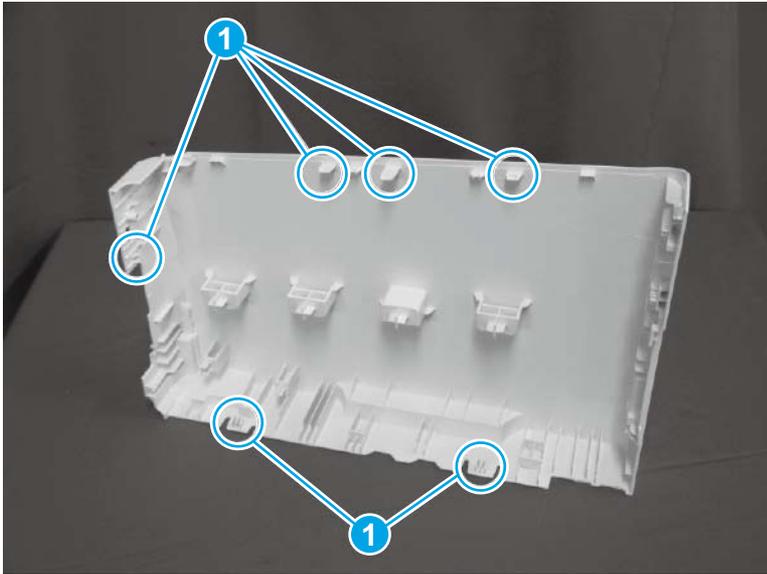

2. At the rear of the printer, remove one screw (callout 1), and then release one tab (callout 2).

 **TIP:** Use a small, flat-blade screwdriver to release the tab.

**Figure 1-158** Remove one screw and release tab

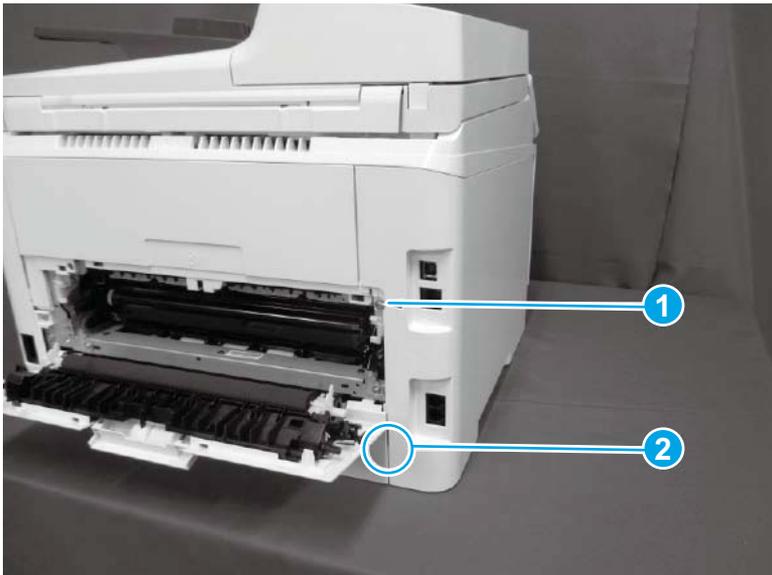


3. Release six tabs (callout 1) along the top, front, and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-159 Remove the left cover

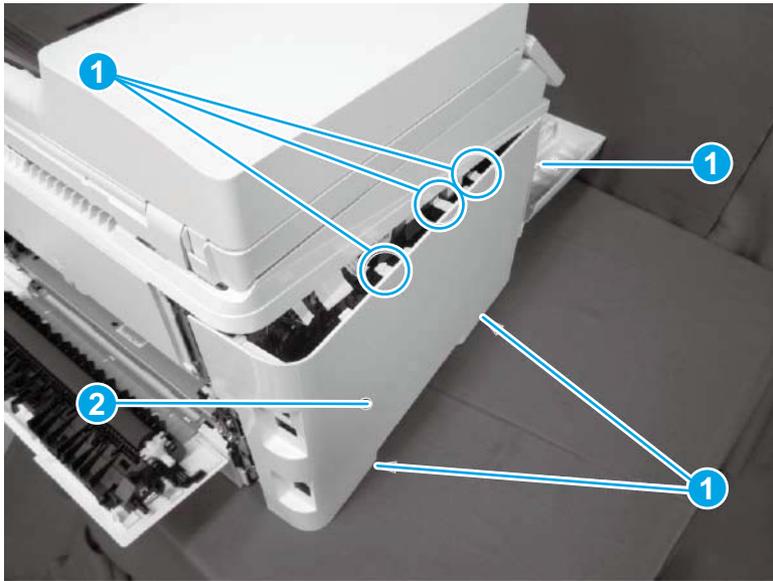

#### Step 5: Remove the rear lower cover (simplex models)

1. Close the rear door.

Figure 1-160 Close the rear door

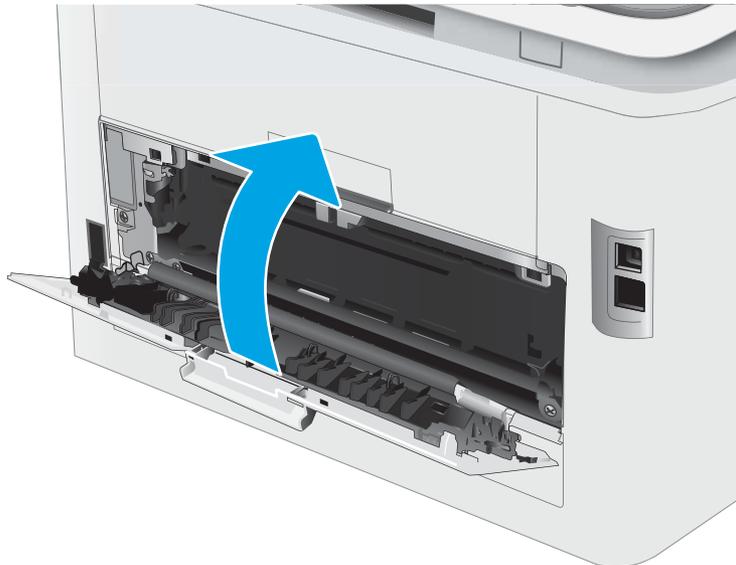

2. Release two tabs (callout 1), and then remove the rear lower cover (callout 2).

---


 **TIP:** Slide the printer to the edge of a table or tilt it up to more easily release the tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-161** Remove the rear lower cover (simplex models)

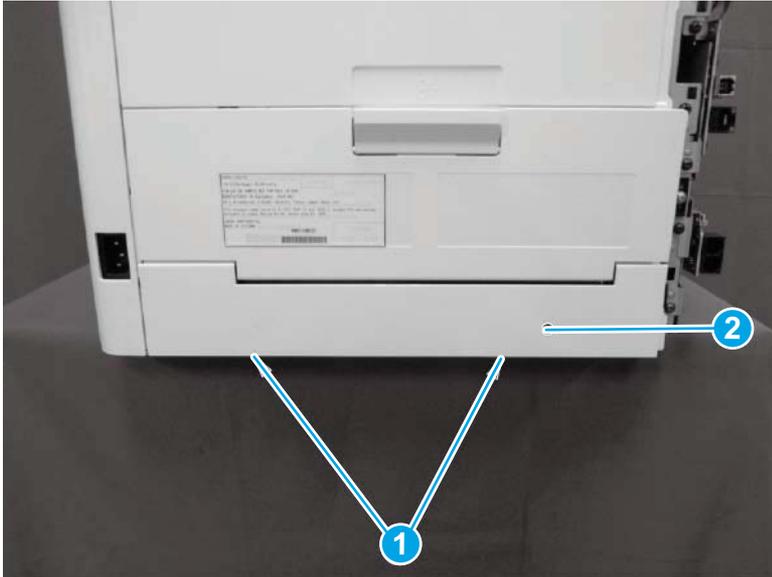

### Step 6: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Rear lower cover (duplex models)

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and duplexer doors](#)
- [Step 3: Remove the right cover \(M253-M254\)](#)
- [Step 4: Remove the left cover \(M253-M254\)](#)
- [Step 5: Remove the right cover \(M278-M281\)](#)
- [Step 6: Remove the left cover \(M278-M281\)](#)
- [Step 7: Remove the rear lower cover \(duplex models\)](#)
- [Step 8: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the rear lower cover for duplex models.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Rear lower cover (duplex models) part number	
RL2-3225-000CN	Cover, bottom, rear (duplex)

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


## Post service test

No post service test is available for this assembly.

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-162 Remove the cassette tray

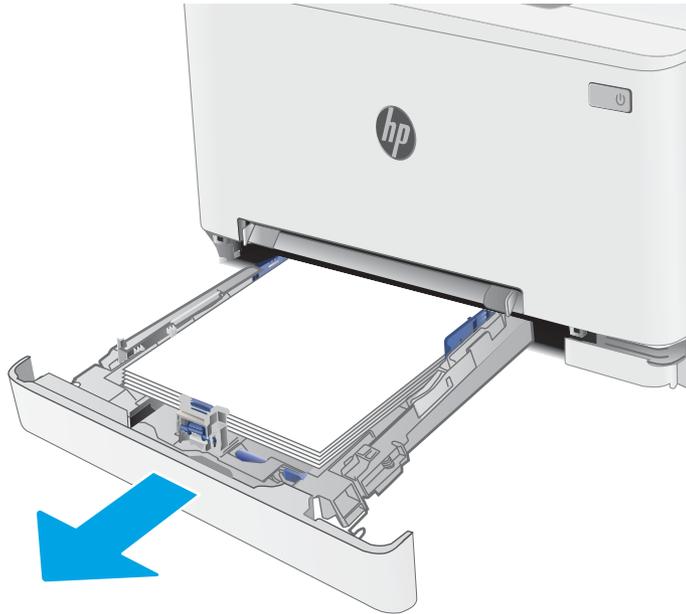

### Step 2: Open the front and duplexer doors


1. Open the front door.

Figure 1-163 Open the front door



2. Open the duplexer door.

Figure 1-164 Open the duplexer door

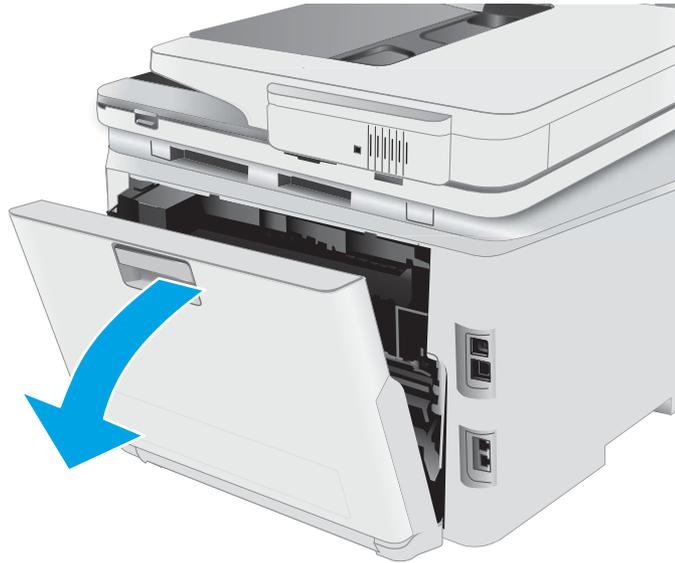


### Step 3: Remove the right cover (M253-M254)

 **NOTE:** This step is for the M253-M254 printers. For the M278-M281 printers, skip this step and go to [Step 5: Remove the right cover \(M278-M281\) on page 134](#).

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


Figure 1-165 Tab locations

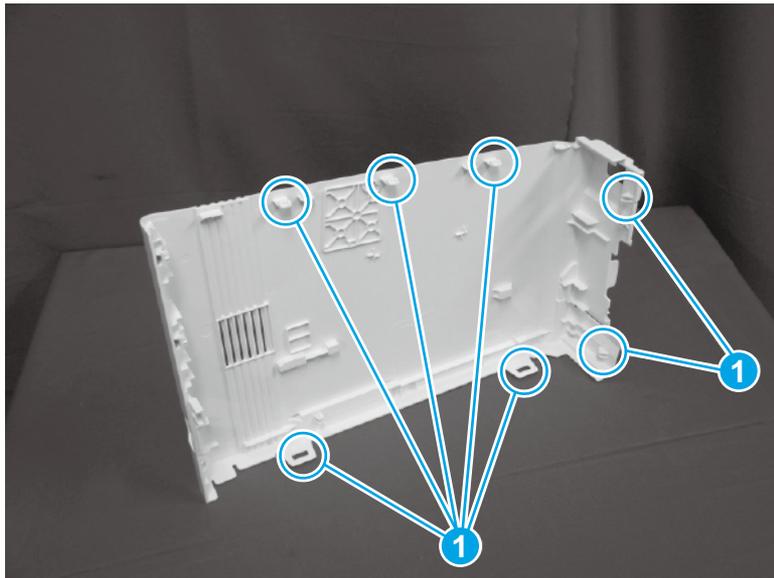

- At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

**Figure 1-166** Remove one screw and release tabs

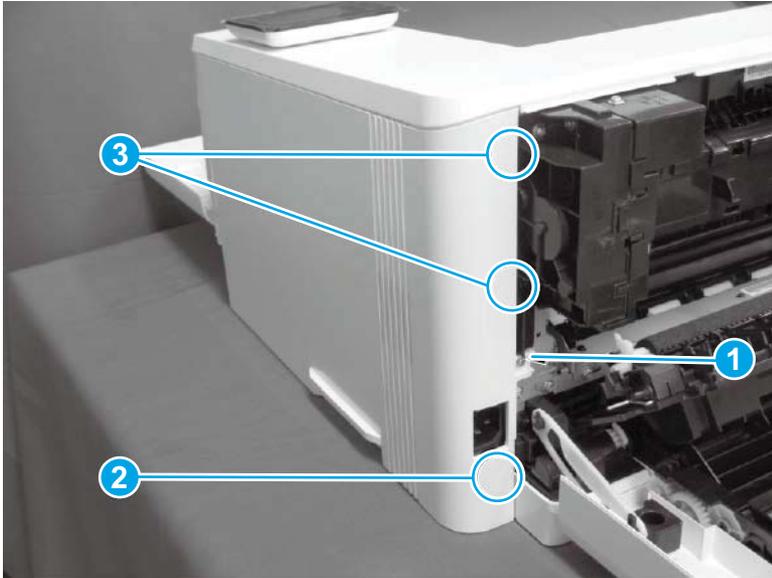


- Release seven tabs (callout 1) along the top, bottom, and front of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-167** Remove the right cover

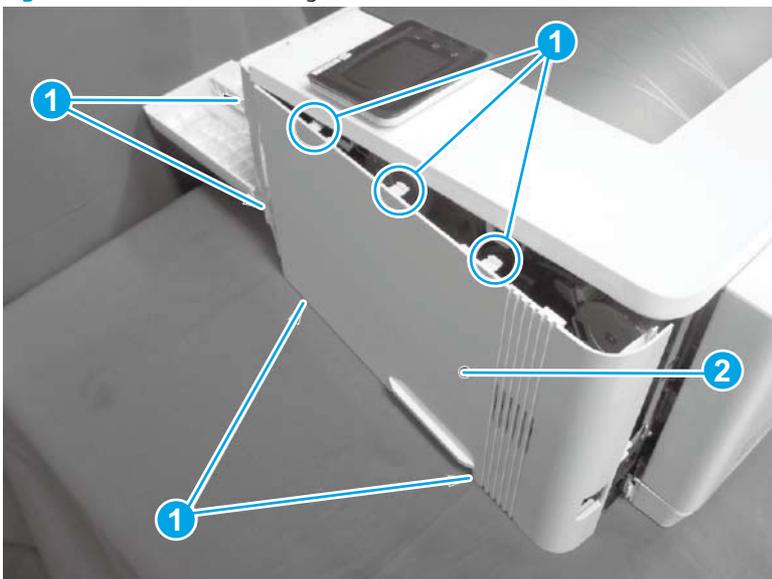


#### Step 4: Remove the left cover (M253-M254)

 **NOTE:** This step is for the M253-M254 printers. For the M278-M281 printers, skip this step and go to [Step 5: Remove the right cover \(M278-M281\) on page 134](#).

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


**Figure 1-168** Tab locations

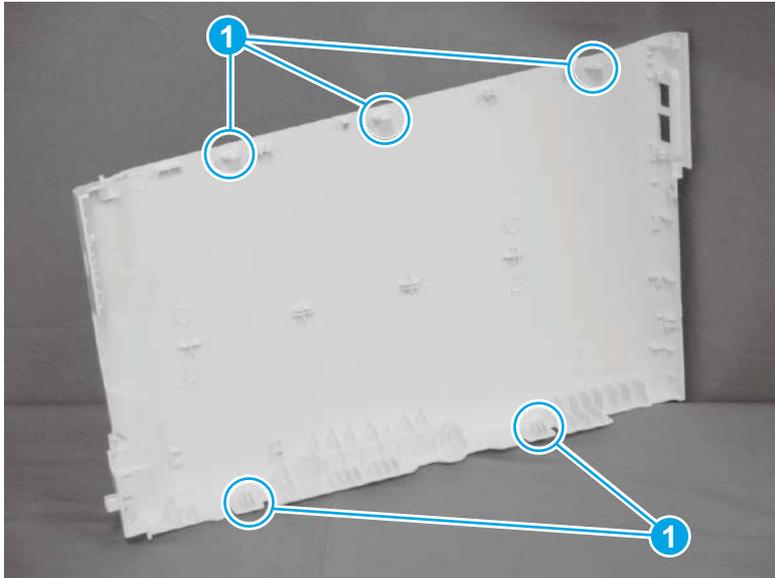

2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

**Figure 1-169** Remove one screw and release tabs

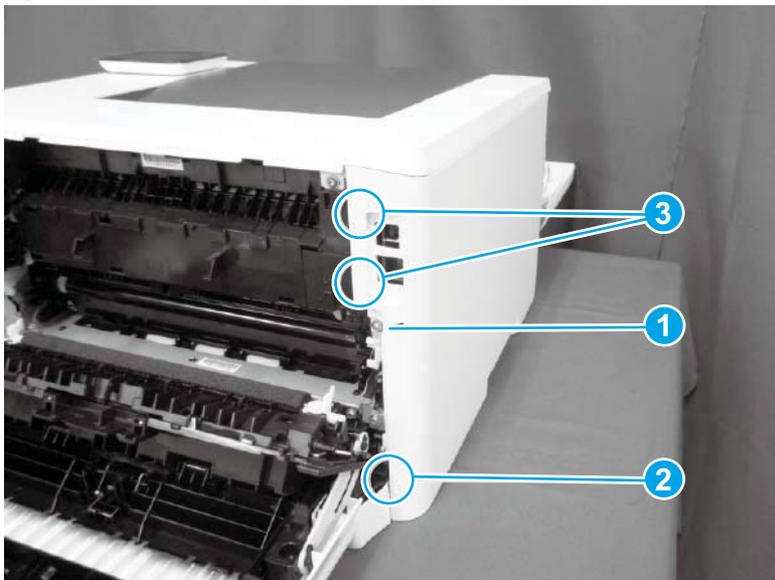

3. Release five tabs (callout 1) along the top and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

---


 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-170** Remove the left cover

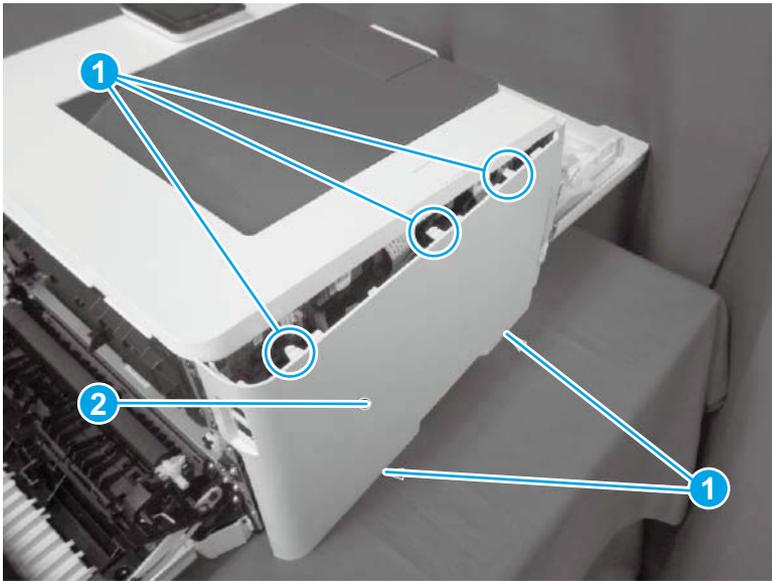

#### Step 5: Remove the right cover (M278-M281)


---

 **NOTE:** This step is for the M278-M281 printers. For the M253-M254 printers, skip this step and go to [Step 7: Remove the rear lower cover \(duplex models\) on page 138](#).

---

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-171 Tab locations

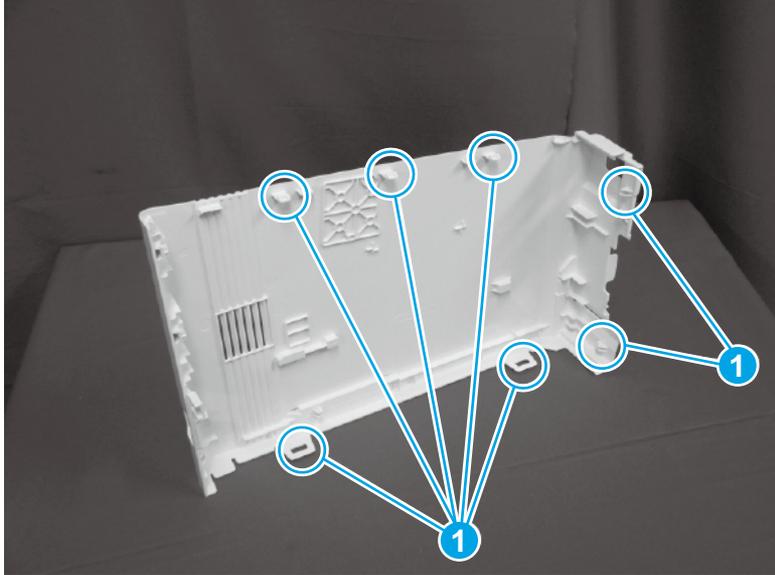


2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

---

Figure 1-172 Remove one screw and release tabs

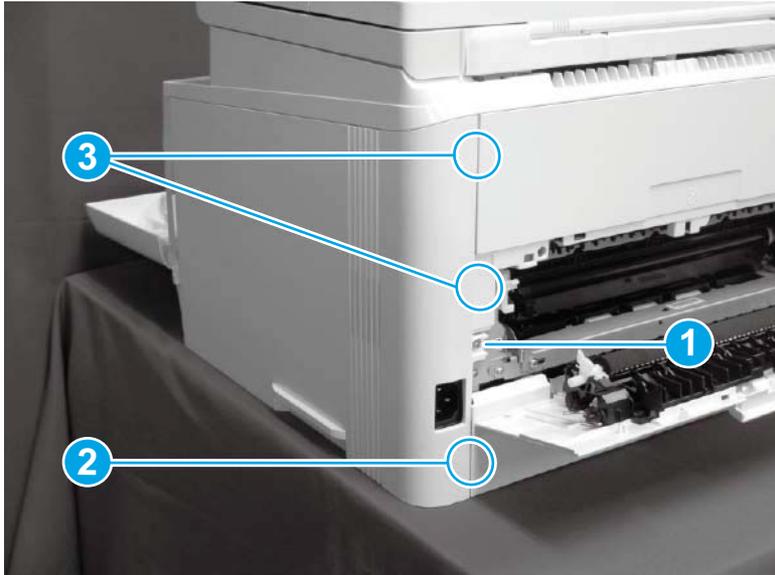

3. Release seven tabs (callout 1) along the top, bottom, and front of the cover. Pull the cover (callout 2) away from the printer to remove it.

---


 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-173** Remove the right cover

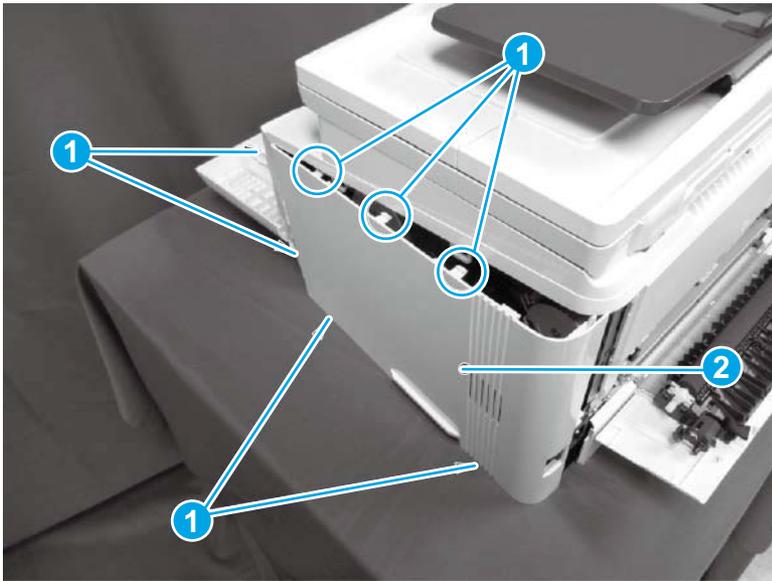

#### Step 6: Remove the left cover (M278-M281)


---

 **NOTE:** This step is for the M278-M281 printers. For the M253-M254 printers, skip this step and go to [Step 7: Remove the rear lower cover \(duplex models\) on page 138.](#)

---

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


Figure 1-174 Tab locations

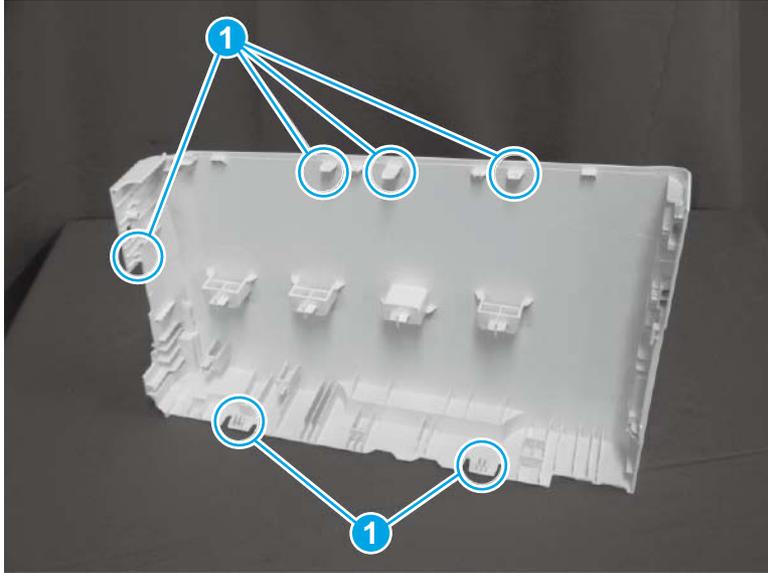

2. At the rear of the printer, remove one screw (callout 1), and then release one tab (callout 2).

 **TIP:** Use a small, flat-blade screwdriver to release the tab.

Figure 1-175 Remove one screw and release tab

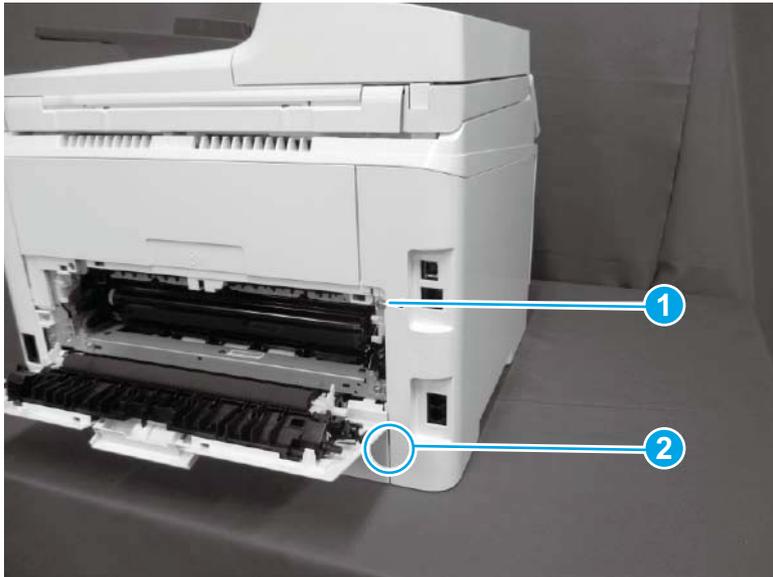


3. Release six tabs (callout 1) along the top, front, and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-176** Remove the left cover

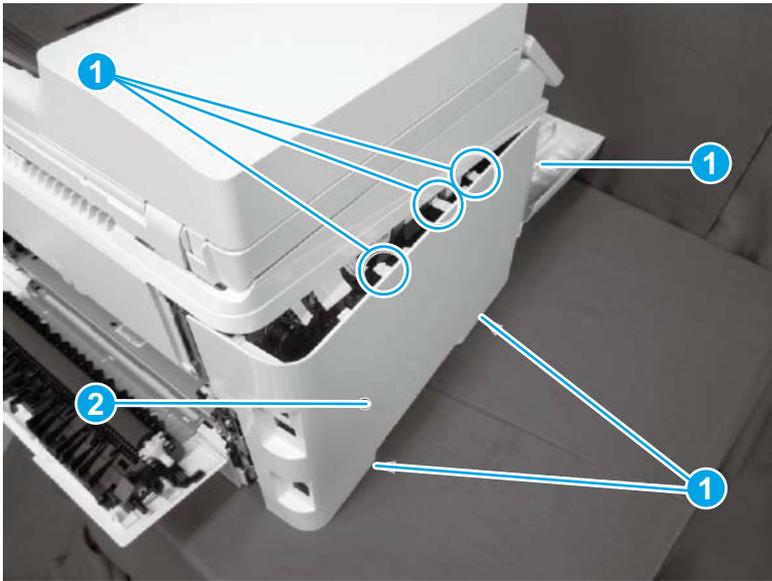

#### Step 7: Remove the rear lower cover (duplex models)


1. Close the duplexer door.

**Figure 1-177** Close the duplexer door

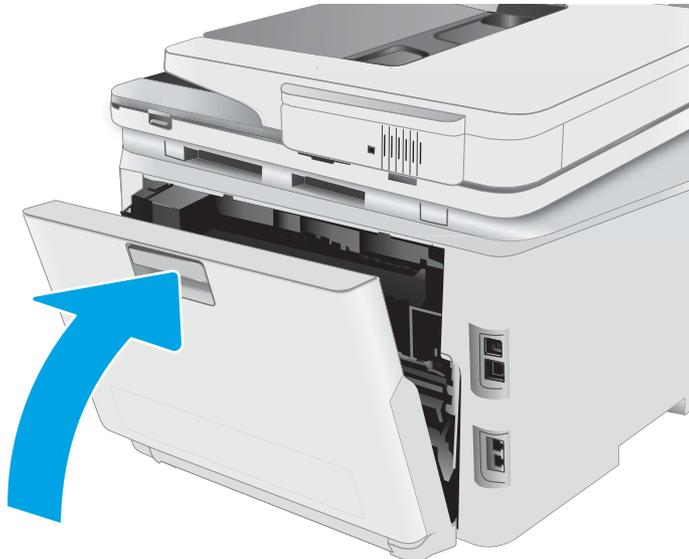

2. Release one tab (callout 1).

Figure 1-178 Release one tab

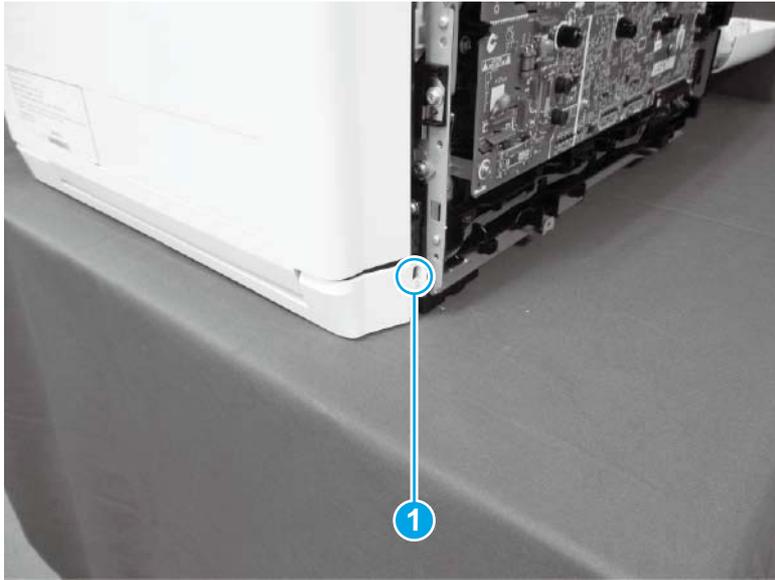

3. Release three tabs (callout 1), and then remove the rear lower cover (callout 2).

---


 **TIP:** Slide the printer to the edge of a table or tilt it up to more easily release the tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-179 Release three tabs and remove the cover

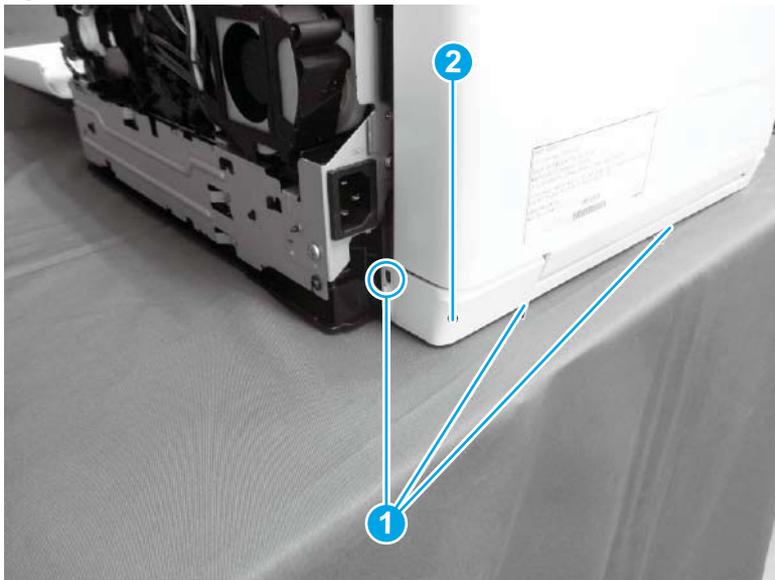

### Step 8: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Rear door assembly (simplex models)

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and rear doors](#)
- [Step 3: Remove the left cover \(M153-M154 and M253-M254\)](#)
- [Step 4: Remove the left cover \(M178-M181 and M278-M281\)](#)
- [Step 5: Remove the rear lower cover \(simplex models\)](#)
- [Step 6: Remove the rear door assembly \(simplex models\)](#)
- [Step 7: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the rear door assembly for simplex models.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Rear door assembly (simplex models) part number	
RM2-2489-000CN	Rear door assembly (simplex)

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

No post service test is available for this assembly.

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-180 Remove the cassette tray

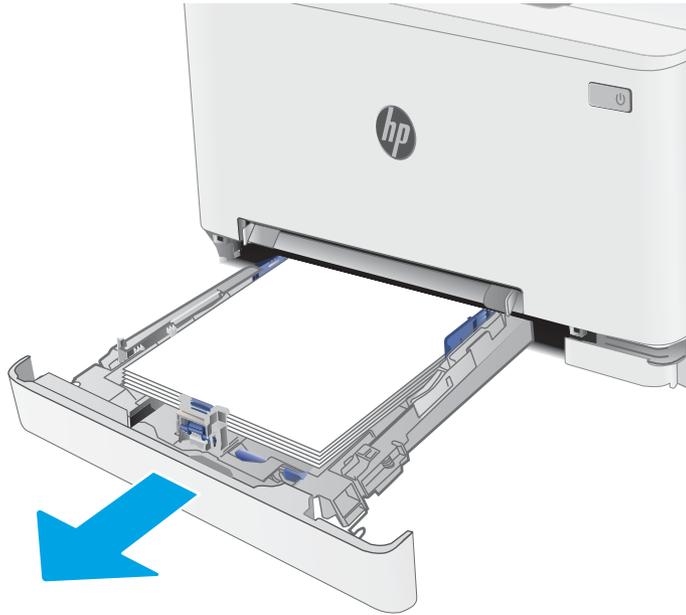

### Step 2: Open the front and rear doors


1. Open the front door.

Figure 1-181 Open the front door



2. Open the rear door.

Figure 1-182 Open the rear door

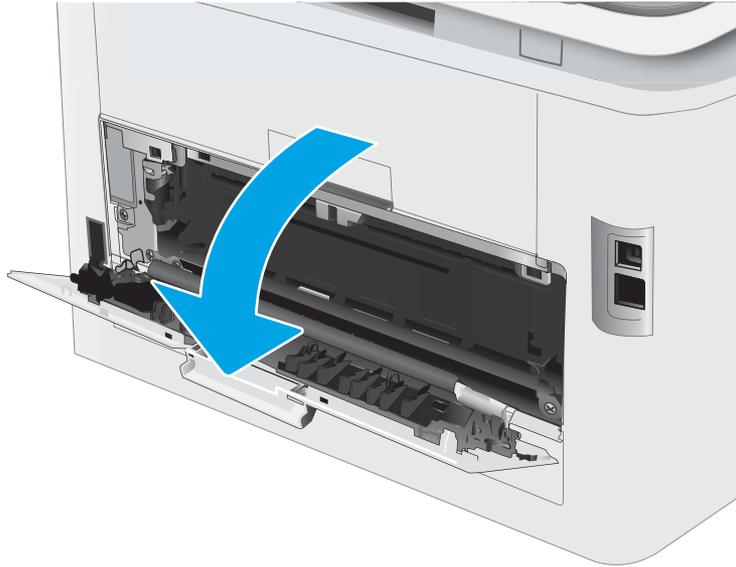


### Step 3: Remove the left cover (M153-M154 and M253-M254)

 **NOTE:** This step is for the M153-M154 and M253-M254 printers. For the M178-M181 and M278-M281 printers, skip this step and go to [Step 4: Remove the left cover \(M178-M181 and M278-M281\) on page 145](#).

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


Figure 1-183 Tab locations

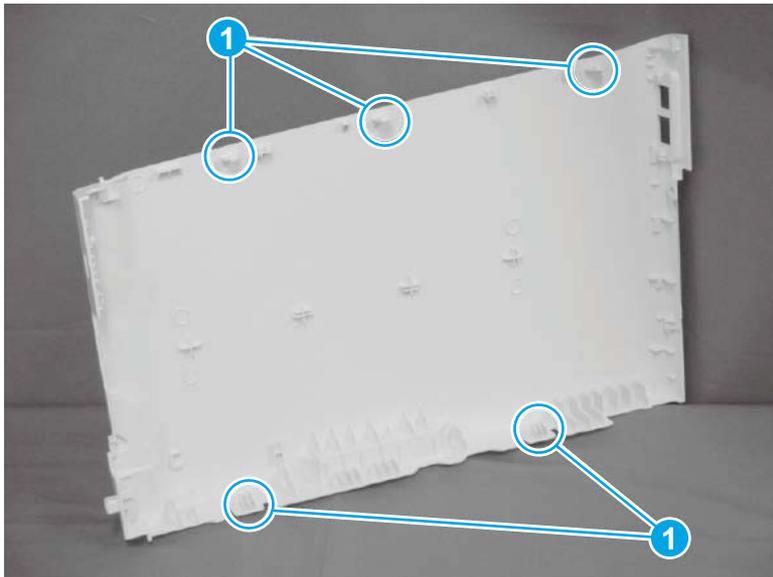

2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

**Figure 1-184** Remove one screw and release tabs

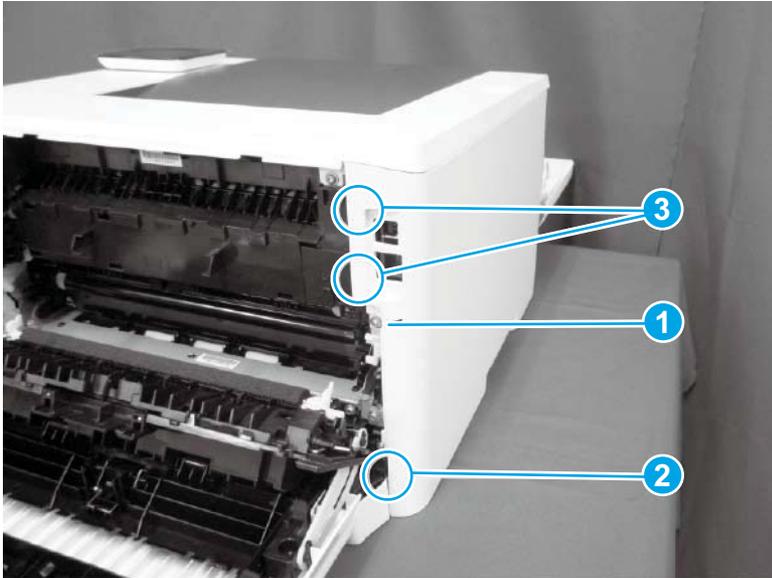


3. Release five tabs (callout 1) along the top and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-185** Remove the left cover

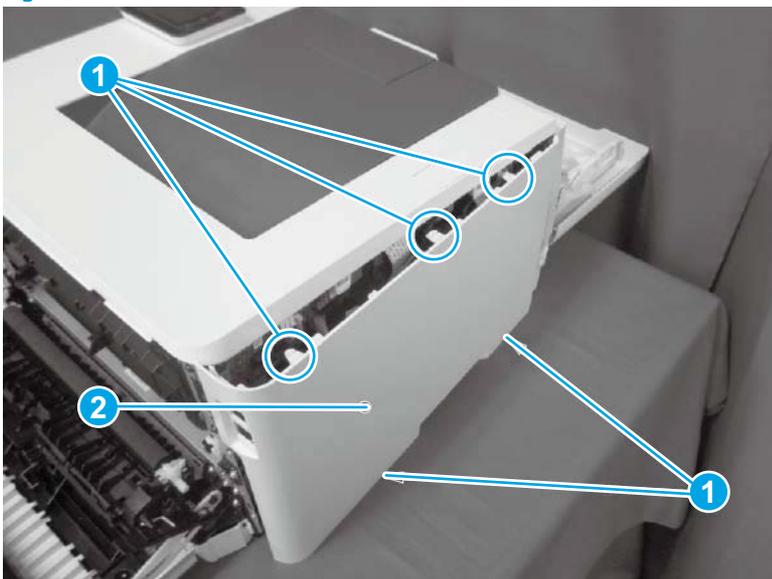


#### Step 4: Remove the left cover (M178-M181 and M278-M281)

 **NOTE:** This step is for the M178-M181 and M278-M281 printers. For the M153-M154 and M253-M254 printers, skip this step and go to [Step 5: Remove the rear lower cover \(simplex models\) on page 146](#).

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


**Figure 1-186** Tab locations

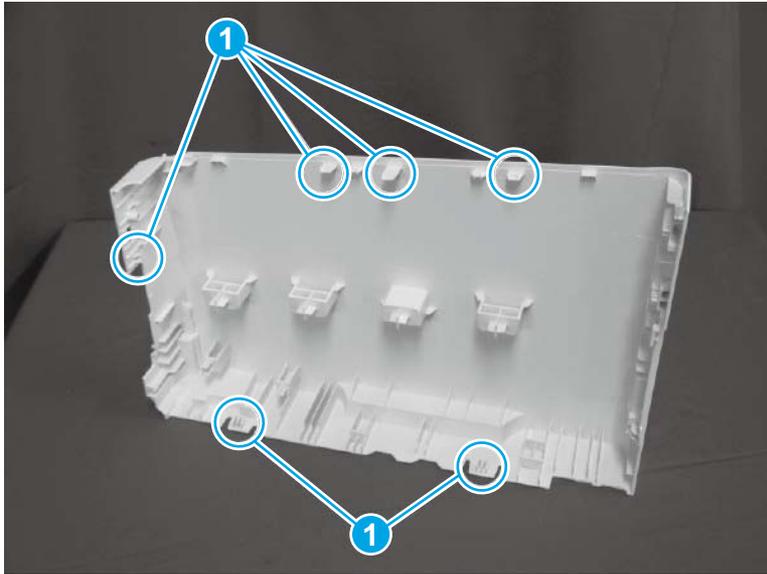

2. At the rear of the printer, remove one screw (callout 1), and then release one tab (callout 2).

 **TIP:** Use a small, flat-blade screwdriver to release the tab.

**Figure 1-187** Remove one screw and release tab

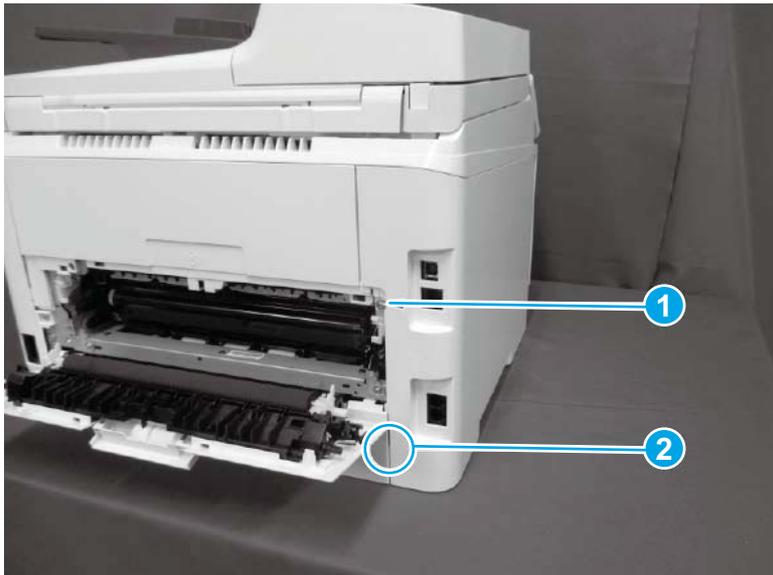


3. Release six tabs (callout 1) along the top, front, and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-188** Remove the left cover

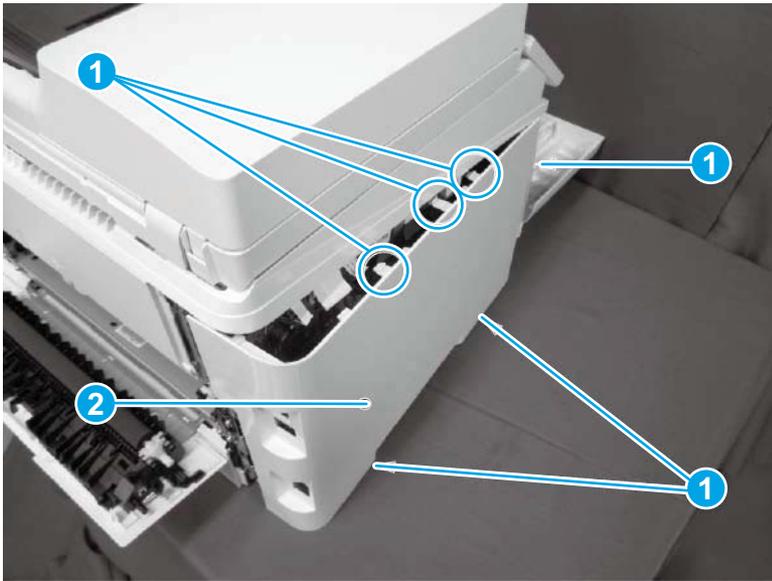

#### Step 5: Remove the rear lower cover (simplex models)

1. Close the rear door.

**Figure 1-189** Close the rear door

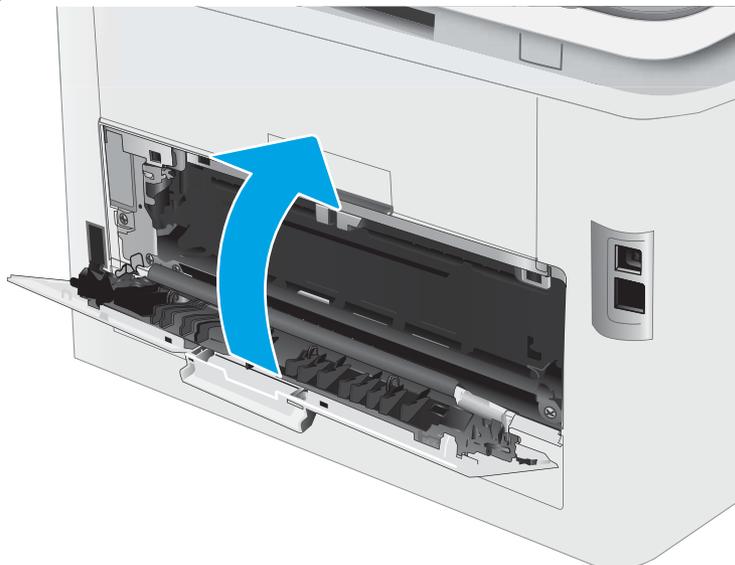


2. Release two tabs (callout 1), and then remove the rear lower cover (callout 2).

 **TIP:** Slide the printer to the edge of a table or tilt it up to more easily release the tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-190** Remove the rear lower cover (simplex models)

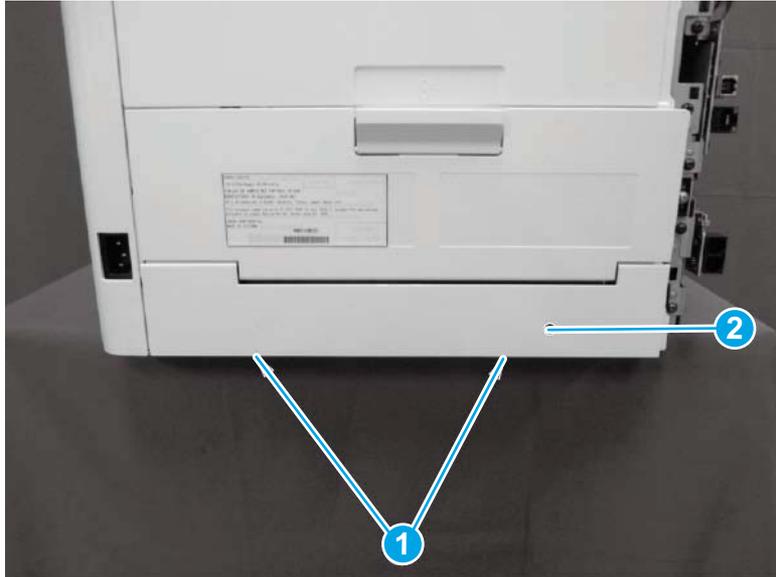

#### Step 6: Remove the rear door assembly (simplex models)


1. Remove one screw (callout 1), and then remove one M4 tapping screw (callout 2).

**Figure 1-191** Remove two screws

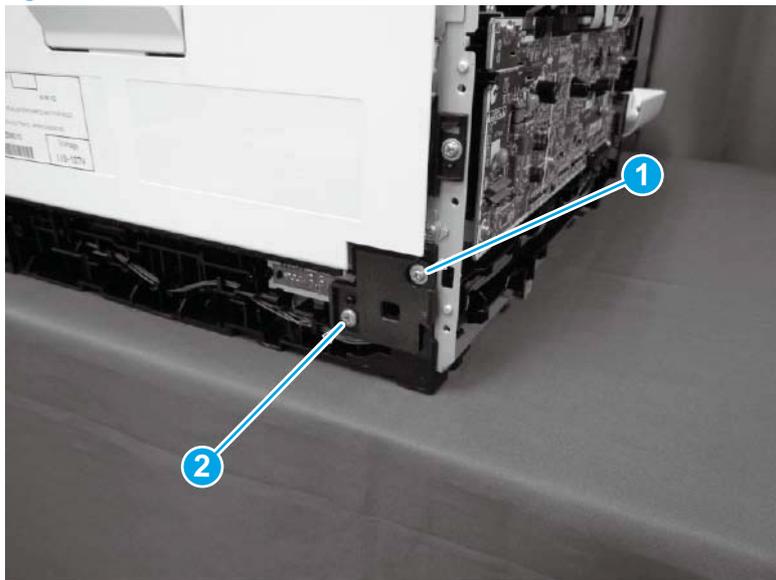

2. Open the rear door. Release the shaft holder (callout 1) to remove it from the rear door.


**Figure 1-192** Remove the shaft holder

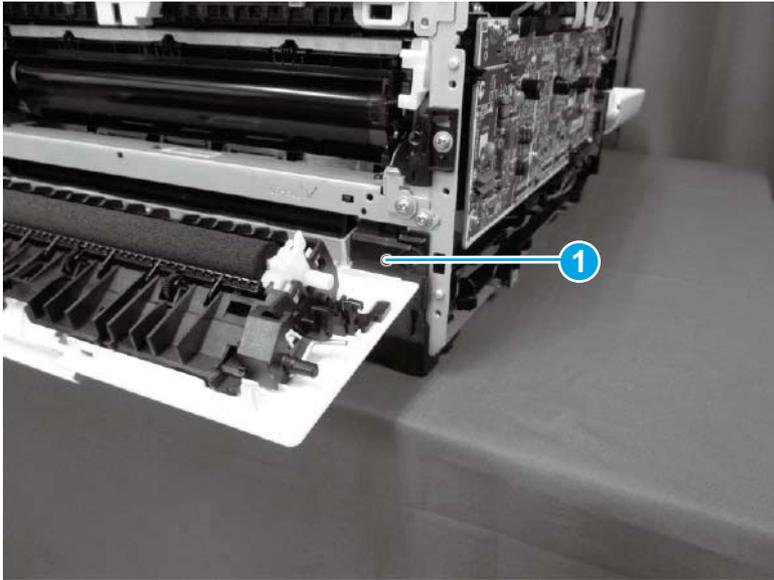

3. Slide the rear door assembly (callout 1) to the right to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-193** Remove the rear door assembly

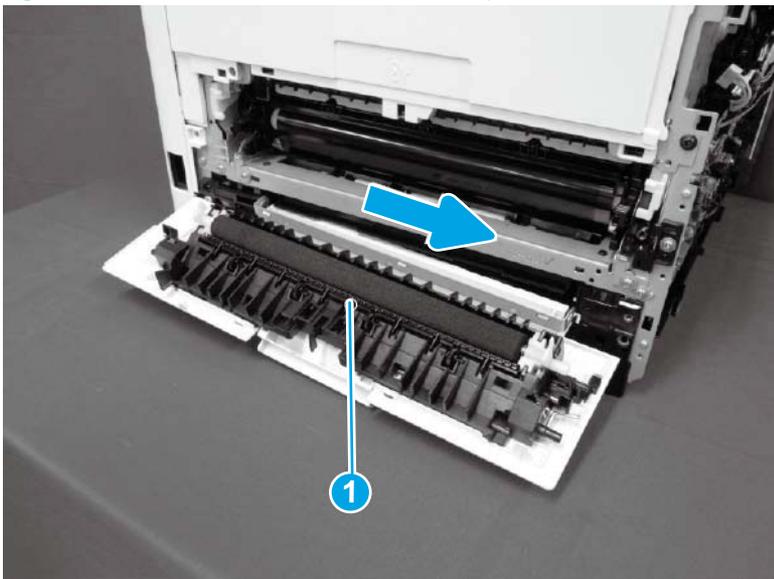

### Step 7: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Rear door assembly (duplex models)

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and duplexer doors](#)
- [Step 3: Remove the right cover \(M253-M254\)](#)
- [Step 4: Remove the left cover \(M253-M254\)](#)
- [Step 5: Remove the right cover \(M278-M281\)](#)
- [Step 6: Remove the left cover \(M278-M281\)](#)
- [Step 7: Remove the rear lower cover \(duplex models\)](#)
- [Step 8: Remove the duplexer door](#)
- [Step 9: Remove the rear door assembly \(duplex models\)](#)
- [Step 10: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the rear door assembly for duplex models.

---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- 
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- 
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### Rear door assembly (duplex models) part number

---

RM2-5580-000CN

Rear door assembly (duplex)

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-194 Remove the cassette tray



### Step 2: Open the front and duplexer doors


1. Open the front door.

Figure 1-195 Open the front door



2. Open the duplexer door.

Figure 1-196 Open the duplexer door

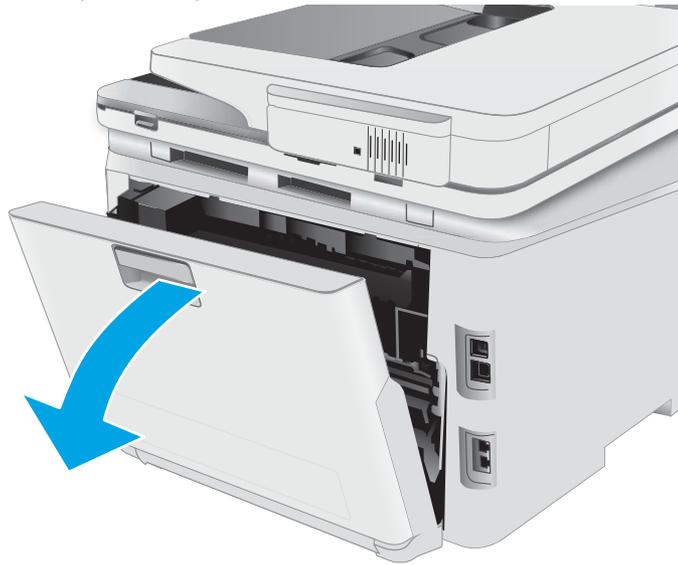


### Step 3: Remove the right cover (M253-M254)

 **NOTE:** This step is for the M253-M254 printers. For the M278-M281 printers, skip this step and go to [Step 5: Remove the right cover \(M278-M281\) on page 156.](#)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-197 Tab locations

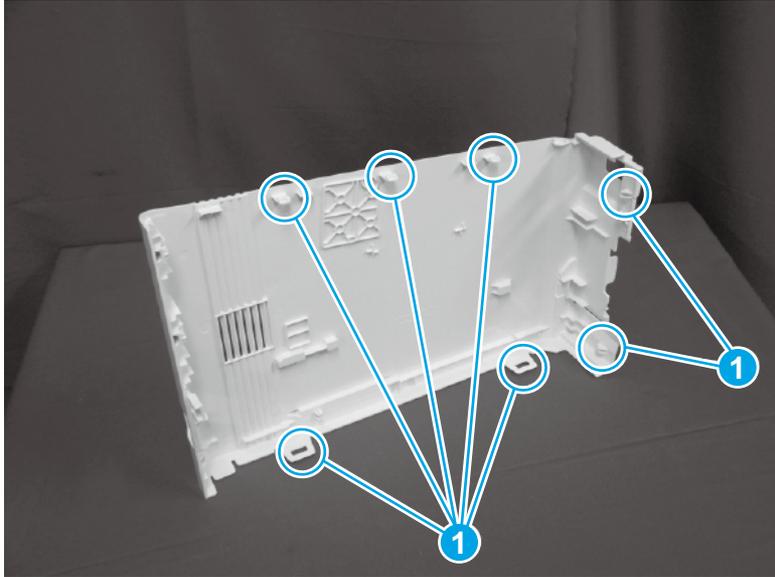


2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

---

Figure 1-198 Remove one screw and release tabs

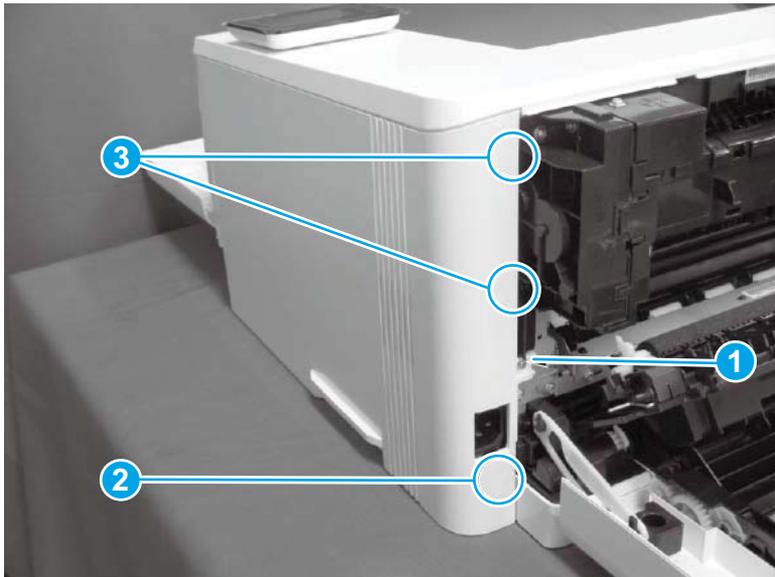

3. Release seven tabs (callout 1) along the top, bottom, and front of the cover. Pull the cover (callout 2) away from the printer to remove it.

---


 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-199** Remove the right cover

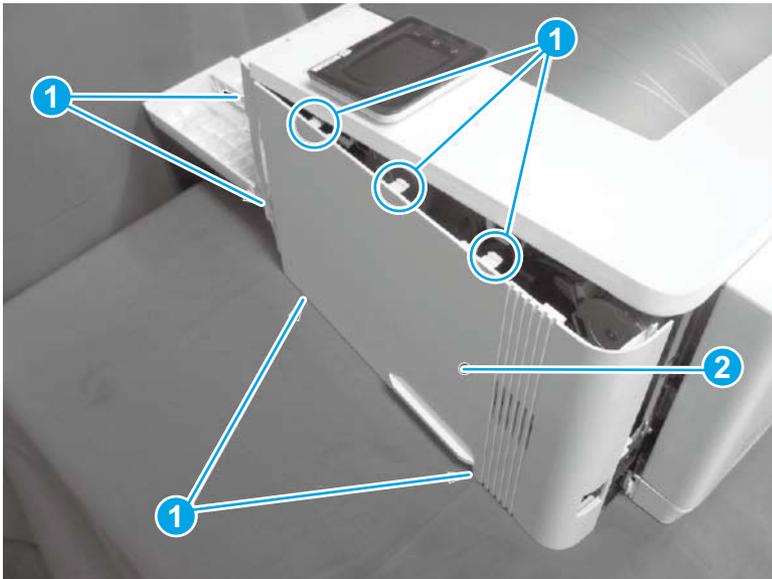

#### Step 4: Remove the left cover (M253-M254)


---

 **NOTE:** This step is for the M253-M254 printers. For the M278-M281 printers, skip this step and go to [Step 5: Remove the right cover \(M278-M281\) on page 156](#).

---

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-200 Tab locations

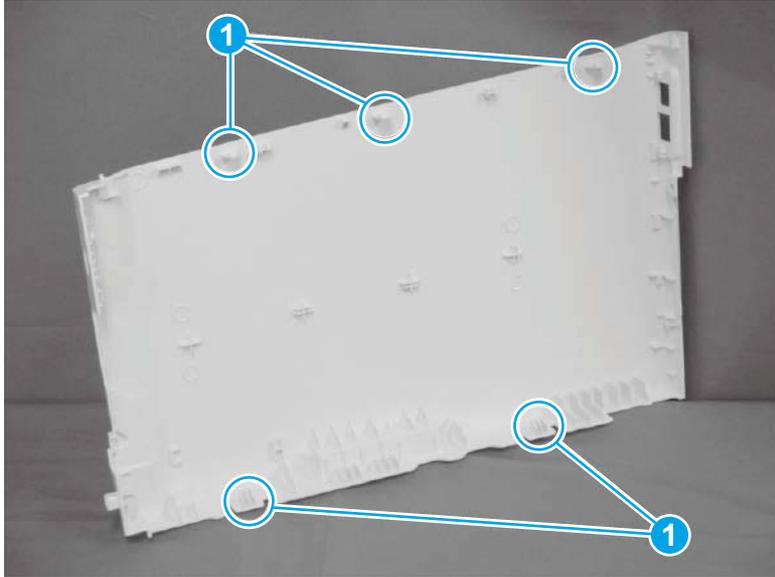


2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

---

Figure 1-201 Remove one screw and release tabs

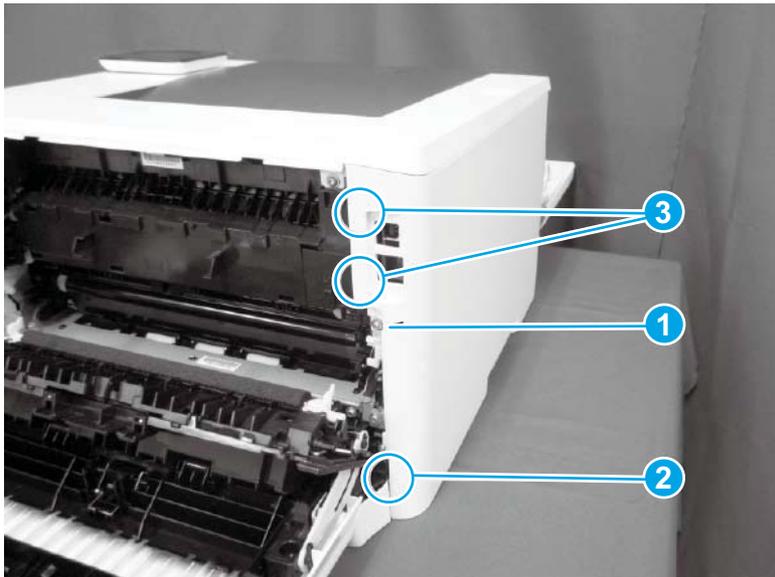

3. Release five tabs (callout 1) along the top and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

---


 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-202** Remove the left cover

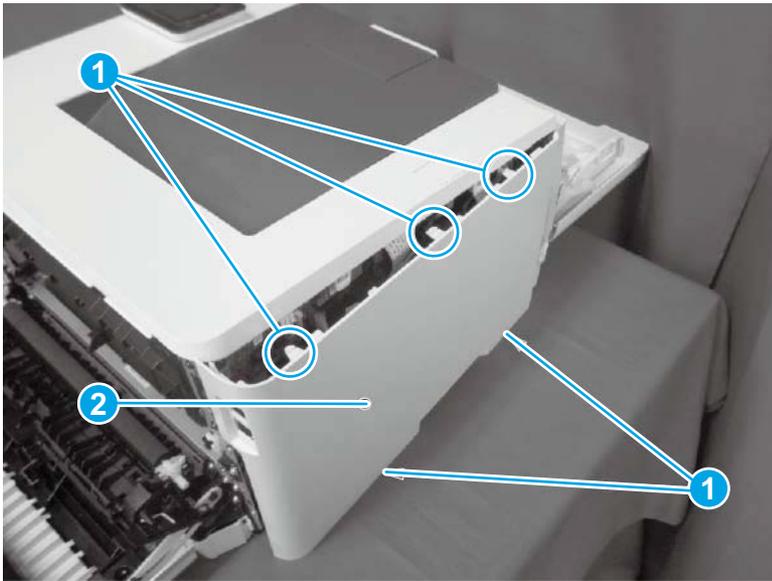

#### Step 5: Remove the right cover (M278-M281)


---

 **NOTE:** This step is for the M278-M281 printers. For the M253-M254 printers, skip this step and go to [Step 7: Remove the rear lower cover \(duplex models\) on page 160.](#)

---

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-203 Tab locations

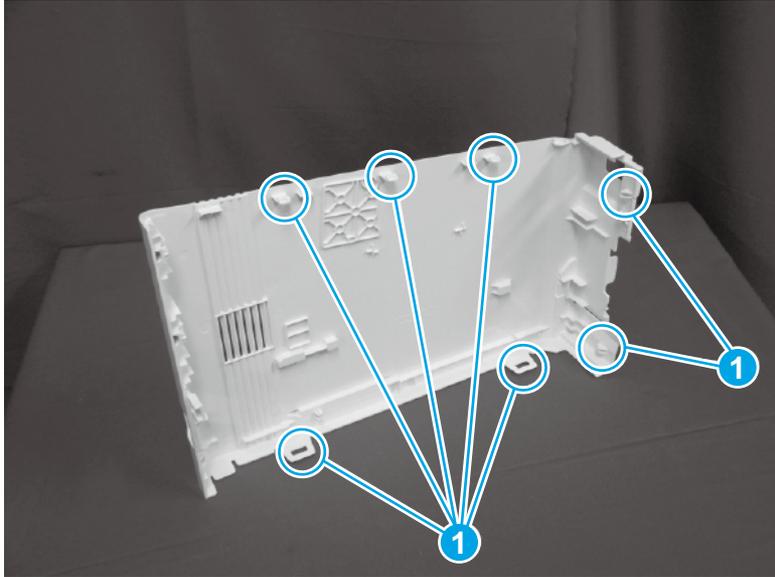


2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

---

Figure 1-204 Remove one screw and release tabs

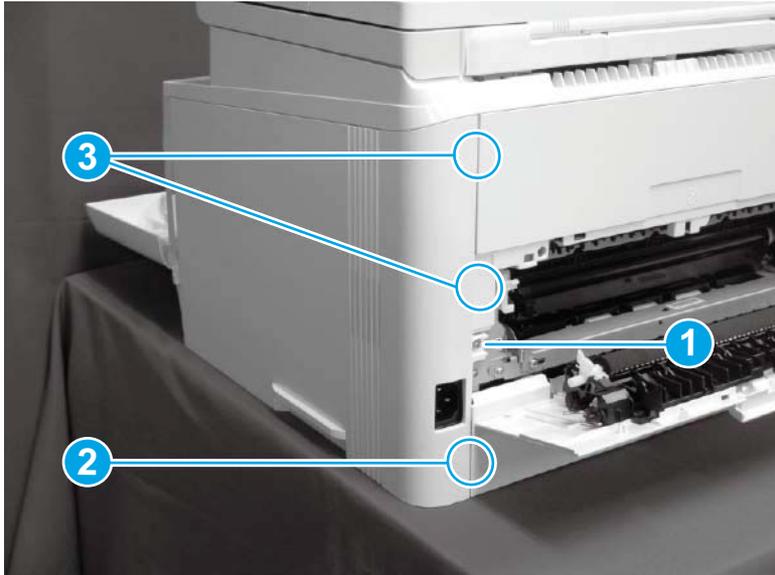

3. Release seven tabs (callout 1) along the top, bottom, and front of the cover. Pull the cover (callout 2) away from the printer to remove it.

---


 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-205** Remove the right cover

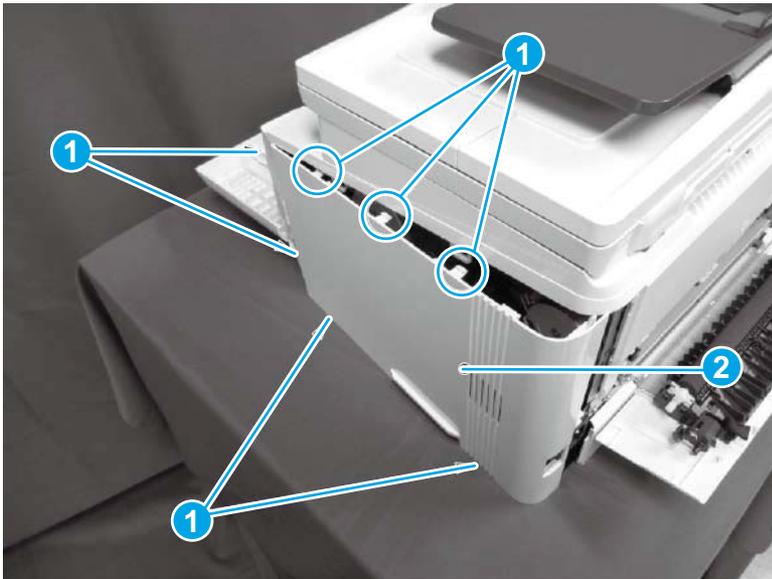

#### Step 6: Remove the left cover (M278-M281)


---

 **NOTE:** This step is for the M278-M281 printers. For the M253-M254 printers, skip this step and go to [Step 7: Remove the rear lower cover \(duplex models\) on page 160.](#)

---

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-206 Tab locations

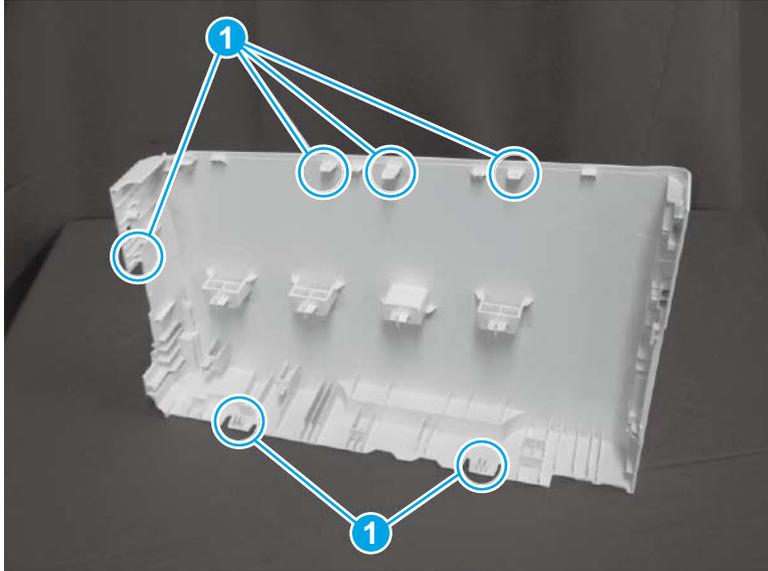


2. At the rear of the printer, remove one screw (callout 1), and then release one tab (callout 2).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab.

---

Figure 1-207 Remove one screw and release tab

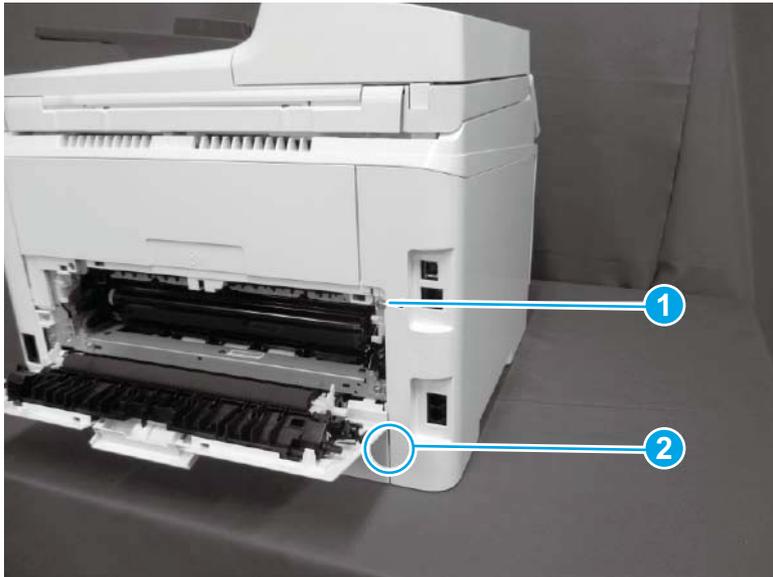


3. Release six tabs (callout 1) along the top, front, and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-208** Remove the left cover

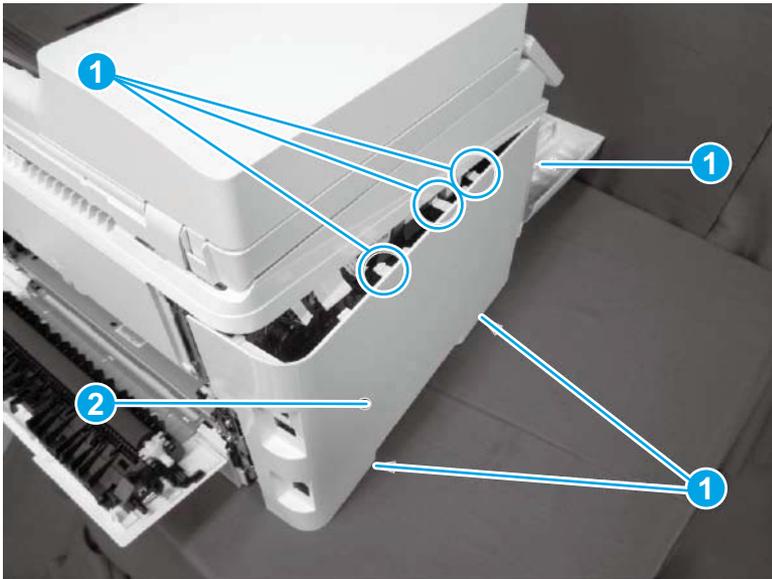

#### Step 7: Remove the rear lower cover (duplex models)


1. Close the duplexer door.

**Figure 1-209** Close the duplexer door

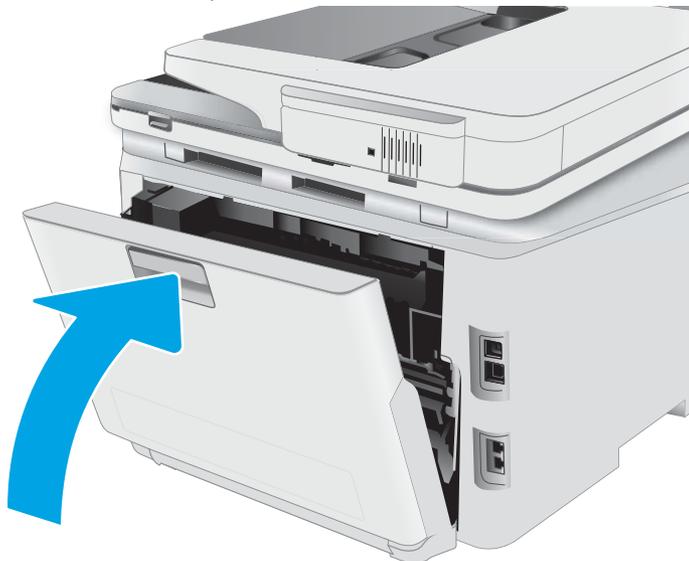

2. Release one tab (callout 1).

Figure 1-210 Release one tab

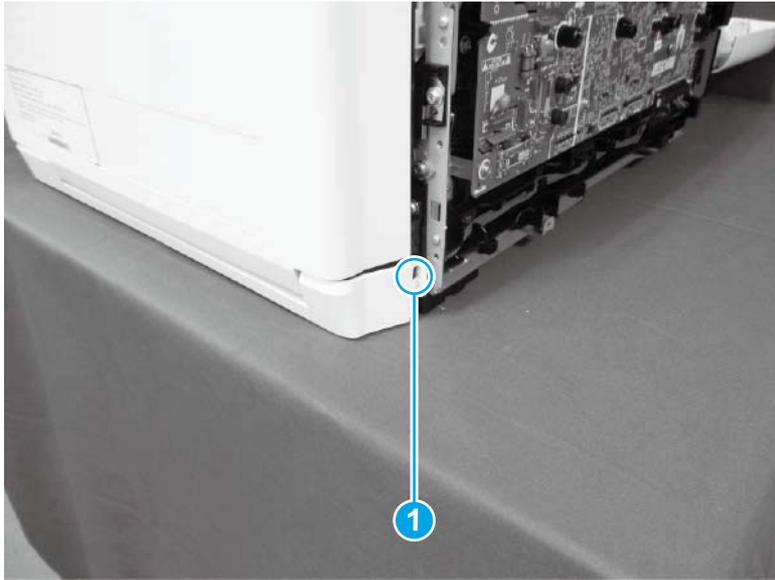

3. Release three tabs (callout 1), and then remove the rear lower cover (callout 2).

---


 **TIP:** Slide the printer to the edge of a table or tilt it up to more easily release the tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-211 Release three tabs and remove the cover

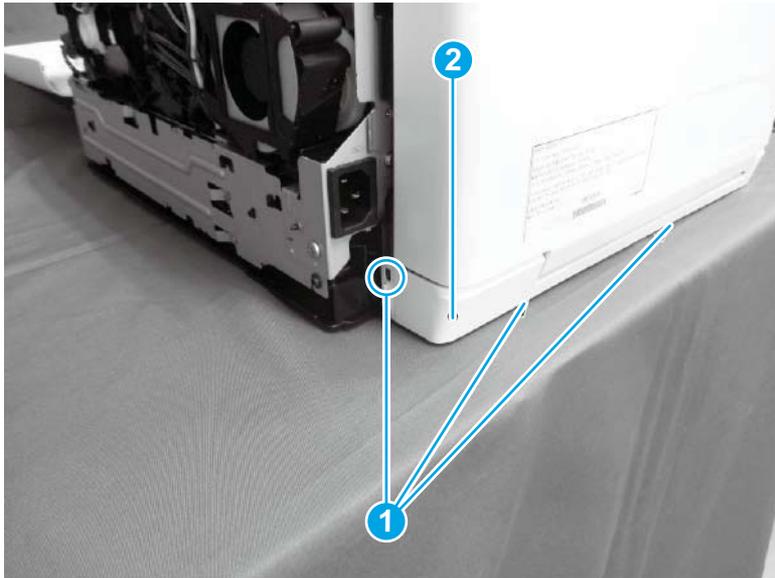

### Step 8: Remove the duplexer door


1. At the rear of the printer, at the bottom of the duplexer door, remove two larger M4 tapping screws (callout 1), and then remove the two holders (callout 2) from the door.

Figure 1-212 Remove two screws and holders

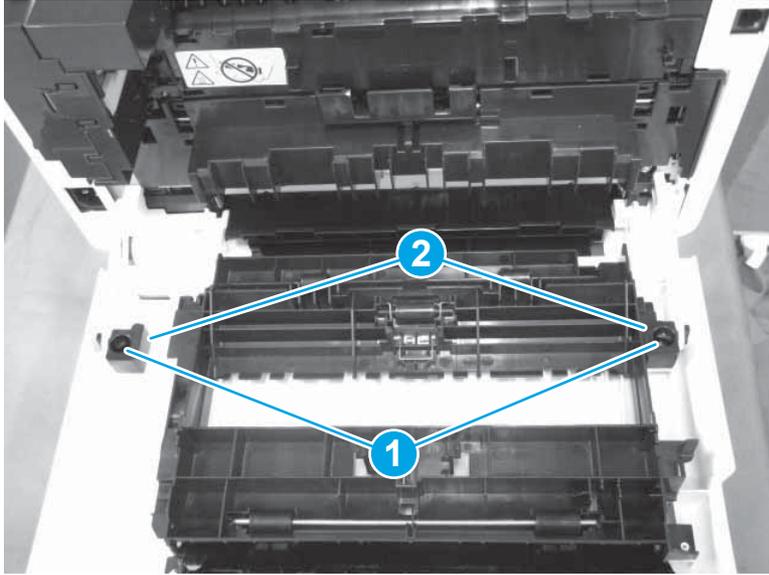


2. Rotate the shaft (callout 1) toward the printer to release it.

Figure 1-213 Rotate the shaft

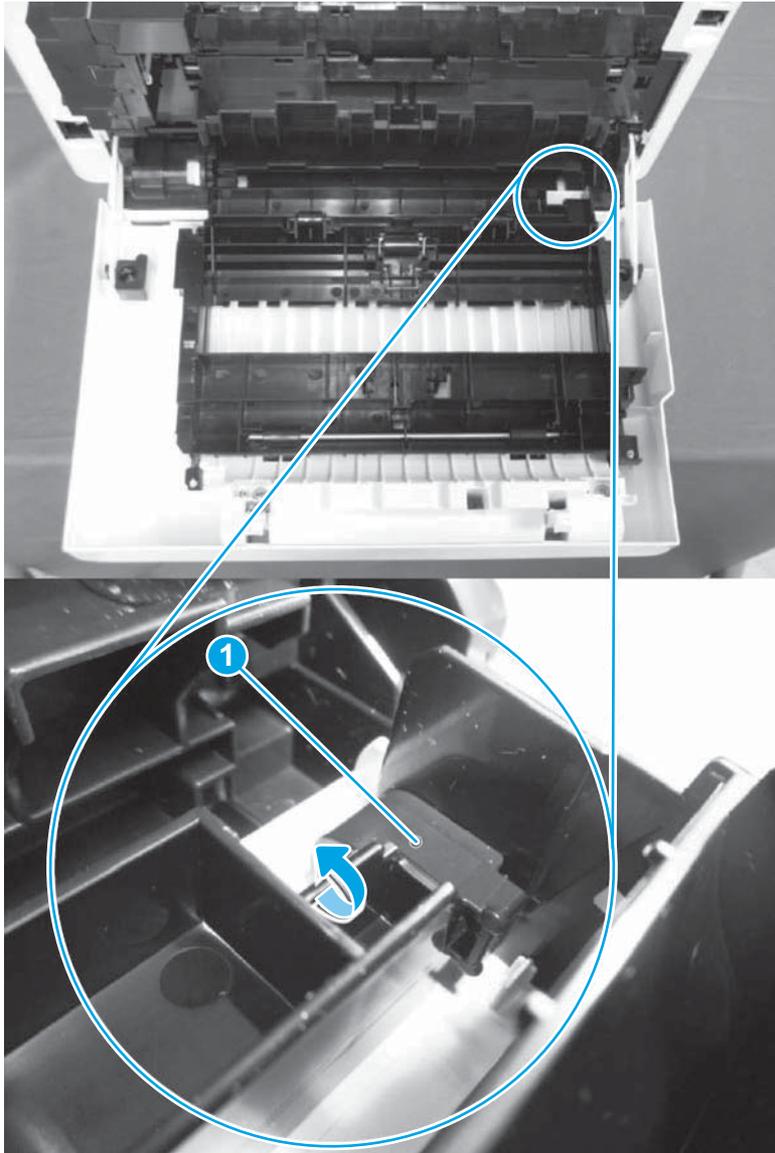

3. Slide the shaft (callout 1) to the left to remove it.

Figure 1-214 Remove the shaft

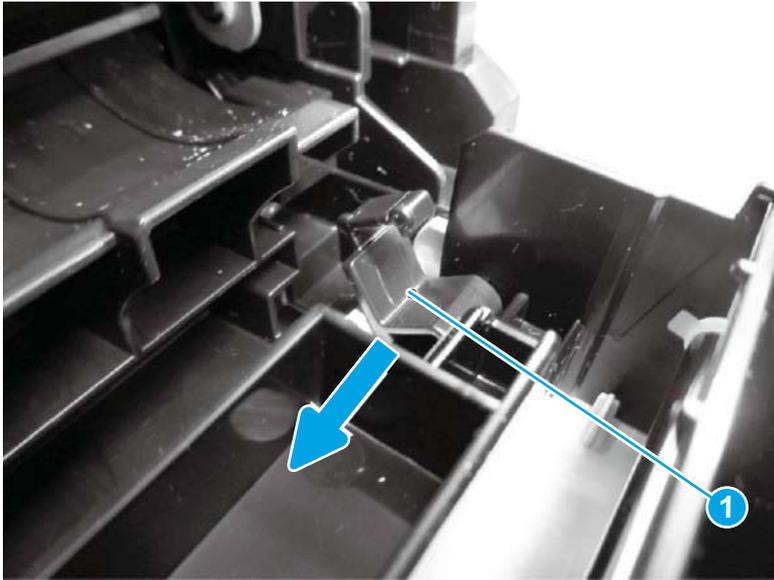


4. Rotate the right side of the door away from the printer, and then release the left shaft (callout 1) to remove the door.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-215 Remove the duplexer door

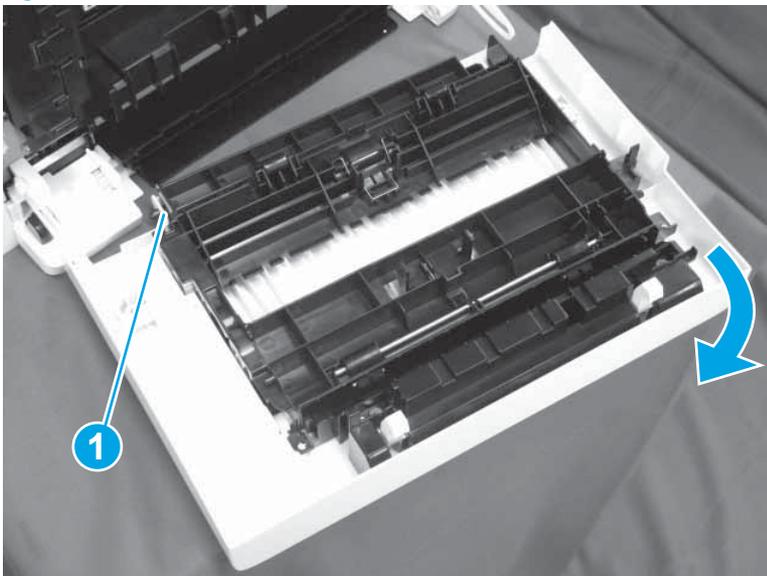

### Step 9: Remove the rear door assembly (duplex models)

1. Remove two screws (callout 1), remove one M4 tapping screw (callout 2), and then remove the cover (callout 3).

Figure 1-216 Remove three screws and the cover

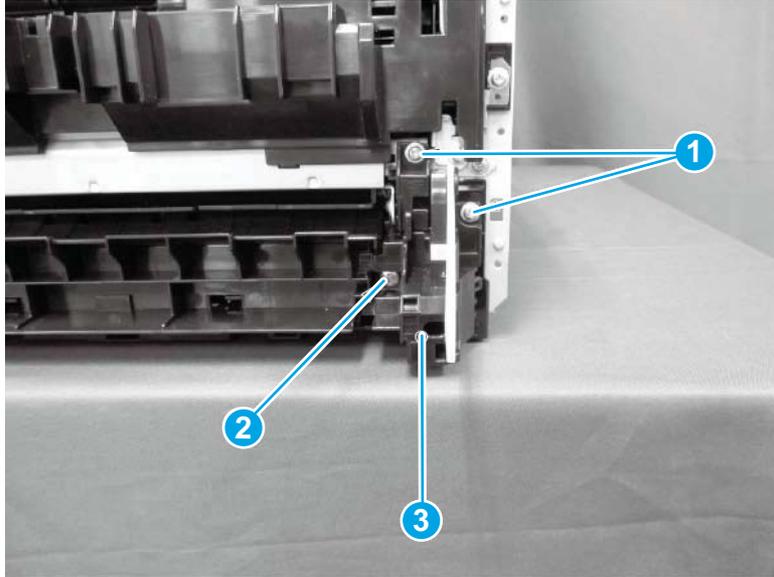


2. Open the rear door assembly. Release the shaft holder (callout 1) to remove it from the rear door assembly. Slide the rear door assembly (callout 2) to the right to remove it.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-217 Remove the rear door assembly

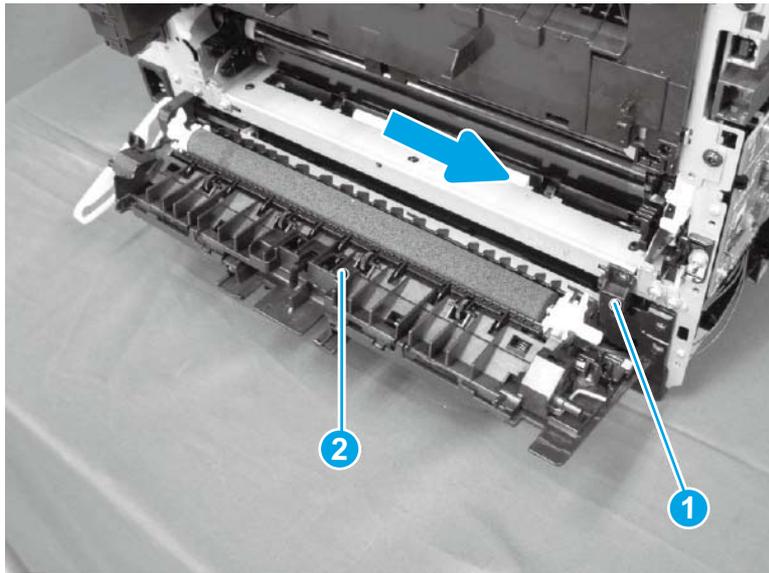

#### Step 10: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Front door assembly

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Remove the front door assembly](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the front door assembly.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.

 **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.

- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Front door assembly part number	
RM2-2400-000CN	Front door assembly (M153-M154)
RM2-2401-000CN	Front door assembly (M178-M181)
RM2-5590-000CN	Front door assembly (M253-M254)
RM2-5591-000CN	Front door assembly (M278-M181)

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

No post service test is available for this assembly.

## Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.


Figure 1-218 Remove the cassette tray

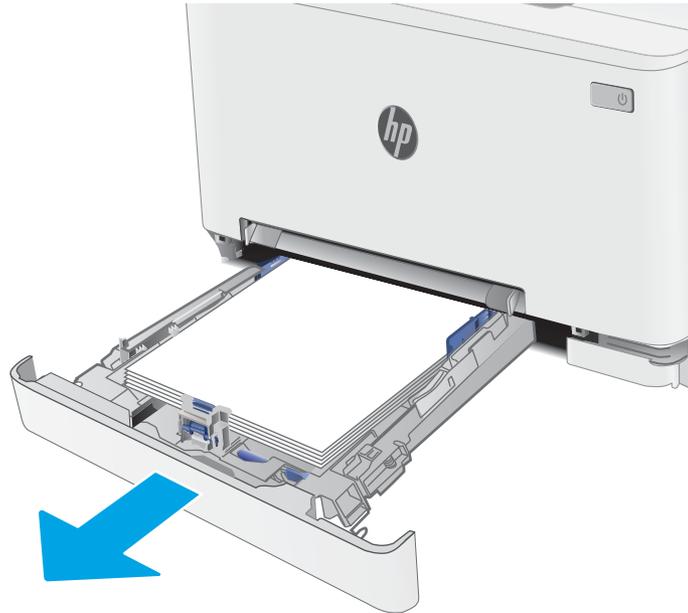

## Step 2: Remove the front door assembly

1. Open the front door. On the inside of the door, use one flat-blade screwdriver to release one tab on the side of the right support arm bracket (callout 1). At the same time, use a second flat-blade screwdriver to release one tab on the bottom of the bracket (callout 2). Slide the door away from the printer to release the bracket.


Figure 1-219 Release the right support arm bracket

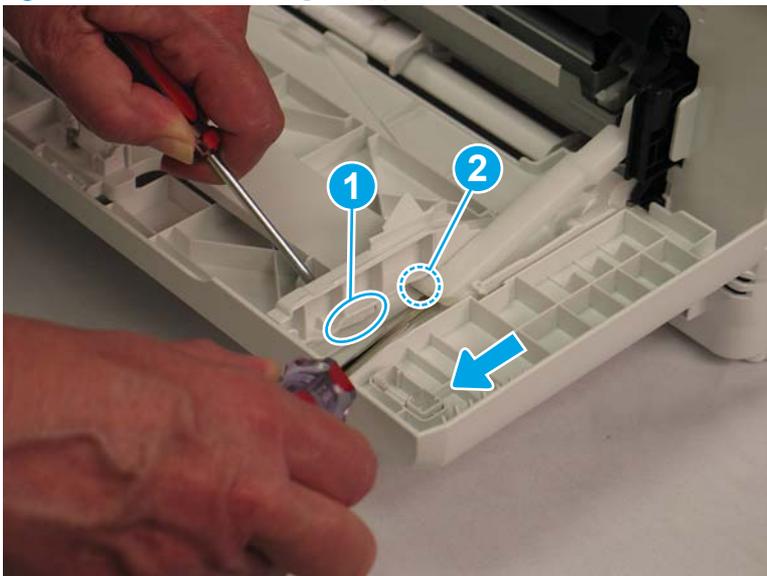

2. On the inside of the door, use one flat-blade screwdriver to release one tab on the side of the left support arm bracket (callout 1). At the same time, use a second flat-blade screwdriver to release one tab on the bottom of the bracket (callout 2). Slide the door away from the printer to release the bracket and remove the door.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-220** Release the left support arm bracket

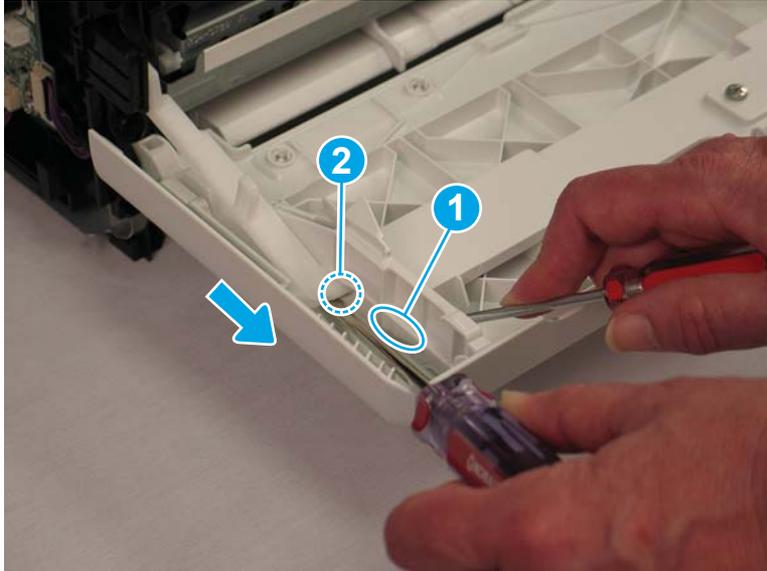

### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Control panel (M153-M154)

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and rear doors](#)
- [Step 3: Remove the right cover \(M153-M154\)](#)
- [Step 4: Remove the left cover \(M153-M154\)](#)
- [Step 5: Remove the rear cover \(simplex models\)](#)
- [Step 6: Remove the top cover \(M153-M154\)](#)
- [Step 7: Remove the control panel \(M153-M154\)](#)
- [Step 8: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the control panel for the M153-M154 models.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Control panel (M154) part number	
RM2-9557-000CN	Control panel (M154 wireless model)
RM2-9558-000CN	Control panel (M154 non-wireless model)

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

## Post service test

Make sure that the printer initializes to a **Ready** state.

Navigate the control-panel menus to make sure that the control panel is correctly functioning.

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-221 Remove the cassette tray



### Step 2: Open the front and rear doors


1. Open the front door.

Figure 1-222 Open the front door



2. Open the rear door.


Figure 1-223 Open the rear door

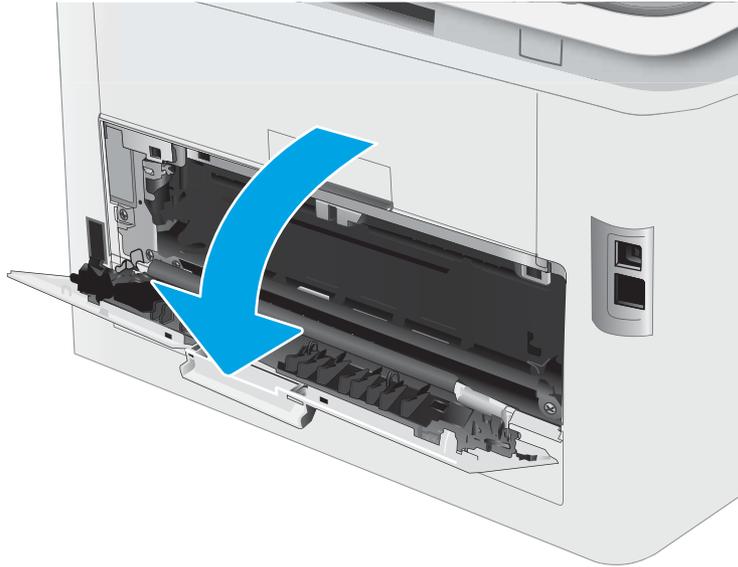

### Step 3: Remove the right cover (M153-M154)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


Figure 1-224 Tab locations

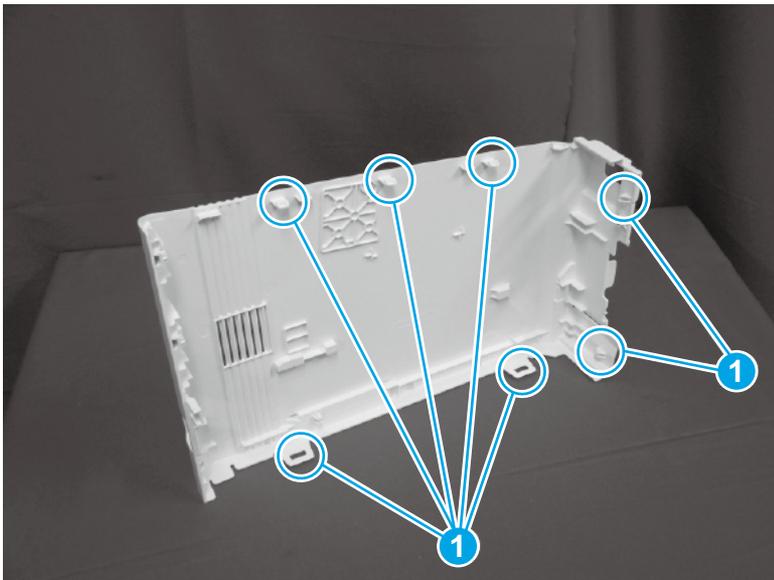

- At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

**Figure 1-225** Remove one screw and release tabs

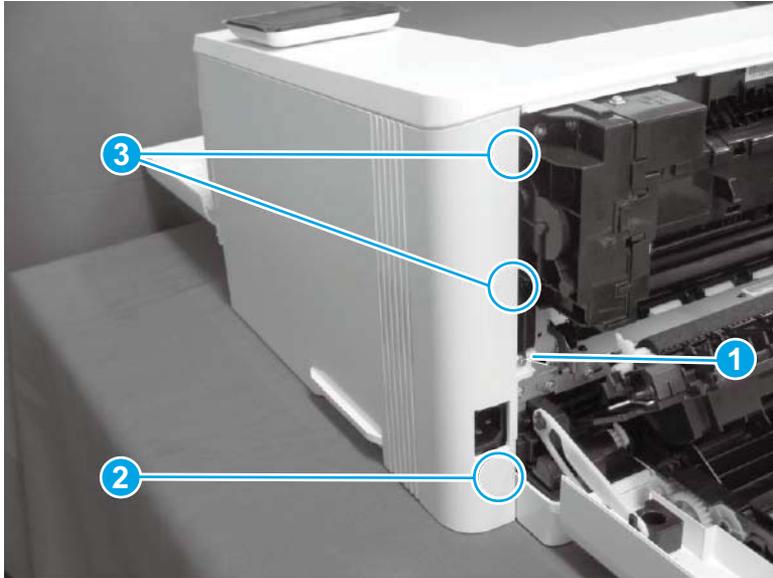


- Release seven tabs (callout 1) along the top, bottom, and front of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-226** Remove the right cover

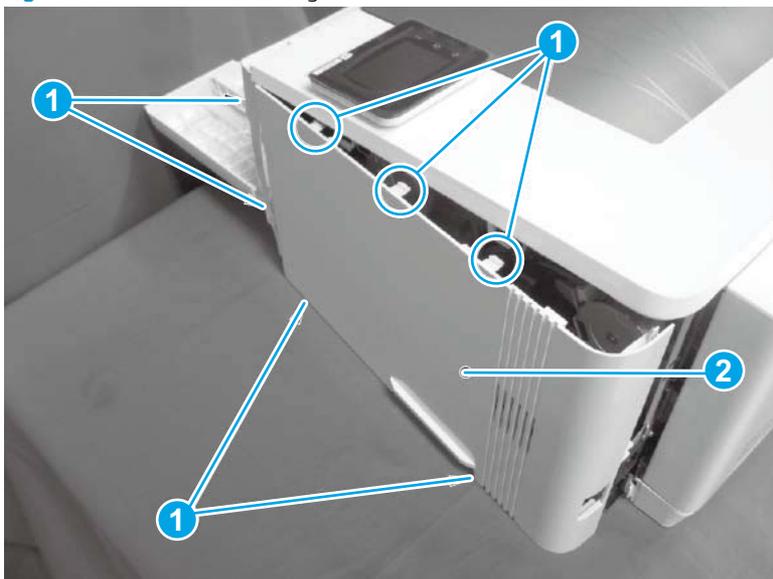

#### Step 4: Remove the left cover (M153-M154)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-227 Tab locations

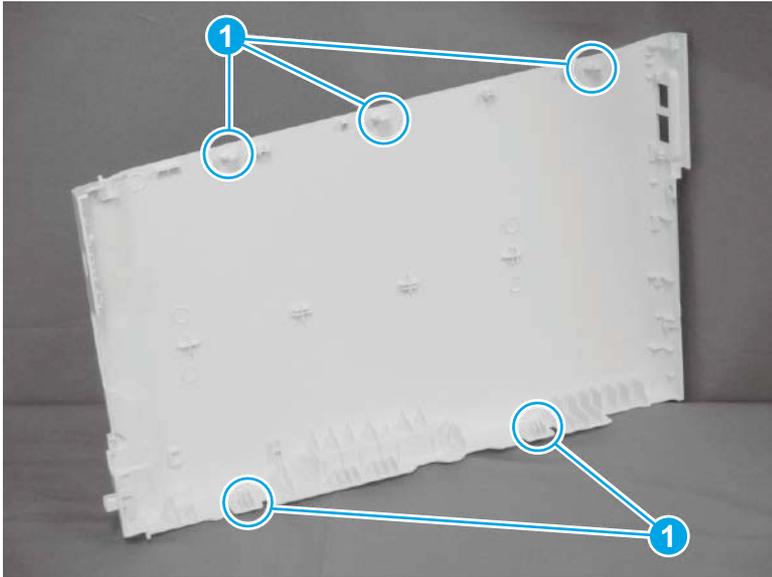


2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

---

Figure 1-228 Remove one screw and release tabs

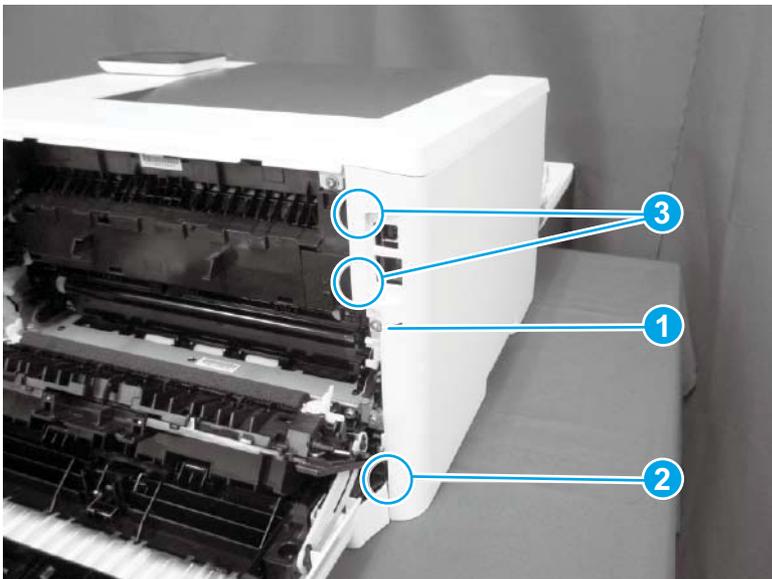

3. Release five tabs (callout 1) along the top and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

---


 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-229** Remove the left cover

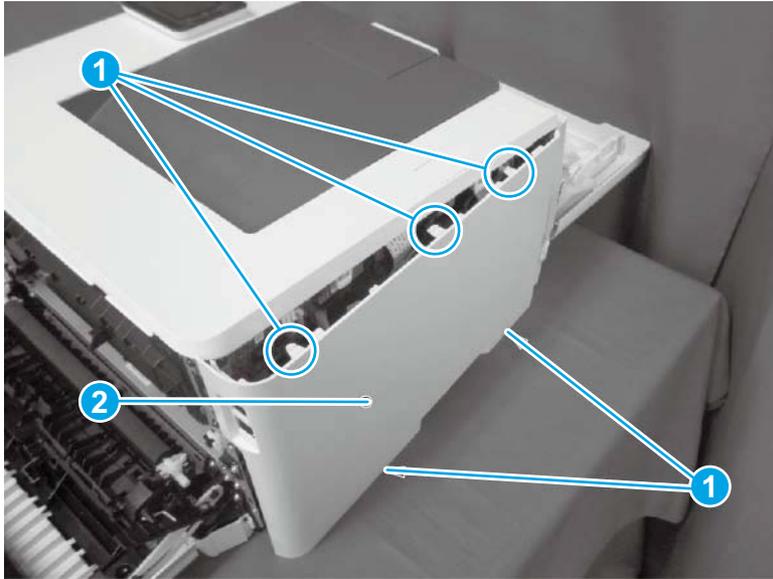

#### Step 5: Remove the rear cover (simplex models)

---

 **NOTE:** This step is for simplex printers. For duplex printers, skip this step and go to [Step 6: Remove the top cover \(M153-M154\) on page 176](#).

---


- ▲ At the back of the printer, use a small flat-blade screwdriver to release three tabs (callout 1) at the bottom of the cover, and then pull the cover down and away from the printer to remove it.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-230 Remove the rear cover

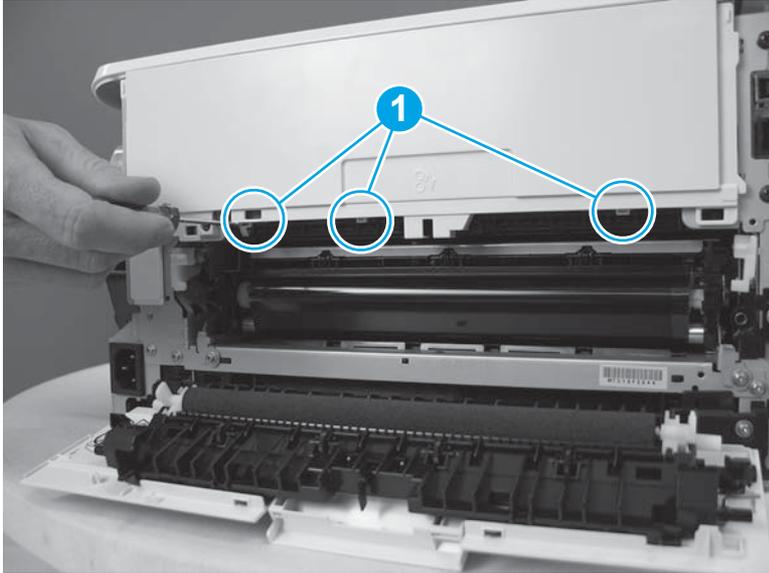

Step 6: Remove the top cover (M153-M154)


1. On the left side of the printer, on the formatter, disconnect one flat cable (callout 1).

Figure 1-231 Disconnect one connector

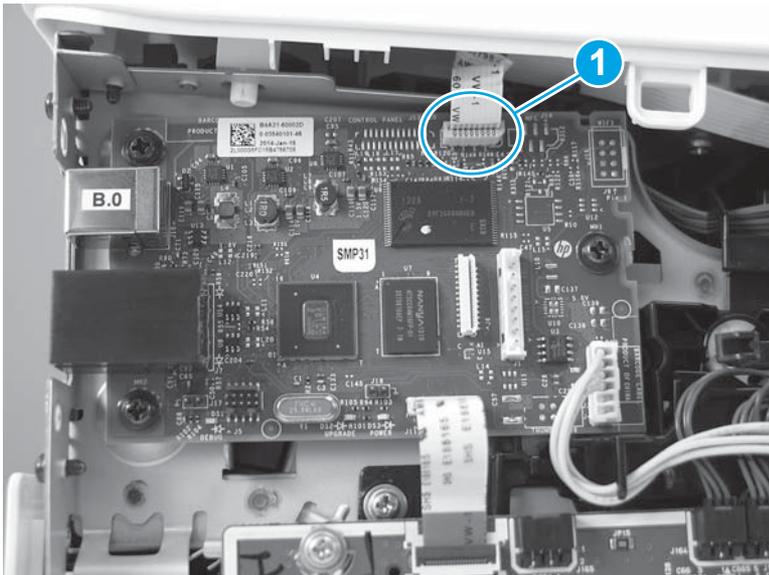


2. **Duplex models only:** Remove one screw (callout 1), and then release the grounding cable. Remove one M4 tapping screw (callout 2), and then pull the guide (callout 3) toward the front of the printer to remove it.

Figure 1-232 Remove two screws and the guide

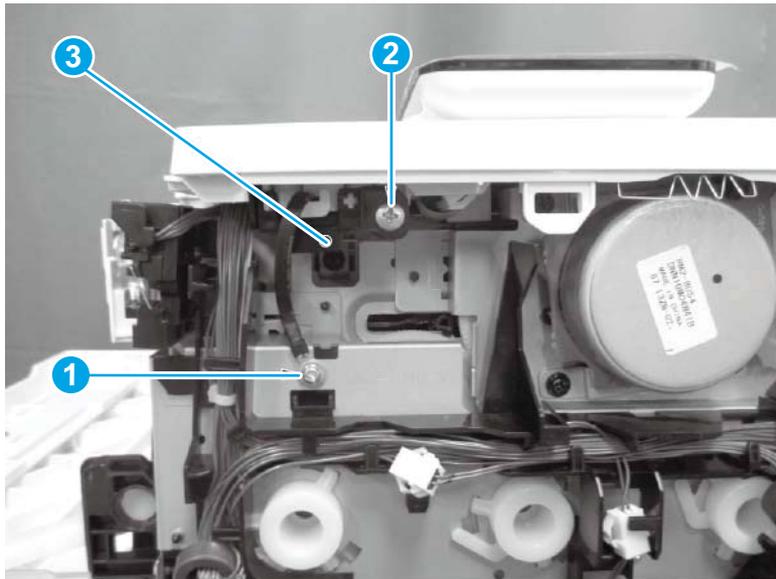

3. Remove two screws (callout 1), and then release one tab (callout 2).


Figure 1-233 Remove two screws

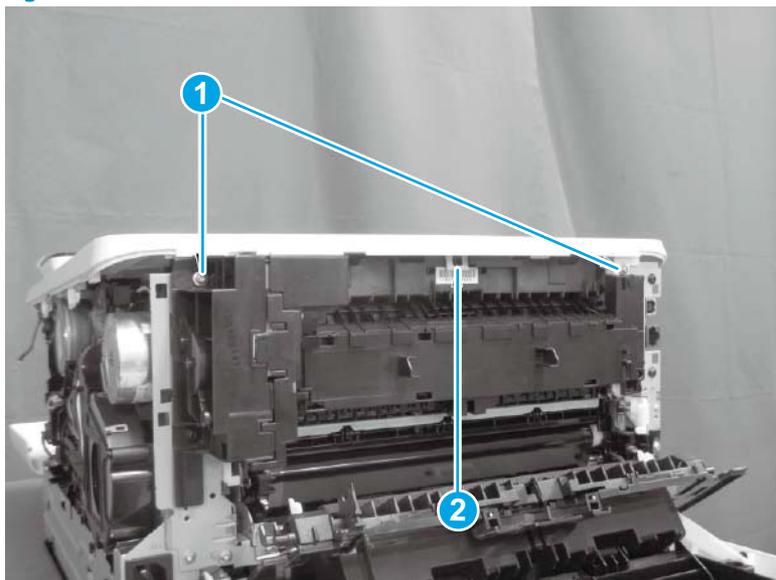

4. Remove three screws (callout 1), and then remove the top cover (callout 2).

 **NOTE:** Do not touch the parts around the main motor when removing the top cover


**Figure 1-234** Remove three screws and the top cover

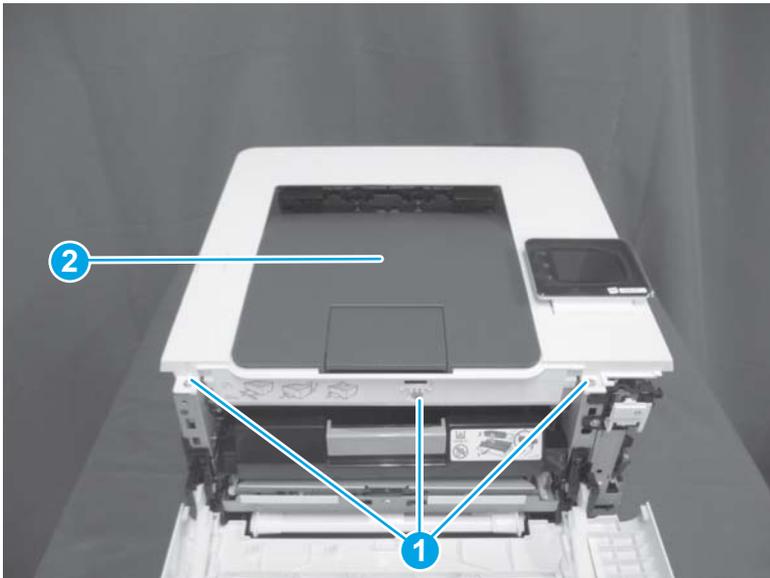

**Step 7: Remove the control panel (M153-M154)**

1. On the underside of the top cover, remove two screws (callout 1), and then remove the cover (callout 2).


**Figure 1-235** Remove two screws and the cover

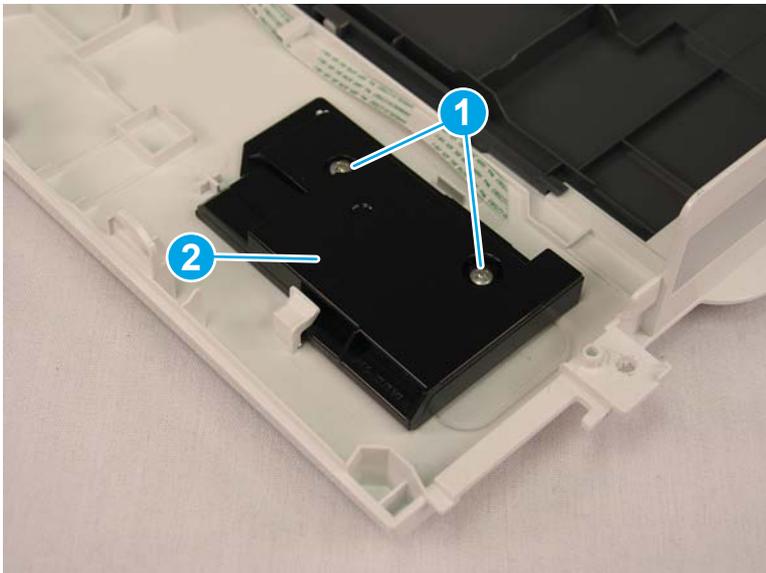

2. Disconnect one flat cable (callout 1), and then lift the control panel up to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-236** Disconnect one cable and remove the control panel

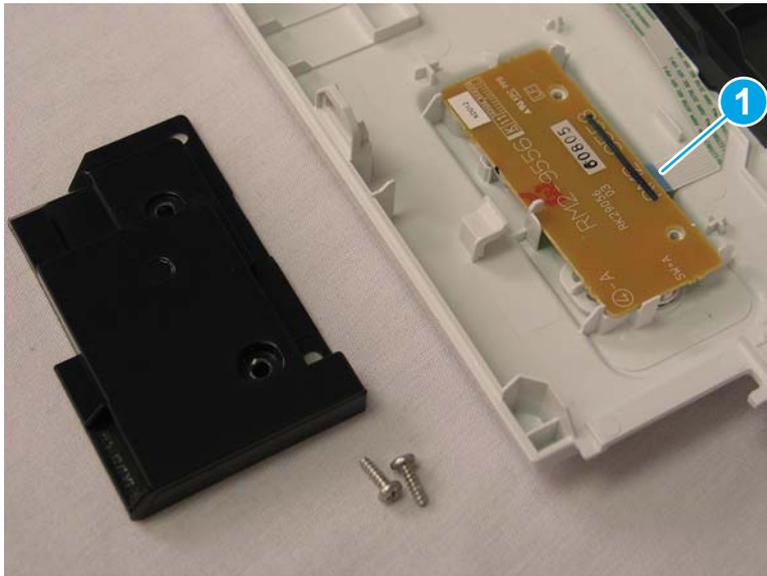

### Step 8: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Control panel (M178-M181)

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and rear doors](#)
- [Step 3: Remove the right cover \(M178-M181\)](#)
- [Step 4: Remove the left cover \(M178-M181\)](#)
- [Step 5: Remove the flatbed scanner \(M180n\)](#)
- [Step 6: Remove the document feeder and scanner \(M180nw and M181fw\)](#)
- [Step 7: Remove the control panel \(M178-M181\)](#)
- [Step 8: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the control panel for the M178-M181 models.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

#### Control panel (M178-M181) part numbers

T6B70-60106	Control panel, LED (M180n)
T6B74-60101	Control panel, 2-line LCD (M180nw)
T6B71-60105	Control panel, 2-line LCD with 10-keys (M181fw)

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

## Post service test

Make sure that the printer initializes to a **Ready** state.

Navigate the control-panel menus to make sure that the control panel is correctly functioning.

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-237 Remove the cassette tray



### Step 2: Open the front and rear doors


1. Open the front door.

Figure 1-238 Open the front door



2. Open the rear door.


Figure 1-239 Open the rear door

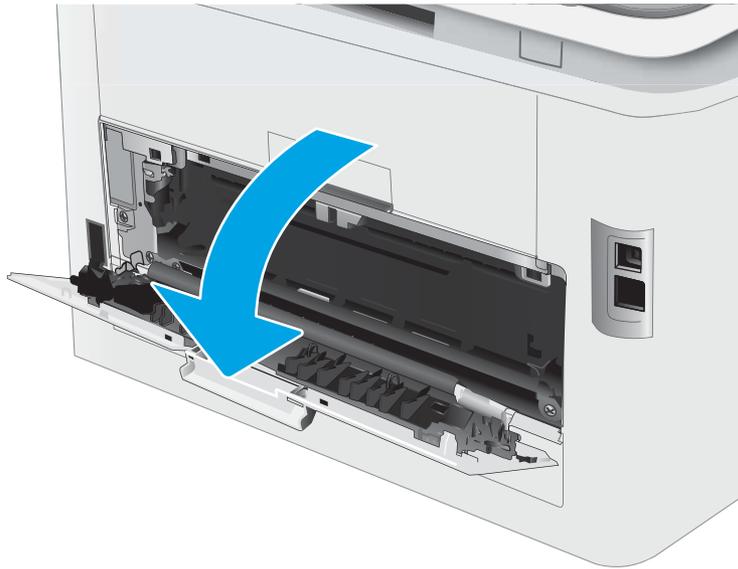

### Step 3: Remove the right cover (M178-M181)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


Figure 1-240 Tab locations

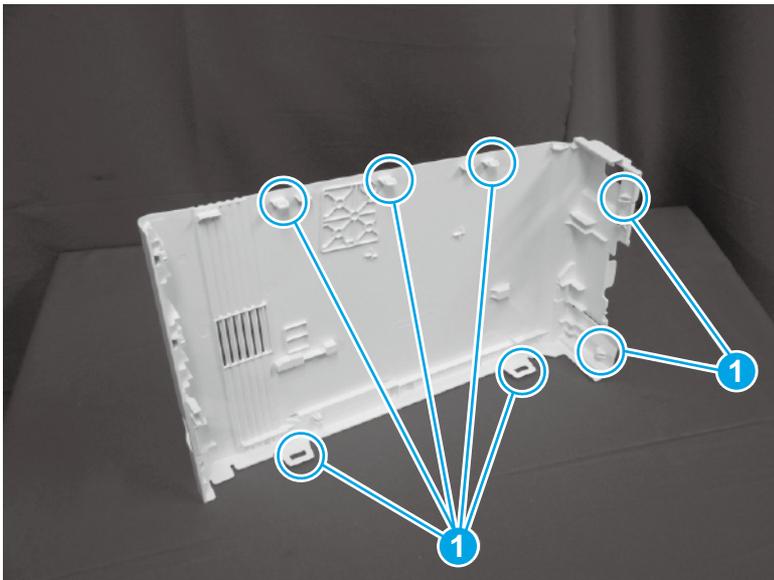

2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

**Figure 1-241** Remove one screw and release tabs

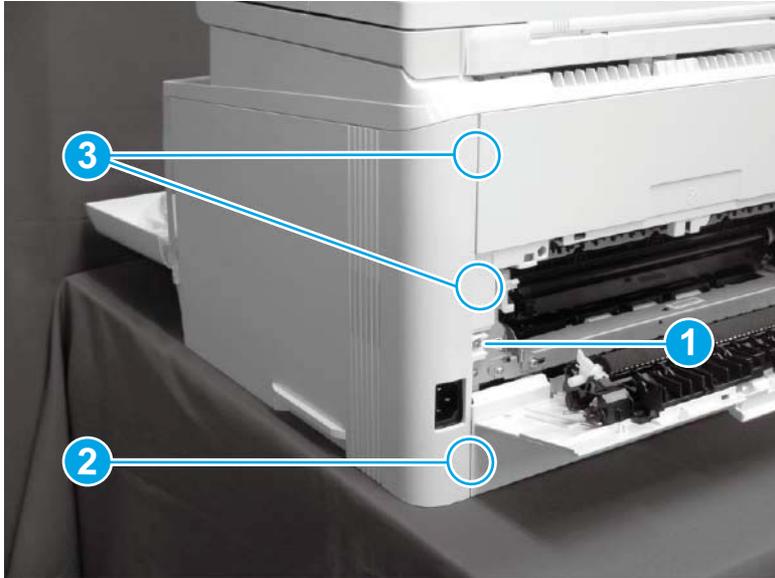


3. Release seven tabs (callout 1) along the top, bottom, and front of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-242** Remove the right cover

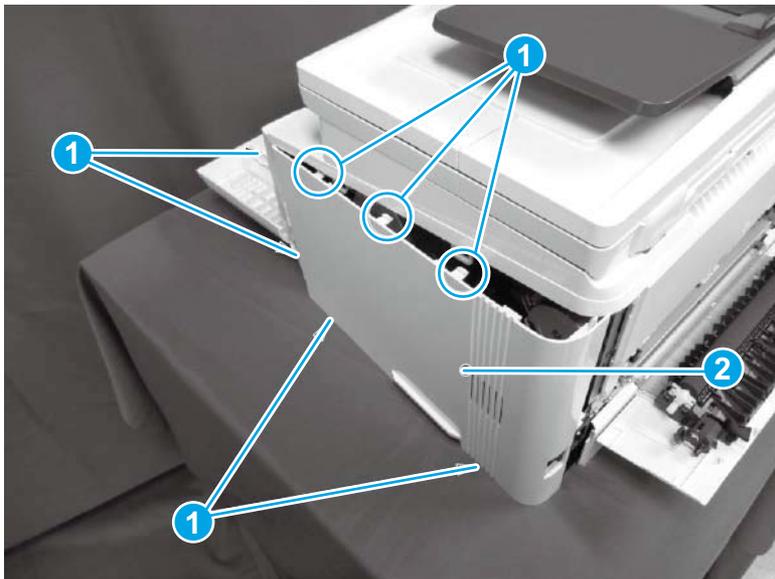

#### Step 4: Remove the left cover (M178-M181)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


Figure 1-243 Tab locations

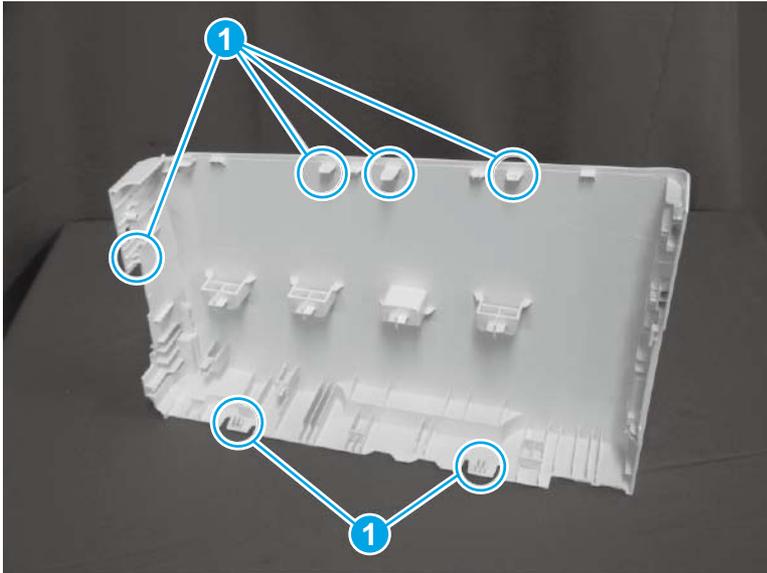

2. At the rear of the printer, remove one screw (callout 1), and then release one tab (callout 2).

 **TIP:** Use a small, flat-blade screwdriver to release the tab.

Figure 1-244 Remove one screw and release tab

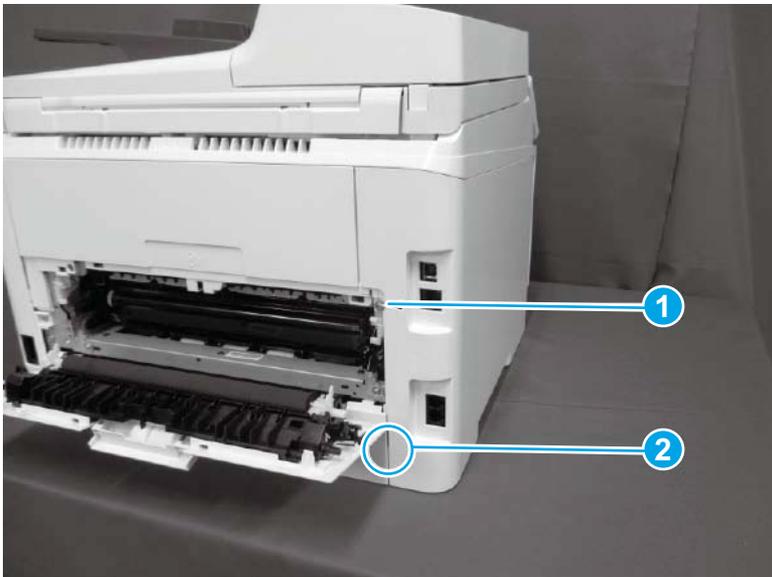

3. Release six tabs (callout 1) along the top, front, and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

---


 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-245 Remove the left cover

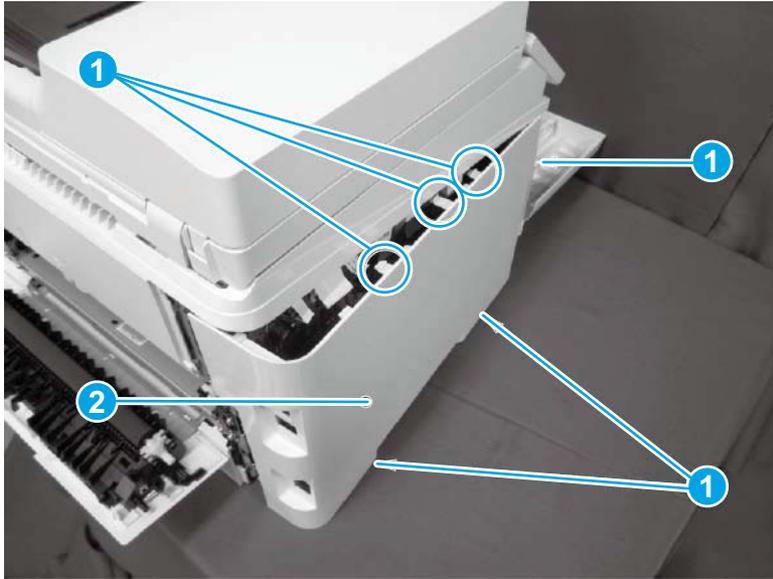

#### Step 5: Remove the flatbed scanner (M180n)


---

 **NOTE:** This step is for the M180n printer. For the M180nw and M181fw printers, skip this step and go to [Step 6: Remove the document feeder and scanner \(M180nw and M181fw\) on page 189.](#)

---

1. Disconnect one flat cable (callout 1) from the formatter.

Figure 1-246 Disconnect one flat cable

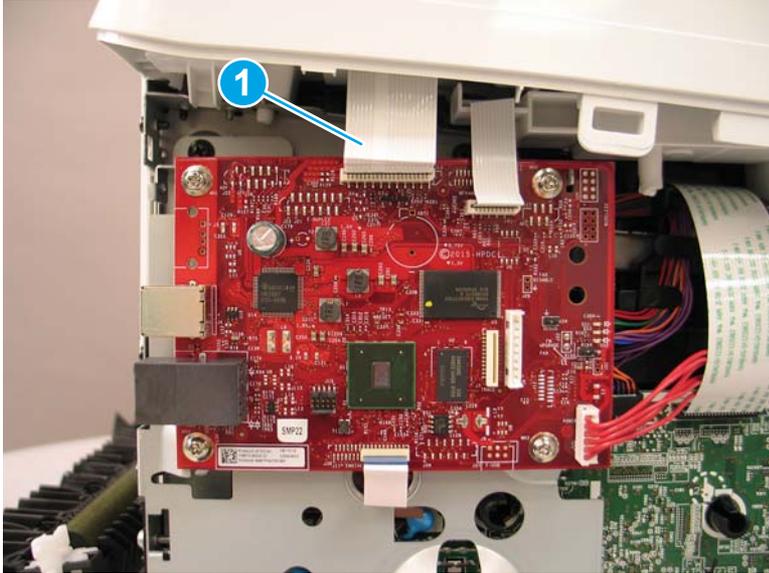


2. Open the scanner. Release one tab (callout 1), and then rotate the slider pin (callout 2) towards the front of the printer to release it.

---

 **TIP:** Use a Phillips head screwdriver in the end of the slider pin to rotate it.


---

Figure 1-247 Release one tab and rotate the slider pin

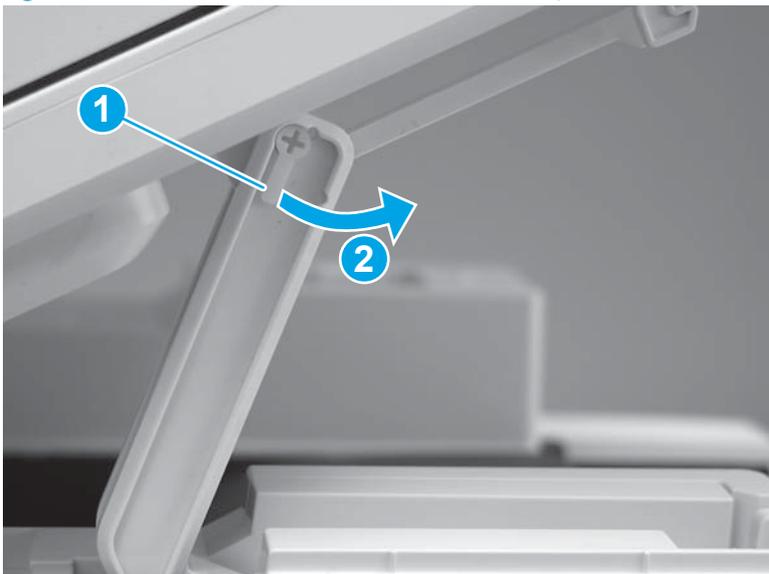

3. Remove the slider pin.

Figure 1-248 Remove the slider pin

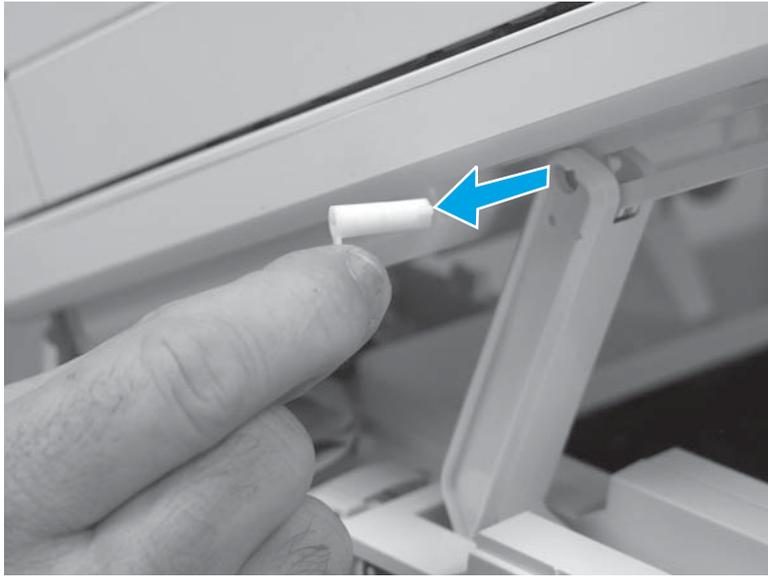

4. Rotate the hinge arm down.

---

**⚠ WARNING!** The hinge arm is spring-loaded by a strong spring and might snap down suddenly. Be careful not to pinch your fingers between the hinge arm and the top of the printer.


---

Figure 1-249 Rotate the hinge arm




5. On the scanner bed, use a small, flat-blade screwdriver to release one tab (callout 1), and then remove the scanner cable cover (callout 2).

Figure 1-250 Remove the scanner cable cover

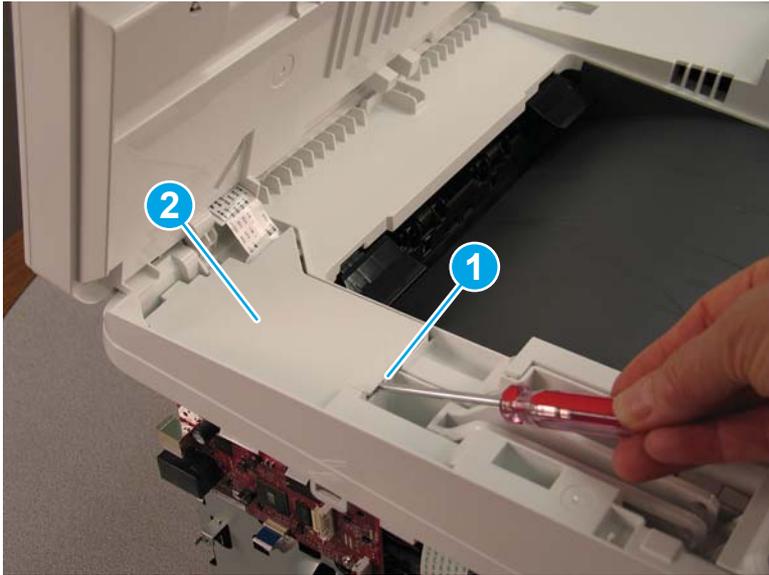

6. Release the flat cable (callout 1) from the guides (callout 2), and then release the flat cable (callout 3) through the opening in the cover.

Figure 1-251 Release the flat cable

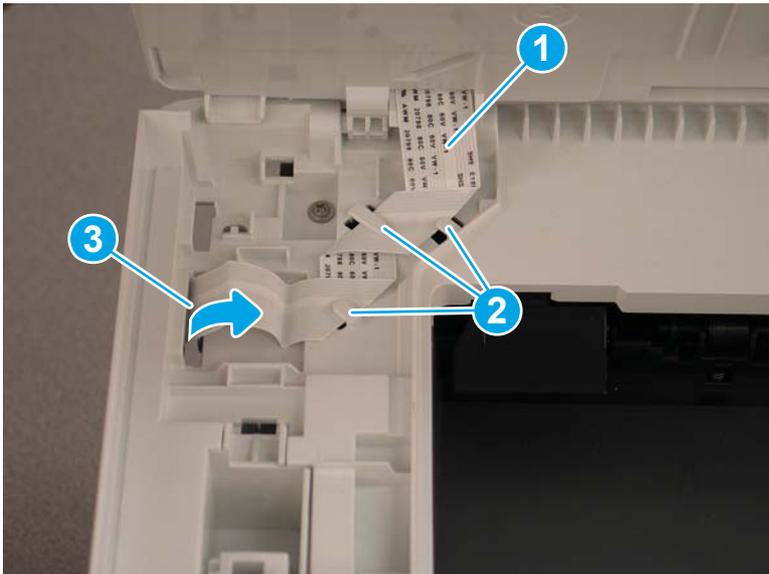


7. Open the scanner assembly fully, slide the assembly to the right (callout 1), and then lift the assembly off of the chassis (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

 **NOTE:** The figure below shows the document feeder scanner. The procedure is also correct for the flatbed scanner.

**Figure 1-252** Remove the scanner assembly

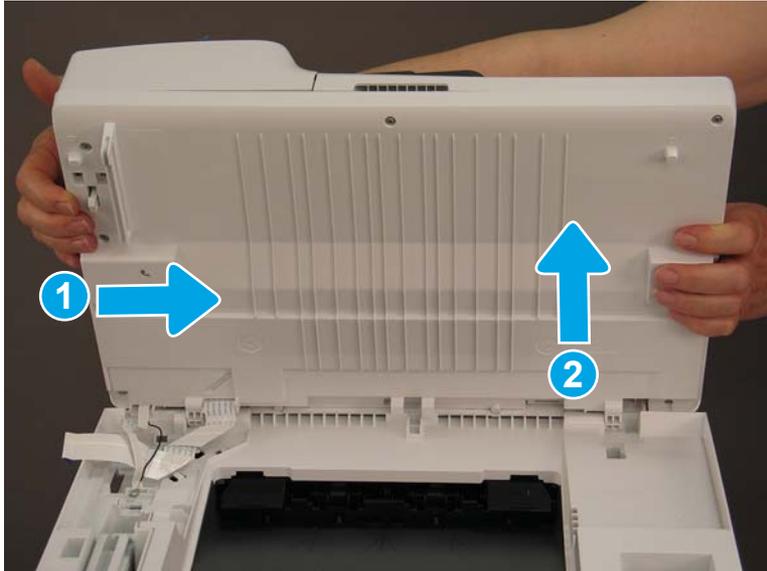


#### Step 6: Remove the document feeder and scanner (M180nw and M181fw)

 **NOTE:** This step is for the M180nw and M181fw printers. For the M180n printer, skip this step and go to [Step 7: Remove the control panel \(M178-M181\) on page 192.](#)

1. Disconnect two flat cables (callout 1) from the formatter, and then remove one screw (callout 2) to release the grounding wire.


**Figure 1-253** Disconnect two cables and remove one screw

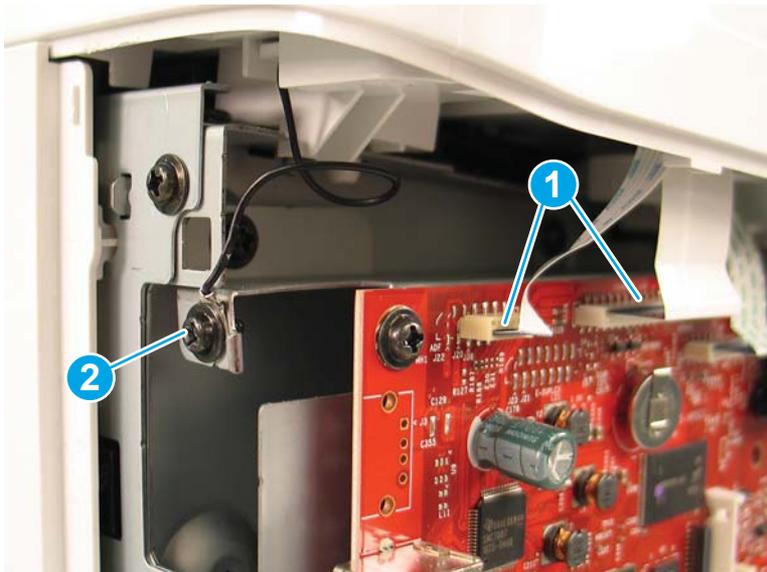

2. Open the scanner. Release one tab (callout 1), and then rotate the ISA slider pin (callout 2) towards the front of the printer to release it.


 **TIP:** Use a Phillips head screwdriver in the end of the slider pin to rotate it.

**Figure 1-254** Release one tab and rotate the slider pin

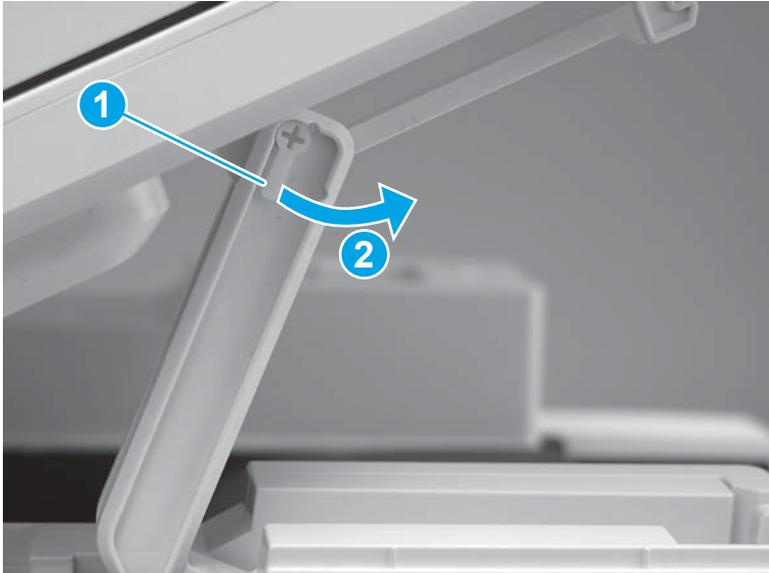

3. Remove the slider pin.

**Figure 1-255** Remove the slider pin

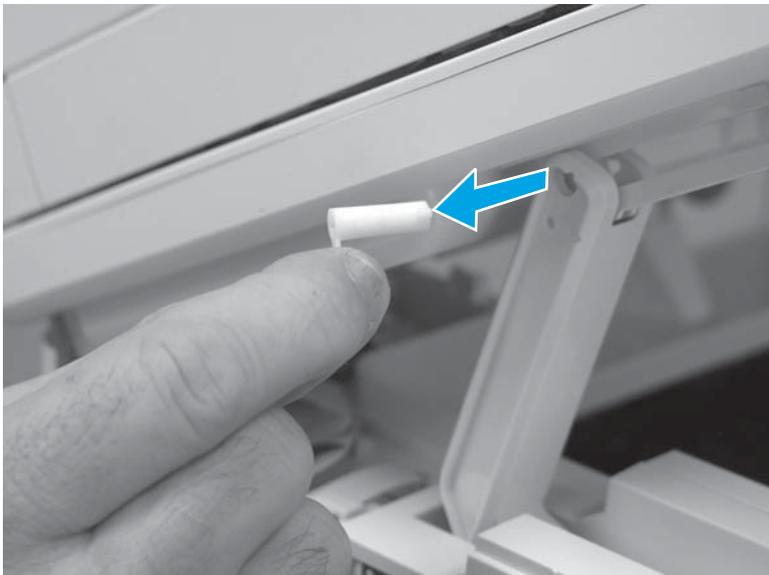

4. Rotate the hinge arm down.


**⚠ WARNING!** The hinge arm is spring-loaded by a strong spring and might snap down suddenly. Be careful not to pinch your fingers between the hinge arm and the top of the printer.

Figure 1-256 Rotate the hinge arm down




5. On the scanner bed, use a small, flat-blade screwdriver to release one tab (callout 1), and then remove the scanner cable cover (callout 2).

Figure 1-257 Remove the scanner cable cover

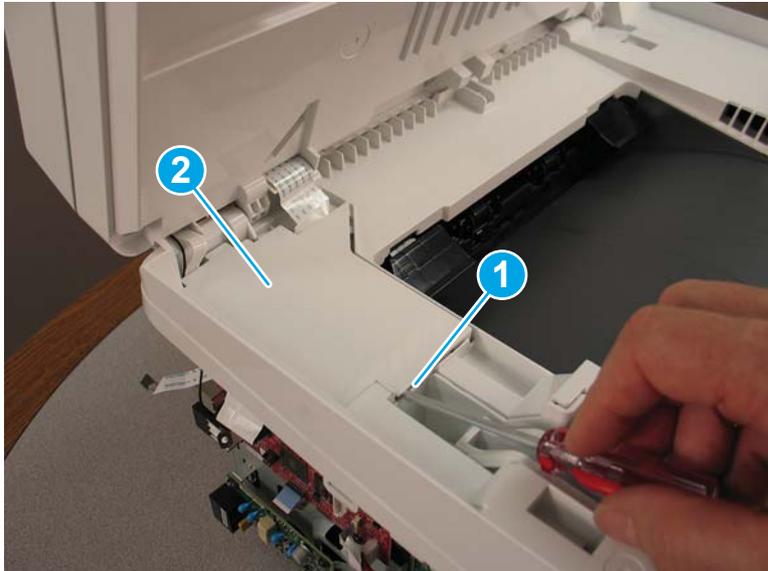

6. Release the flat cable (callout 1) from the guides (callout 2), and then feed the two flat cables (callout 3) through the openings in the scanner.


Figure 1-258 Release the flat cable

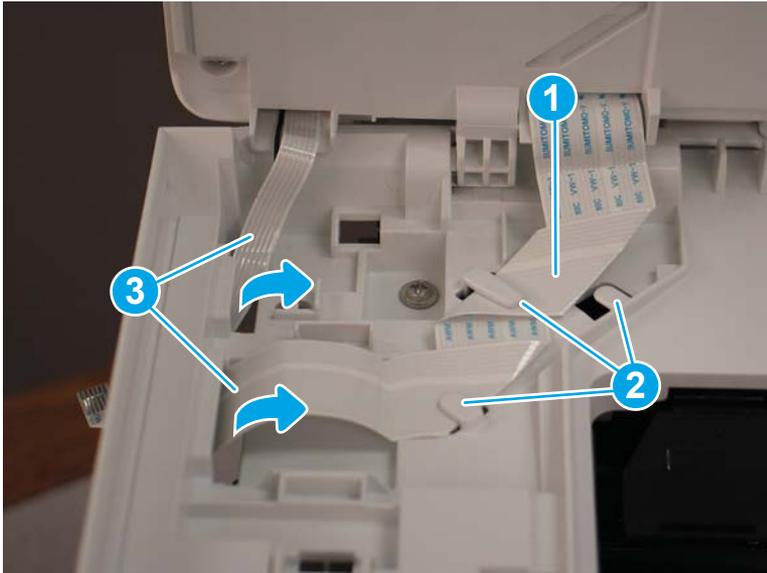

7. Open the scanner assembly fully, slide the assembly to the right (callout 1), and then lift the assembly off of the chassis (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-259 Remove the scanner assembly

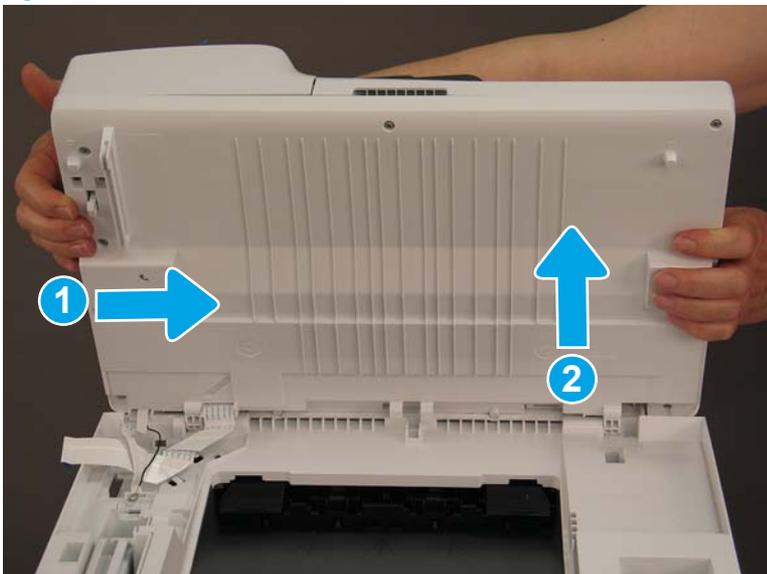

### Step 7: Remove the control panel (M178-M181)

1. Remove one screw (callout 1) to release the grounding wire.


Figure 1-260 Remove one screw

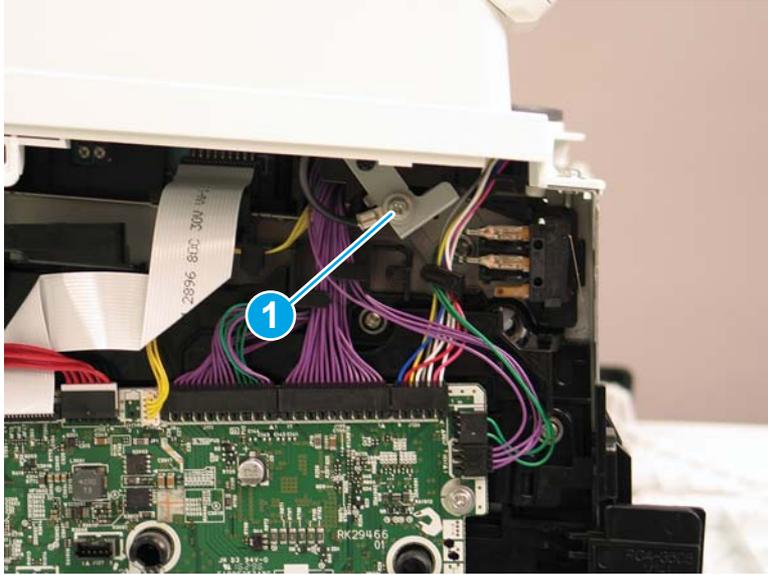

2. Raise the hinge arm.


**⚠ WARNING!** The hinge arm is spring-loaded by a strong spring and might spring up. Be careful not to pinch your fingers between the hinge arm and the top of the printer.

Figure 1-261 Rotate the hinge arm up

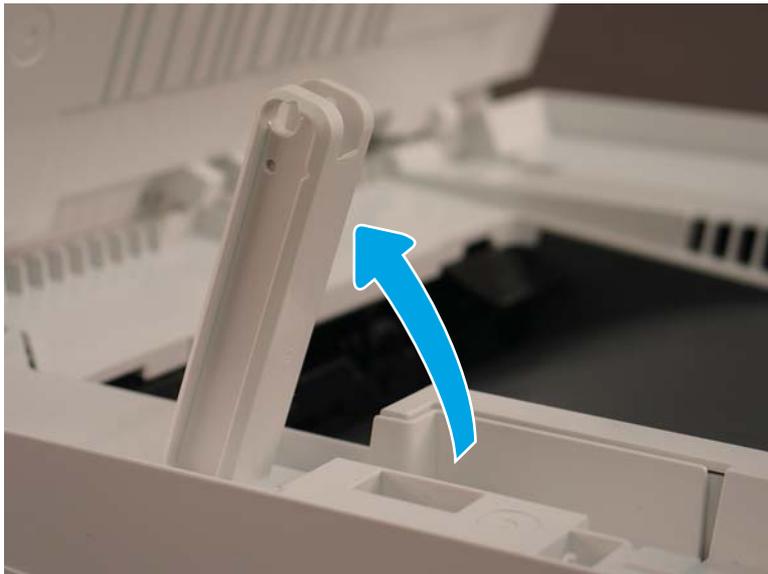

3. Release two tabs (callout 1), and then slide the cover (callout 2) away from the control panel to remove it.

Figure 1-262 Remove the cover

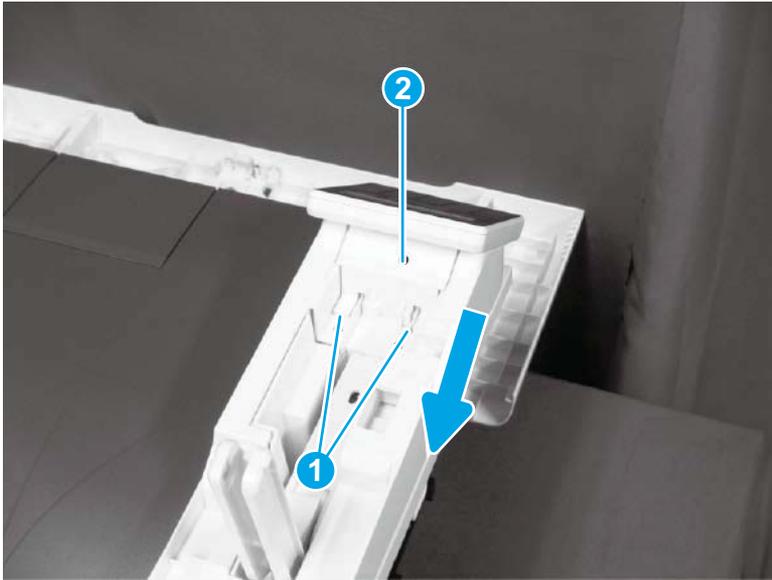


4. Release two tabs (callout 1), and then slide the control panel (callout 2) up to remove it.

---

**⚠ CAUTION:** The control panel is still attached to the printer. Do not remove it completely.

---


Figure 1-263 Remove the control panel

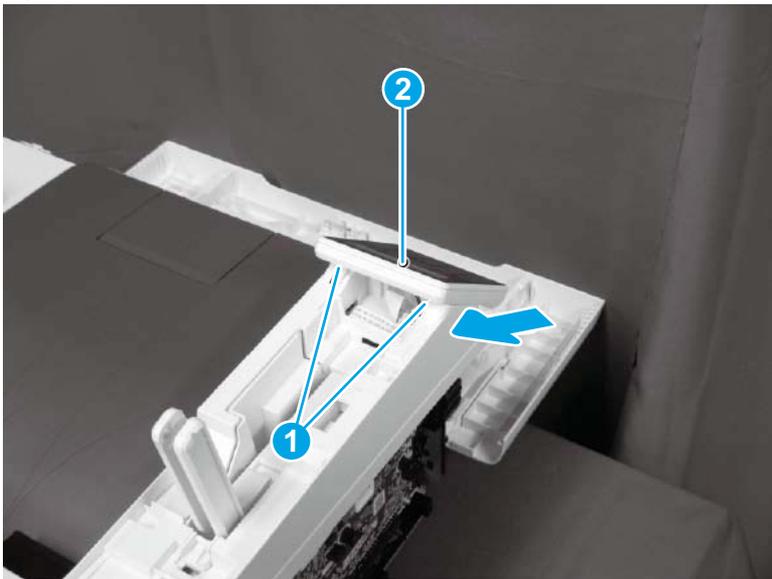

5. On the back of the control panel (callout 1), disconnect one connector (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-264 Disconnect one connector

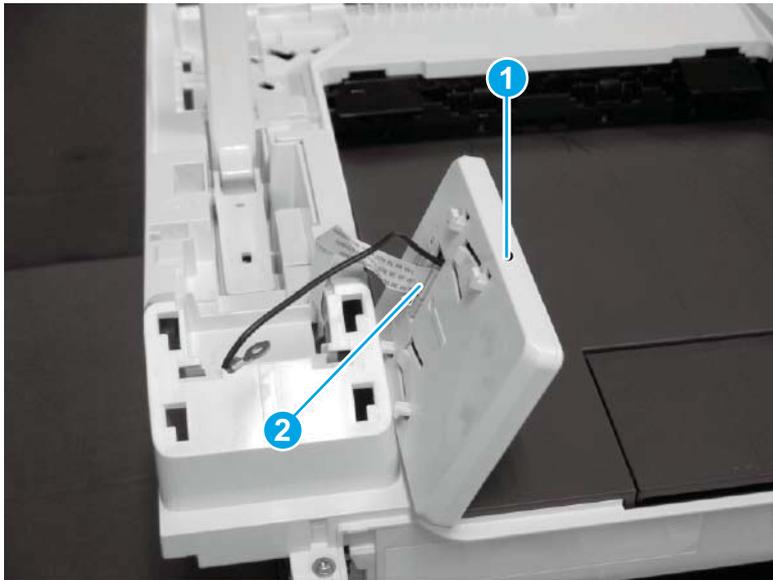

### Step 8: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Control panel (M254nw/dn 2-line)

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and rear doors](#)
- [Step 3: Remove the right cover \(M253-M254\)](#)
- [Step 4: Remove the left cover \(M253-M254\)](#)
- [Step 5: Remove the rear cover \(simplex models\)](#)
- [Step 6: Remove the top cover \(M253-M254\)](#)
- [Step 7: Remove the control panel \(M254nw/dn 2-line\)](#)
- [Step 8: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the 2-line control panel for the M254nw/dn models.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Control panel (M254nw/dn) part number	
Not available	Control panel (M254nw/dn)

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

## Post service test


Make sure that the printer initializes to a **Ready** state.

Navigate the control-panel menus to make sure that the control panel is correctly functioning.

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-265 Remove the cassette tray

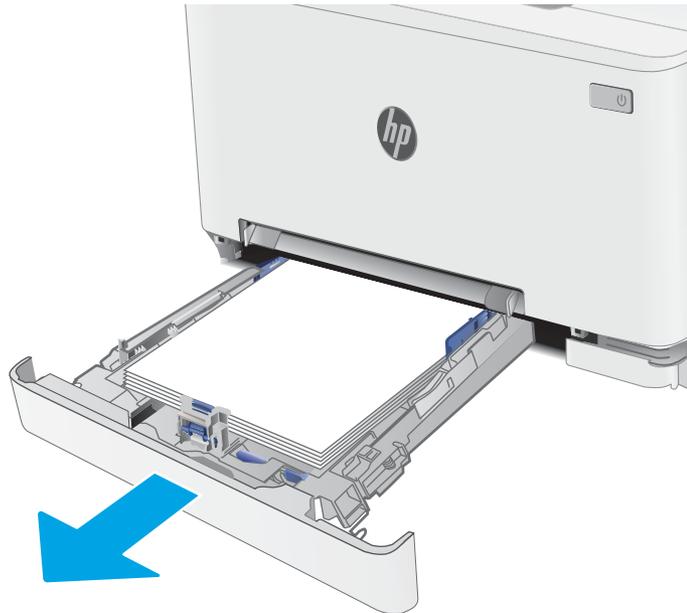

### Step 2: Open the front and rear doors


1. Open the front door.

Figure 1-266 Open the front door




2. **Simplex models only:** Open the rear door.

**Figure 1-267** Open the rear door

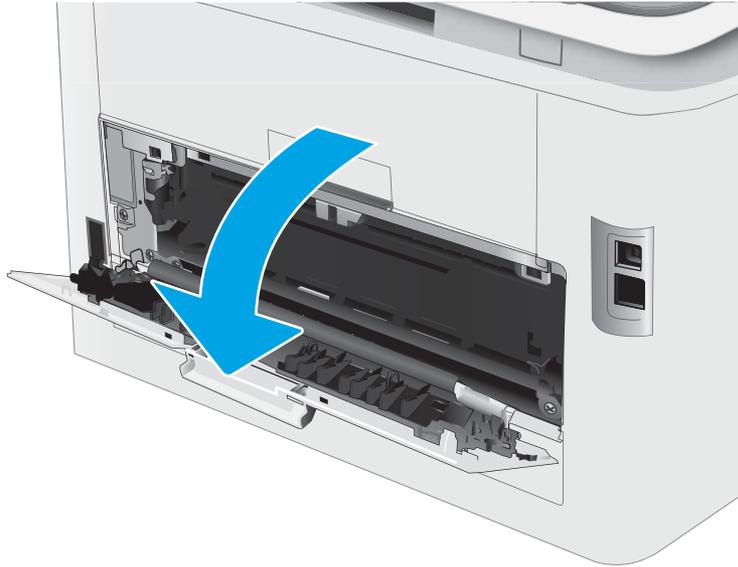

3. **Duplex models only:** Open the duplexer door.


**Figure 1-268** Open the duplexer door

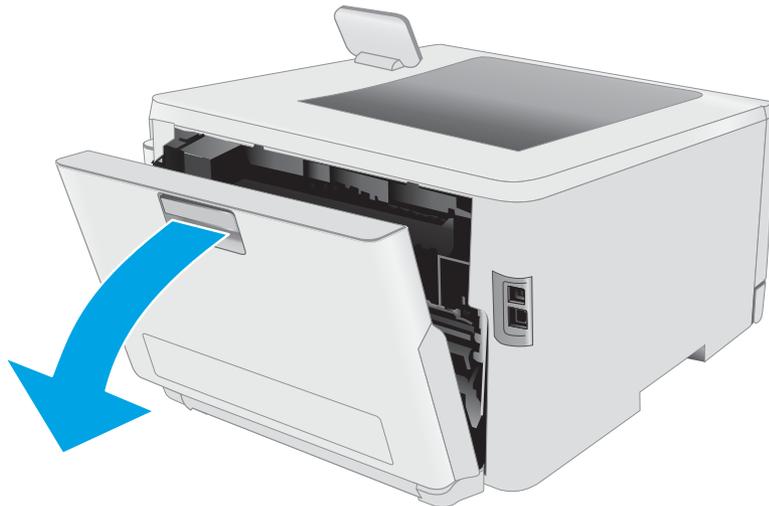

### Step 3: Remove the right cover (M253-M254)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-269 Tab locations

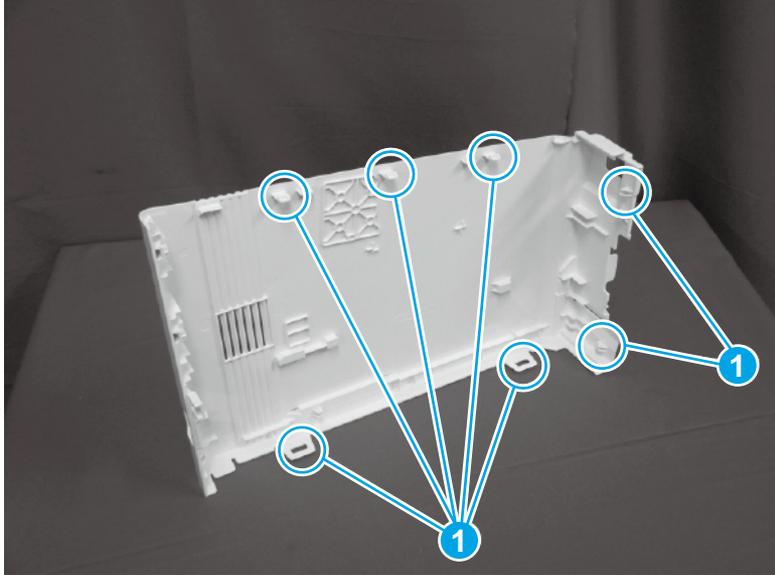


2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

---

Figure 1-270 Remove one screw and release tabs

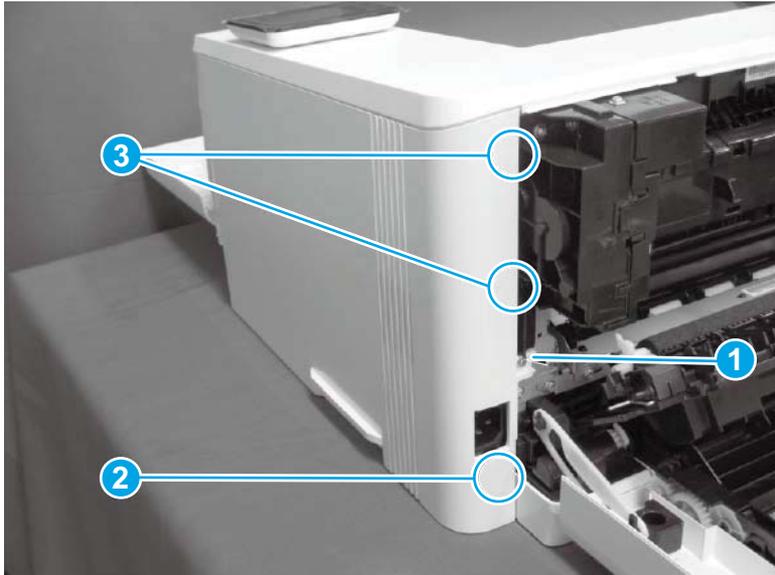


3. Release seven tabs (callout 1) along the top, bottom, and front of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-271** Remove the right cover

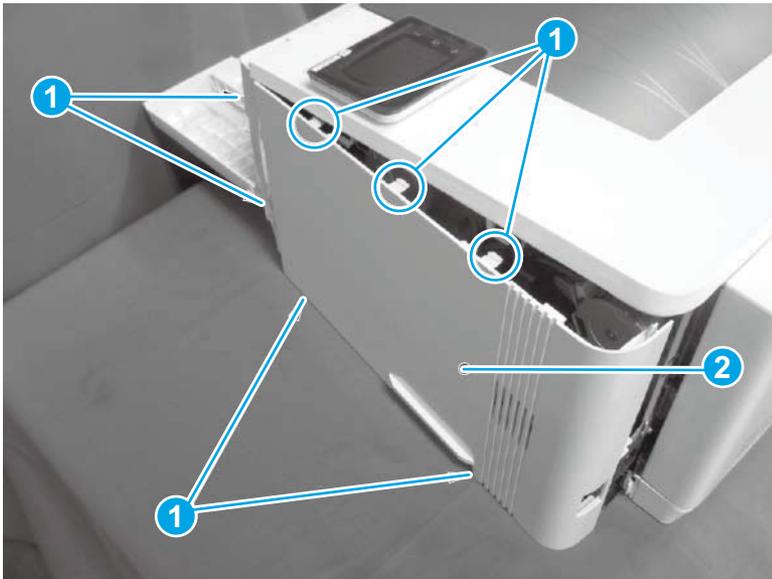

#### Step 4: Remove the left cover (M253-M254)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


**Figure 1-272** Tab locations

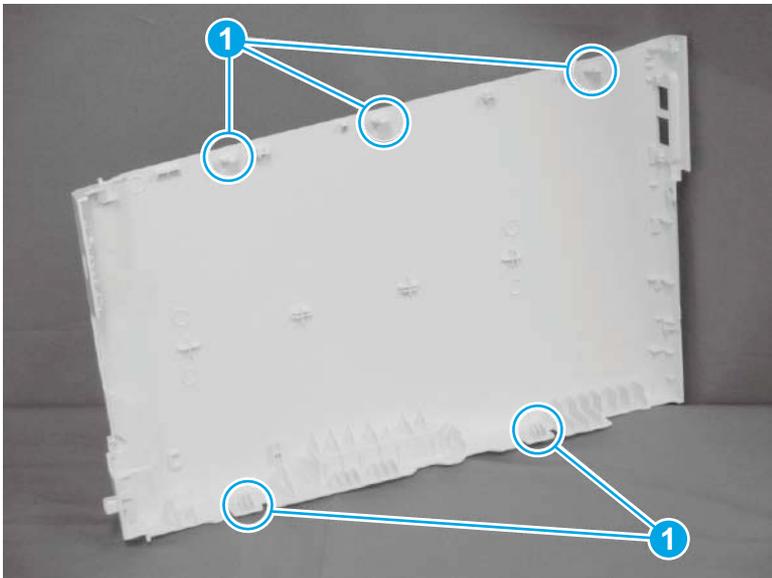

2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

**Figure 1-273** Remove one screw and release tabs

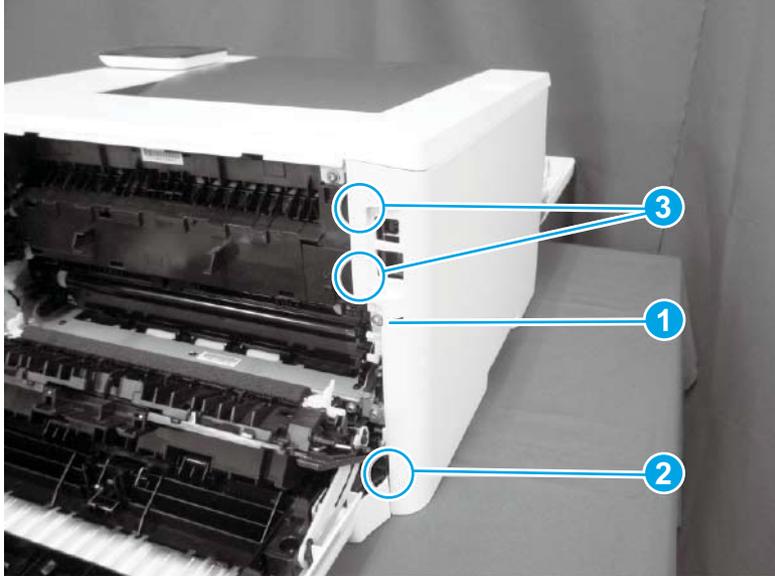


3. Release five tabs (callout 1) along the top and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-274** Remove the left cover

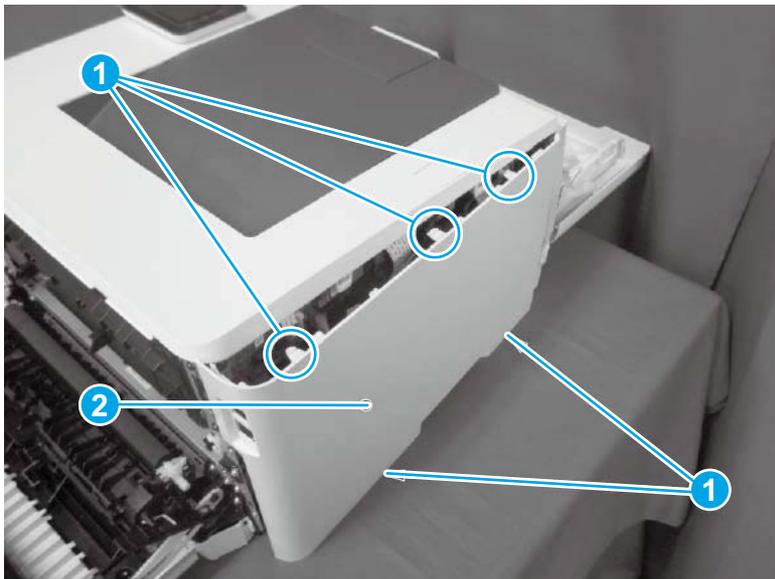


## Step 5: Remove the rear cover (simplex models)

 **NOTE:** This step is for simplex printers. For duplex printers, skip this step and go to [Step 6: Remove the top cover \(M253-M254\) on page 202](#).

- ▲ At the back of the printer, use a small flat-blade screwdriver to release three tabs (callout 1) at the bottom of the cover, and then pull the cover down and away from the printer to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-275 Remove the rear cover

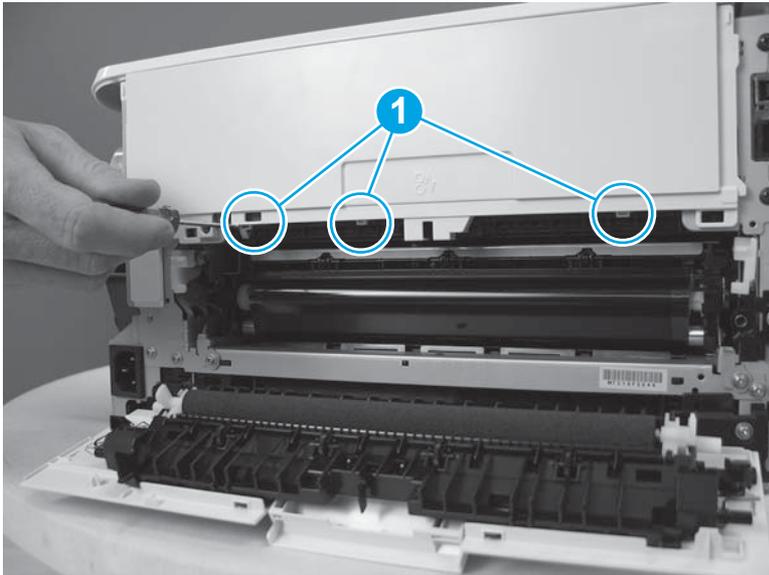

## Step 6: Remove the top cover (M253-M254)


1. On the left side of the printer, on the formatter, disconnect one flat cable (callout 1).

Figure 1-276 Disconnect one connector

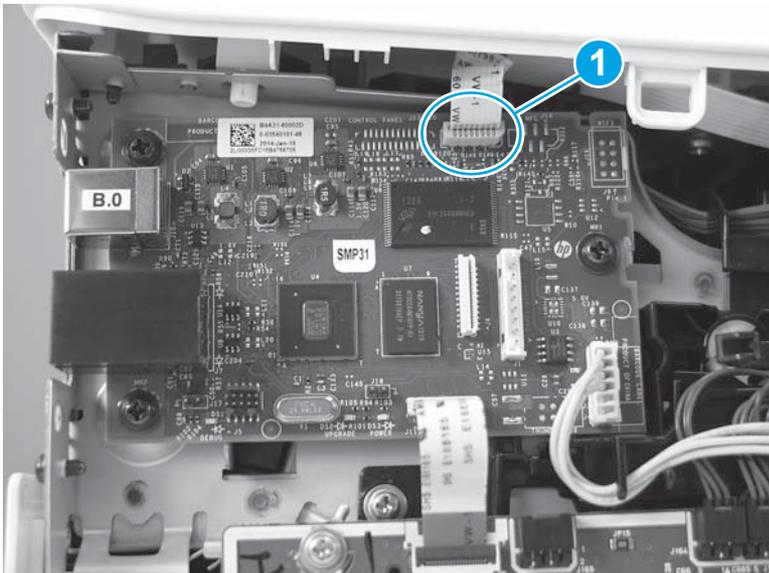


2. **Duplex models only:** Remove one screw (callout 1), and then release the grounding cable. Remove one M4 tapping screw (callout 2), and then pull the guide (callout 3) toward the front of the printer to remove it.

Figure 1-277 Remove two screws and the guide

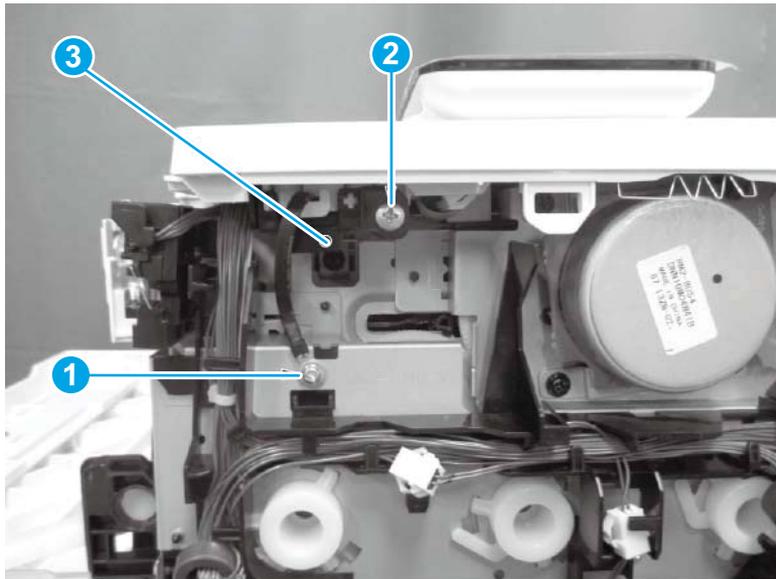

3. Remove two screws (callout 1), and then release one tab (callout 2).


Figure 1-278 Remove two screws

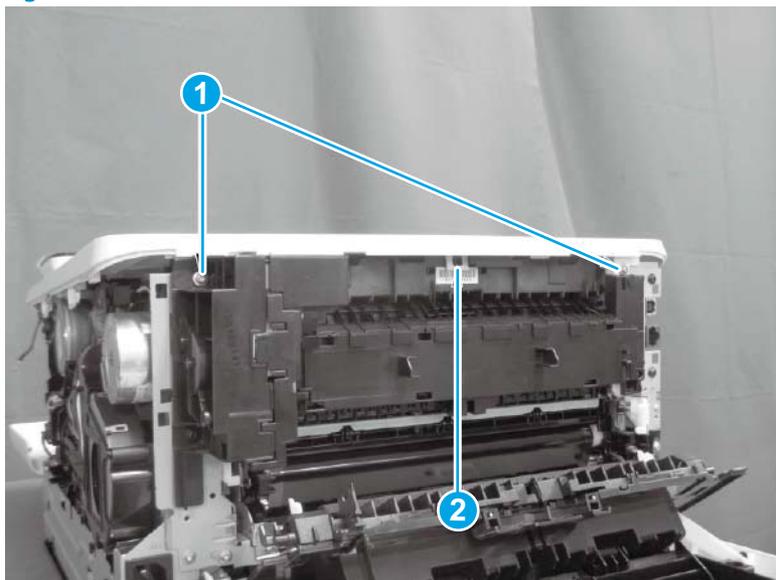

4. Remove three screws (callout 1), and then remove the top cover (callout 2).

 **NOTE:** Do not touch the parts around the main motor when removing the top cover


**Figure 1-279** Remove three screws and the top cover

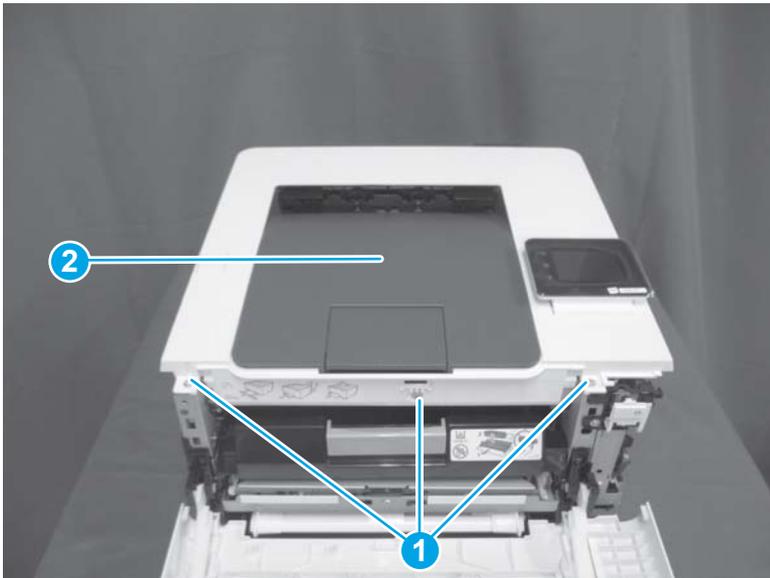

**Step 7: Remove the control panel (M254nw/dn 2-line)**

1. On the underside of the top cover, remove two screws (callout 1), and then remove the cover (callout 2).


**Figure 1-280** Remove two screws and the cover

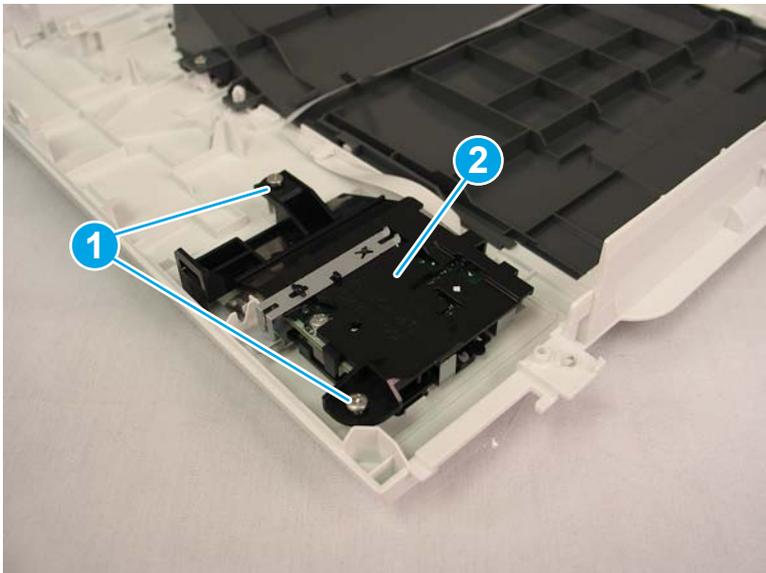

2. Disconnect one flat cable (callout 1), remove one screw (callout 2), and then lift the control panel up to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-281** Disconnect one cable and remove one screw

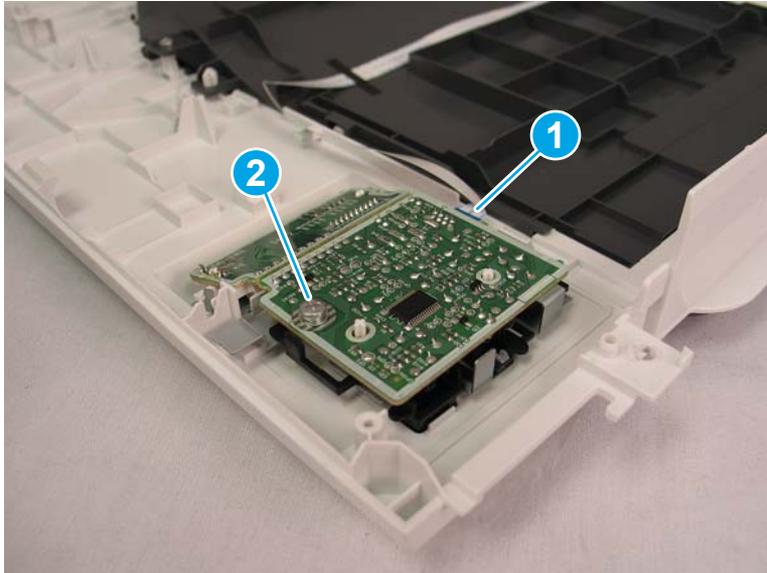

### Step 8: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Control panel (M254dw touchscreen)

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and duplexer doors](#)
- [Step 3: Remove the right cover \(M253-M254\)](#)
- [Step 4: Remove the left cover \(M253-M254\)](#)
- [Step 5: Remove the rear cover \(simplex models\)](#)
- [Step 6: Remove the top cover \(M253-M254\)](#)
- [Step 7: Remove the control panel \(M254dw touchscreen\)](#)
- [Step 8: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the touchscreen control panel for the M254dw model.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.



**WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.

- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Control panel (M254dw) part number	
T6B59-60101	Control panel (M254dw)
B3Q09-60101	Control panel mount base (M254dw)

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

## Post service test

Make sure that the printer initializes to a **Ready** state.

Navigate the control-panel menus to make sure that the control panel is correctly functioning.

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-282 Remove the cassette tray



### Step 2: Open the front and duplexer doors


1. Open the front door.

Figure 1-283 Open the front door



2. Open the duplexer door.


Figure 1-284 Open the duplexer door

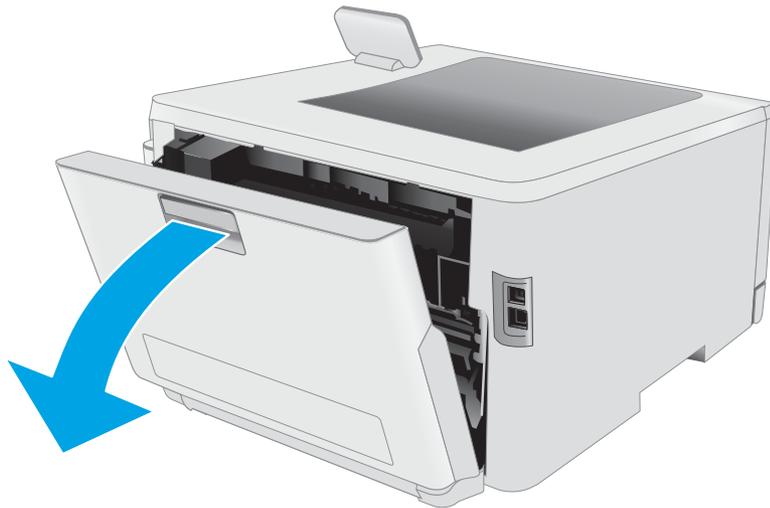

### Step 3: Remove the right cover (M253-M254)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


Figure 1-285 Tab locations

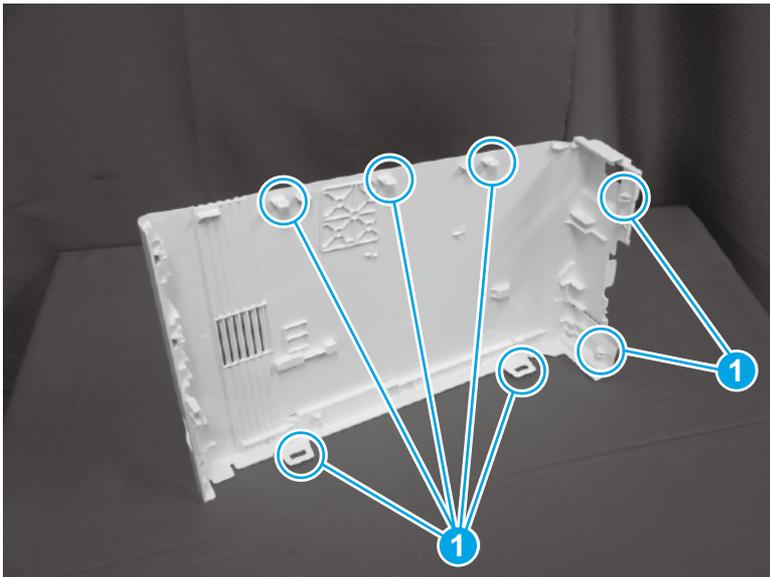

2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

**Figure 1-286** Remove one screw and release tabs

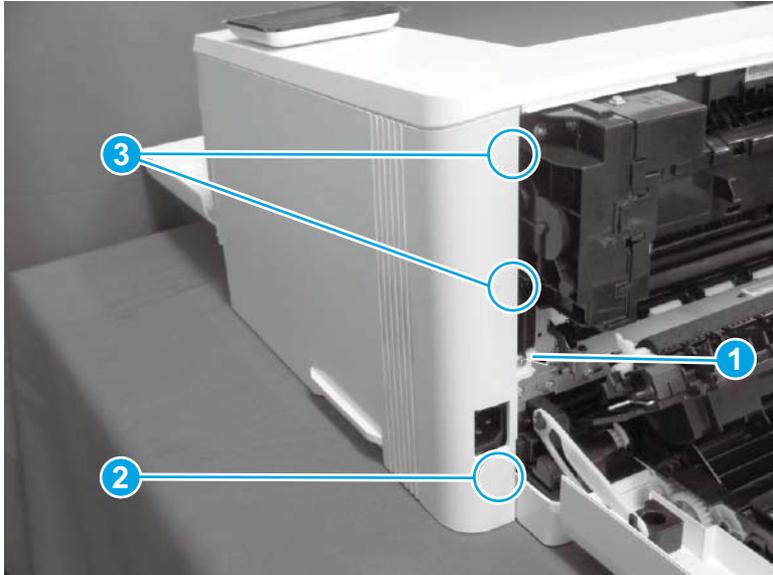


3. Release seven tabs (callout 1) along the top, bottom, and front of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-287** Remove the right cover

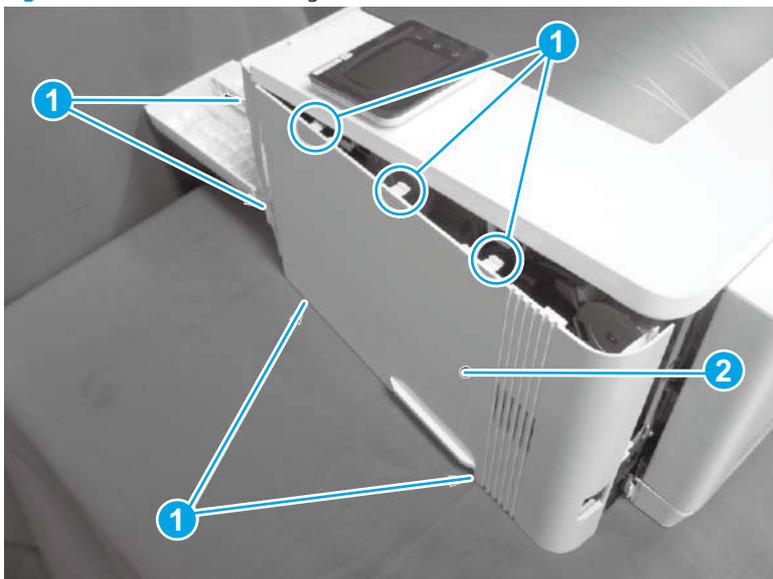

#### Step 4: Remove the left cover (M253-M254)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


Figure 1-288 Tab locations

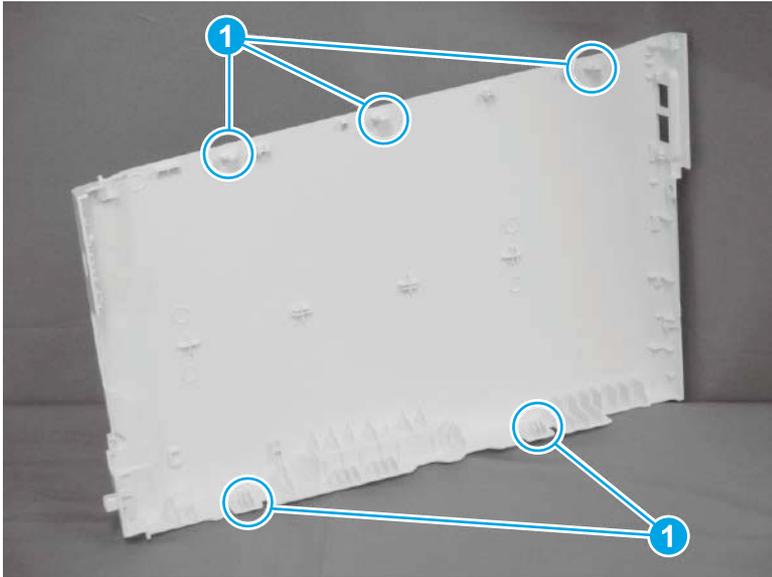

2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

Figure 1-289 Remove one screw and release tabs

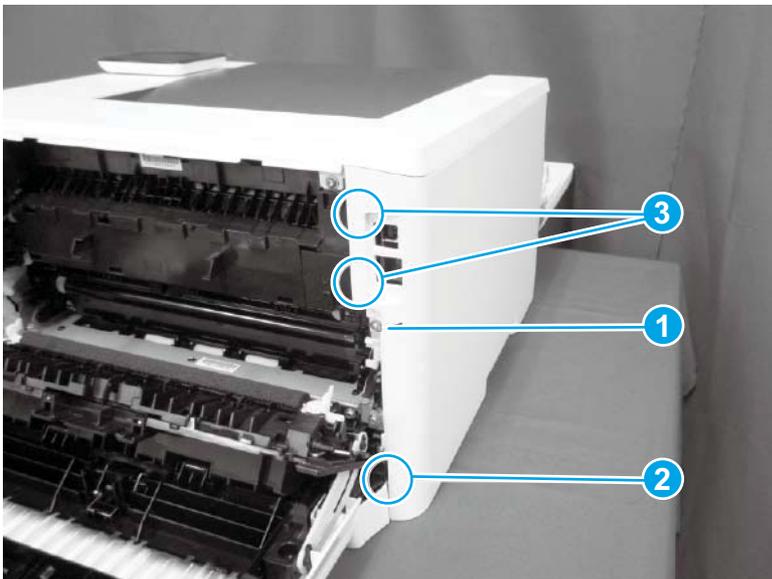


3. Release five tabs (callout 1) along the top and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-290 Remove the left cover

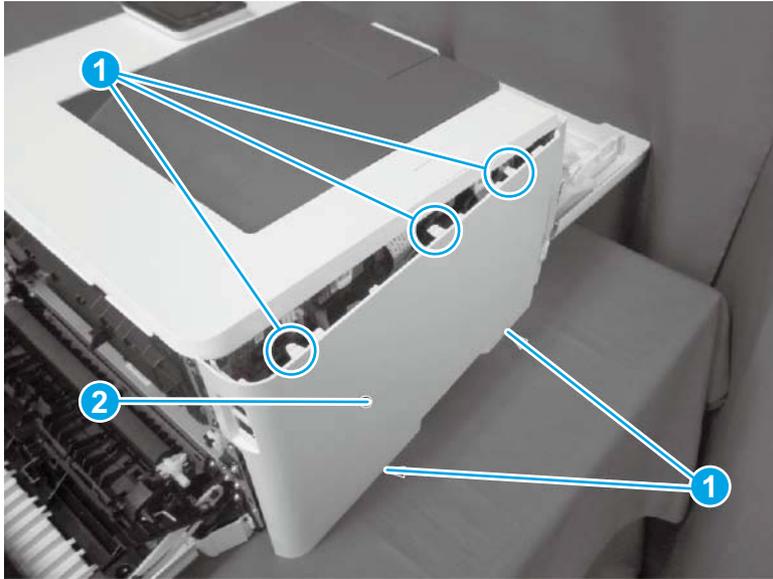


#### Step 5: Remove the rear cover (simplex models)

 **NOTE:** This step is for simplex printers. For duplex printers, skip this step and go to [Step 6: Remove the top cover \(M253-M254\) on page 212](#).

- ▲ At the back of the printer, use a small flat-blade screwdriver to release three tabs (callout 1) at the bottom of the cover, and then pull the cover down and away from the printer to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-291 Remove the rear cover

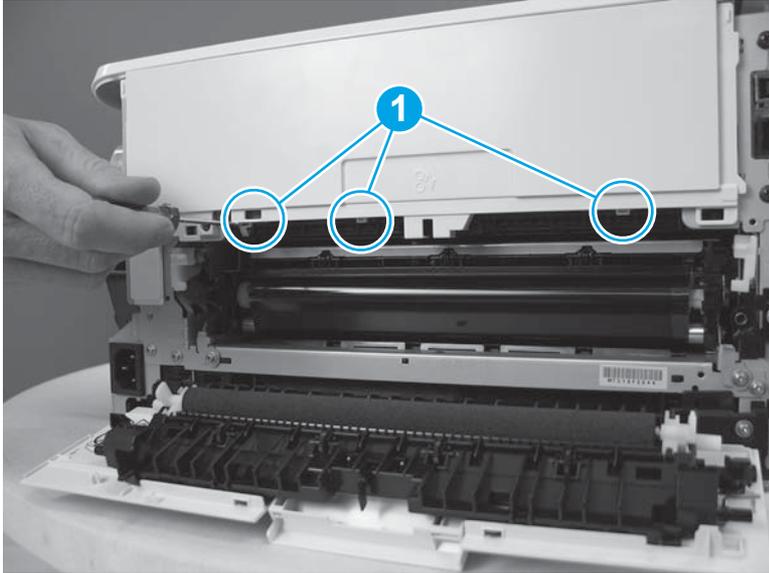

Step 6: Remove the top cover (M253-M254)


1. On the left side of the printer, on the formatter, disconnect one flat cable (callout 1).

Figure 1-292 Disconnect one connector

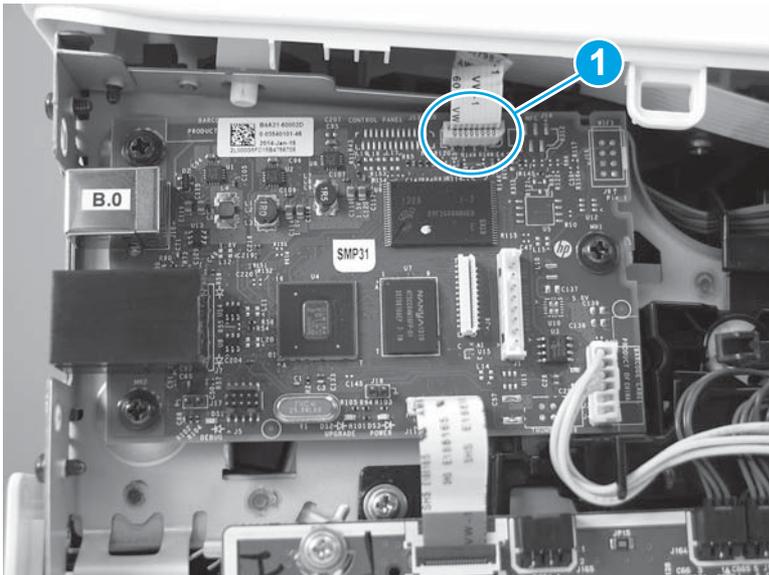


2. **Duplex models only:** Remove one screw (callout 1), and then release the grounding cable. Remove one M4 tapping screw (callout 2), and then pull the guide (callout 3) toward the front of the printer to remove it.

Figure 1-293 Remove two screws and the guide

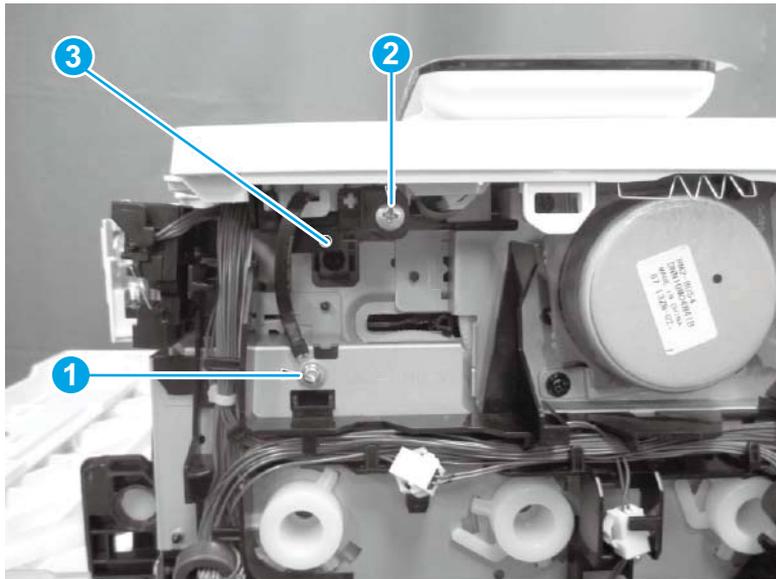

3. Remove two screws (callout 1), and then release one tab (callout 2).


Figure 1-294 Remove two screws

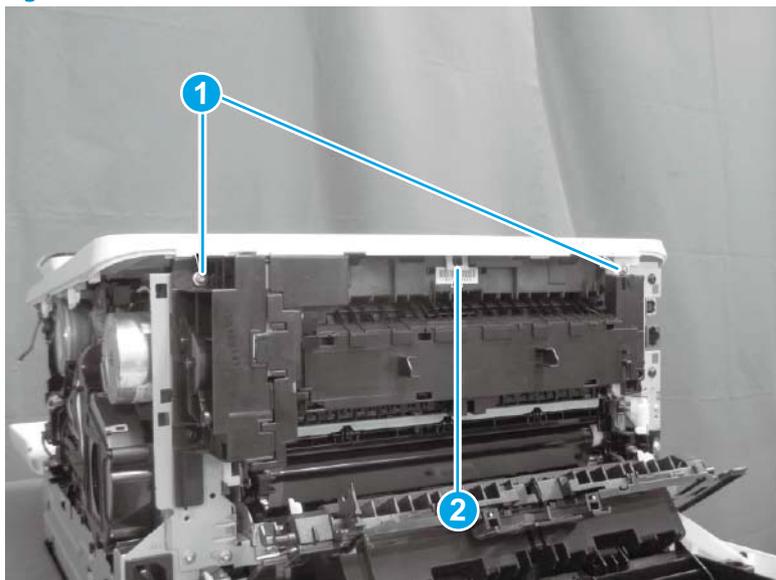

4. Remove three screws (callout 1), and then remove the top cover (callout 2).

 **NOTE:** Do not touch the parts around the main motor when removing the top cover

**Figure 1-295** Remove three screws and the top cover

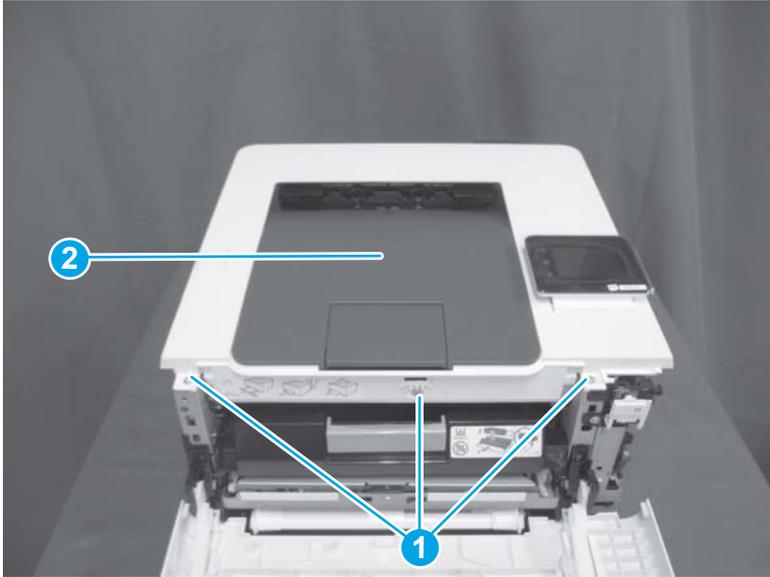


#### Step 7: Remove the control panel (M254dw touchscreen)

1. Lay the top cover face down. Release the flat cable (callout 1) from the underside of the cover.


 **NOTE:** Do not lose the two pieces of black tape (callout 2). These will be used to secure the flat cable when the control panel is reinstalled.

**Figure 1-296** Release the flat cable

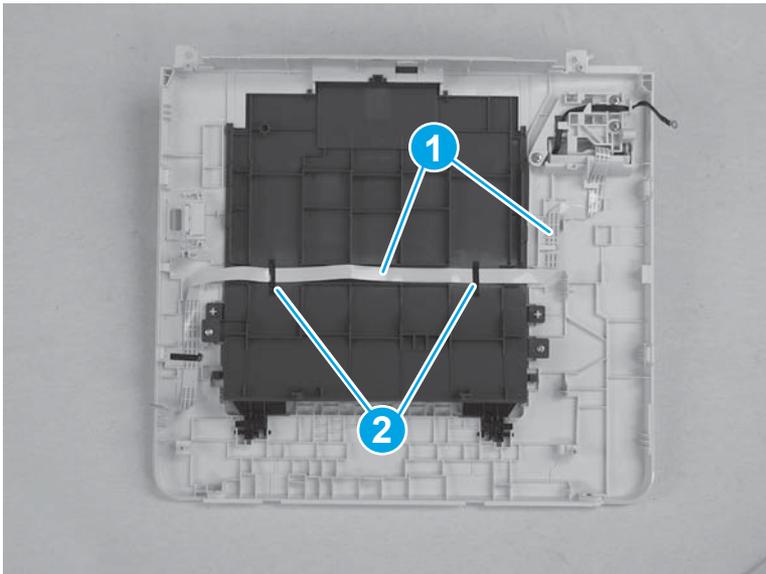


2. Remove the cable (callout 1) from the guides (callout 2), and then remove three screws (callout 3).

Figure 1-297 Remove three screws and release the cable

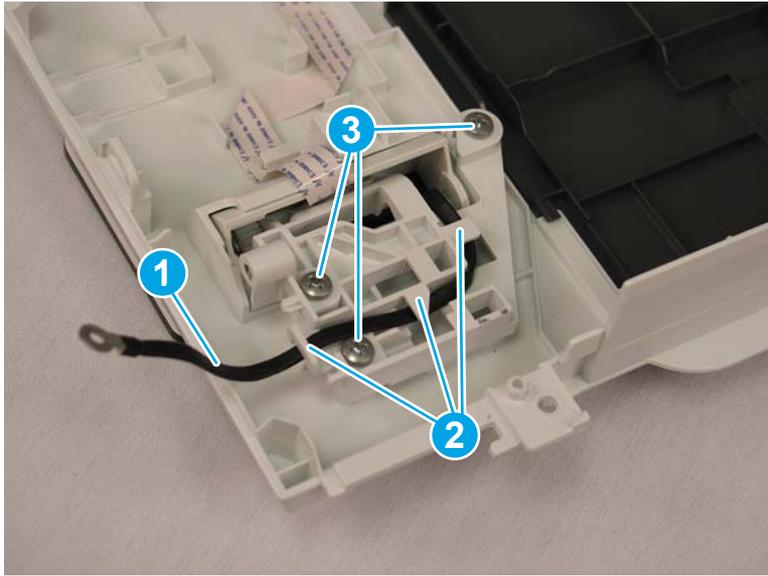

3. Slide the control panel bracket toward the center of the cover to release the hinge pins (callout 1), and then remove the bracket.

Figure 1-298 Remove the bracket

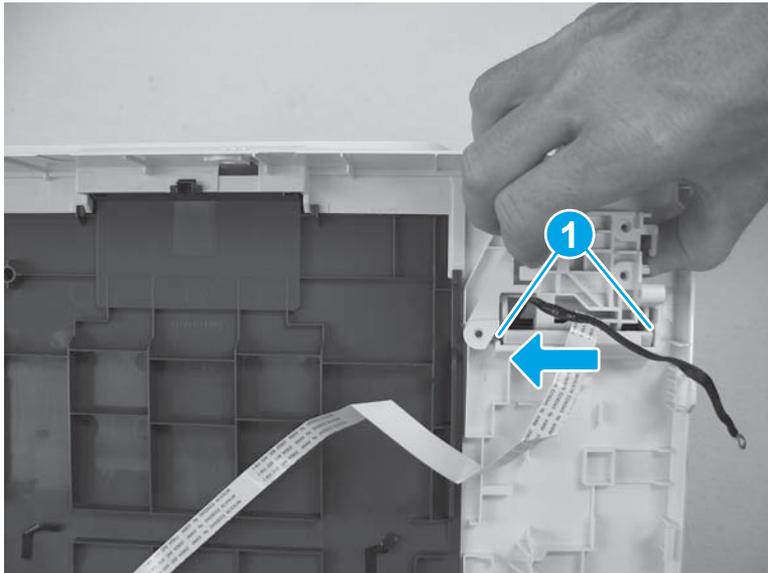


4. Pull the assembly away from the top side of the top cover to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-299** Remove the control panel

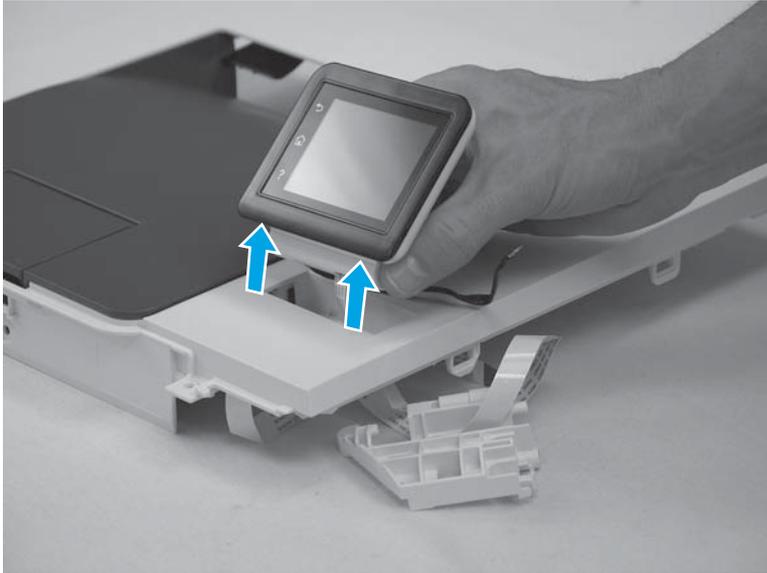

### Step 8: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Control panel (M278-M281 models)

- [Introduction](#)
- [Step 1: Remove the control panel \(M278-M281\)](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the control panel for the M278-M281 models.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.

 **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.

- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Control panel (M278-M281) part number	
T6B80-60101	Control panel (M278-M281)

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Make sure that the printer initializes to a **Ready** state.

Navigate the control-panel menus to make sure that the control panel is correctly functioning.

### Step 1: Remove the control panel (M278-M281)


1. Open the scanner

Figure 1-300 Open the scanner




2. At the back of the control panel, remove one screw (callout 1), and then use a small flat-blade screwdriver in the two pry points (callout 2) to remove the cover.

Figure 1-301 Remove one screw and the cover

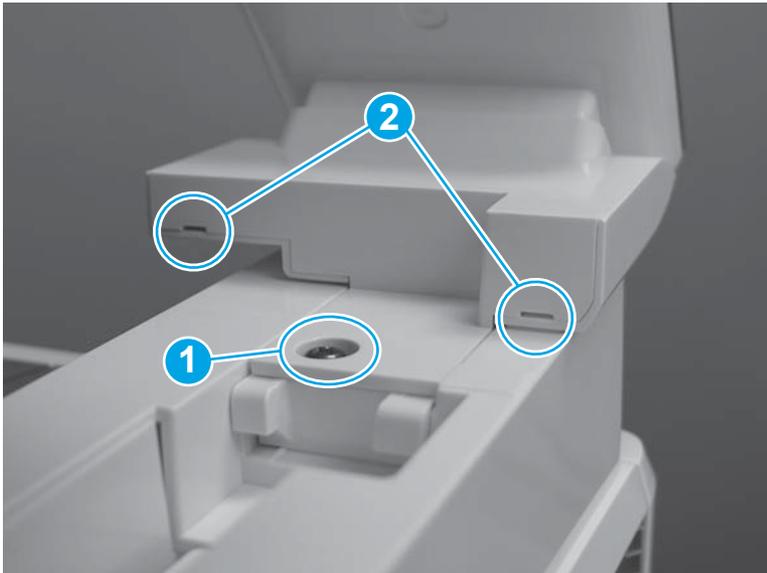


3. Remove the flat cable (callout 1) from the guides, and then remove three screws (callout 2).

Figure 1-302 Remove three screws

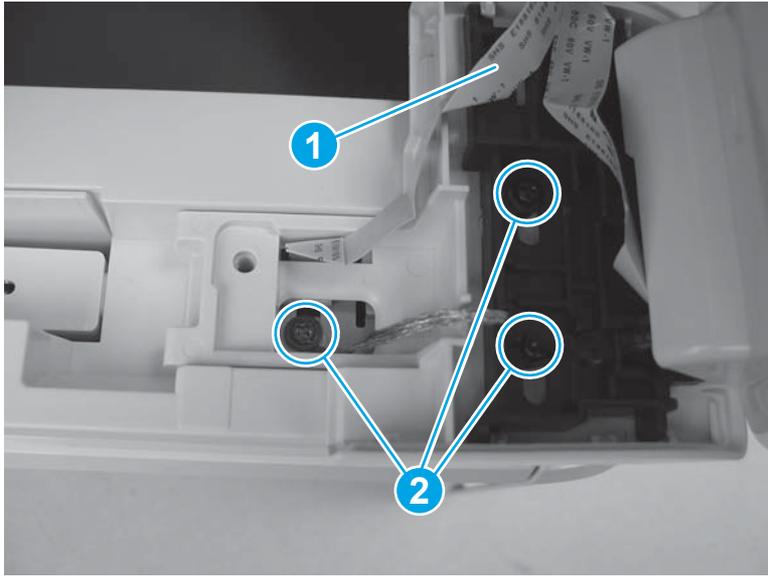

4. Move the control panel to the fully opened position (callout 1), and then rotate it back about 20 degrees (callout 2).

Figure 1-303 Rotate the control panel

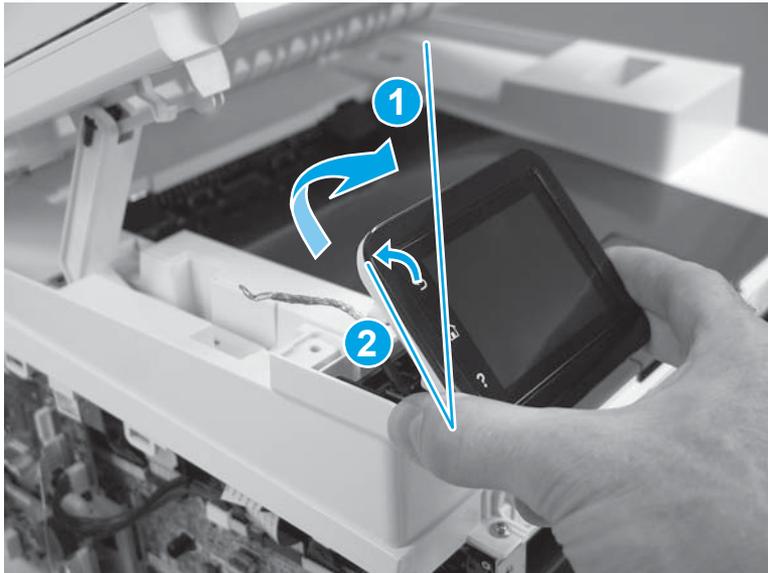

5. Firmly move the assembly to the right 7-8 mm (0.26-0.31 in) (callout 1) to release two tabs from the posts at the base of the control panel.

Figure 1-304 Release two tabs



6. Rotate the control panel forward to release it (callout 1), and then lift it slightly away from the printer.

---

**⚠ CAUTION:** The control panel is still attached to the printer. Do not remove it completely.

---

Figure 1-305 Release the control panel




7. Use a small, flat-blade screw driver to unclasp the flat cable connector in the control panel.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-306** Disconnect the flat cable

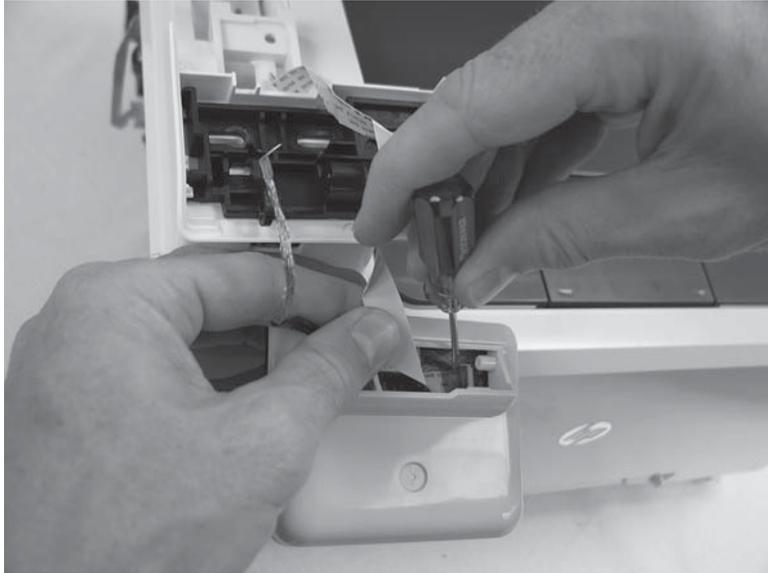

## Step 2: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Flatbed image scanner assemblies (M180n model)

- [Removal and replacement: Document lid \(M180n\)](#)
- [Removal and replacement: Image scanner \(M180n\)](#)

## Removal and replacement: Document lid (M180n)

- [Introduction](#)
- [Step 1: Remove the document lid \(M180n\)](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the document lid for the M180n model.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.

 **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.

- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Document lid (M180n) part number	
RM2-2411-000CN	Document lid assembly

### Required tools

- No special tools are required to remove or install this assembly

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove the document lid (M180n)

- ▲ Partially open the document lid, and then press back to release two tabs (callout 1).

 **TIP:** If the tabs are difficult to release, use a small, flat-blade screwdriver to release them.

**Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-307 Remove the document lid



### Step 2: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Image scanner (M180n)

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and rear doors](#)
- [Step 3: Remove the left cover \(M178-M181\)](#)
- [Step 4: Remove the document lid \(M180n\)](#)
- [Step 5: Remove the image scanner \(M180n\)](#)
- [Step 6: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the image scanner for the M180n model.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.  
 **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Image scanner (M180n) part number	
RM2-2412-000CN	Image scanner assembly (M180n)

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Verify that the document feeder and the flatbed scanner are correctly functioning (copy a page).

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-308 Remove the cassette tray



### Step 2: Open the front and rear doors


1. Open the front door.

Figure 1-309 Open the front door



2. Open the rear door.


Figure 1-310 Open the rear door

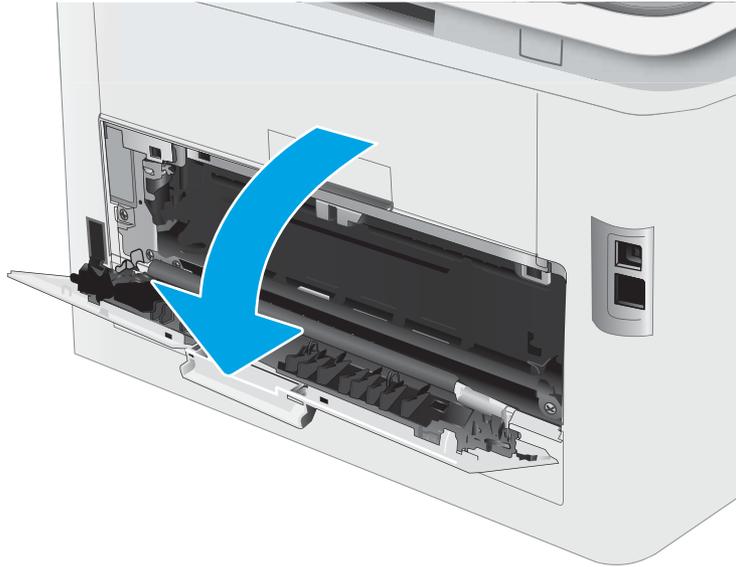

### Step 3: Remove the left cover (M178-M181)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


Figure 1-311 Tab locations

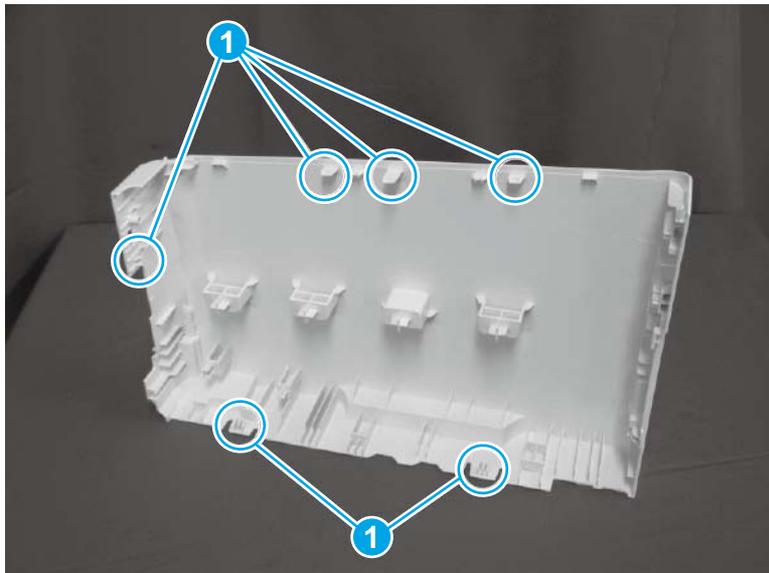

2. At the rear of the printer, remove one screw (callout 1), and then release one tab (callout 2).

 **TIP:** Use a small, flat-blade screwdriver to release the tab.

**Figure 1-312** Remove one screw and release tab

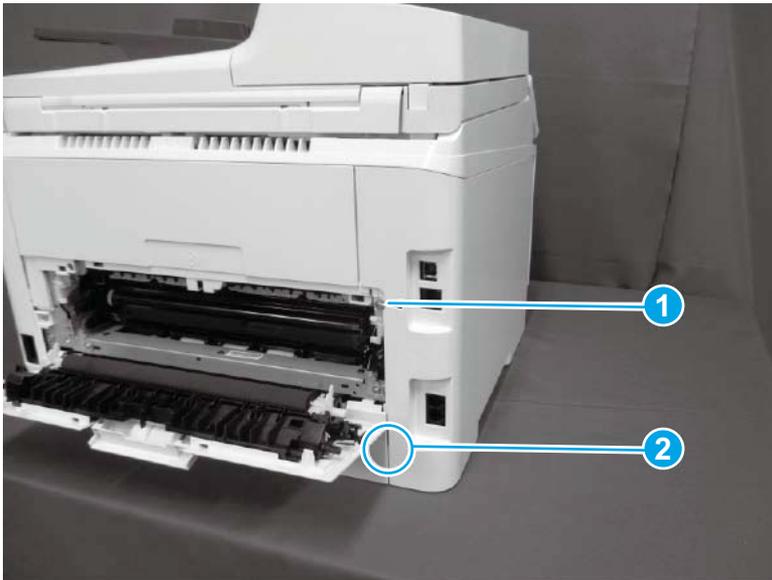


3. Release six tabs (callout 1) along the top, front, and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-313** Remove the left cover

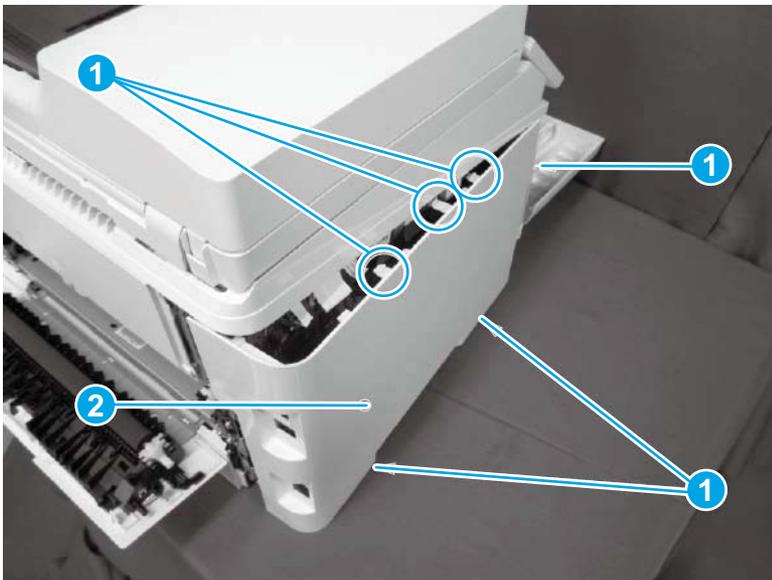

#### Step 4: Remove the document lid (M180n)

- ▲ Partially open the document lid, and then press back to release two tabs (callout 1). Remove the document lid from the image scanner.

**TIP:** If the tabs are difficult to release, use a small, flat-blade screwdriver to release them.

**Reinstallation tip:** Save the document lid and install it on the replacement image scanner.

**Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-314 Remove the document lid



#### Step 5: Remove the image scanner (M180n)

1. Disconnect one flat cable (callout 1) from the formatter.


Figure 1-315 Disconnect one flat cable

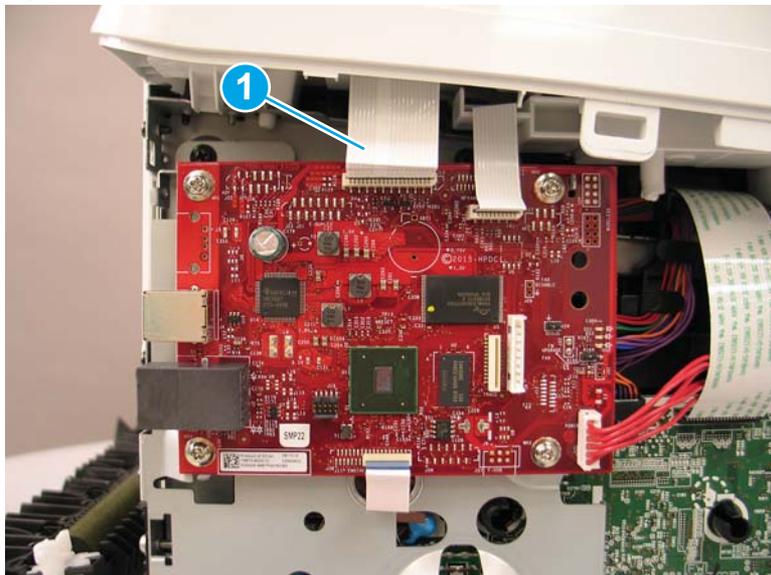

2. Open the scanner. Release one tab (callout 1), and then rotate the slider pin (callout 2) towards the front of the printer to release it.

 **TIP:** Use a Phillips head screwdriver in the end of the slider pin to rotate it.

**Figure 1-316** Release one tab and rotate the slider pin

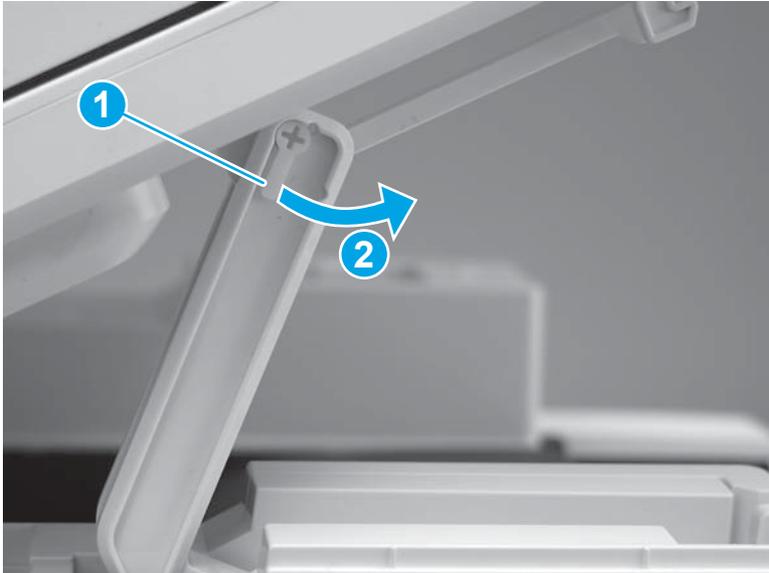

3. Remove the slider pin.

**Figure 1-317** Remove the slider pin



4. Rotate the hinge arm down.


**⚠ WARNING!** The hinge arm is spring-loaded by a strong spring and might snap down suddenly. Be careful not to pinch your fingers between the hinge arm and the top of the printer.

Figure 1-318 Rotate the hinge arm




5. On the scanner bed, use a small, flat-blade screwdriver to release one tab (callout 1), and then remove the scanner cable cover (callout 2).

Figure 1-319 Remove the scanner cable cover

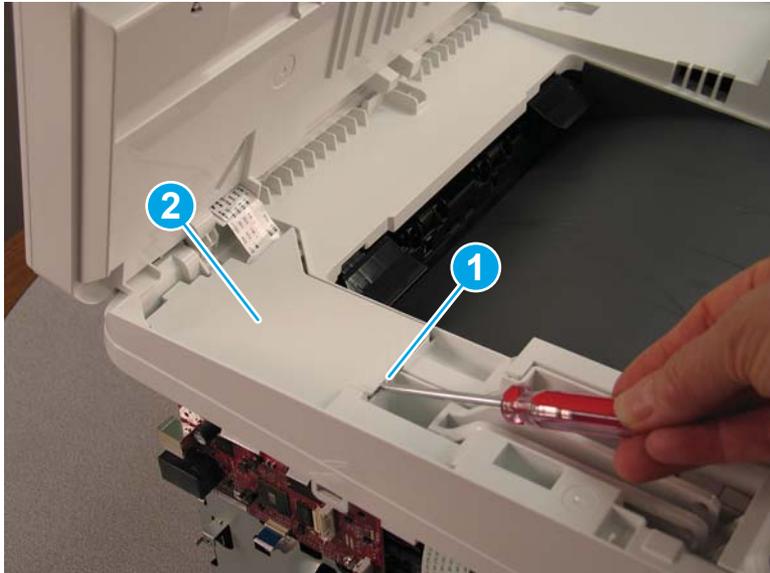

6. Release the flat cable (callout 1) from the guides (callout 2), and then release the flat cable (callout 3) through the opening in the cover.

Figure 1-320 Release the flat cable

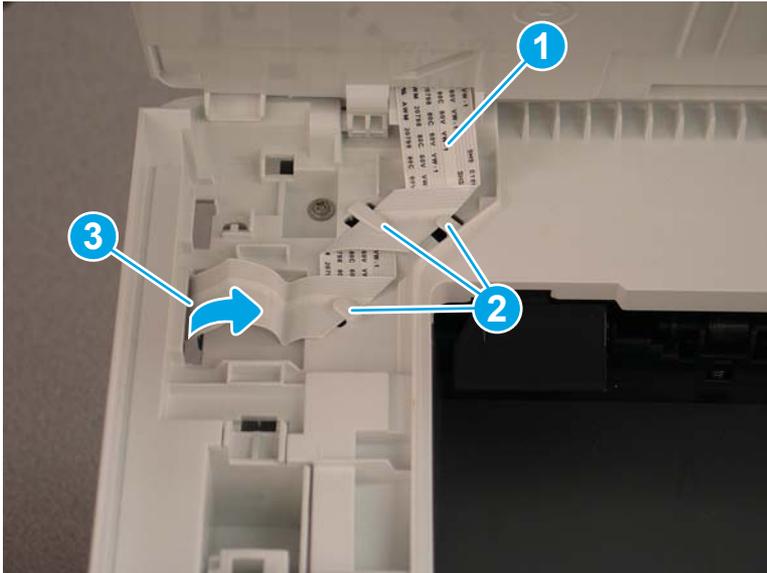


7. Open the scanner assembly fully, slide the assembly to the right (callout 1), and then lift the assembly off of the chassis (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

 **NOTE:** The figure below shows the document feeder scanner. The procedure is also correct for the flatbed scanner.

Figure 1-321 Remove the scanner assembly

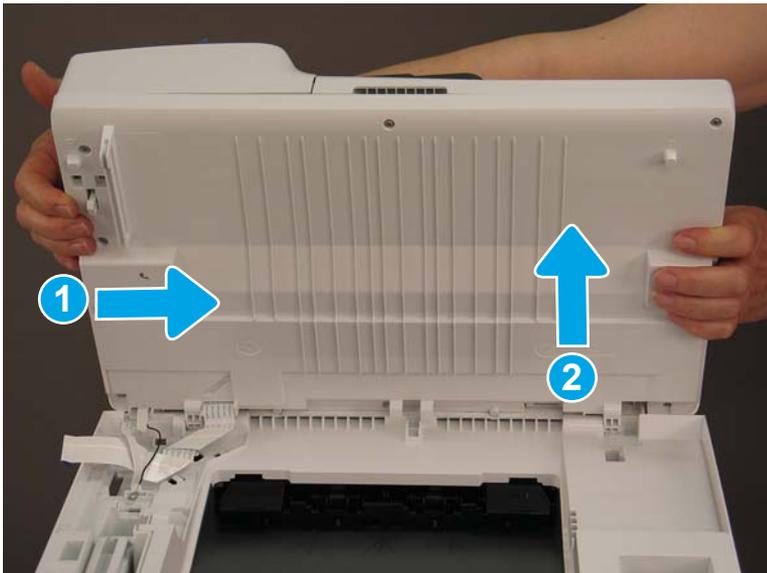

### Step 6: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Document feeder and image scanner assemblies (M180nw and M181fw models)

- [Removal and replacement: Document feeder \(M180nw, M181fw\)](#)
- [Removal and replacement: Document feeder input tray \(M180nw, M181fw\)](#)
- [Removal and replacement: Document feeder top cover \(M180nw, M181fw\)](#)
- [Removal and replacement: Document feeder pre-pick arm \(M180nw, M181fw\)](#)
- [Removal and replacement: Document feeder core assembly \(M180nw, M181fw\)](#)
- [Removal and replacement: Document feeder base assembly \(M180nw, M181fw\)](#)
- [Removal and replacement: Image scanner \(M180nw, M181fw\)](#)

## Removal and replacement: Document feeder (M180nw, M181fw)

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and rear doors](#)
- [Step 3: Remove the left cover \(M178-M181\)](#)
- [Step 4: Remove the document feeder and scanner assembly \(M180nw and M181fw\)](#)
- [Step 5: Remove the document feeder \(M180nw and M181fw\)](#)
- [Step 6: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the document feeder for the M180nw and M181fw models.

---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- 
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- 
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Document feeder (M180nw, M181fw) part number	
RM2-2419-000CN	ADF assembly (M180nw, M181fw)

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

Verify that the document feeder is correctly functioning (copy a page).

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-322 Remove the cassette tray

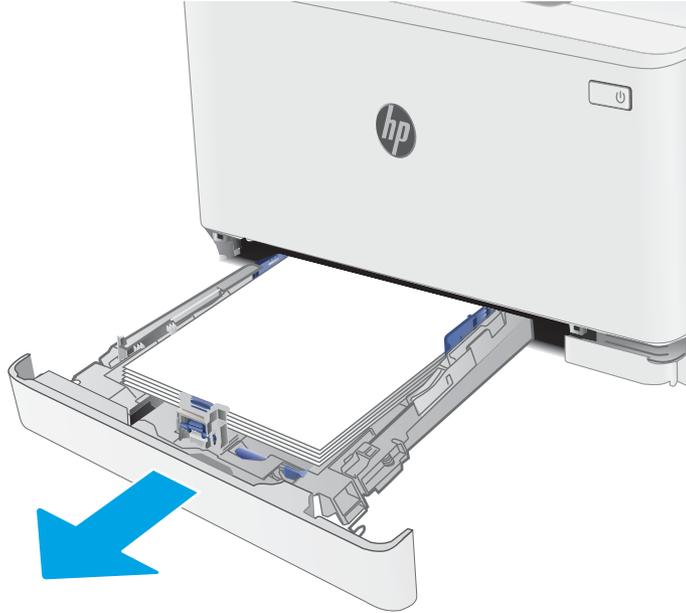

### Step 2: Open the front and rear doors


1. Open the front door.

Figure 1-323 Open the front door



2. Open the rear door.


Figure 1-324 Open the rear door

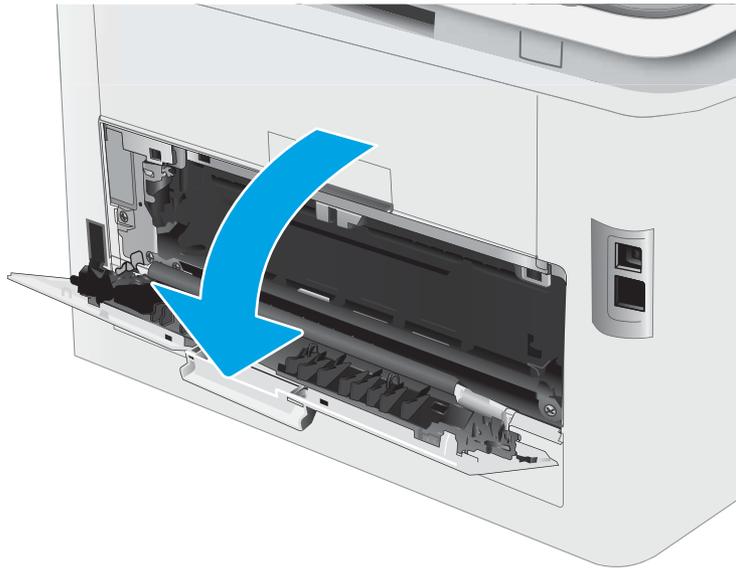

### Step 3: Remove the left cover (M178-M181)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


Figure 1-325 Tab locations

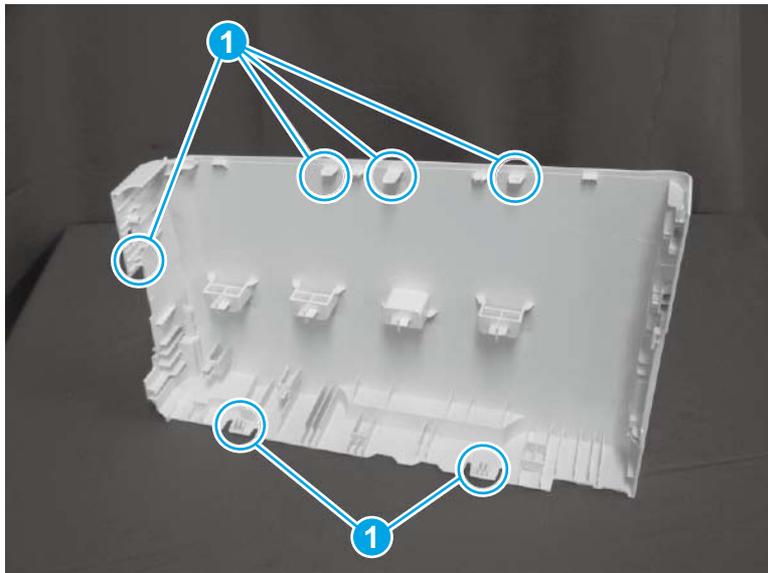

2. At the rear of the printer, remove one screw (callout 1), and then release one tab (callout 2).

 **TIP:** Use a small, flat-blade screwdriver to release the tab.

**Figure 1-326** Remove one screw and release tab

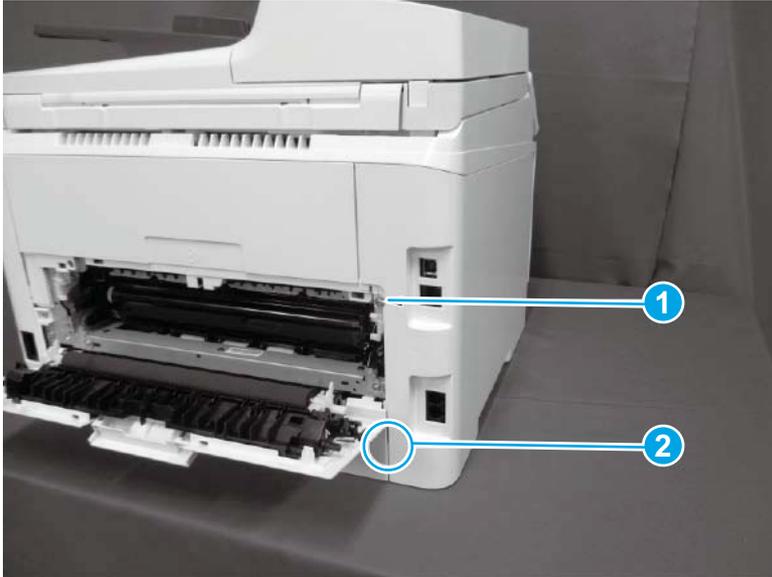


3. Release six tabs (callout 1) along the top, front, and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-327** Remove the left cover

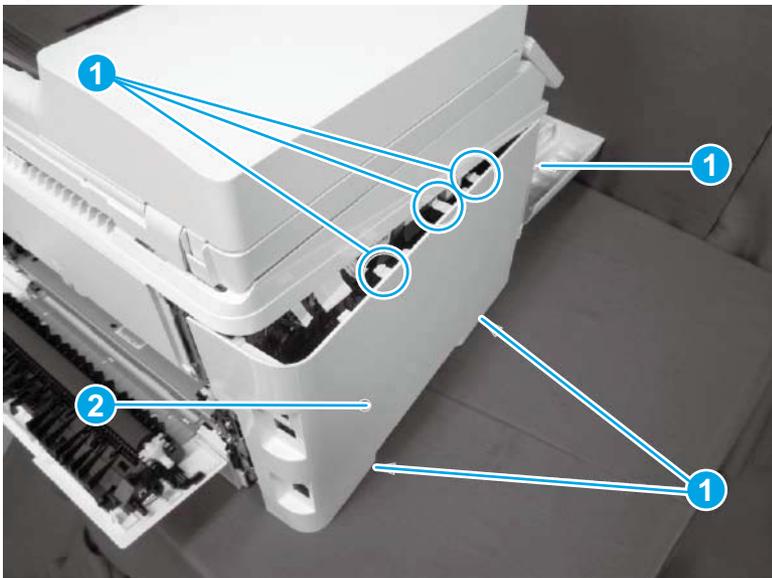

#### Step 4: Remove the document feeder and scanner assembly (M180nw and M181fw)

1. Disconnect two flat cables (callout 1) from the formatter, and then remove one screw (callout 2) to release the grounding wire.


Figure 1-328 Disconnect two cables and remove one screw

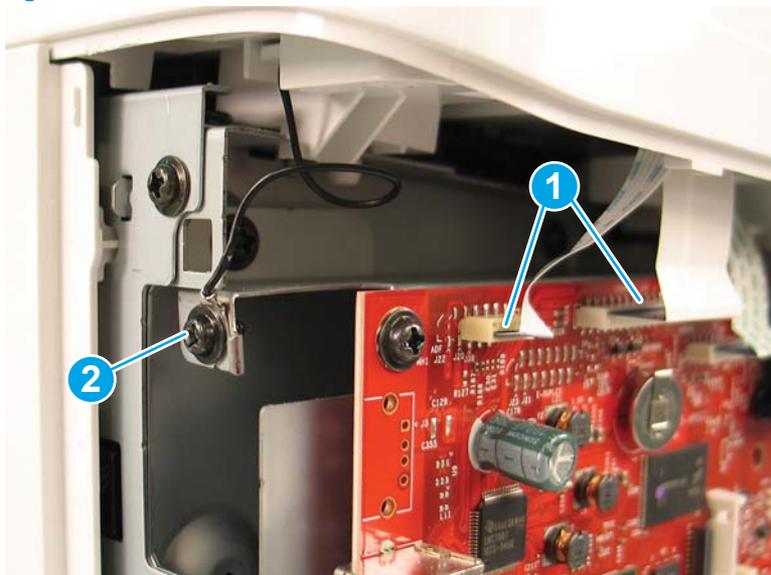

2. Open the scanner. Release one tab (callout 1), and then rotate the ISA slider pin (callout 2) towards the front of the printer to release it.


 **TIP:** Use a Phillips head screwdriver in the end of the slider pin to rotate it.

Figure 1-329 Release one tab and rotate the slider pin

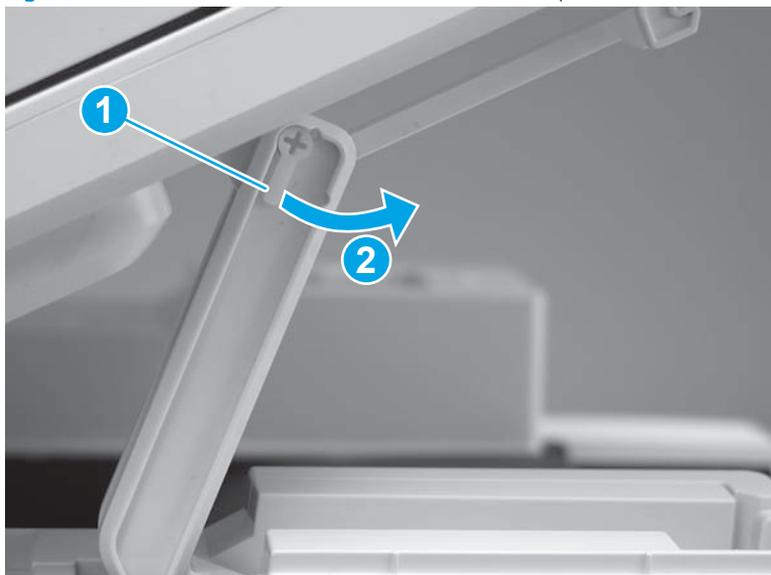

3. Remove the slider pin.

Figure 1-330 Remove the slider pin

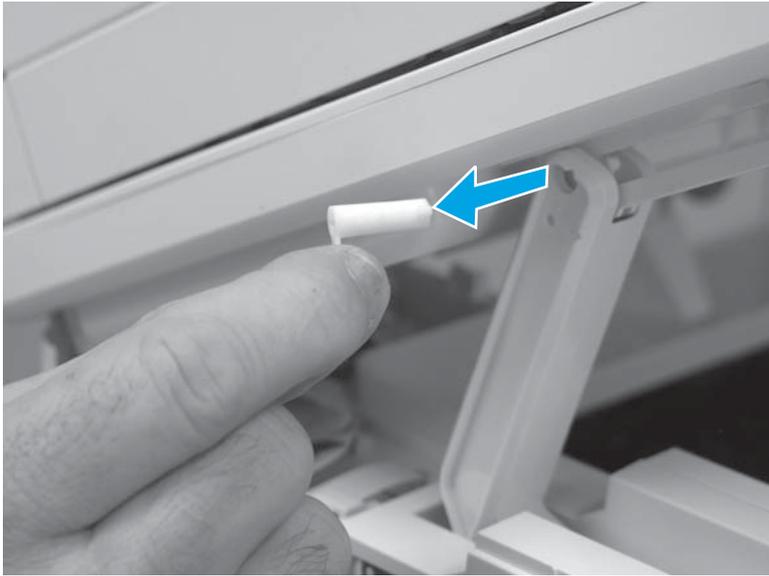

4. Rotate the hinge arm down.

---

**⚠ WARNING!** The hinge arm is spring-loaded by a strong spring and might snap down suddenly. Be careful not to pinch your fingers between the hinge arm and the top of the printer.


---

Figure 1-331 Rotate the hinge arm down




5. On the scanner bed, use a small, flat-blade screwdriver to release one tab (callout 1), and then remove the scanner cable cover (callout 2).

Figure 1-332 Remove the scanner cable cover

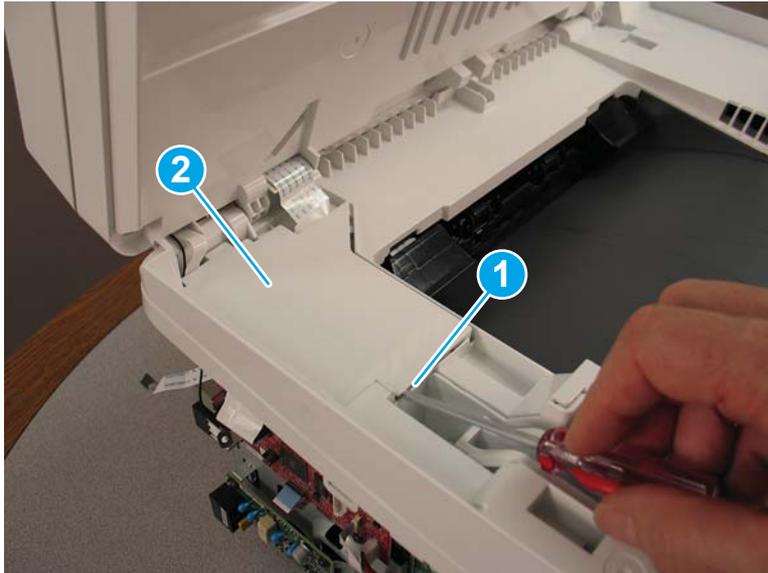

6. Release the flat cable (callout 1) from the guides (callout 2), and then feed the two flat cables (callout 3) through the openings in the scanner.


Figure 1-333 Release the flat cable

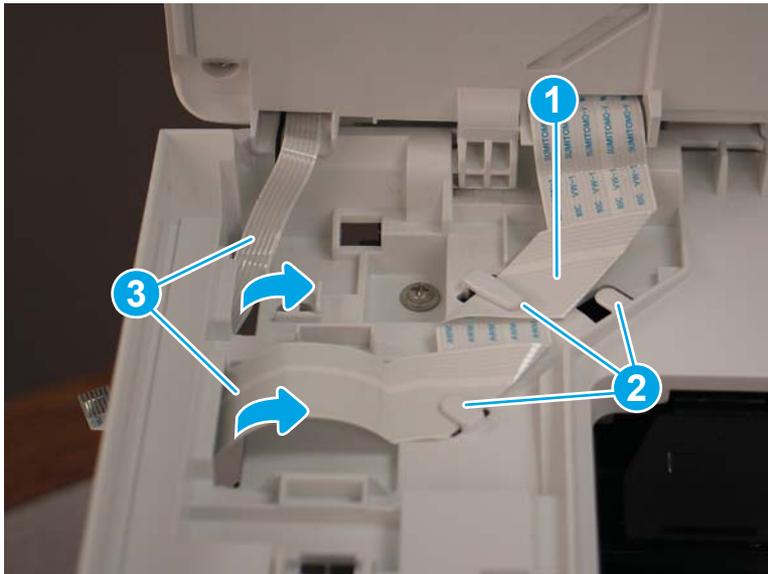

7. Open the scanner assembly fully, slide the assembly to the right (callout 1), and then lift the assembly off of the chassis (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-334** Remove the scanner assembly

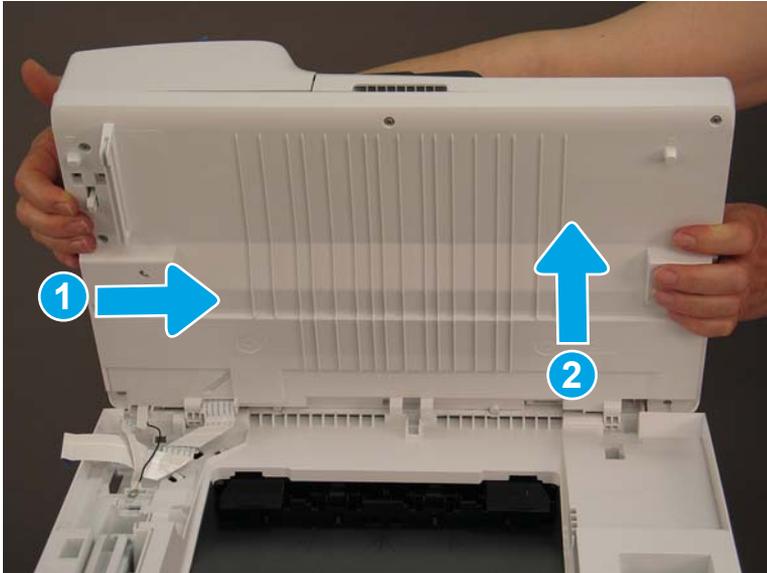


#### Step 5: Remove the document feeder (M180nw and M181fw)

1. Partially open the document feeder, and then press back to release two tabs (callout 1).

 **TIP:** If the tabs are difficult to release, use a small, flat-blade screwdriver to release them.


**Figure 1-335** Release two tabs

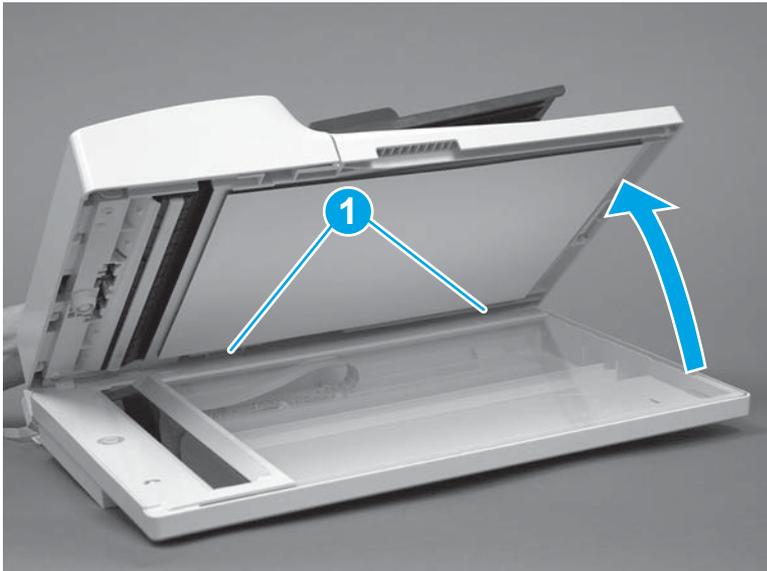

2. Release the cables (callout 1) through the opening in the scanner (callout 2), and then remove the document feeder (callout 3).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-336** Remove the document feeder

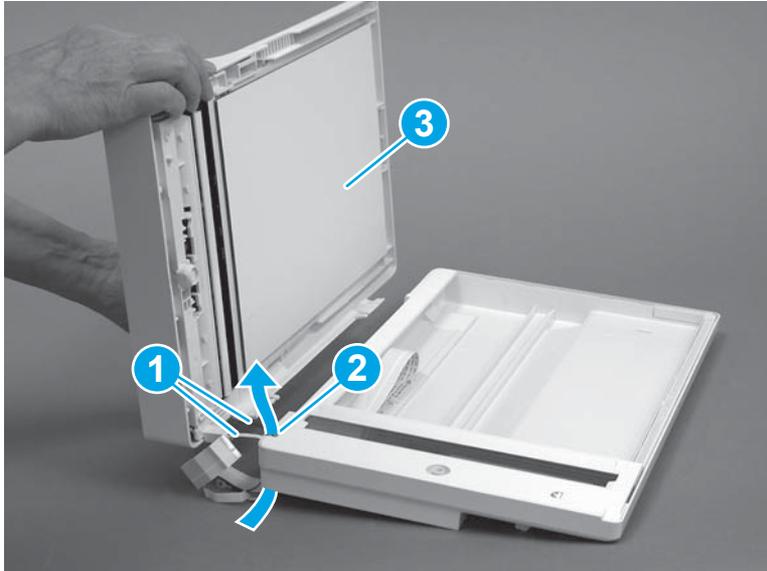

### Step 6: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Document feeder input tray (M180nw, M181fw)

- [Introduction](#)
- [Step 1: Remove the document feeder input tray \(M180nw and M181fw\)](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the document feeder top cover for the M180nw and M181fw models.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.

 **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.

- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Document feeder input tray (M180nw, M181fw) part number	
RM2-2420-000CN	Input tray assembly (M180nw, M181fw)

### Required tools

- No special tools are required to remove or install this assembly.

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

Verify that the document feeder is correctly functioning (copy a page).

### Step 1: Remove the document feeder input tray (M180nw and M181fw)


1. Fully open the document feeder top cover.

Figure 1-337 Open the document feeder top cover

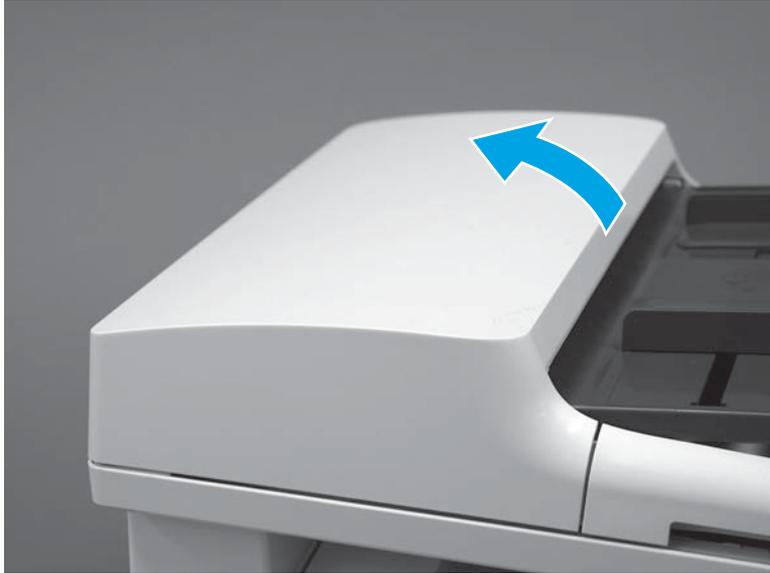

2. Raise the input tray until it is perpendicular to the printer.

Figure 1-338 Raise the input tray

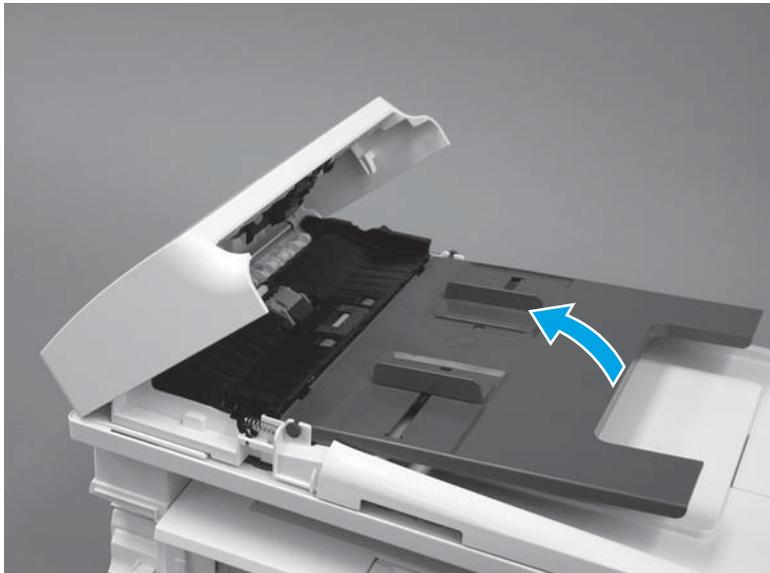


3. Pull the input tray straight up and off of the printer to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-339** Remove the document feeder input tray

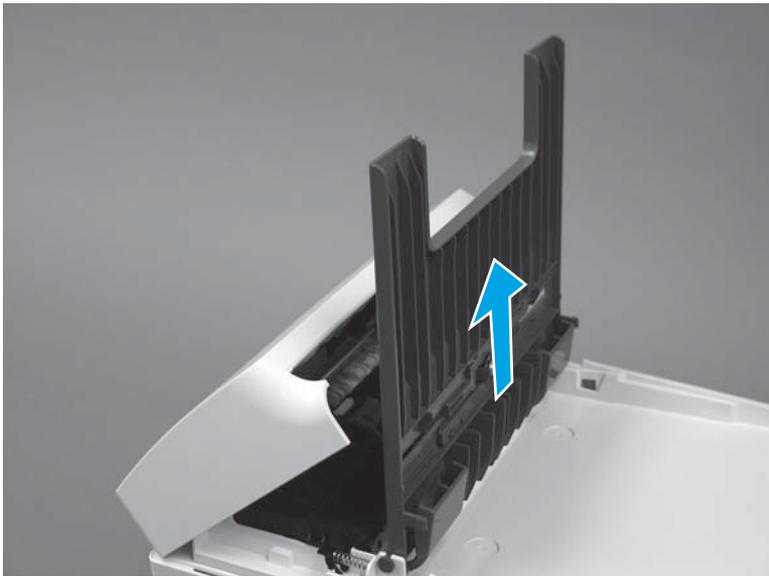

### Step 2: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Document feeder top cover (M180nw, M181fw)

- [Introduction](#)
- [Step 1: Remove the document feeder top cover \(M180nw and M181fw\)](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the document feeder top cover for the M180nw and M181fw models.

---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.

 **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.

---

- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Document feeder top cover (M180nw, M181fw) part number	
RM2-1180-000CN	Top cover assembly (M180nw, M181fw)

---

### Required tools

- No special tools are required to remove or install this assembly.

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

Verify that the document feeder is correctly functioning (copy a page).

### Step 1: Remove the document feeder top cover (M180nw and M181fw)


1. Fully open the document feeder top cover.

Figure 1-340 Open the document feeder top cover

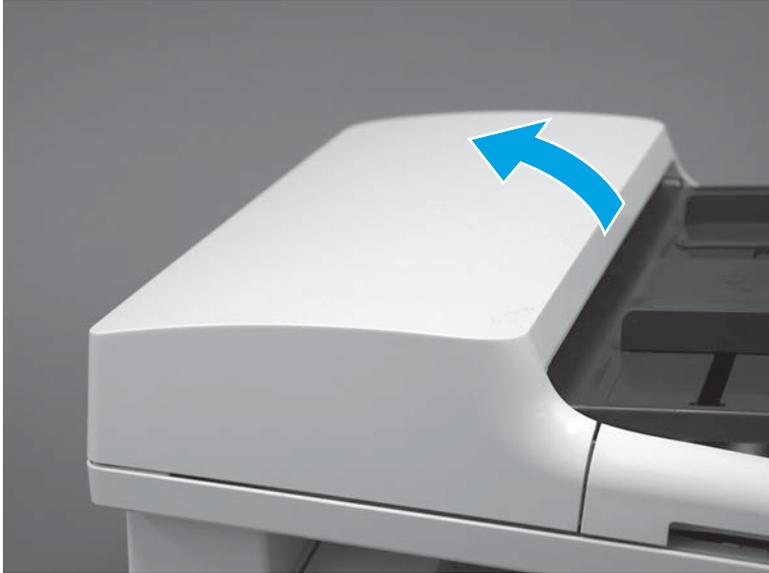

2. Release one tab (callout 1), and then continue to raise the top cover.


Figure 1-341 Release one tab

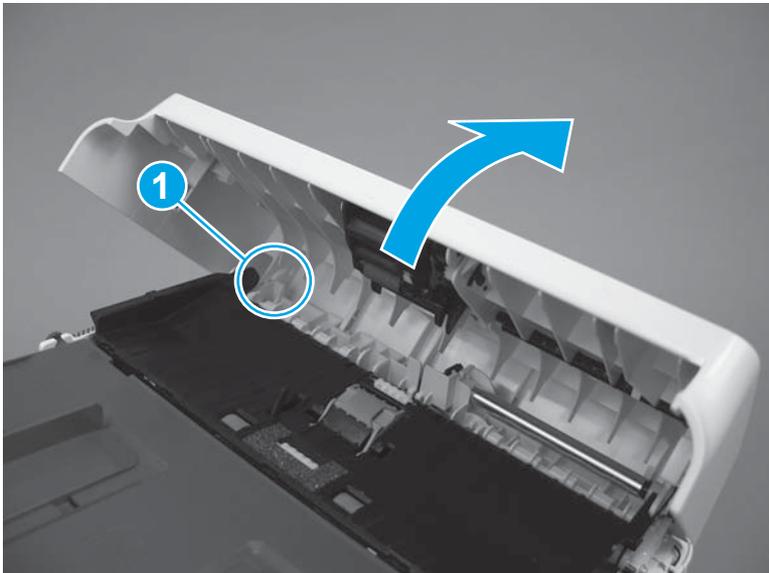

3. Slide the top cover as shown below to release three hinge pins (callout 1), and then remove the cover.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-342** Remove the document feeder top cover

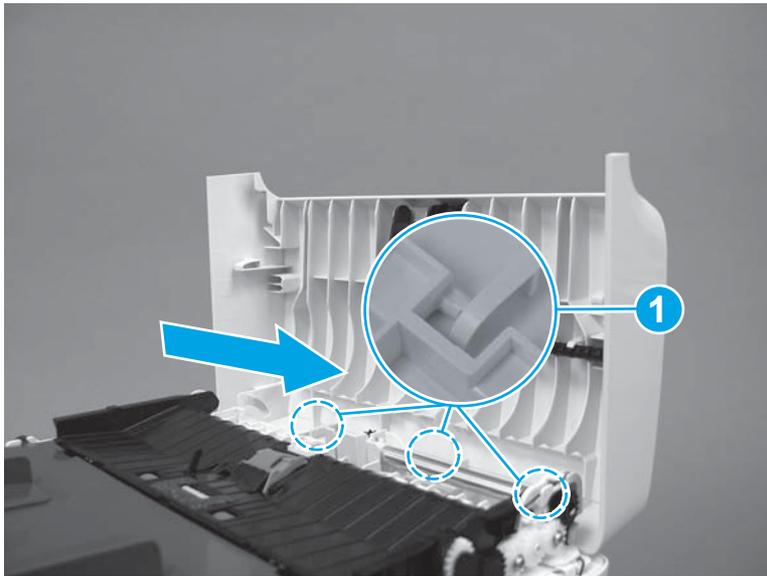

### Step 2: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Document feeder pre-pick arm (M180nw, M181fw)

- [Introduction](#)
- [Step 1: Remove the document feeder top cover \(M180nw and M181fw\)](#)
- [Step 2: Remove the pre-pick arm assembly \(M180nw and M181fw\)](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the document feeder pre-pick arm for the M180nw and M181fw models.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Document feeder pre-pick arm (M180nw, M181fw) part number	
RM2-1187-000CN	Pre-pick arm assembly (M180nw, M181fw)

### Required tools

- No special tools are required to remove or install this assembly.

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

Verify that the document feeder is correctly functioning (copy a page).

### Step 1: Remove the document feeder top cover (M180nw and M181fw)


1. Fully open the document feeder top cover.

Figure 1-343 Open the document feeder top cover

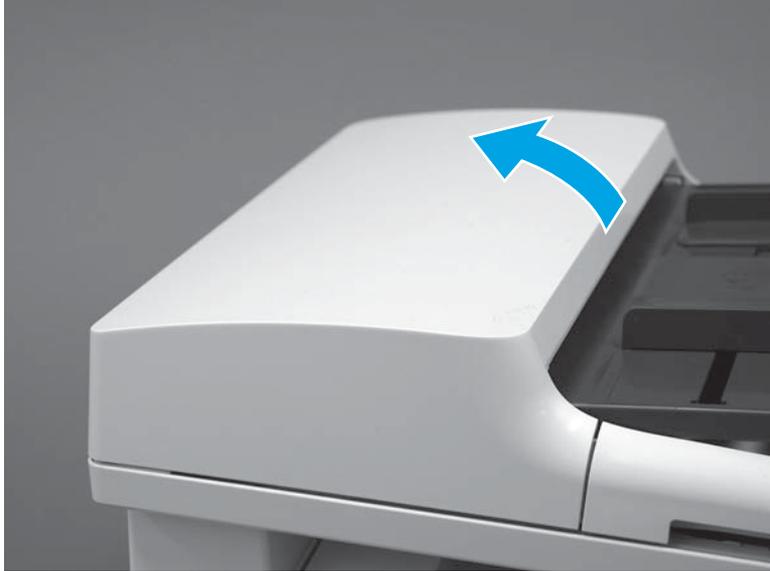

2. Release one tab (callout 1), and then continue to raise the top cover.


Figure 1-344 Release one tab

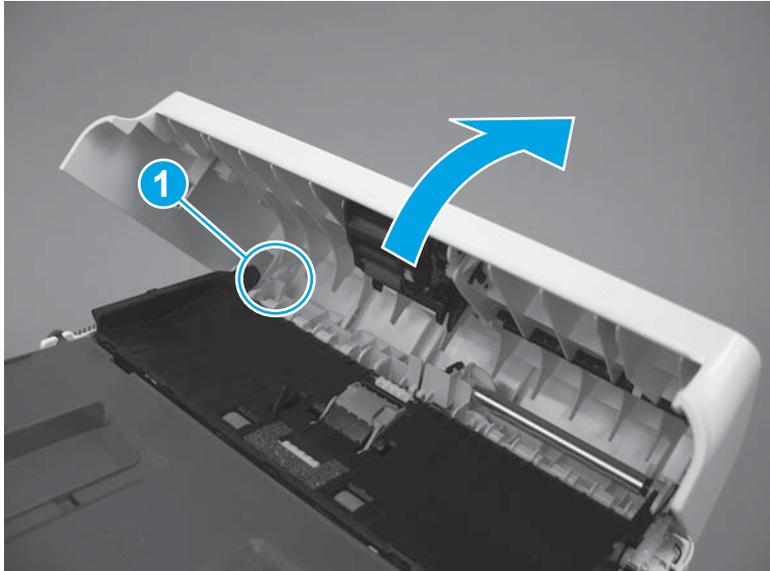

3. Slide the top cover as shown below to release three hinge pins (callout 1), and then remove the cover.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-345** Remove the document feeder top cover

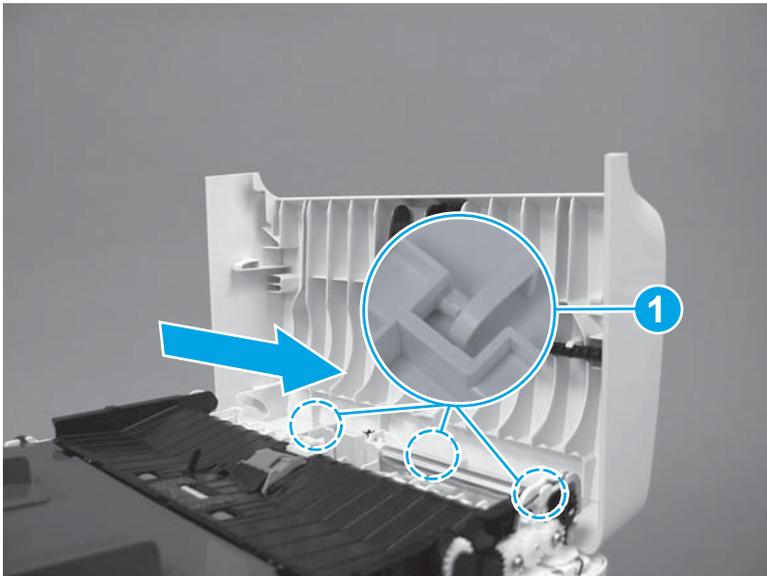

**Step 2: Remove the pre-pick arm assembly (M180nw and M181fw)**

1. Before proceeding, take note of how the document feeder pre-pick arm drive gear is installed on the assembly.

**Figure 1-346** Note the pre-pick arm drive gear

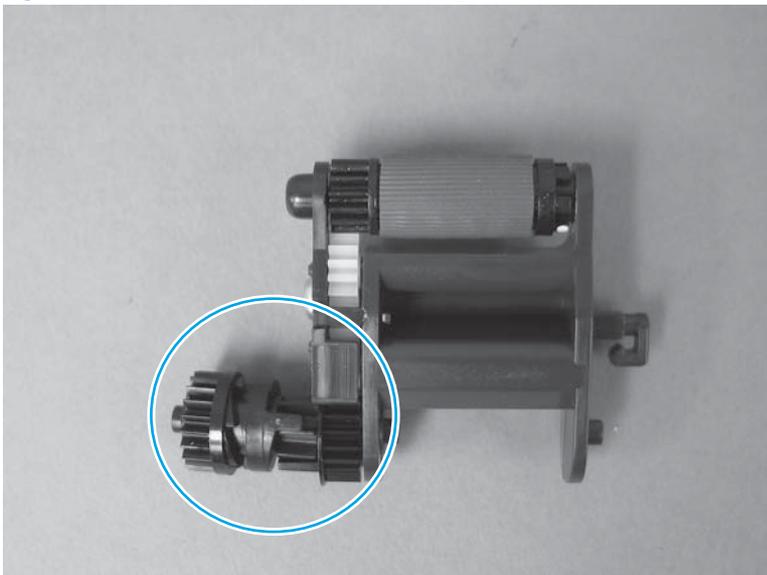


2. Inside the document feeder top cover, release two tabs (callout 1), and then remove the pre-pick arm assembly (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

 **CAUTION:** The pre-pick arm drive gear (callout 3) is not captive. Do not lose the gear when handling the assembly.

**Figure 1-347** Remove the document feeder pre-pick arm

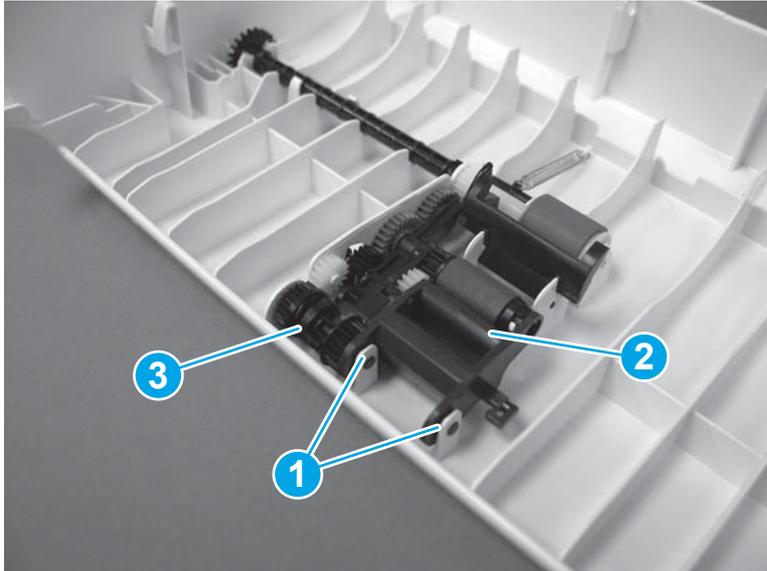

### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Document feeder core assembly (M180nw, M181fw)

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and rear doors](#)
- [Step 3: Remove the left cover \(M178-M181\)](#)
- [Step 4: Remove the document feeder and scanner assembly \(M180nw, M181fw\)](#)
- [Step 5: Remove the document feeder top cover \(M180nw and M181fw\)](#)
- [Step 6: Remove the document feeder core assembly \(M180nw, M181fw\)](#)
- [Step 7: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the document feeder core assembly for the M180nw and M181fw) models.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.



**WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.

- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### Document feeder core assembly (M180nw, M181fw) part number

---

RM2-2425-000CN

Document feeder core assembly (M180nw, M181fw)

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Verify that the document feeder is correctly functioning (copy a page).

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-348 Remove the cassette tray



### Step 2: Open the front and rear doors


1. Open the front door.

Figure 1-349 Open the front door



2. Open the rear door.


Figure 1-350 Open the rear door

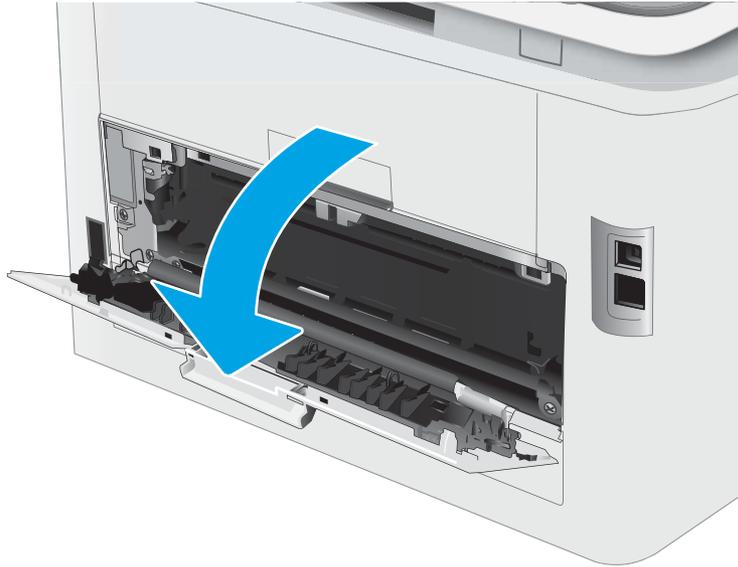

### Step 3: Remove the left cover (M178-M181)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


Figure 1-351 Tab locations

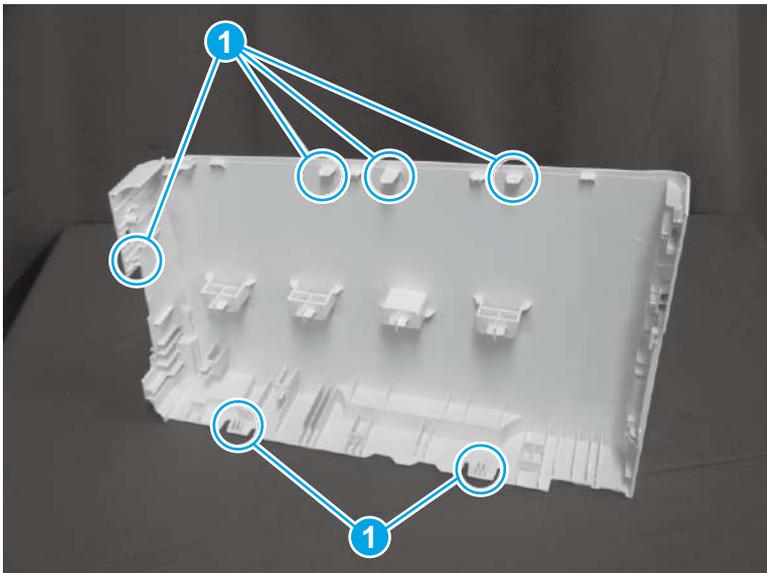

2. At the rear of the printer, remove one screw (callout 1), and then release one tab (callout 2).

 **TIP:** Use a small, flat-blade screwdriver to release the tab.

**Figure 1-352** Remove one screw and release tab

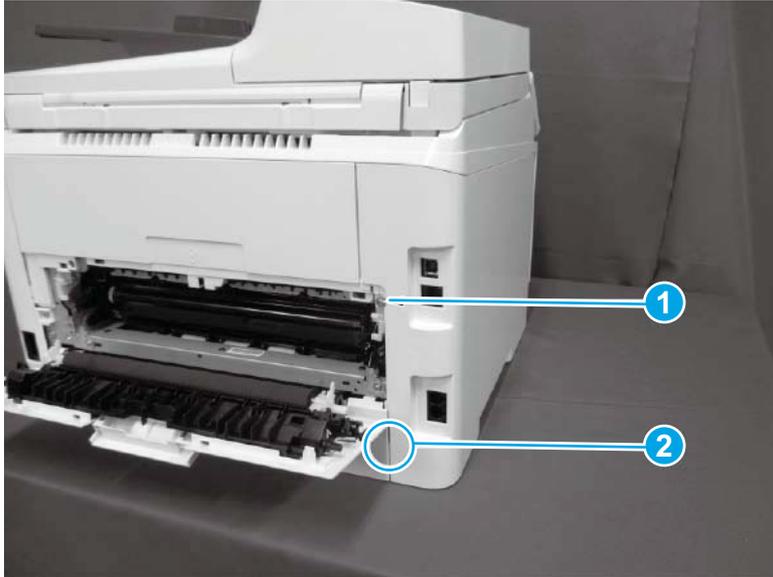


3. Release six tabs (callout 1) along the top, front, and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-353** Remove the left cover

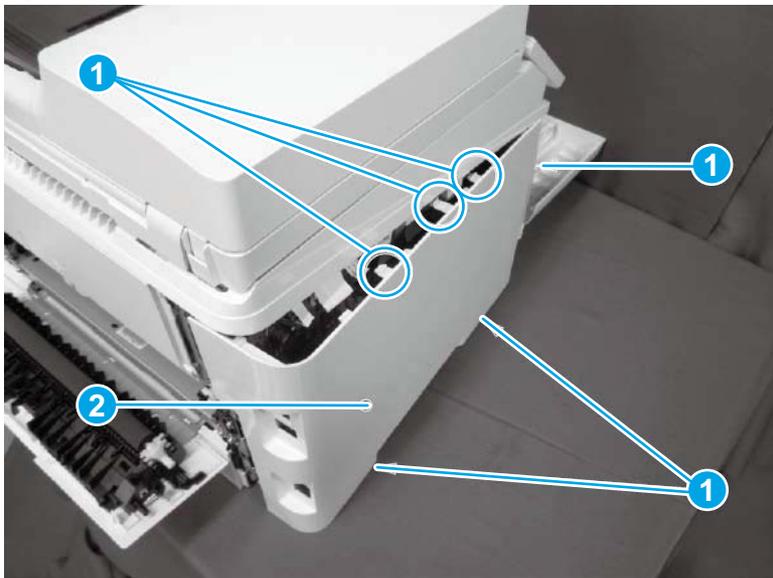

#### Step 4: Remove the document feeder and scanner assembly (M180nw, M181fw)

1. Disconnect two flat cables (callout 1) from the formatter, and then remove one screw (callout 2) to release the grounding wire.


Figure 1-354 Disconnect two cables and remove one screw

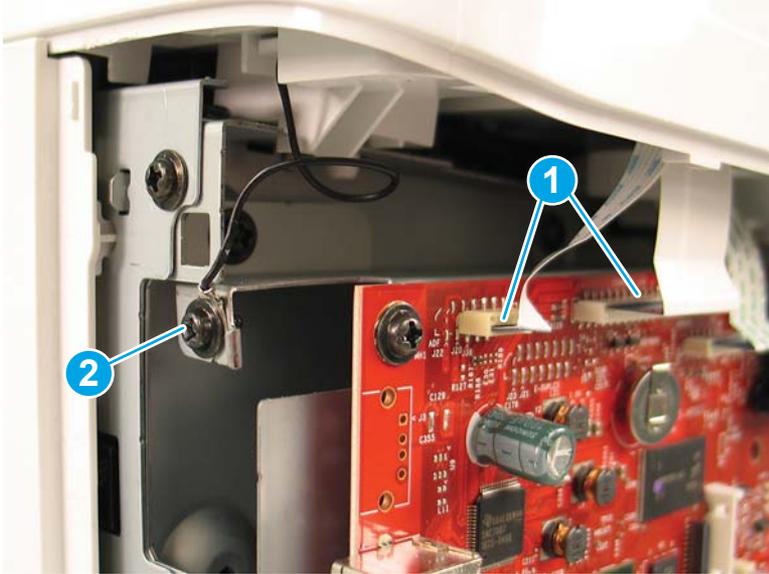

2. Open the scanner. Release one tab (callout 1), and then rotate the ISA slider pin (callout 2) towards the front of the printer to release it.


 **TIP:** Use a Phillips head screwdriver in the end of the slider pin to rotate it.

Figure 1-355 Release one tab and rotate the slider pin

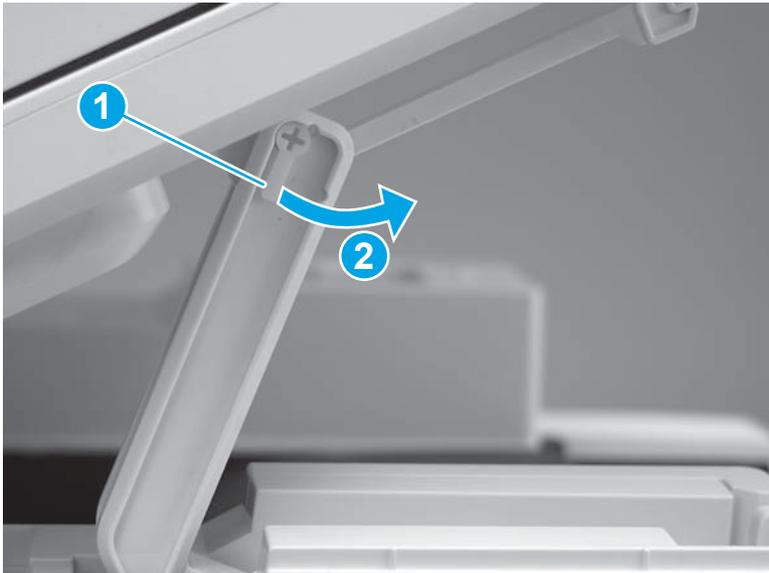

3. Remove the slider pin.

Figure 1-356 Remove the slider pin

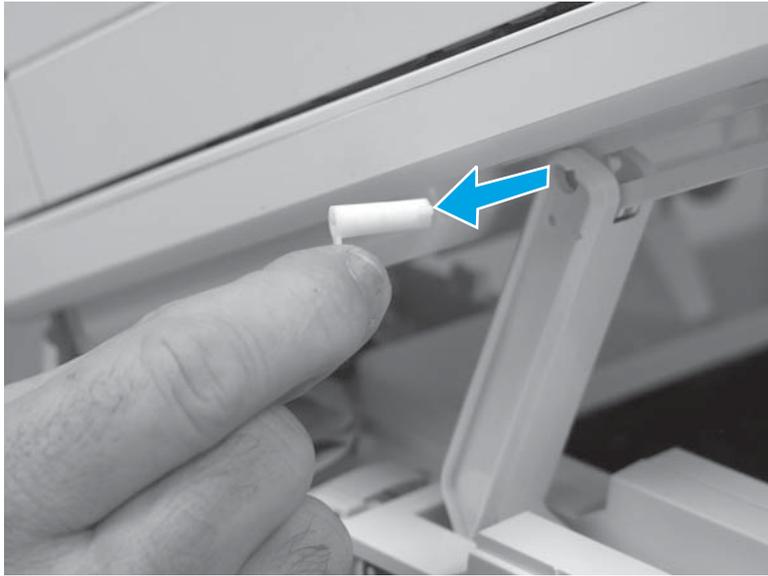

4. Rotate the hinge arm down.

---

**⚠ WARNING!** The hinge arm is spring-loaded by a strong spring and might snap down suddenly. Be careful not to pinch your fingers between the hinge arm and the top of the printer.


---

Figure 1-357 Rotate the hinge arm down




5. On the scanner bed, use a small, flat-blade screwdriver to release one tab (callout 1), and then remove the scanner cable cover (callout 2).

**Figure 1-358** Remove the scanner cable cover

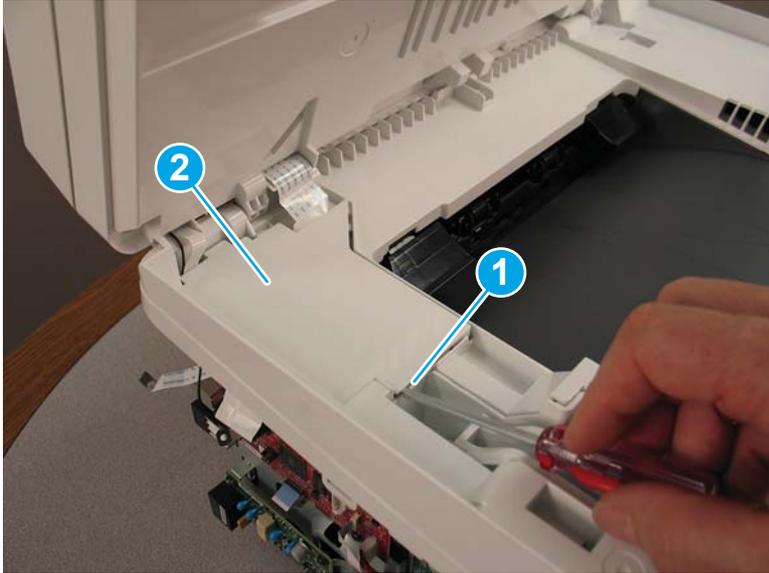

6. Release the flat cable (callout 1) from the guides (callout 2), and then feed the two flat cables (callout 3) through the openings in the scanner.


**Figure 1-359** Release the flat cable

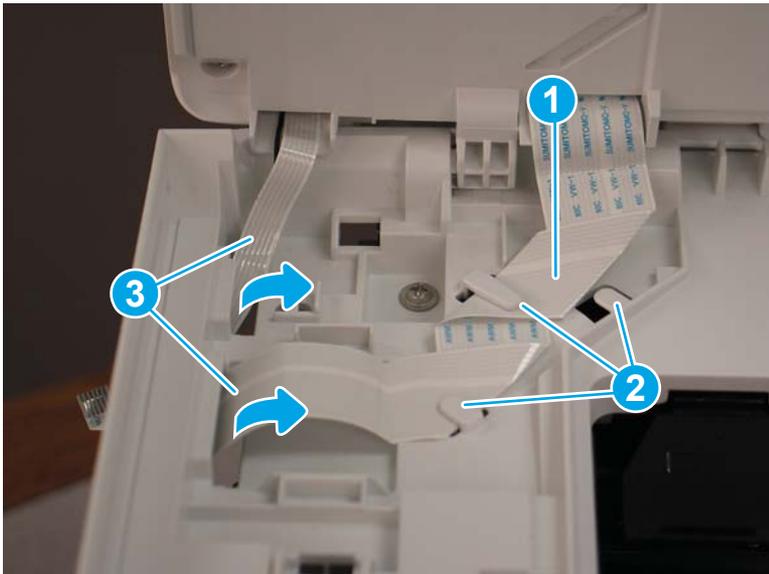

7. Open the scanner assembly fully, slide the assembly to the right (callout 1), and then lift the assembly off of the chassis (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-360** Remove the scanner assembly

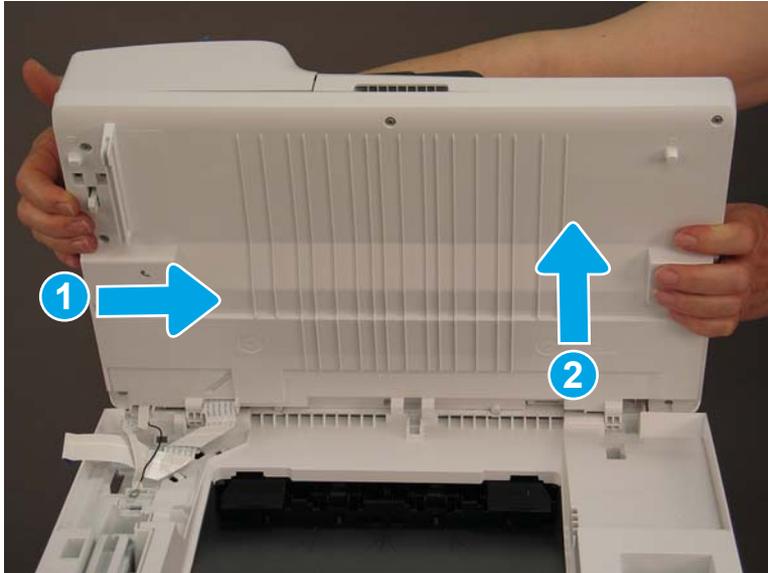

**Step 5: Remove the document feeder top cover (M180nw and M181fw)**


1. Fully open the document feeder top cover.

**Figure 1-361** Open the document feeder top cover



2. Release one tab (callout 1), and then continue to raise the top cover.

Figure 1-362 Release one tab

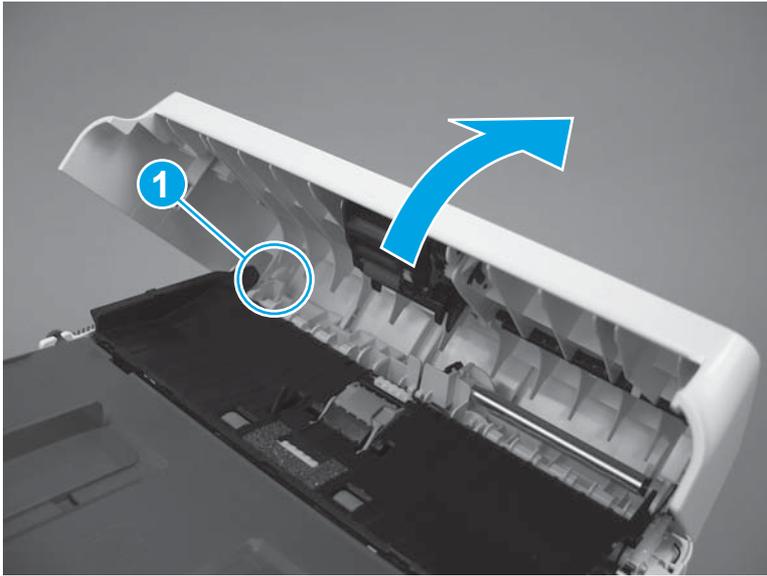


3. Slide the top cover as shown below to release three hinge pins (callout 1), and then remove the cover.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-363 Remove the document feeder top cover

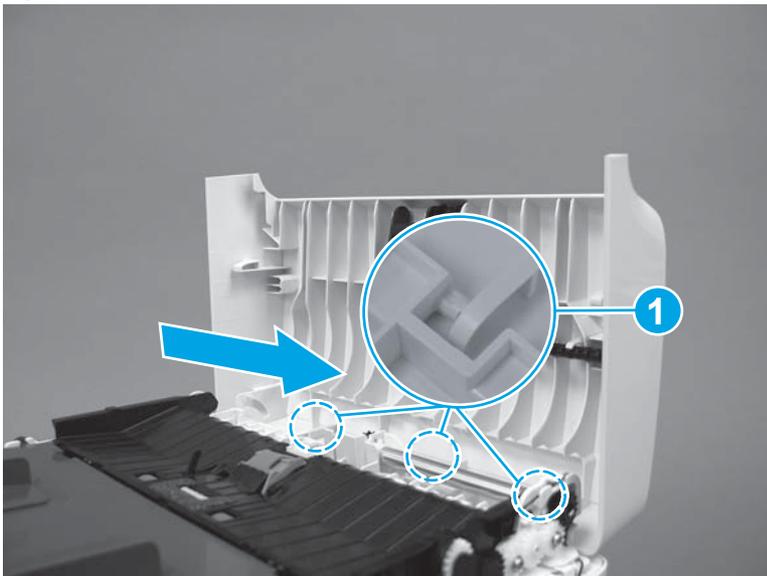

#### Step 6: Remove the document feeder core assembly (M180nw, M181fw)

1. Release one tab (callout 1), slightly lift up the core assembly (callout 2), and then slide the assembly as shown below (callout 3) to release it.


Figure 1-364 Release the document feeder core assembly

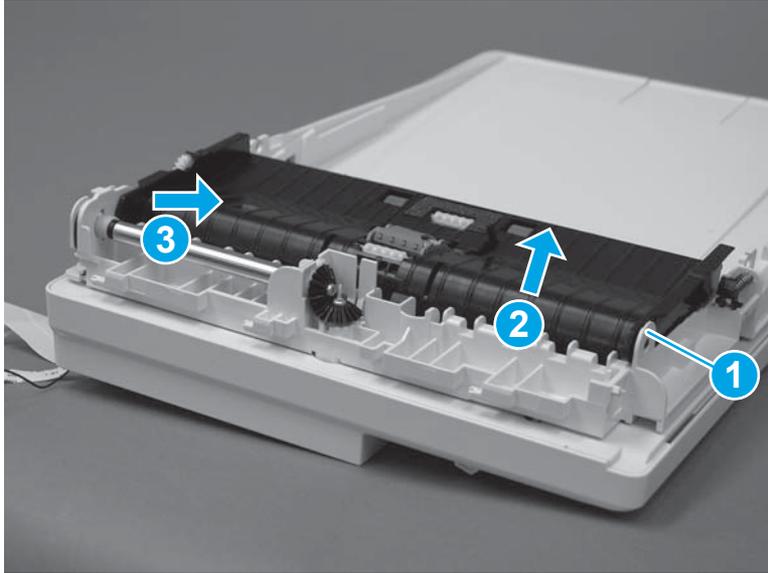

2. Release the wire harness from the guide (callout 1), release the flat cable two-sided tape (callout 2), and then thread the wire harness and flat cable through the opening in the hinge (callout 3) while removing the core assembly (callout 4).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-365 Remove the document feeder core assembly

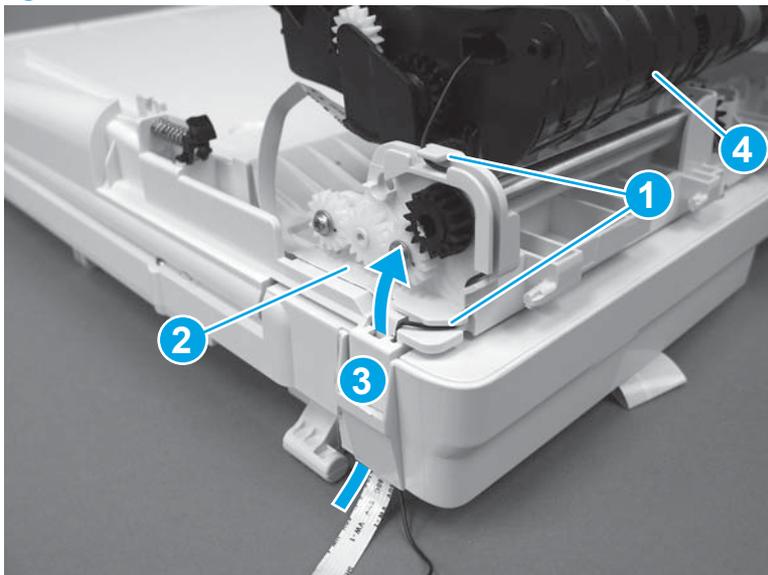

### Step 7: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Document feeder base assembly (M180nw, M181fw)

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and rear doors](#)
- [Step 3: Remove the left cover \(M178-M181\)](#)
- [Step 4: Remove the document feeder and scanner assembly \(M180nw, M181fw\)](#)
- [Step 5: Remove the document feeder top cover \(M180nw and M181fw\)](#)
- [Step 6: Remove the document feeder core assembly \(M180nw, M181fw\)](#)
- [Step 7: Remove the document feeder base assembly \(M180nw, M181fw\)](#)
- [Step 8: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the document feeder base assembly for the M180nw and M181fw models.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Document feeder core assembly (M180nw, M181fw) part number	
RM2-1183-000CN	Document feeder base assembly (M180nw, M181fw)

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

## Post service test

Verify that the document feeder is correctly functioning (copy a page).

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-366 Remove the cassette tray



### Step 2: Open the front and rear doors


1. Open the front door.

Figure 1-367 Open the front door



2. Open the rear door.


Figure 1-368 Open the rear door

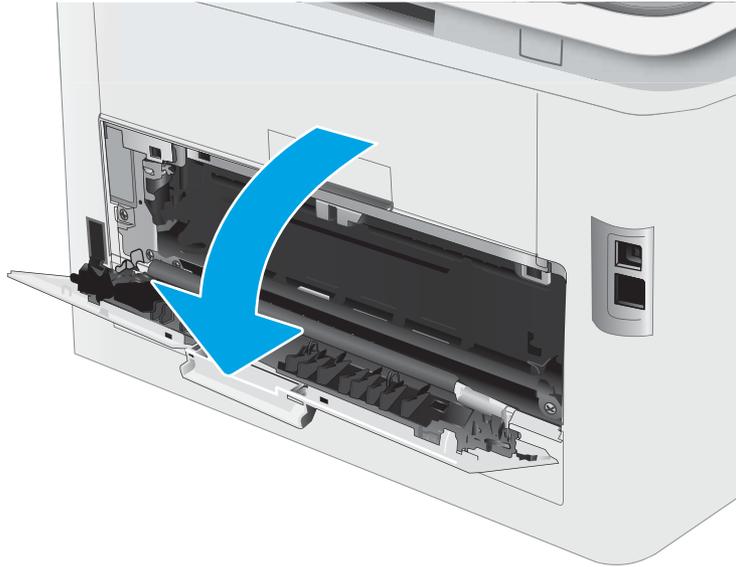

### Step 3: Remove the left cover (M178-M181)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


Figure 1-369 Tab locations

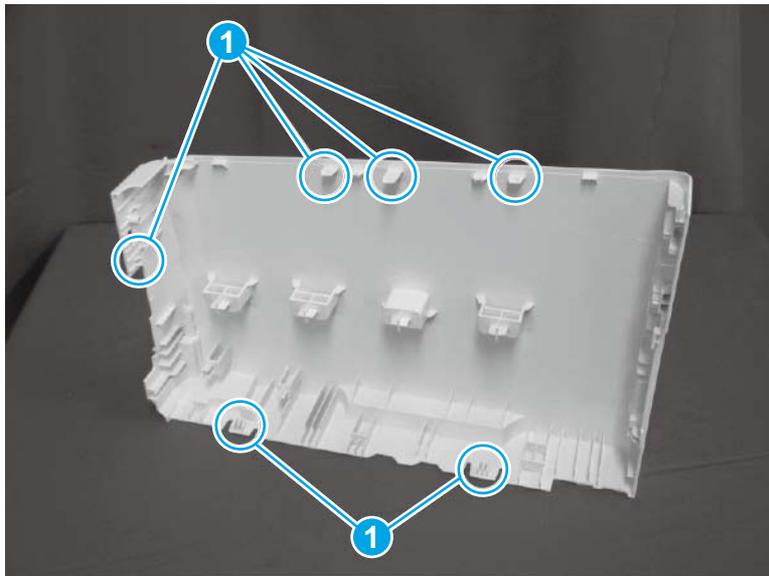

2. At the rear of the printer, remove one screw (callout 1), and then release one tab (callout 2).

 **TIP:** Use a small, flat-blade screwdriver to release the tab.

**Figure 1-370** Remove one screw and release tab

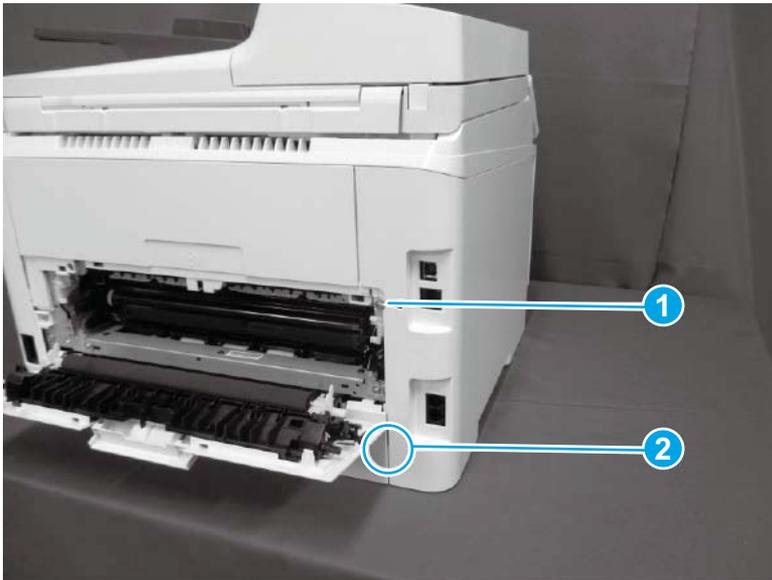


3. Release six tabs (callout 1) along the top, front, and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-371** Remove the left cover

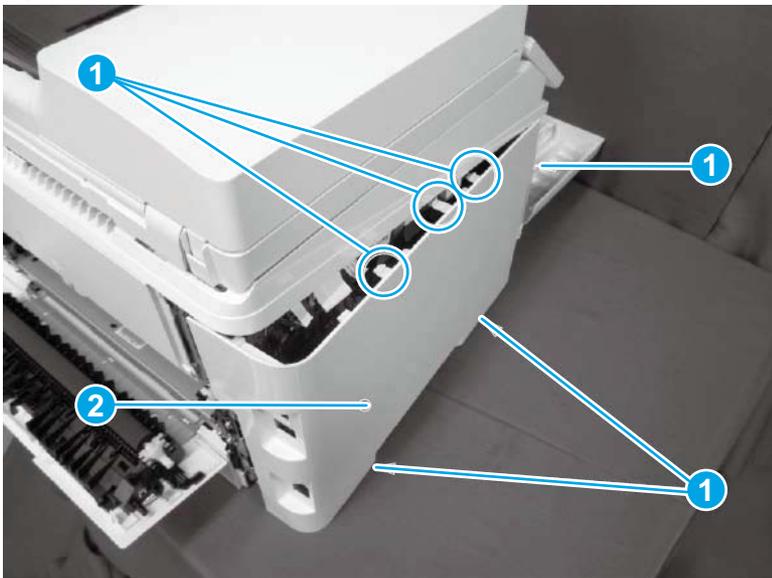

#### Step 4: Remove the document feeder and scanner assembly (M180nw, M181fw)

1. Disconnect two flat cables (callout 1) from the formatter, and then remove one screw (callout 2) to release the grounding wire.


Figure 1-372 Disconnect two cables and remove one screw

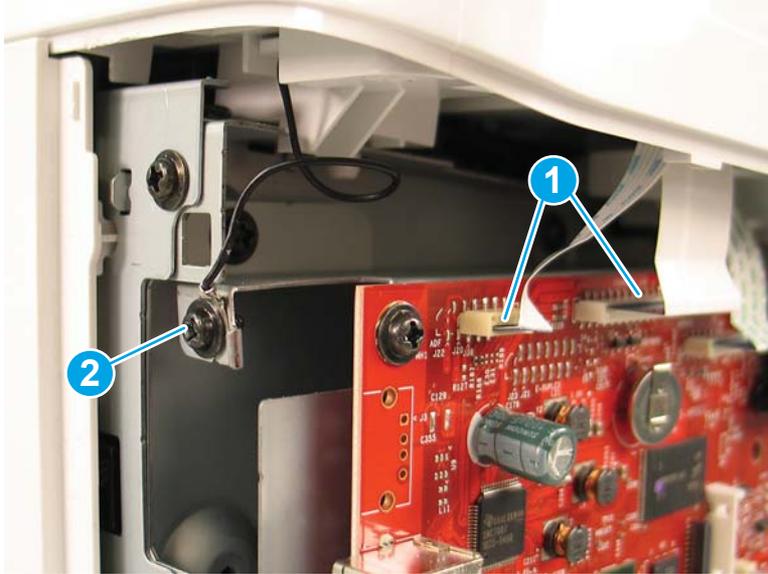

2. Open the scanner. Release one tab (callout 1), and then rotate the ISA slider pin (callout 2) towards the front of the printer to release it.


 **TIP:** Use a Phillips head screwdriver in the end of the slider pin to rotate it.

Figure 1-373 Release one tab and rotate the slider pin

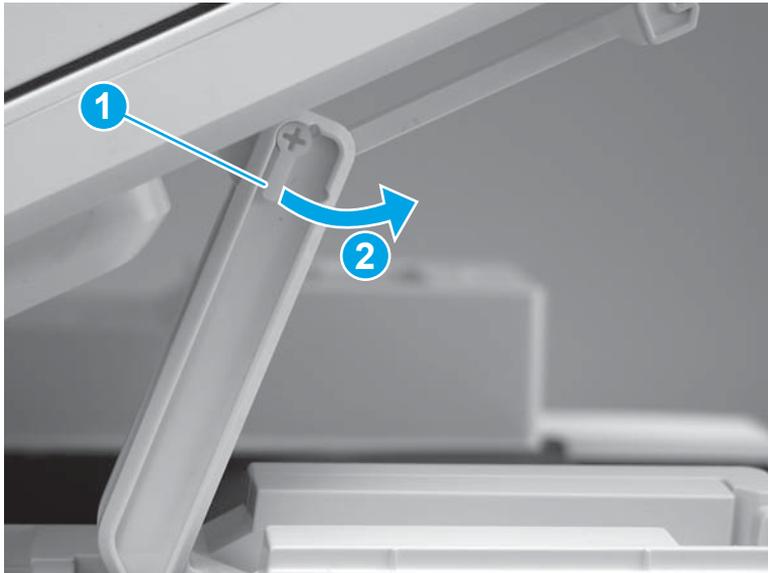

3. Remove the slider pin.

Figure 1-374 Remove the slider pin

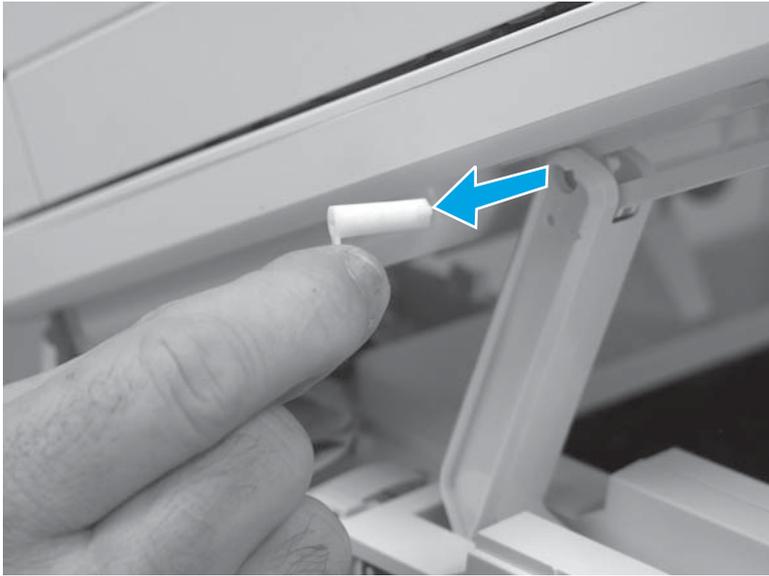

4. Rotate the hinge arm down.

---

**⚠ WARNING!** The hinge arm is spring-loaded by a strong spring and might snap down suddenly. Be careful not to pinch your fingers between the hinge arm and the top of the printer.


---

Figure 1-375 Rotate the hinge arm down




5. On the scanner bed, use a small, flat-blade screwdriver to release one tab (callout 1), and then remove the scanner cable cover (callout 2).

Figure 1-376 Remove the scanner cable cover

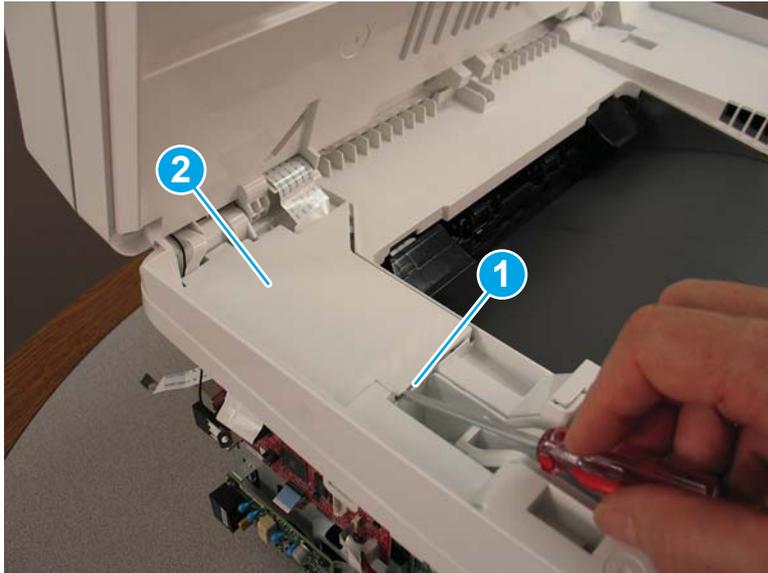

6. Release the flat cable (callout 1) from the guides (callout 2), and then feed the two flat cables (callout 3) through the openings in the scanner.


Figure 1-377 Release the flat cable

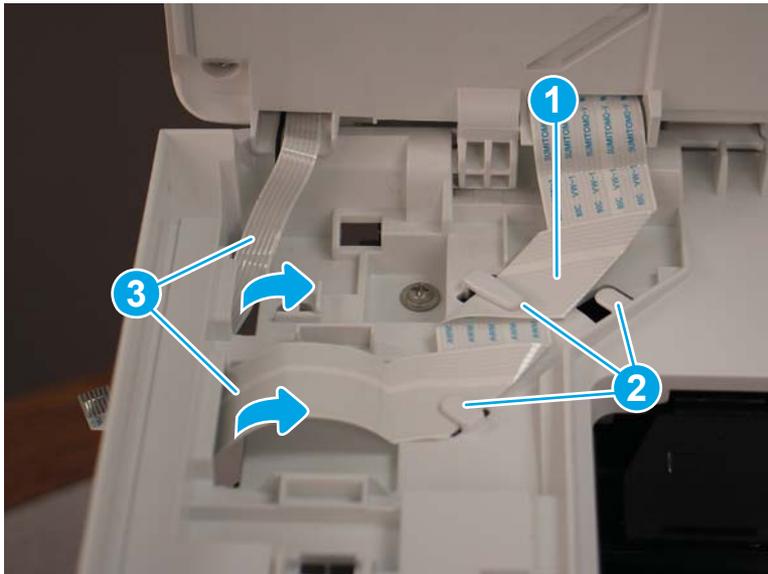

7. Open the scanner assembly fully, slide the assembly to the right (callout 1), and then lift the assembly off of the chassis (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-378** Remove the scanner assembly

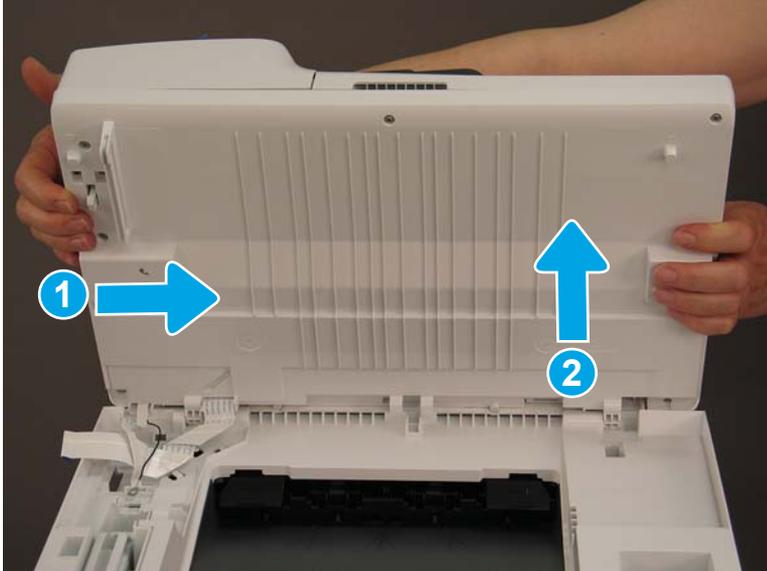

**Step 5: Remove the document feeder top cover (M180nw and M181fw)**


1. Fully open the document feeder top cover.

**Figure 1-379** Open the document feeder top cover

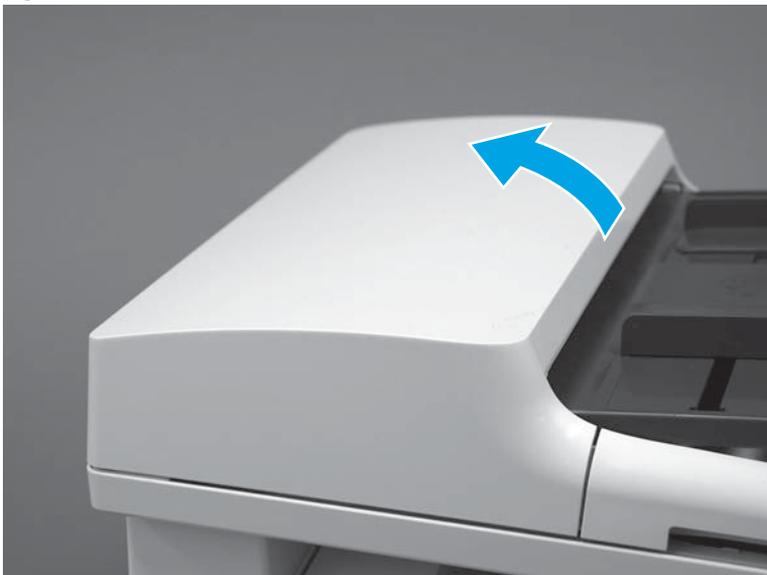

2. Release one tab (callout 1), and then continue to raise the top cover.


Figure 1-380 Release one tab

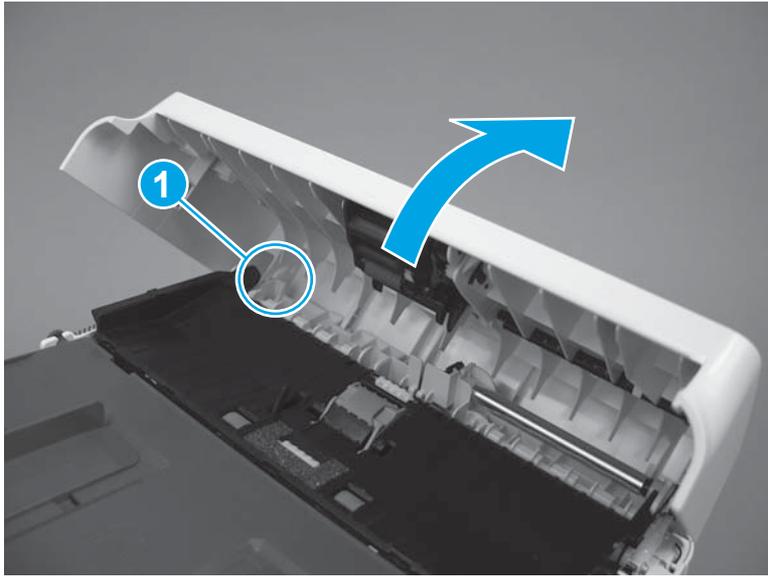

3. Slide the top cover as shown below to release three hinge pins (callout 1), and then remove the cover.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-381 Remove the document feeder top cover

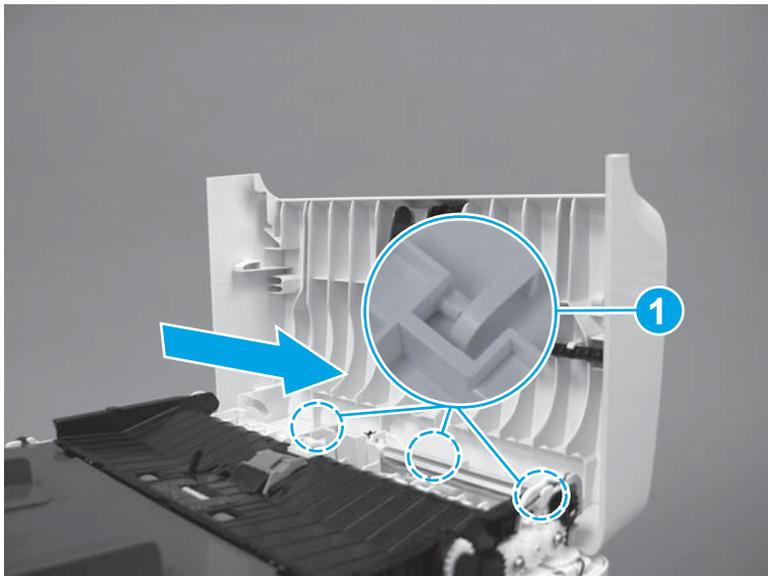

#### Step 6: Remove the document feeder core assembly (M180nw, M181fw)

1. Release one tab (callout 1), slightly lift up the core assembly (callout 2), and then slide the assembly as shown below (callout 3) to release it.


Figure 1-382 Release the document feeder core assembly

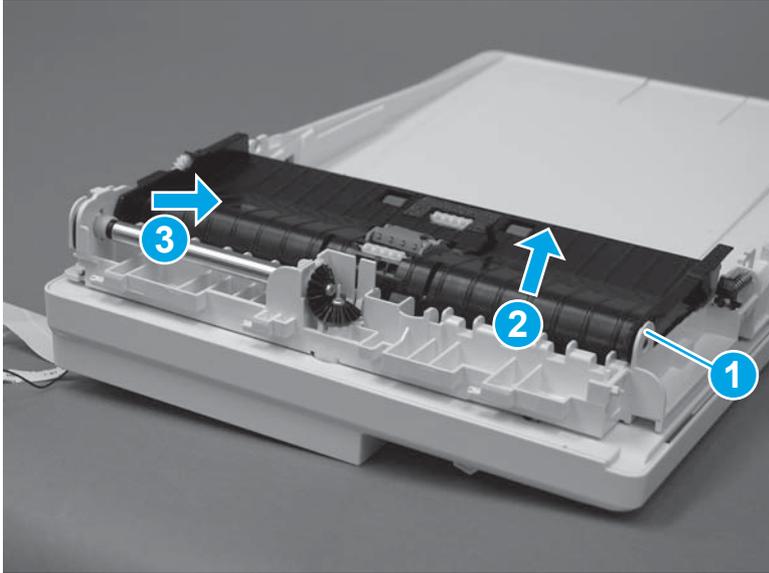

2. Release the wire harness from the guide (callout 1), release the flat cable two-sided tape (callout 2), and then thread the wire harness and flat cable through the opening in the hinge (callout 3) while removing the core assembly (callout 4).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-383 Remove the document feeder core assembly

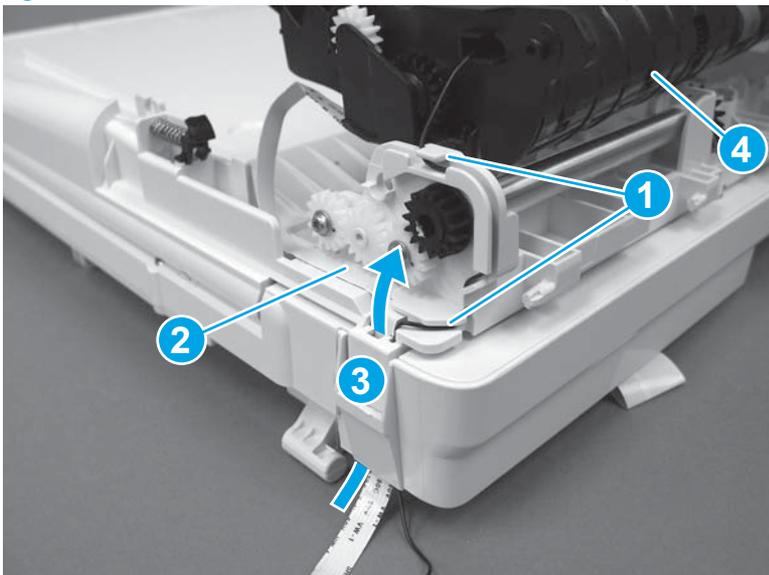


#### Step 7: Remove the document feeder base assembly (M180nw, M181fw)

- ▲ Partially open the document feeder base, and then press back to release two tabs (callout 1) and remove the document lid from the base assembly.

 **TIP:** If the tabs are difficult to release, use a small, flat-blade screwdriver to release them.

**Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-384 Release two tabs

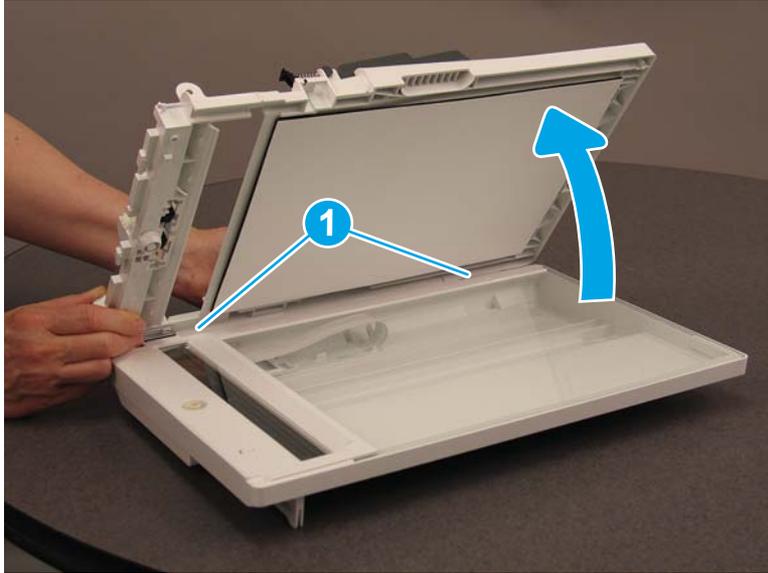

### Step 8: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Image scanner (M180nw, M181fw)

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and rear doors](#)
- [Step 3: Remove the left cover \(M178-M181\)](#)
- [Step 4: Remove the document feeder and scanner assembly \(M180nw and M181fw\)](#)
- [Step 5: Remove the document feeder \(M180nw and M181fw\)](#)
- [Step 6: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the image scanner for the M180nw and M181fw models.

---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- 
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- 
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Image scanner (M180nw, M181fw) part number	
RM2-2416-000CN	Image scanner assembly (M180nw, M181fw)

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Verify that the document feeder and the flatbed scanner are correctly functioning (copy a page).

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-385 Remove the cassette tray



### Step 2: Open the front and rear doors


1. Open the front door.

Figure 1-386 Open the front door



2. Open the rear door.


Figure 1-387 Open the rear door

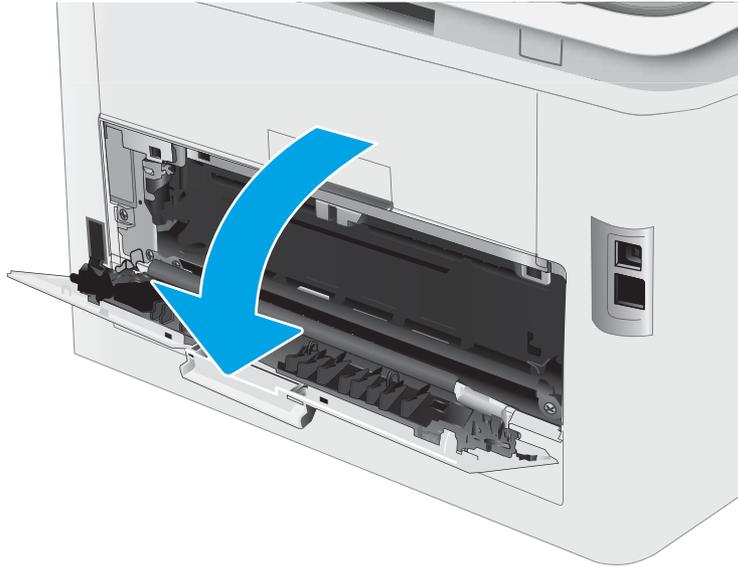

### Step 3: Remove the left cover (M178-M181)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


Figure 1-388 Tab locations

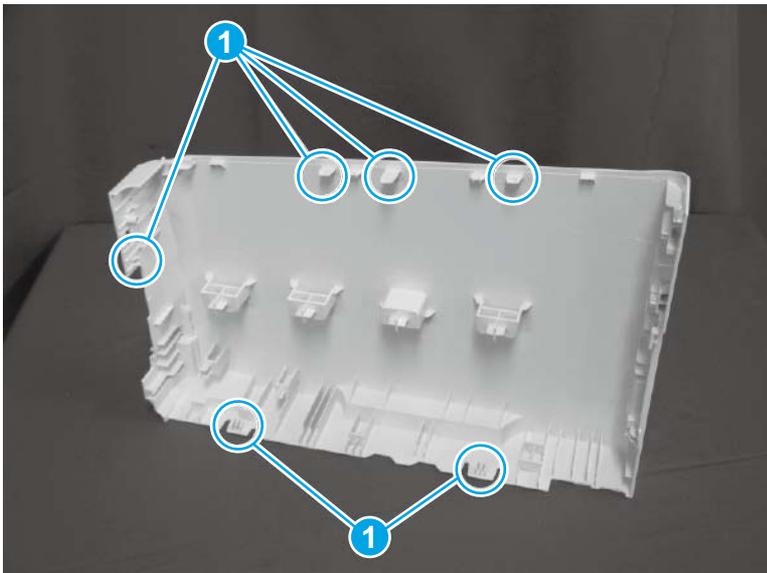

2. At the rear of the printer, remove one screw (callout 1), and then release one tab (callout 2).

 **TIP:** Use a small, flat-blade screwdriver to release the tab.

**Figure 1-389** Remove one screw and release tab

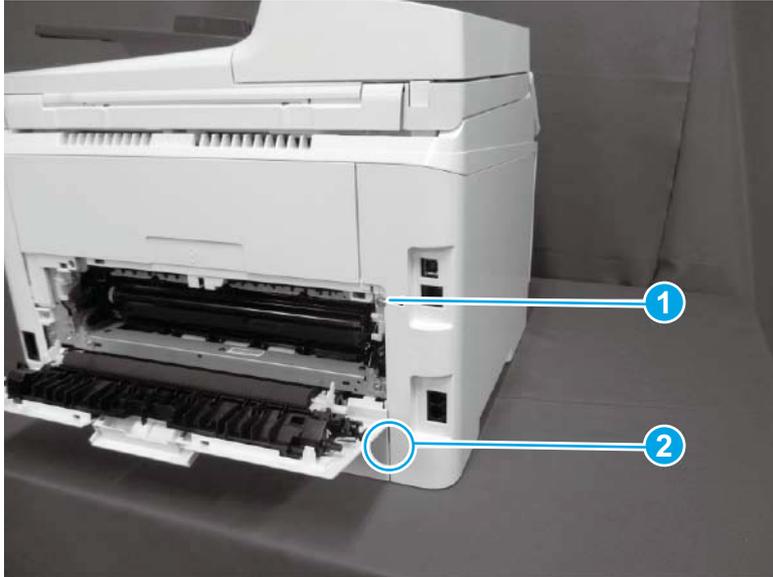


3. Release six tabs (callout 1) along the top, front, and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-390** Remove the left cover

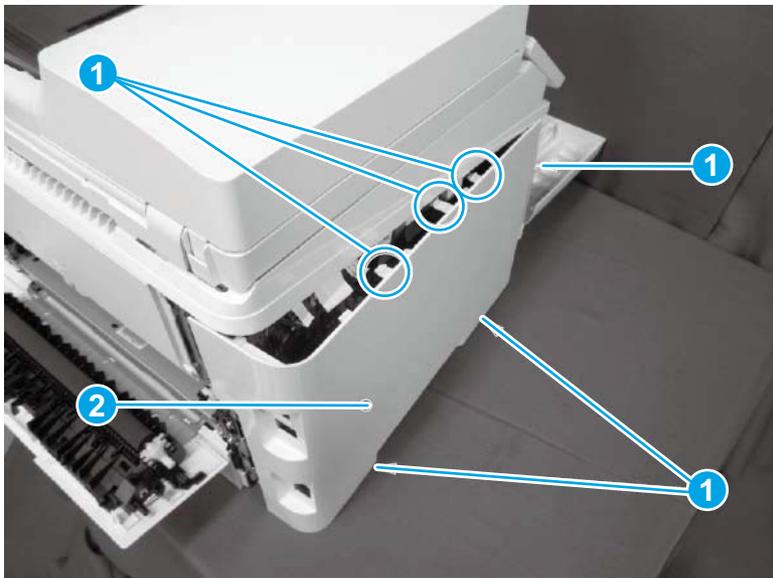

#### Step 4: Remove the document feeder and scanner assembly (M180nw and M181fw)

1. Disconnect two flat cables (callout 1) from the formatter, and then remove one screw (callout 2) to release the grounding wire.


**Figure 1-391** Disconnect two cables and remove one screw

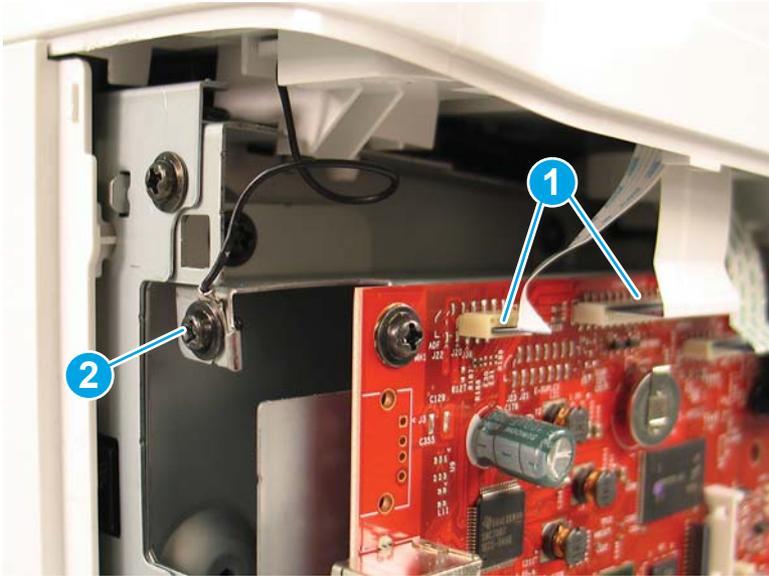

2. Open the scanner. Release one tab (callout 1), and then rotate the ISA slider pin (callout 2) towards the front of the printer to release it.


 **TIP:** Use a Phillips head screwdriver in the end of the slider pin to rotate it.

**Figure 1-392** Release one tab and rotate the slider pin

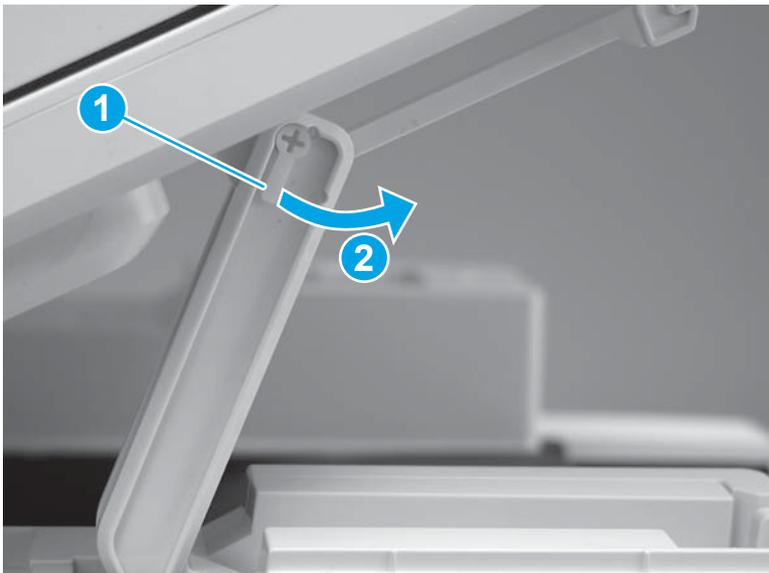

3. Remove the slider pin.

Figure 1-393 Remove the slider pin

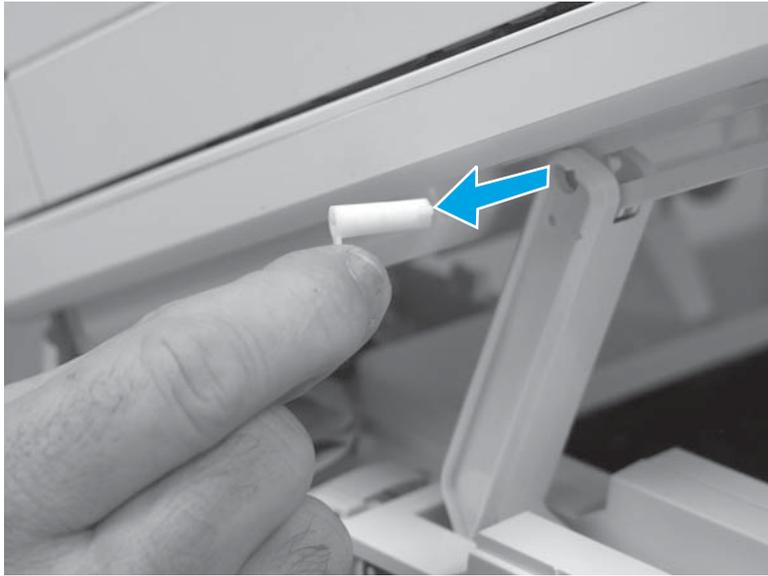

4. Rotate the hinge arm down.


**⚠ WARNING!** The hinge arm is spring-loaded by a strong spring and might snap down suddenly. Be careful not to pinch your fingers between the hinge arm and the top of the printer.

Figure 1-394 Rotate the hinge arm down




5. On the scanner bed, use a small, flat-blade screwdriver to release one tab (callout 1), and then remove the scanner cable cover (callout 2).

Figure 1-395 Remove the scanner cable cover

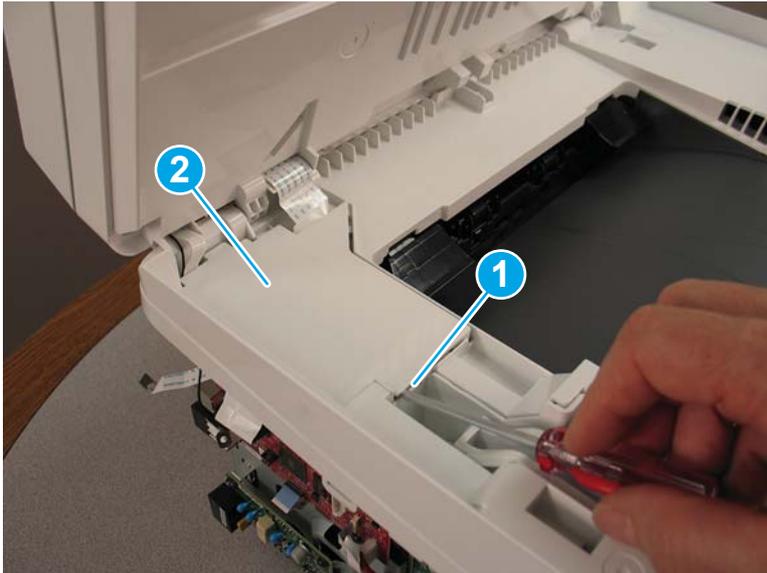

6. Release the flat cable (callout 1) from the guides (callout 2), and then feed the two flat cables (callout 3) through the openings in the scanner.


Figure 1-396 Release the flat cable

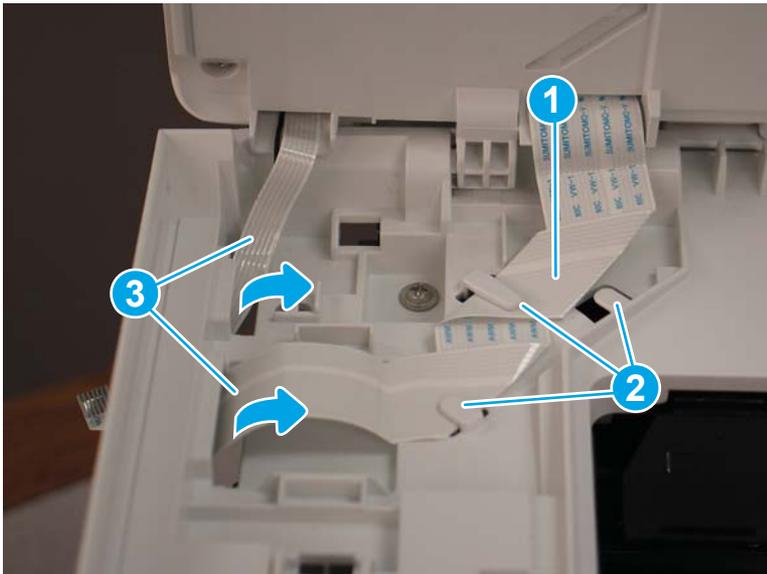

7. Open the scanner assembly fully, slide the assembly to the right (callout 1), and then lift the assembly off of the chassis (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-397** Remove the scanner assembly

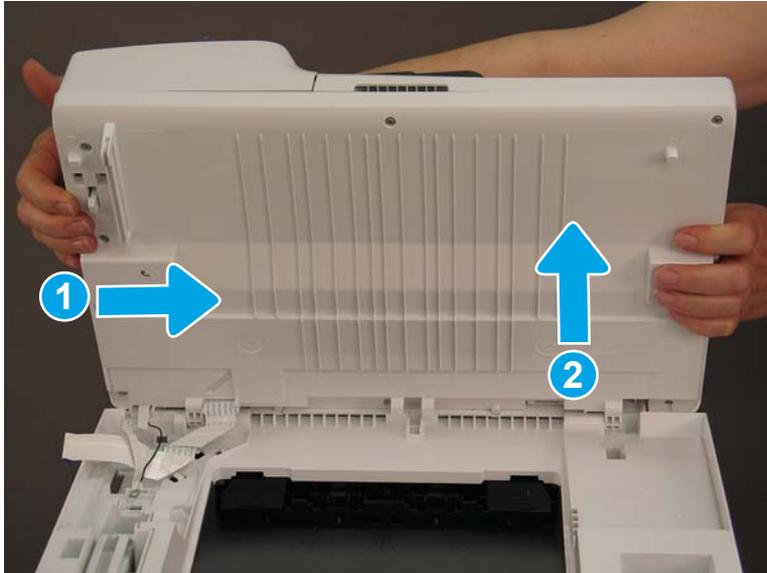


#### Step 5: Remove the document feeder (M180nw and M181fw)

1. Partially open the document feeder, and then press back to release two tabs (callout 1).

 **TIP:** If the tabs are difficult to release, use a small, flat-blade screwdriver to release them.

**Figure 1-398** Release two tabs

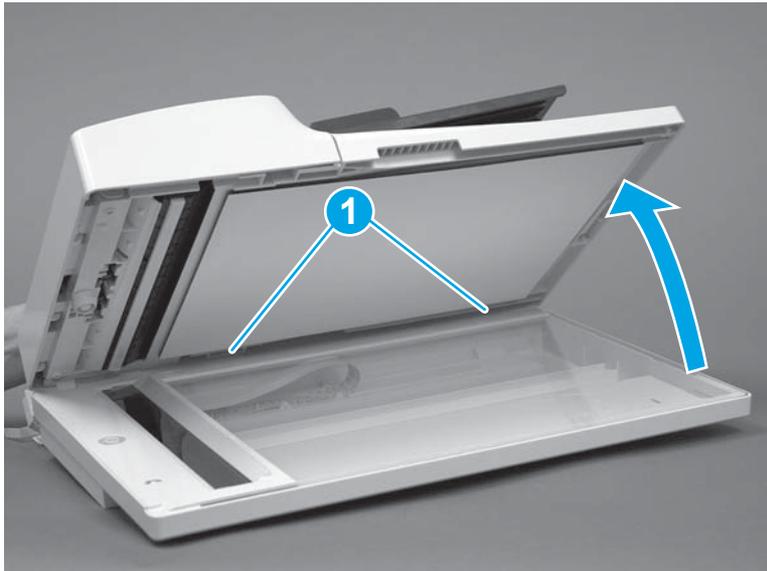


2. Release the cables (callout 1) through the opening in the scanner (callout 2), and then remove the document feeder (callout 3).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-399** Remove the document feeder

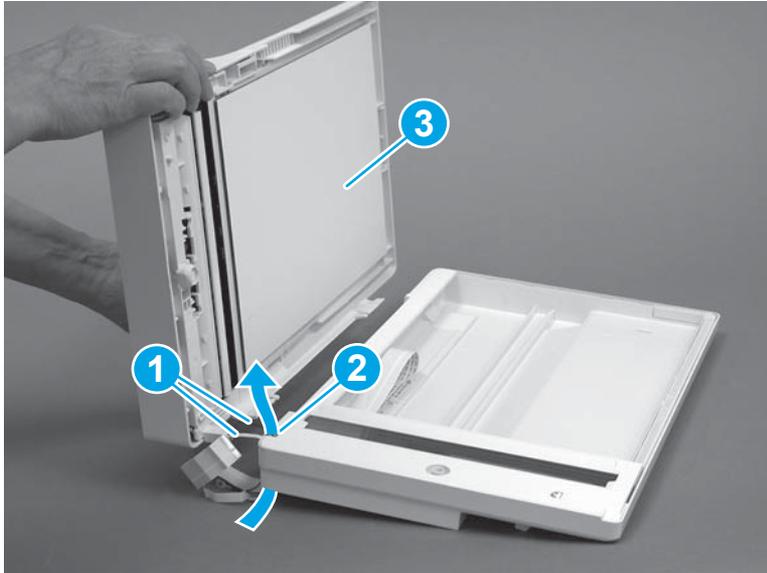

### Step 6: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Document feeder and image scanner assemblies (M278-M281 models)

- [Removal and replacement: Document feeder and image scanner assembly \(M278-M281\)](#)
- [Removal and replacement: Document feeder \(M278-M281\)](#)
- [Removal and replacement: Document feeder hinge \(M278-M281\)](#)
- [Removal and replacement: Image scanner \(M278-M281\)](#)
- [Removal and replacement: Image scanner lift assembly and slider pin \(M278-M281\)](#)
- [Removal and replacement: Document feeder front cover \(M278-M281\)](#)
- [Removal and replacement: Document feeder input tray \(M278-M281\)](#)
- [Removal and replacement: Document feeder inner cover or outer cover \(M278-M281\)](#)
- [Removal and replacement: Document feeder pick extension shaft \(M278-M281\)](#)
- [Removal and replacement: Document feeder extension bearing \(M278-M281\)](#)
- [Removal and replacement: Document feeder pick assembly \(M278-M281\)](#)
- [Removal and replacement: Document feeder separation pad, support, and spring \(M278-M281\)](#)
- [Removal and replacement: Document feeder core \(M278-M281\)](#)
- [Removal and replacement: Document feeder base \(M278-M281\)](#)
- [Removal and replacement: Document feeder flat cable \(M278-M281\)](#)

## Removal and replacement: Document feeder and image scanner assembly (M278-M281)

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and rear doors](#)
- [Step 3: Remove the left cover \(M278-M281\)](#)
- [Step 4: Remove the document feeder and image scanner \(M278-M281\)](#)
- [Step 5: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the document feeder and scanner for the M278-M281 models.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.



**WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.

- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### Document feeder and image scanner assembly (M278-M281) part number

---

B3Q10-60174

ISA assembly (M278-M281)

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Verify that the document feeder and scanner are correctly functioning (copy a page).

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-400 Remove the cassette tray



### Step 2: Open the front and rear doors


1. Open the front door.

Figure 1-401 Open the front door




2. **Simplex models only:** Open the rear door.

**Figure 1-402** Open the rear door

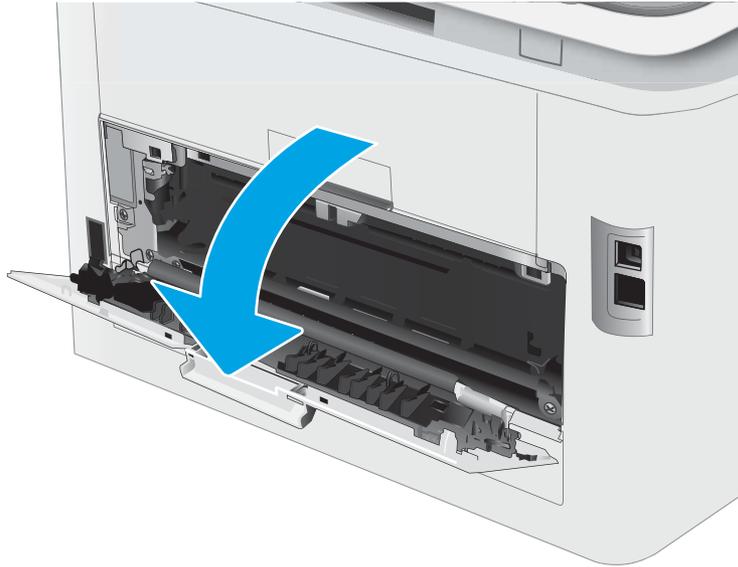

3. **Duplex models only:** Open the duplexer door.


**Figure 1-403** Open the duplexer door

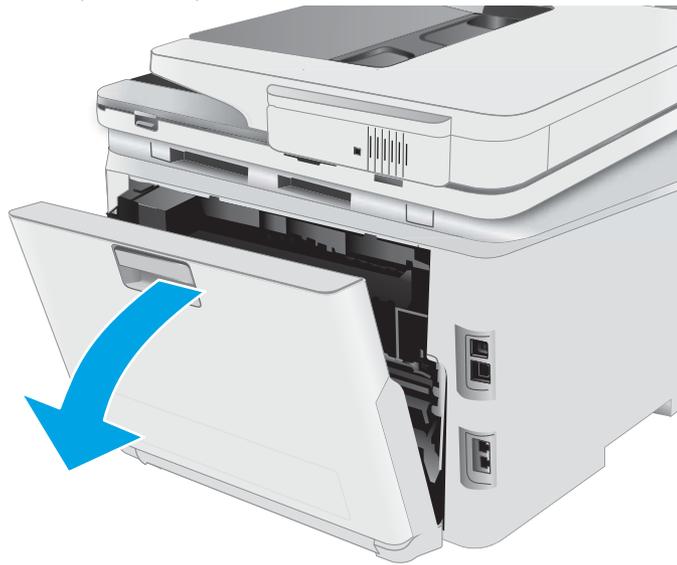

### Step 3: Remove the left cover (M278-M281)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


Figure 1-404 Tab locations

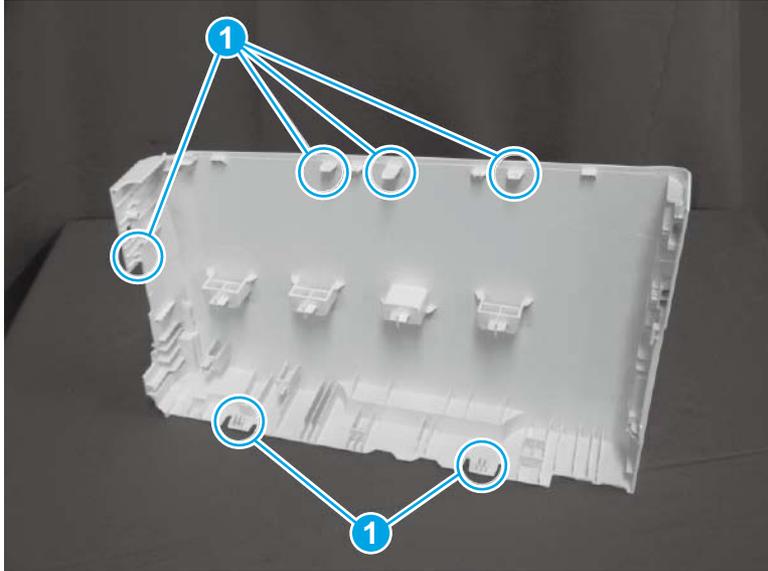

2. At the rear of the printer, remove one screw (callout 1), and then release one tab (callout 2).

 **TIP:** Use a small, flat-blade screwdriver to release the tab.

Figure 1-405 Remove one screw and release tab

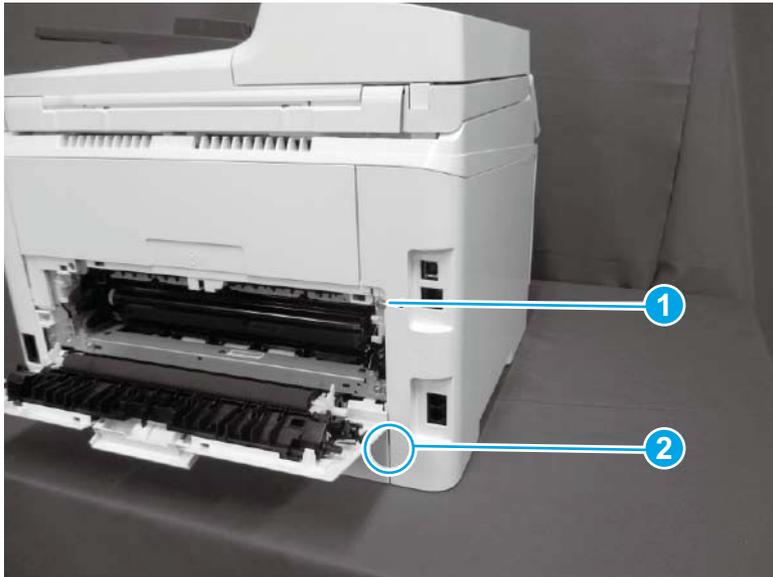


3. Release six tabs (callout 1) along the top, front, and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-406** Remove the left cover

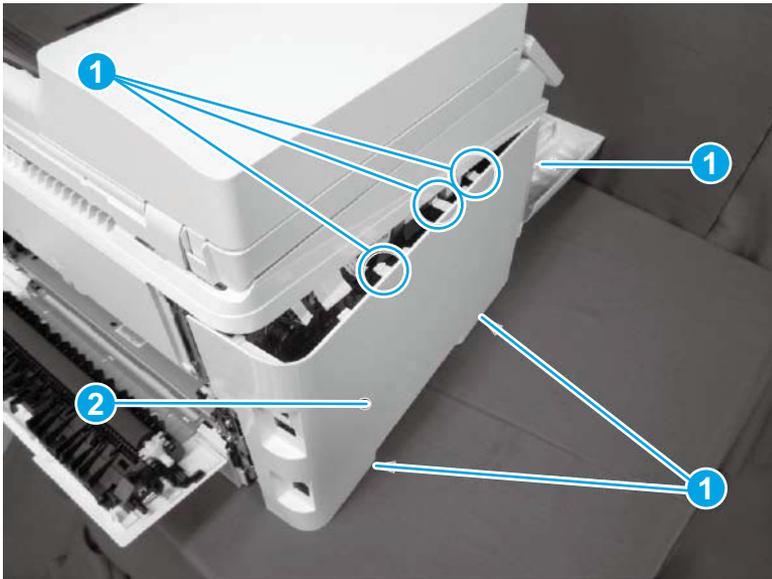

#### Step 4: Remove the document feeder and image scanner (M278-M281)

1. Disconnect two flat cables (callout 1) from the formatter, and then remove one screw (callout 2) to release the grounding wire.


**Figure 1-407** Disconnect two cables and remove one screw

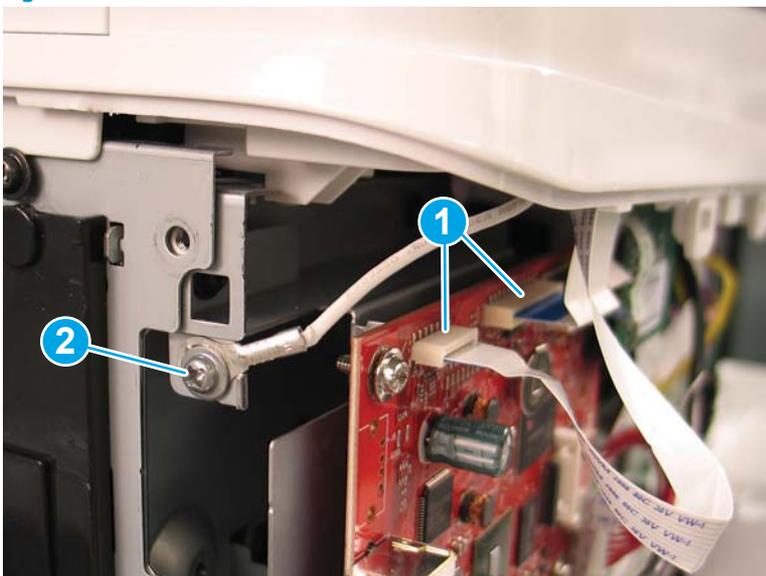

2. Open the scanner. Release one tab (callout 1), and then rotate the slider pin (callout 2) towards the front of the printer to release it.


 **TIP:** Use a Phillips head screwdriver in the end of the slider pin to rotate it.

**Figure 1-408** Release one tab and rotate the slider pin

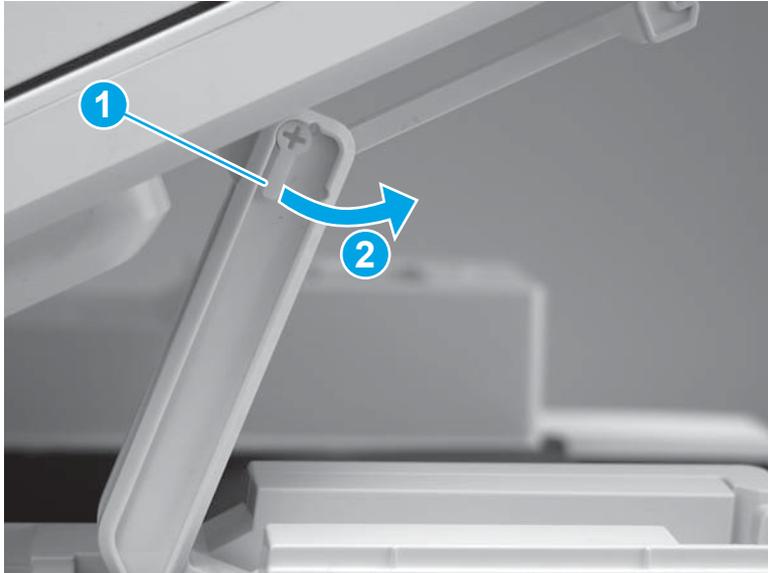

3. Remove the slider pin.


**Figure 1-409** Remove the slider pin

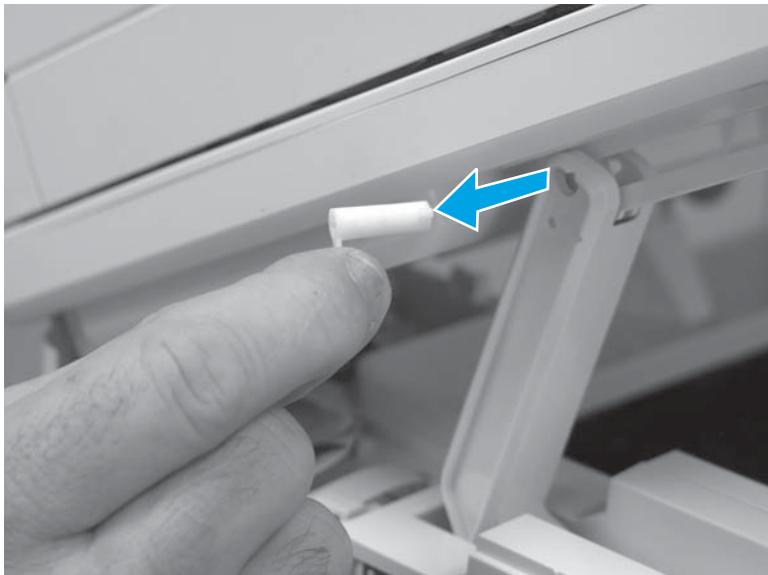

4. Rotate the hinge arm down.


**⚠ WARNING!** The hinge arm is spring-loaded by a strong spring and might snap down suddenly. Be careful not to pinch your fingers between the hinge arm and the top of the printer.

**Figure 1-410** Rotate the hinge arm down

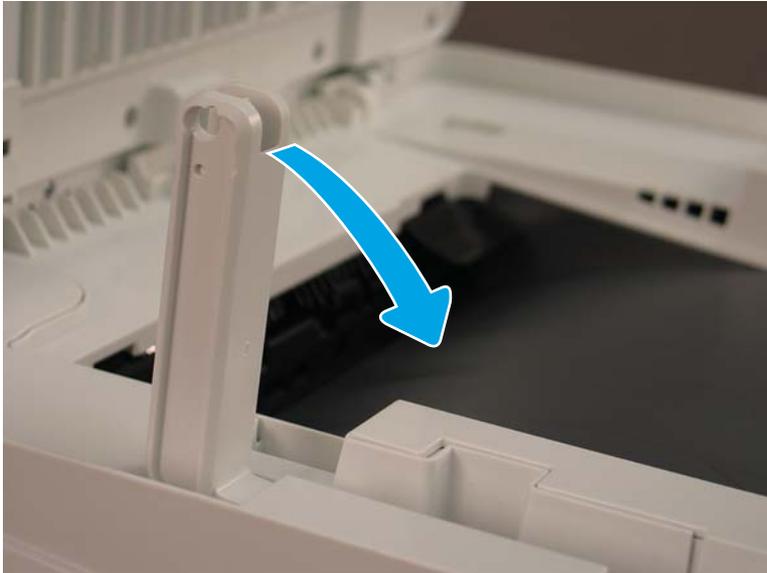


5. On the scanner bed, use a small, flat-blade screwdriver to release one tab (callout 1), and then remove the scanner cable cover (callout 2).

**Figure 1-411** Remove the scanner cable cover

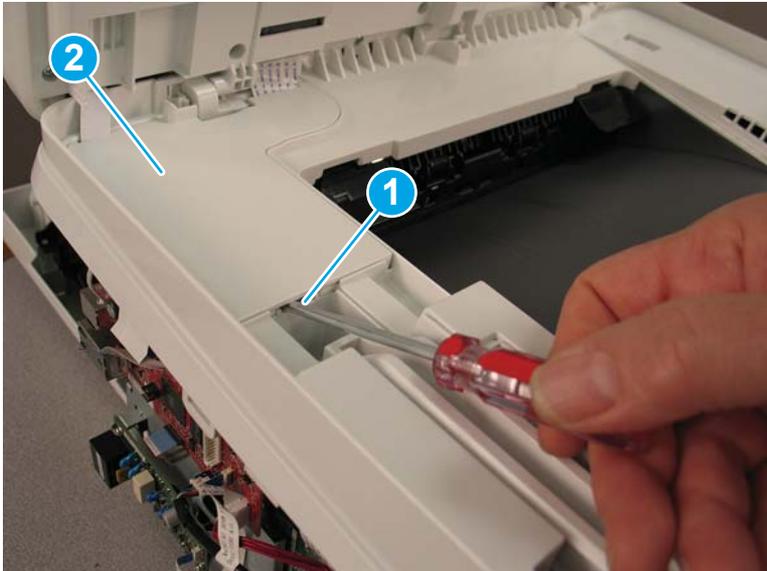

6. Release the flat cable (callout 1) from the guides (callout 2), and then feed the cables (callout 3) through the opening in the scanner.


Figure 1-412 Release the flat cable

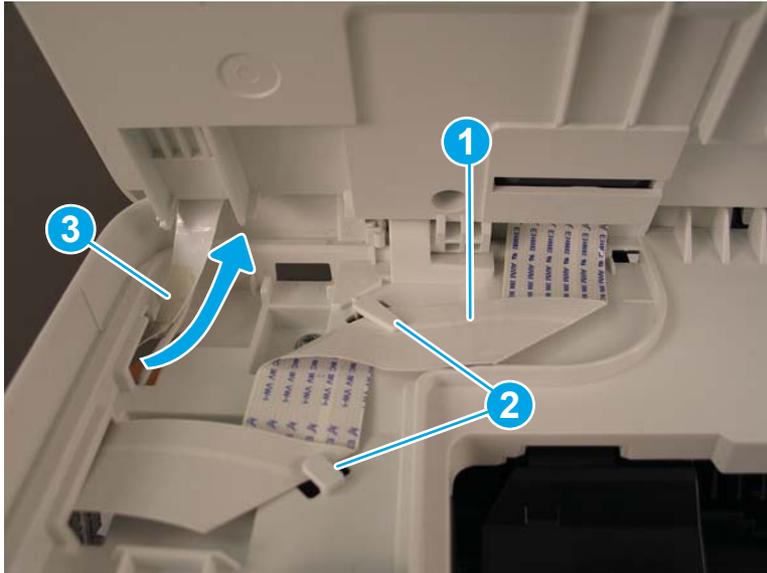

7. Open the scanner assembly fully, slide the assembly to the right (callout 1), and then lift the assembly off of the chassis (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-413 Remove the scanner assembly

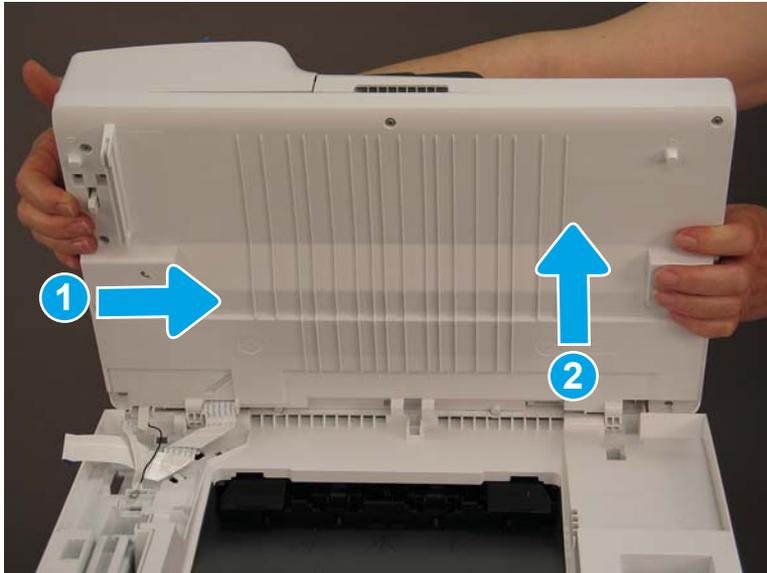

### Step 5: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Document feeder (M278-M281)

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and rear doors](#)
- [Step 3: Remove the left cover \(M278-M281\)](#)
- [Step 4: Remove the document feeder and image scanner \(M278-M281\)](#)
- [Step 5: Remove the document feeder \(M278-M281\)](#)
- [Step 6: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the document feeder for the M278-M281 models.

---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.

 **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.

---

- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Document feeder (M278-M281) part number	
B3Q10-60111	ADF assembly (M278-M281)

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver
- Torx T10 screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

Verify that the document feeder is correctly functioning (copy a page).

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-414 Remove the cassette tray

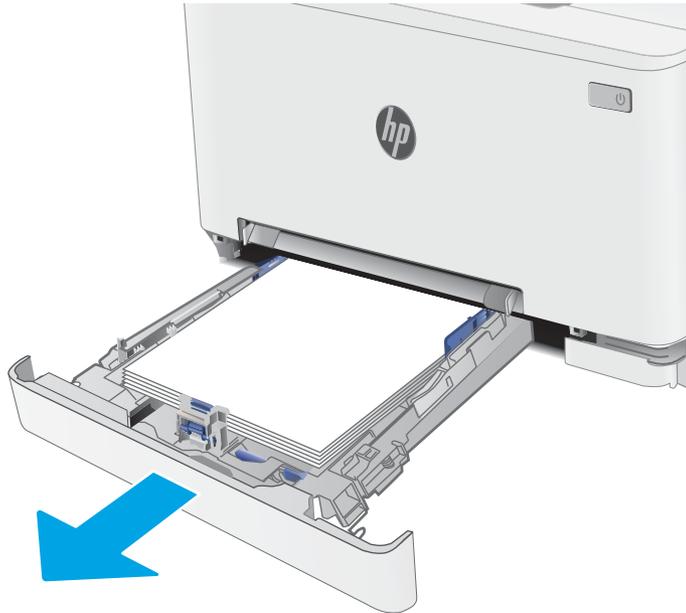

### Step 2: Open the front and rear doors


1. Open the front door.

Figure 1-415 Open the front door




2. **Simplex models only:** Open the rear door.

Figure 1-416 Open the rear door

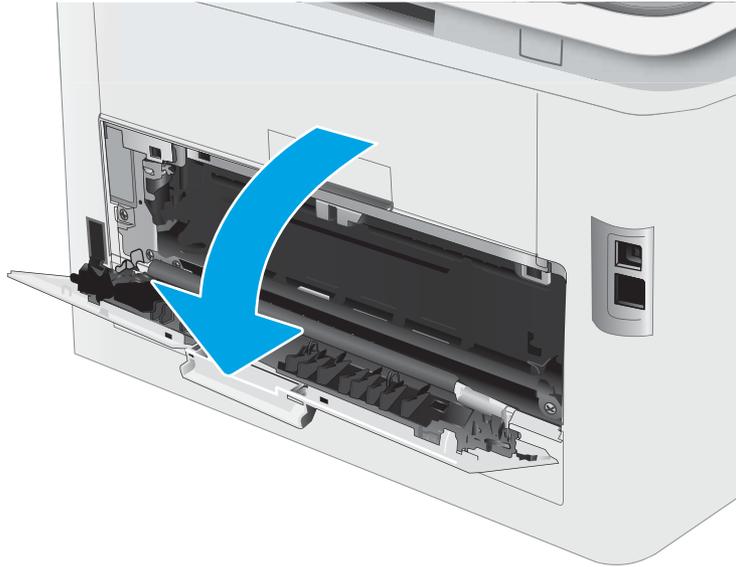

3. **Duplex models only:** Open the duplexer door.


Figure 1-417 Open the duplexer door

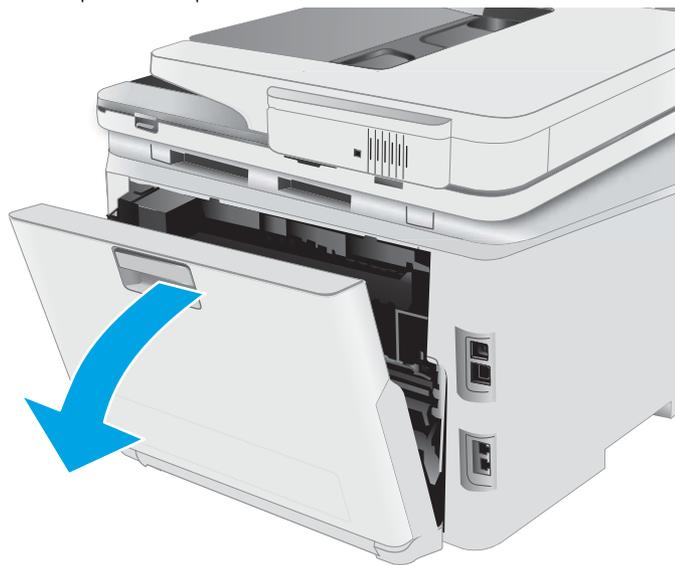

### Step 3: Remove the left cover (M278-M281)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


Figure 1-418 Tab locations

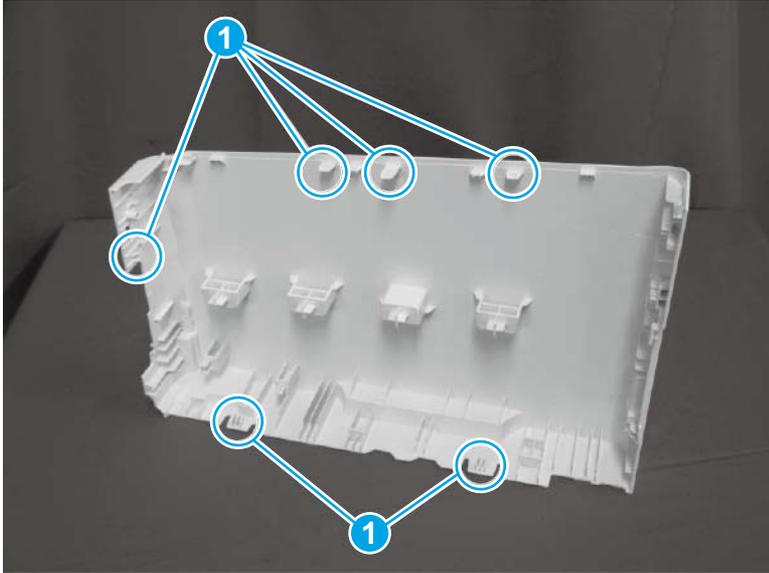

2. At the rear of the printer, remove one screw (callout 1), and then release one tab (callout 2).

 **TIP:** Use a small, flat-blade screwdriver to release the tab.

Figure 1-419 Remove one screw and release tab

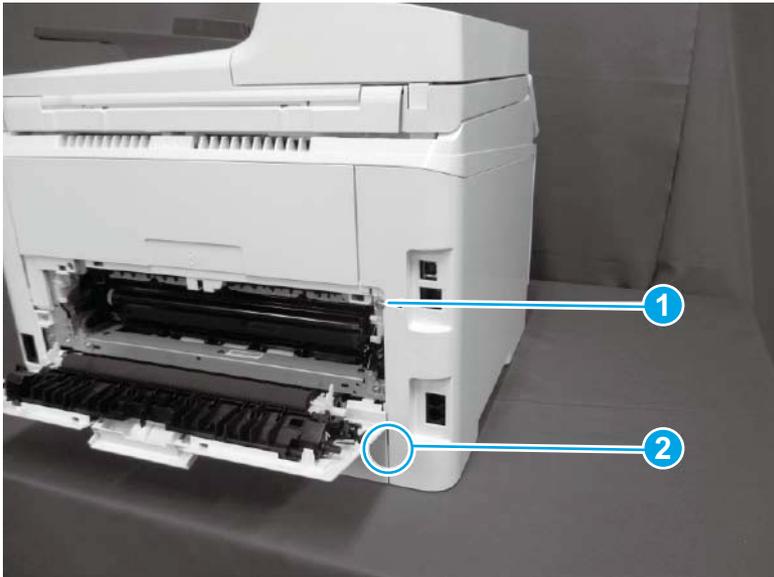


3. Release six tabs (callout 1) along the top, front, and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-420 Remove the left cover

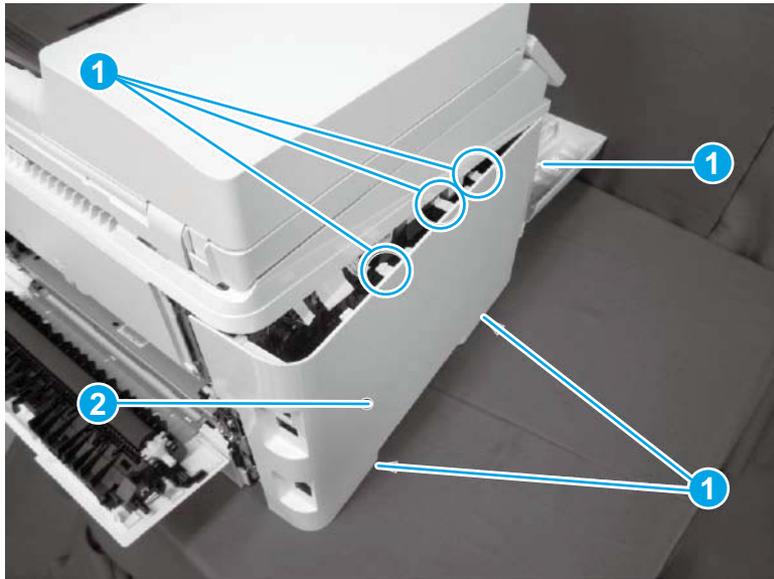

#### Step 4: Remove the document feeder and image scanner (M278-M281)

1. Disconnect two flat cables (callout 1) from the formatter, and then remove one screw (callout 2) to release the grounding wire.


Figure 1-421 Disconnect two cables and remove one screw

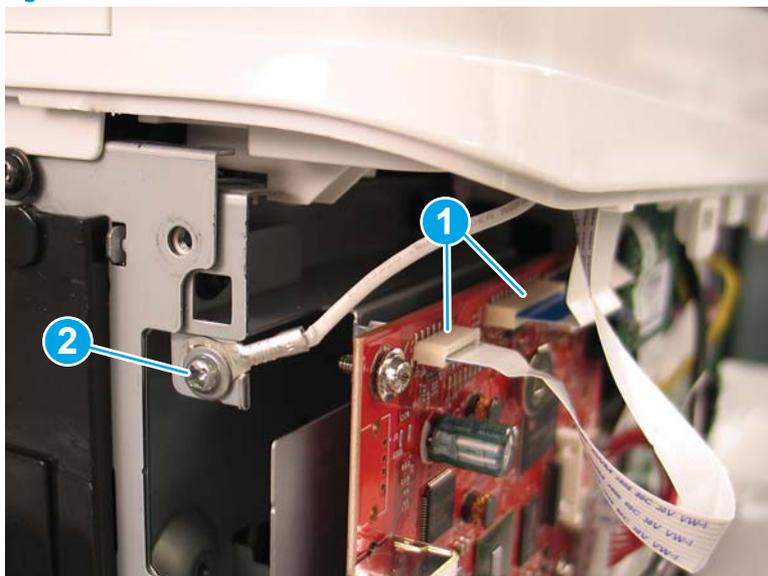

2. Open the scanner. Release one tab (callout 1), and then rotate the slider pin (callout 2) towards the front of the printer to release it.

 **TIP:** Use a Phillips head screwdriver in the end of the slider pin to rotate it.

**Figure 1-422** Release one tab and rotate the slider pin

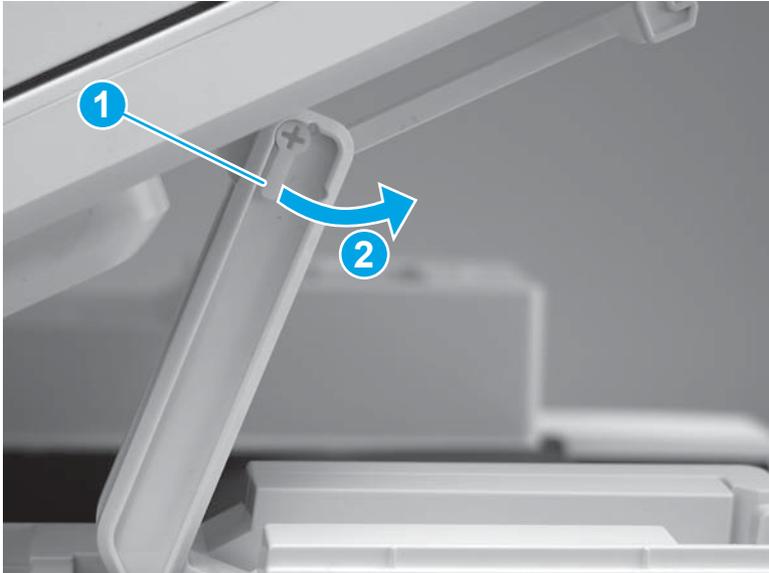

3. Remove the slider pin.


**Figure 1-423** Remove the slider pin



4. Rotate the hinge arm down.


**⚠ WARNING!** The hinge arm is spring-loaded by a strong spring and might snap down suddenly. Be careful not to pinch your fingers between the hinge arm and the top of the printer.

Figure 1-424 Rotate the hinge arm down

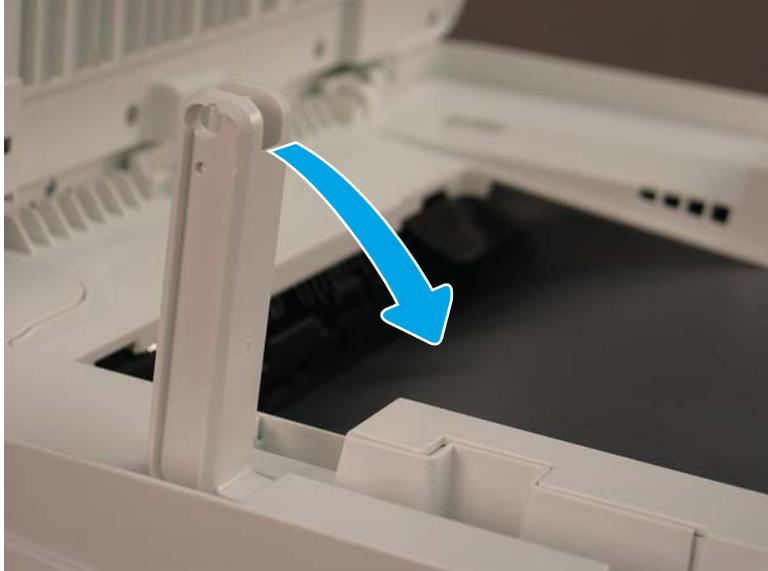


5. On the scanner bed, use a small, flat-blade screwdriver to release one tab (callout 1), and then remove the scanner cable cover (callout 2).

Figure 1-425 Remove the scanner cable cover

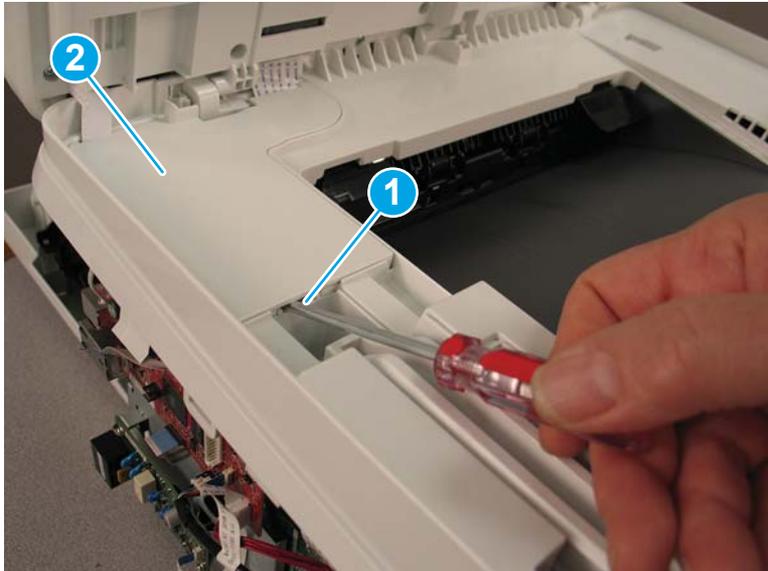

6. Release the flat cable (callout 1) from the guides (callout 2), and then feed the cables (callout 3) through the opening in the scanner.


Figure 1-426 Release the flat cable

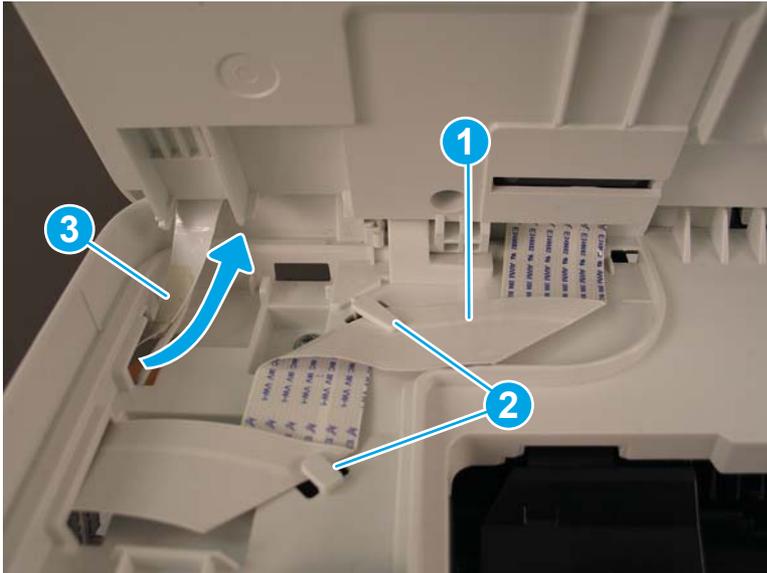

7. Open the scanner assembly fully, slide the assembly to the right (callout 1), and then lift the assembly off of the chassis (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-427 Remove the scanner assembly

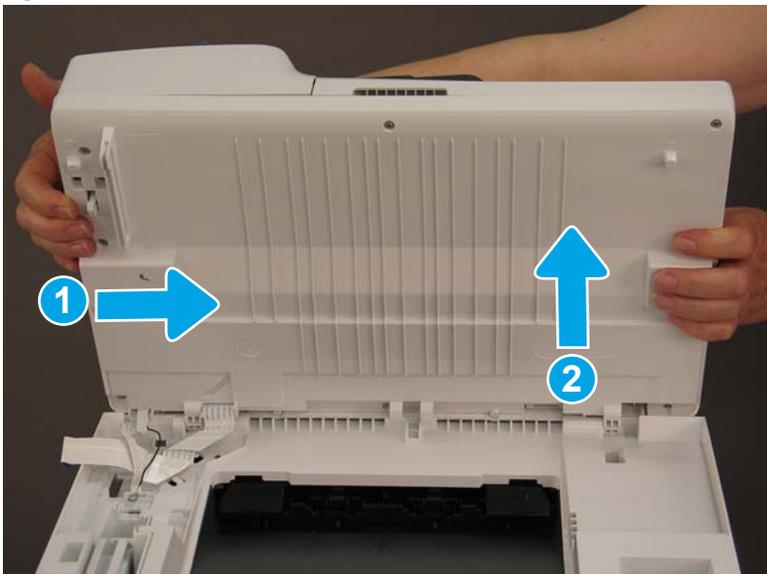

#### Step 5: Remove the document feeder (M278-M281)


1. Turn the document feeder and scanner over to rest on the top of the document feeder with the bottom of the scanner facing up. Remove one Torx T10 screw (callout 1) on the bottom of the scanner assembly.

Figure 1-428 Remove one screw

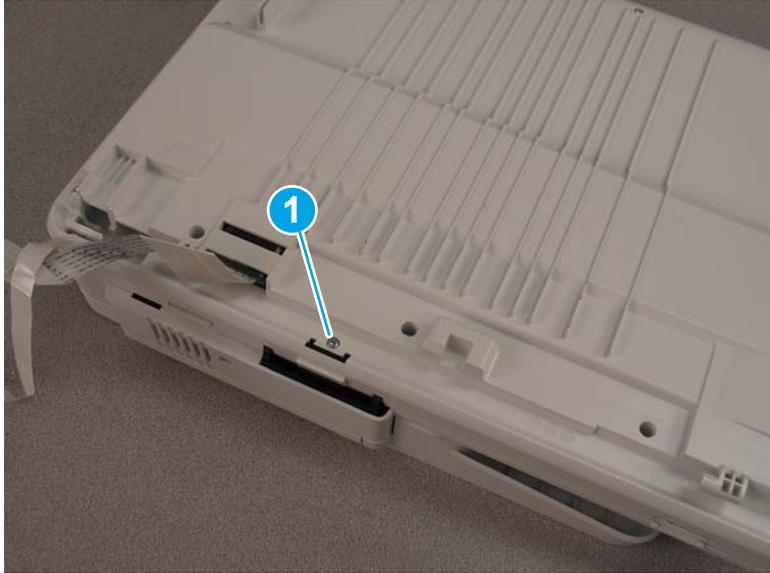


2. Turn the document feeder and scanner over so that the top is facing up, and then open the top cover.

Figure 1-429 Open the top cover

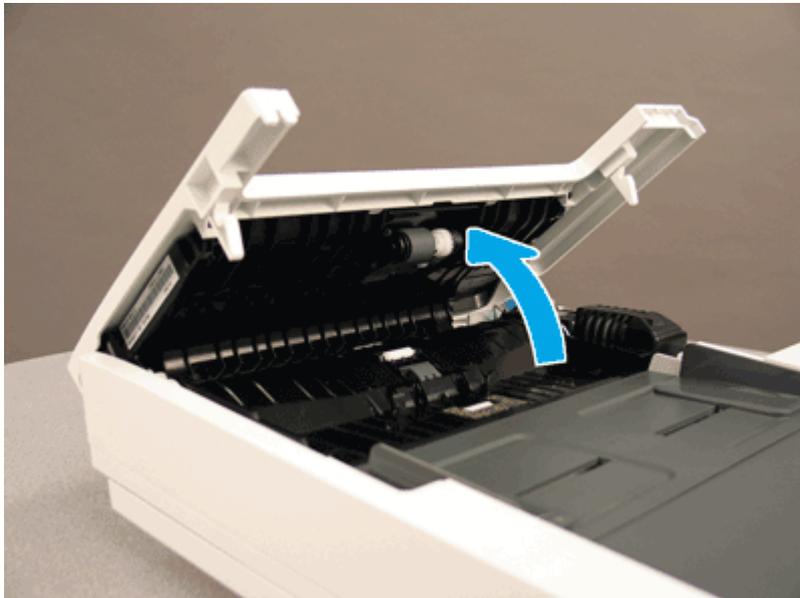

3. Remove one Torx T10 screw (callout 1).


Figure 1-430 Remove one screw

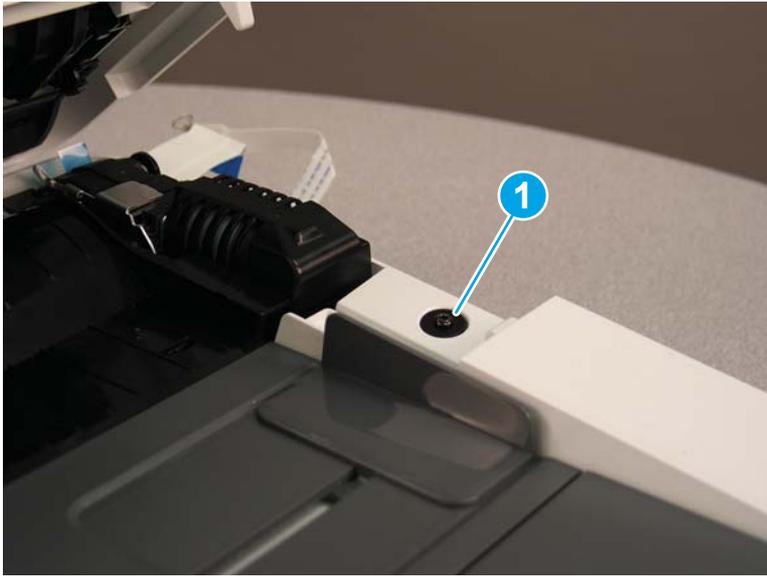

4. Open the document feeder, and then lift up to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-431 Remove the document feeder

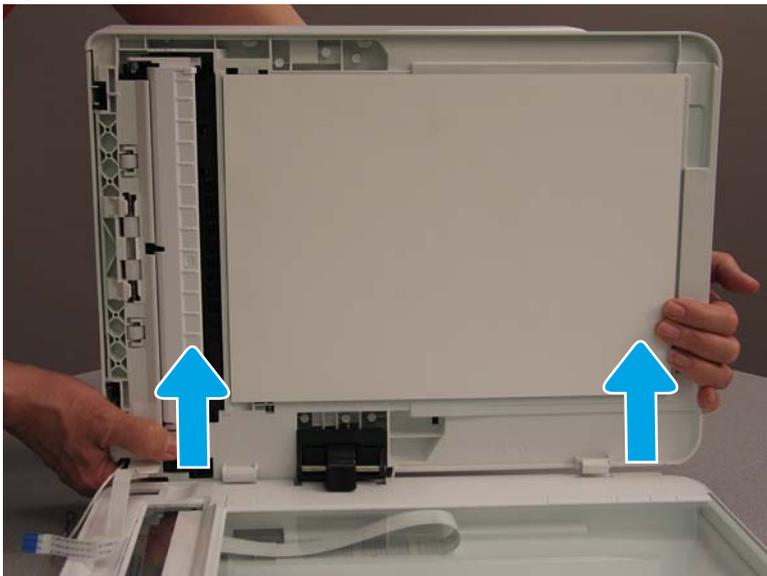

### Step 6: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.



**CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.



**IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.



**NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Document feeder hinge (M278-M281)

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and rear doors](#)
- [Step 3: Remove the left cover \(M278-M281\)](#)
- [Step 4: Remove the document feeder and image scanner \(M278-M281\)](#)
- [Step 5: Remove the document feeder \(M278-M281\)](#)
- [Step 6: Remove the document feeder hinge \(M278-M281\)](#)
- [Step 7: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the document feeder hinge for the M278-M281 models.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.

 **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.

- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Document feeder hinge (M278-M281) part number	
---	--

---

<b>B3Q10-60130</b>
--------------------

ADF lid hinge assembly (M278-M281)
------------------------------------

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver
- Torx T10 screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


## Post service test

Verify that the document feeder is correctly functioning (copy a page).

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-432 Remove the cassette tray

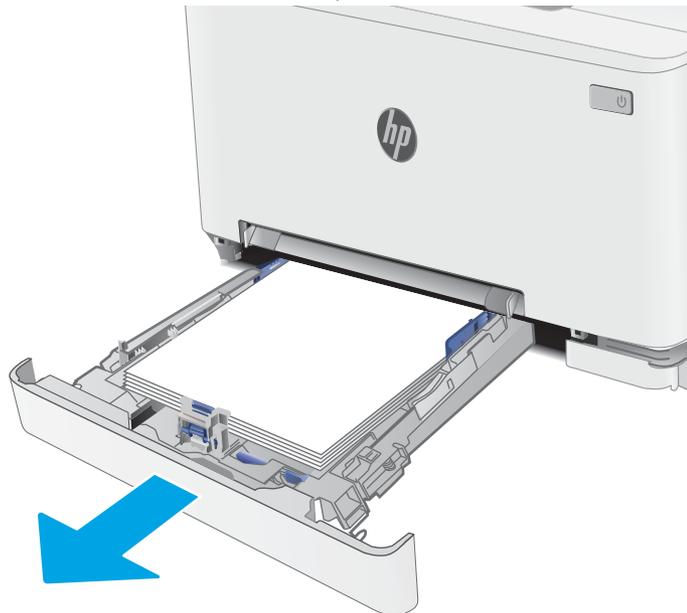

### Step 2: Open the front and rear doors


1. Open the front door.

Figure 1-433 Open the front door



2. **Simplex models only:** Open the rear door.

**Figure 1-434** Open the rear door

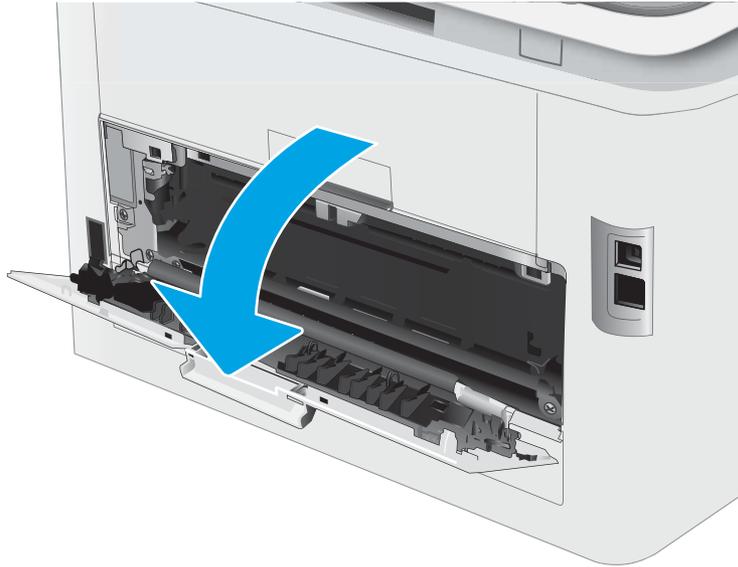

3. **Duplex models only:** Open the duplexer door.


**Figure 1-435** Open the duplexer door



### Step 3: Remove the left cover (M278-M281)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


Figure 1-436 Tab locations

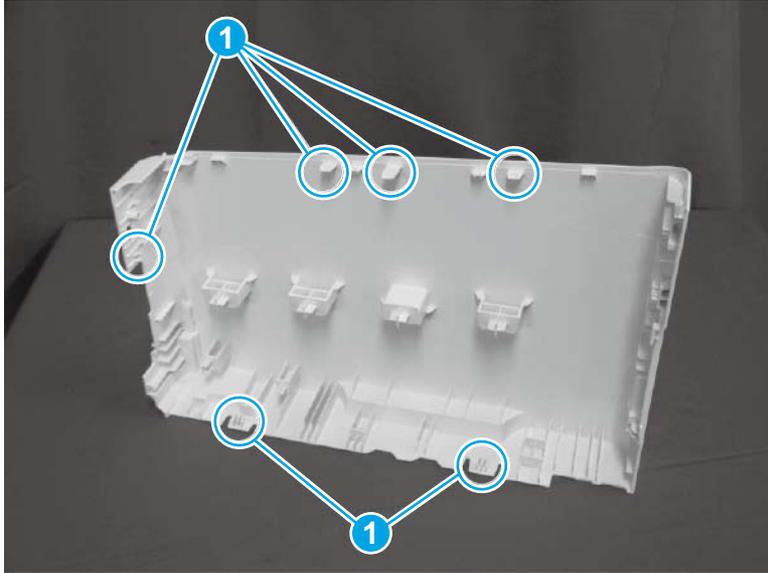

2. At the rear of the printer, remove one screw (callout 1), and then release one tab (callout 2).

 **TIP:** Use a small, flat-blade screwdriver to release the tab.

Figure 1-437 Remove one screw and release tab

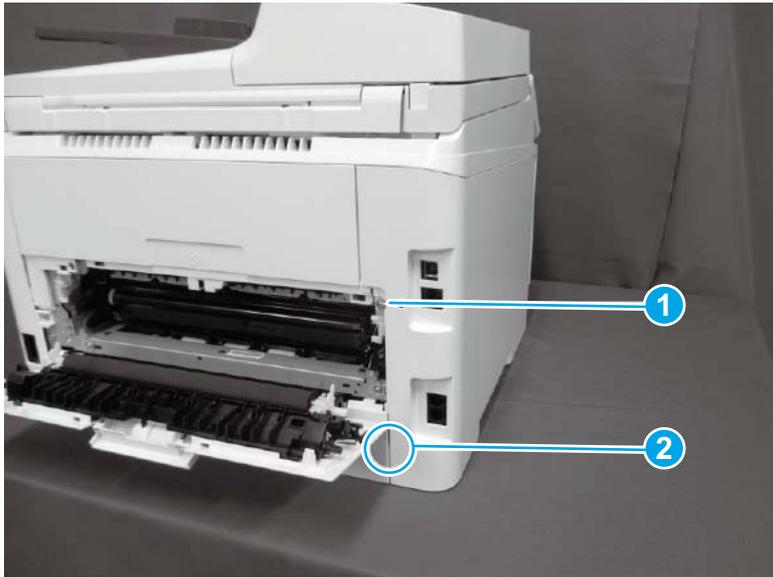


3. Release six tabs (callout 1) along the top, front, and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-438** Remove the left cover

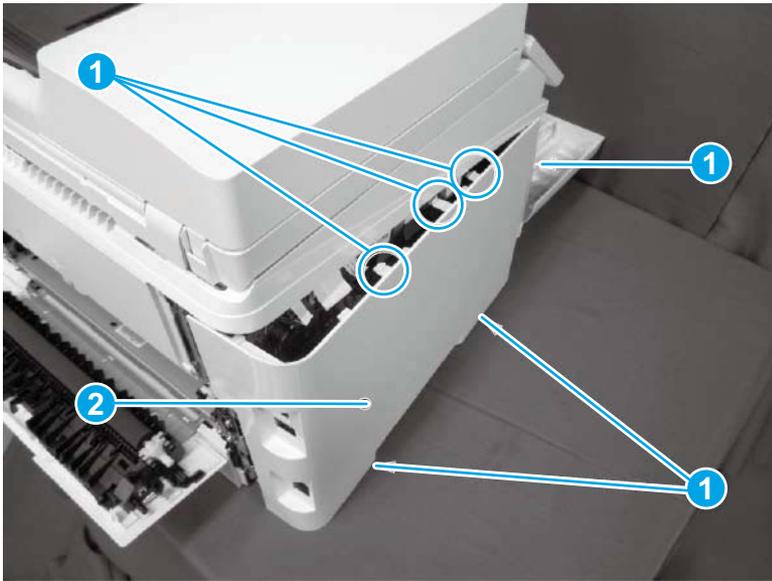

#### Step 4: Remove the document feeder and image scanner (M278-M281)

1. Disconnect two flat cables (callout 1) from the formatter, and then remove one screw (callout 2) to release the grounding wire.


**Figure 1-439** Disconnect two cables and remove one screw

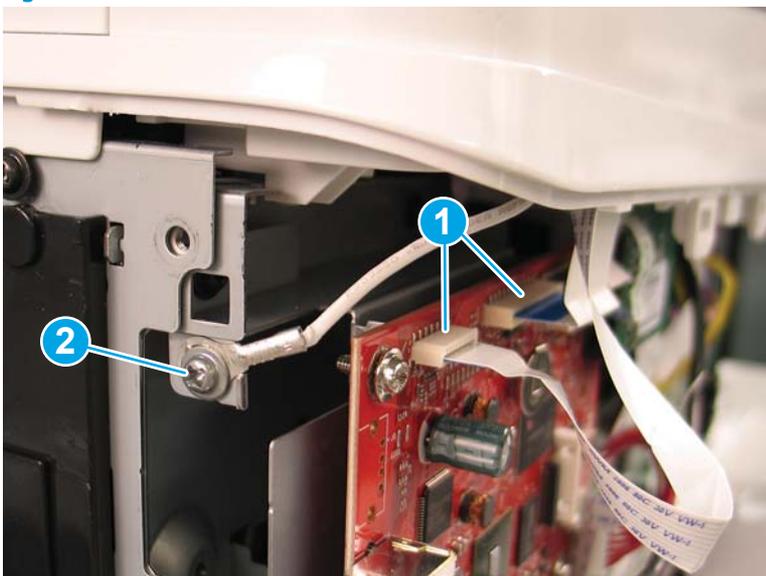

2. Open the scanner. Release one tab (callout 1), and then rotate the slider pin (callout 2) towards the front of the printer to release it.


 **TIP:** Use a Phillips head screwdriver in the end of the slider pin to rotate it.

**Figure 1-440** Release one tab and rotate the slider pin

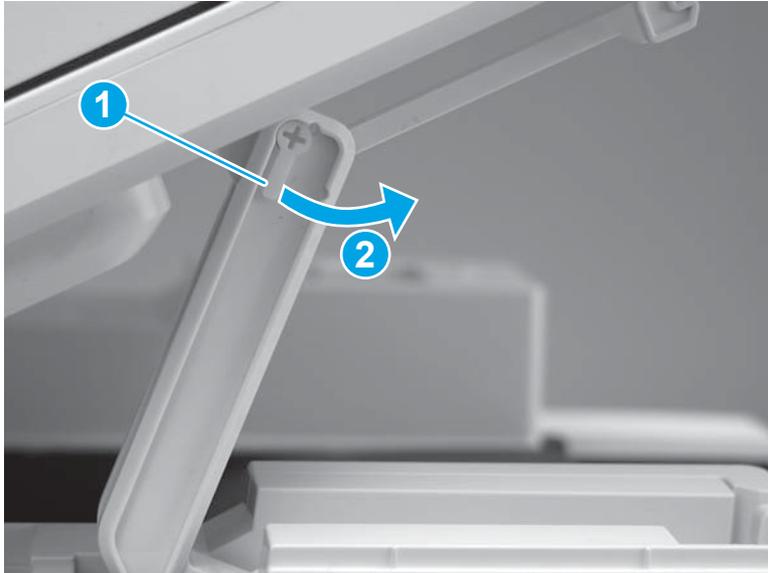

3. Remove the slider pin.


**Figure 1-441** Remove the slider pin

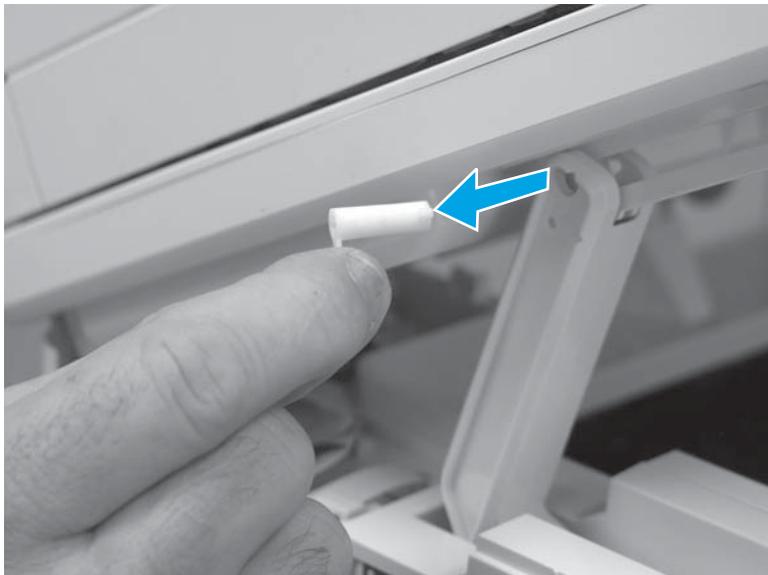

4. Rotate the hinge arm down.


**⚠ WARNING!** The hinge arm is spring-loaded by a strong spring and might snap down suddenly. Be careful not to pinch your fingers between the hinge arm and the top of the printer.

Figure 1-442 Rotate the hinge arm down

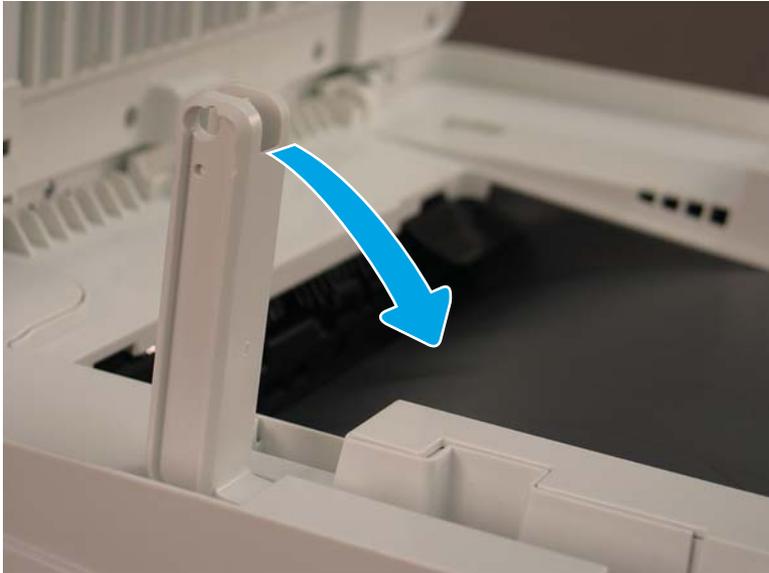


5. On the scanner bed, use a small, flat-blade screwdriver to release one tab (callout 1), and then remove the scanner cable cover (callout 2).

Figure 1-443 Remove the scanner cable cover

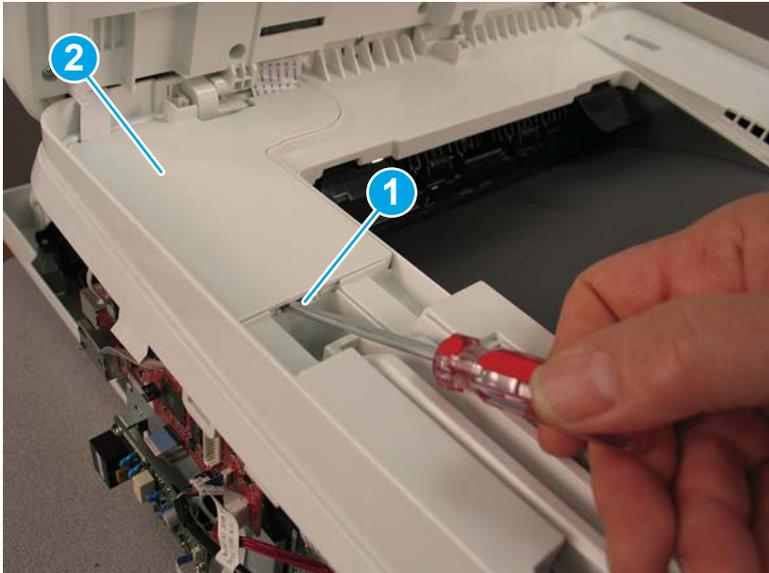

6. Release the flat cable (callout 1) from the guides (callout 2), and then feed the cables (callout 3) through the opening in the scanner.


Figure 1-444 Release the flat cable

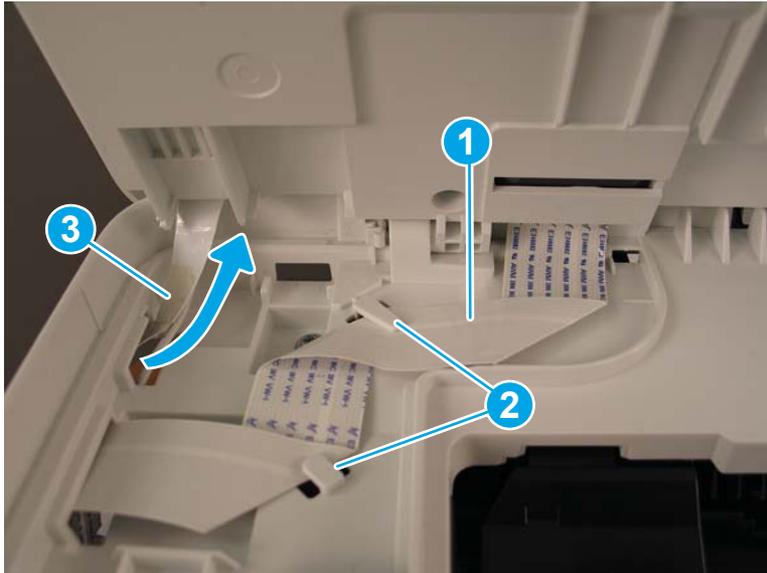

7. Open the scanner assembly fully, slide the assembly to the right (callout 1), and then lift the assembly off of the chassis (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-445 Remove the scanner assembly

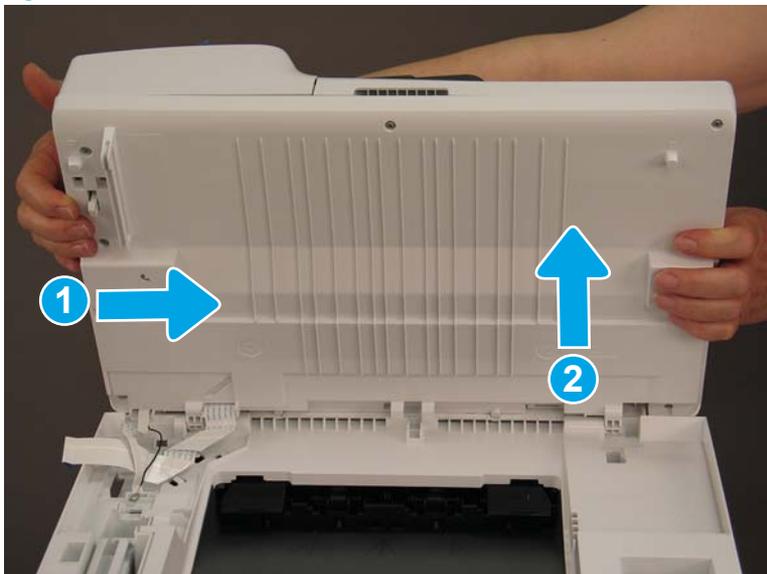

#### Step 5: Remove the document feeder (M278-M281)


1. Turn the document feeder and scanner over to rest on the top of the document feeder with the bottom of the scanner facing up. Remove one Torx T10 screw (callout 1) on the bottom of the scanner assembly.

Figure 1-446 Remove one screw

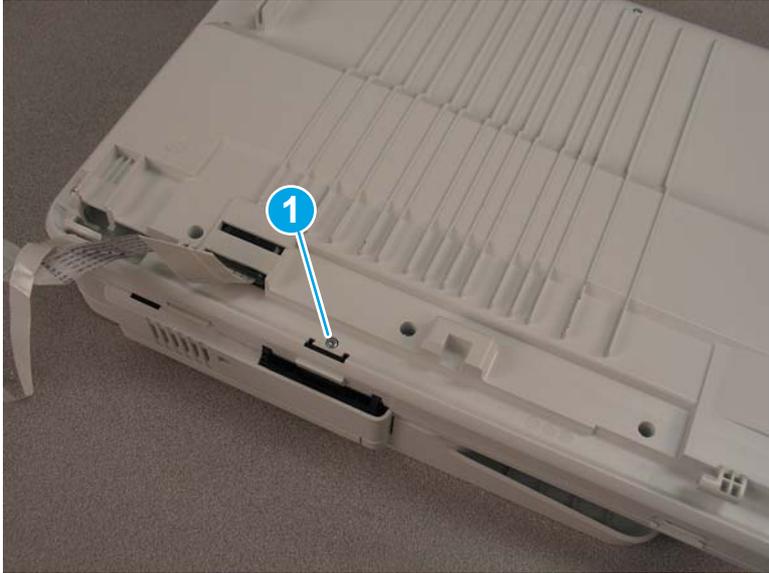


2. Turn the document feeder and scanner over so that the top is facing up, and then open the top cover.

Figure 1-447 Open the top cover

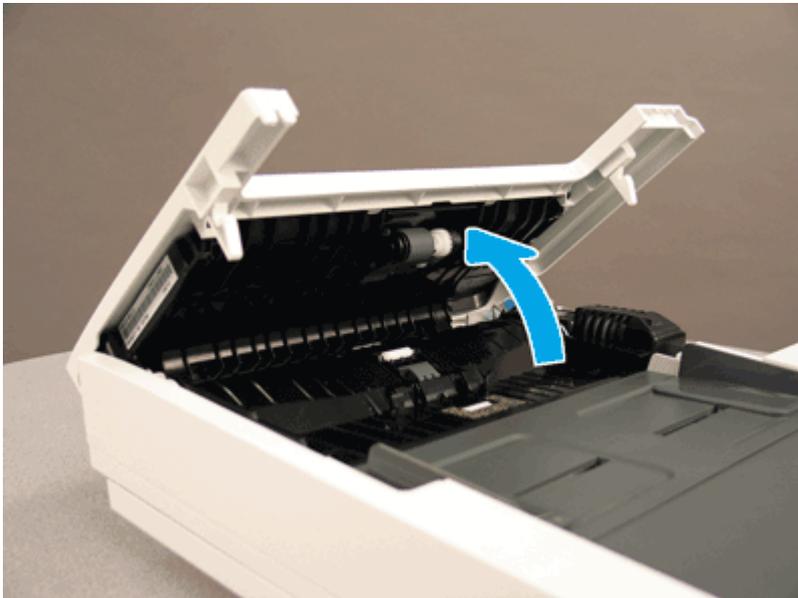

3. Remove one Torx T10 screw (callout 1).


Figure 1-448 Remove one screw

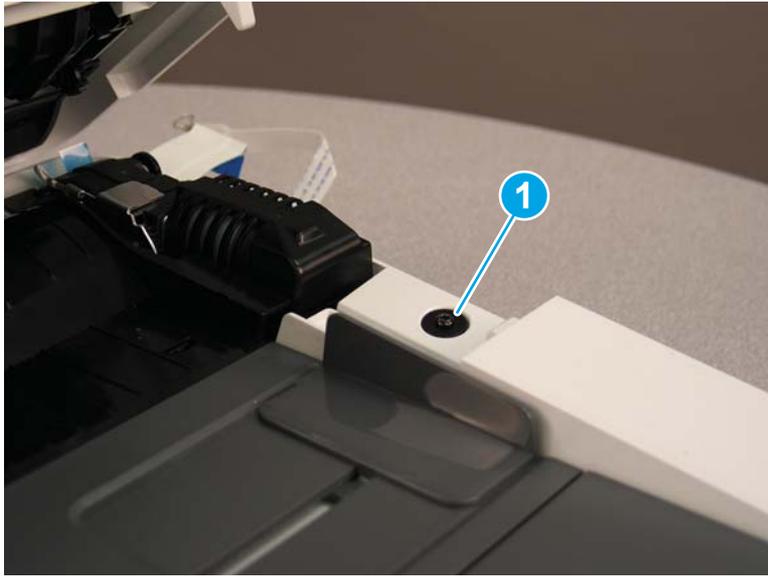

4. Open the document feeder, and then lift up to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-449 Remove the document feeder

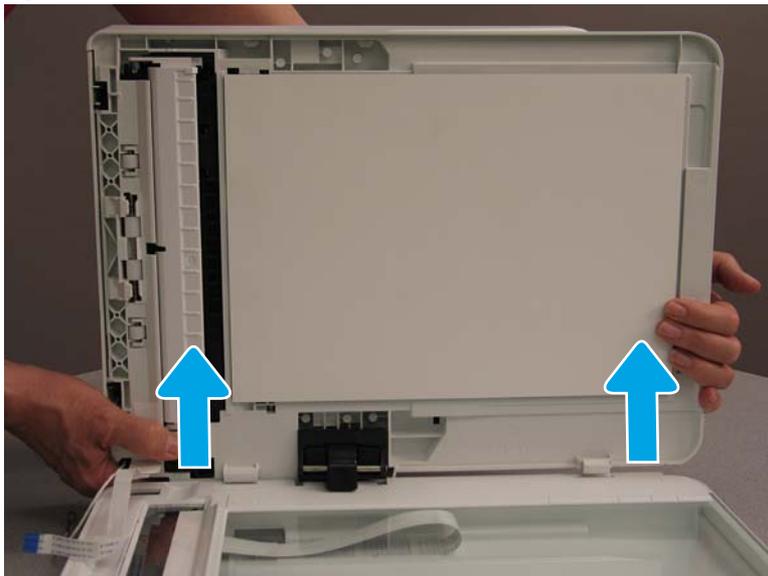

#### Step 6: Remove the document feeder hinge (M278-M281)

- ▲ Lift the hinge up to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-450 Remove the hinge



### Step 7: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Image scanner (M278-M281)

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and rear doors](#)
- [Step 3: Remove the left cover \(M278-M281\)](#)
- [Step 4: Remove the document feeder and image scanner \(M278-M281\)](#)
- [Step 5: Remove the document feeder \(M278-M281\)](#)
- [Step 6: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the image scanner for the M278-M281 models.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.  
 **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Image scanner (M278-M281) part number	
B3Q10-60102	Scanner assembly (M278-M281)

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver
- Torx T10 screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Verify that the document feeder is correctly functioning (copy a page).

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-451 Remove the cassette tray



### Step 2: Open the front and rear doors


1. Open the front door.

Figure 1-452 Open the front door




2. **Simplex models only:** Open the rear door.

Figure 1-453 Open the rear door

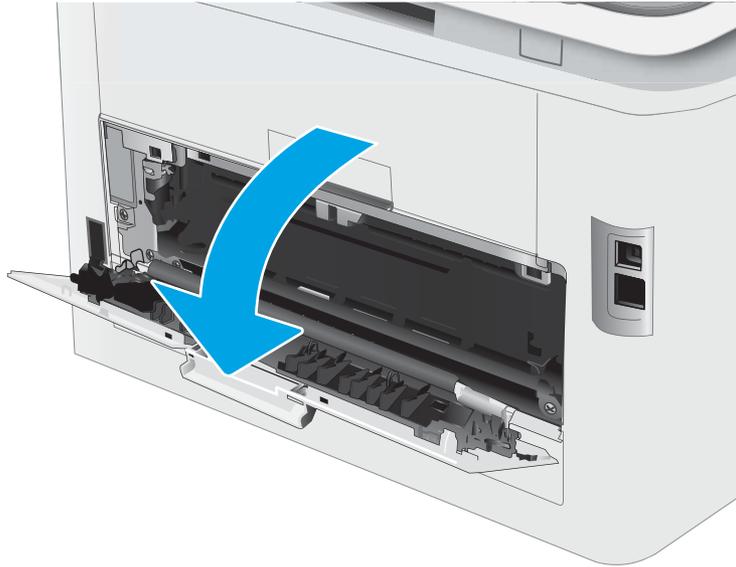

3. **Duplex models only:** Open the duplexer door.


Figure 1-454 Open the duplexer door

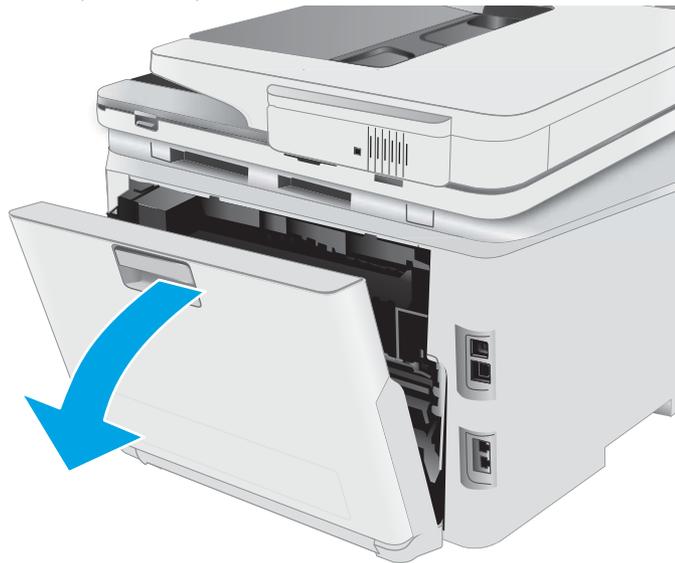

### Step 3: Remove the left cover (M278-M281)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-455 Tab locations

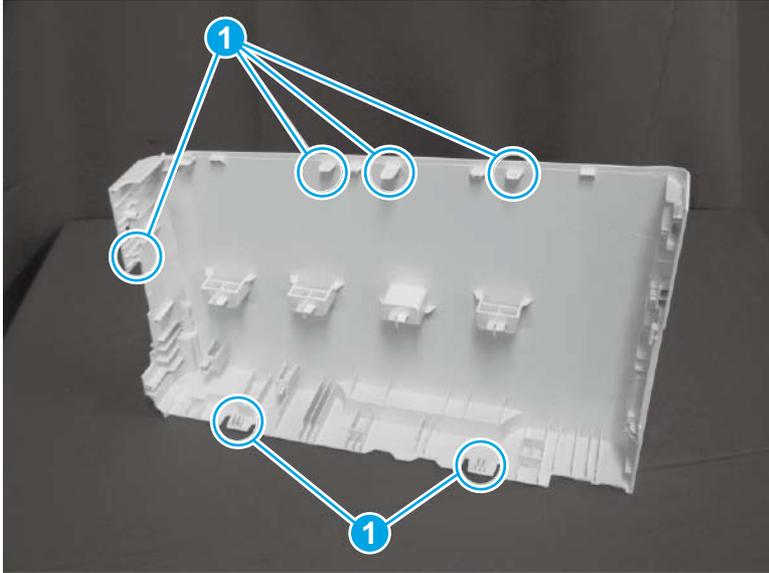


2. At the rear of the printer, remove one screw (callout 1), and then release one tab (callout 2).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab.

---

Figure 1-456 Remove one screw and release tab

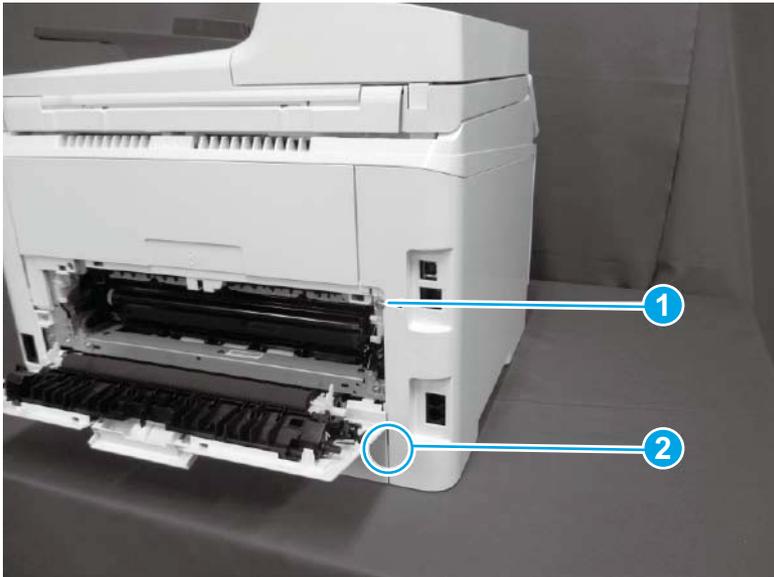


3. Release six tabs (callout 1) along the top, front, and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-457 Remove the left cover

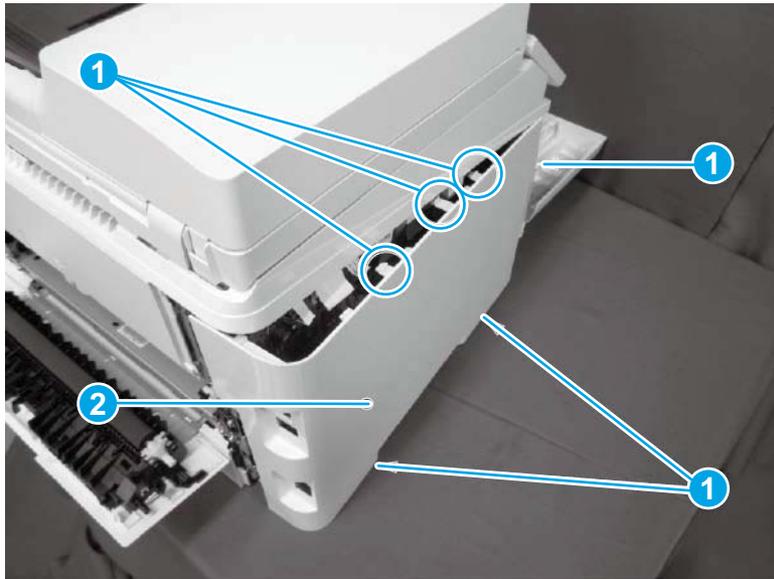

#### Step 4: Remove the document feeder and image scanner (M278-M281)

1. Disconnect two flat cables (callout 1) from the formatter, and then remove one screw (callout 2) to release the grounding wire.


Figure 1-458 Disconnect two cables and remove one screw

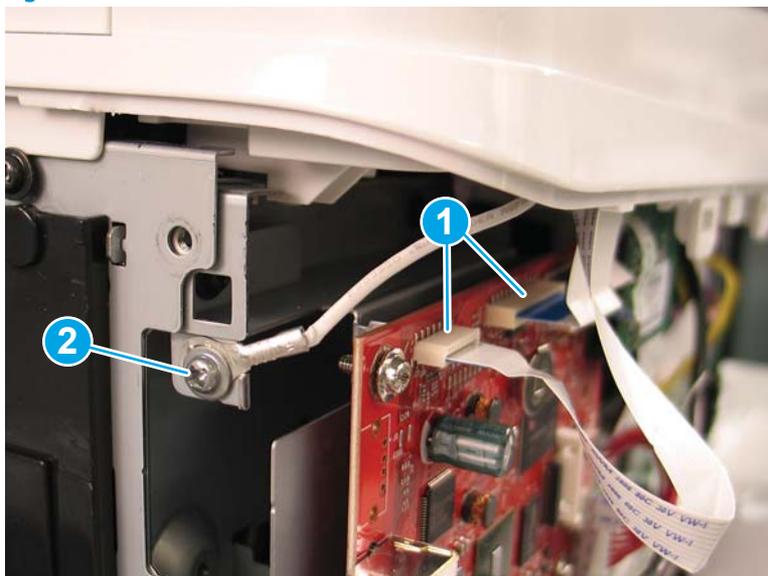

2. Open the scanner. Release one tab (callout 1), and then rotate the slider pin (callout 2) towards the front of the printer to release it.

 **TIP:** Use a Phillips head screwdriver in the end of the slider pin to rotate it.

**Figure 1-459** Release one tab and rotate the slider pin

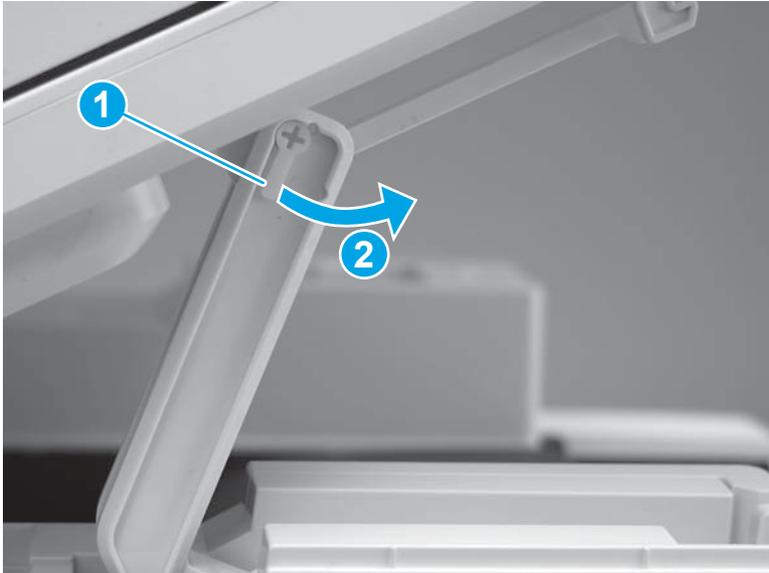

3. Remove the slider pin.


**Figure 1-460** Remove the slider pin



4. Rotate the hinge arm down.


**⚠ WARNING!** The hinge arm is spring-loaded by a strong spring and might snap down suddenly. Be careful not to pinch your fingers between the hinge arm and the top of the printer.

Figure 1-461 Rotate the hinge arm down

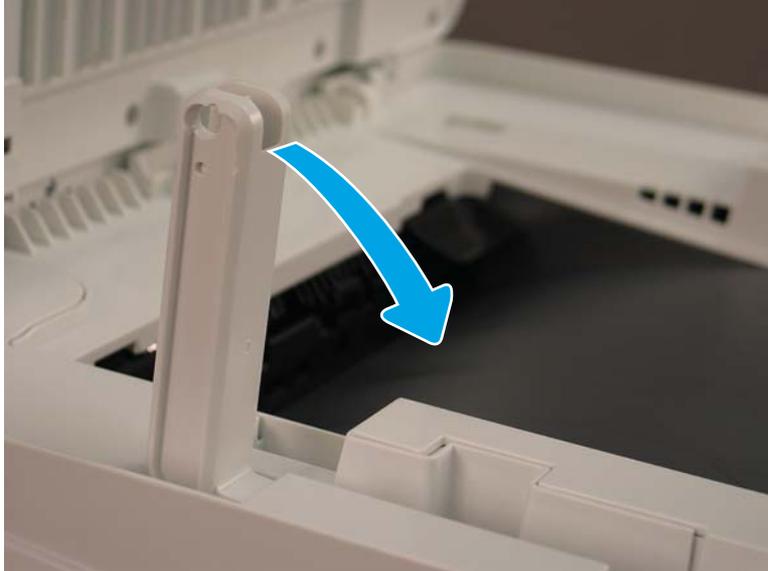


5. On the scanner bed, use a small, flat-blade screwdriver to release one tab (callout 1), and then remove the scanner cable cover (callout 2).

Figure 1-462 Remove the scanner cable cover

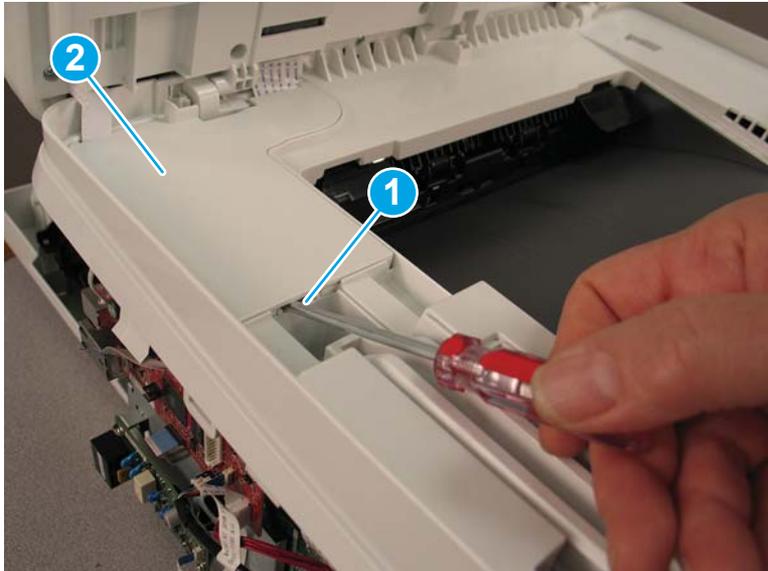

6. Release the flat cable (callout 1) from the guides (callout 2), and then feed the cables (callout 3) through the opening in the scanner.


Figure 1-463 Release the flat cable

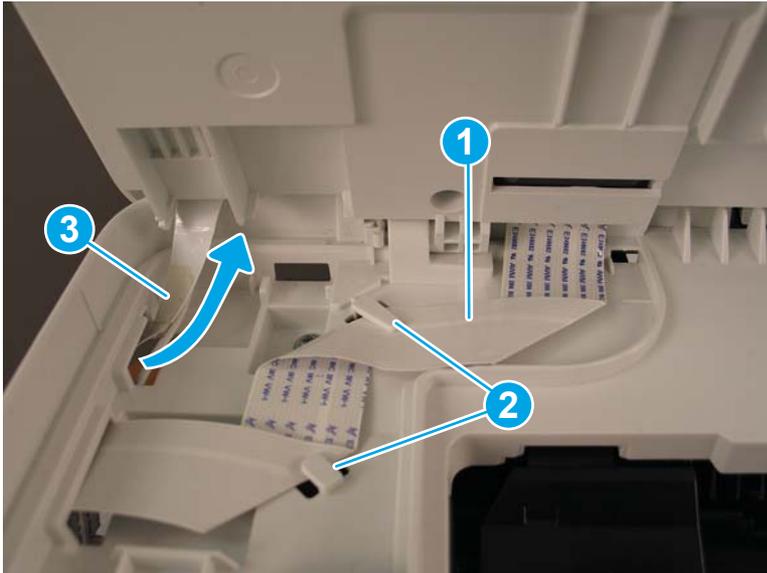

7. Open the scanner assembly fully, slide the assembly to the right (callout 1), and then lift the assembly off of the chassis (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-464 Remove the scanner assembly

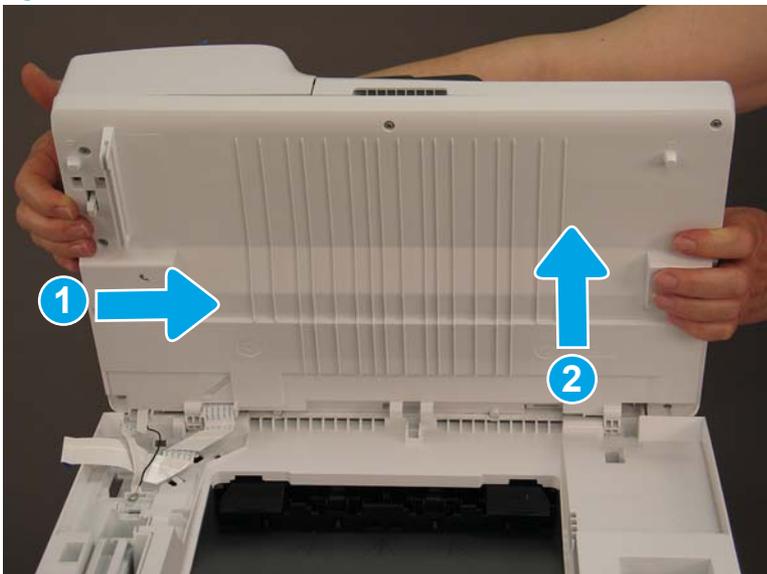

#### Step 5: Remove the document feeder (M278-M281)


1. Turn the document feeder and scanner over to rest on the top of the document feeder with the bottom of the scanner facing up. Remove one Torx T10 screw (callout 1) on the bottom of the scanner assembly.

Figure 1-465 Remove one screw

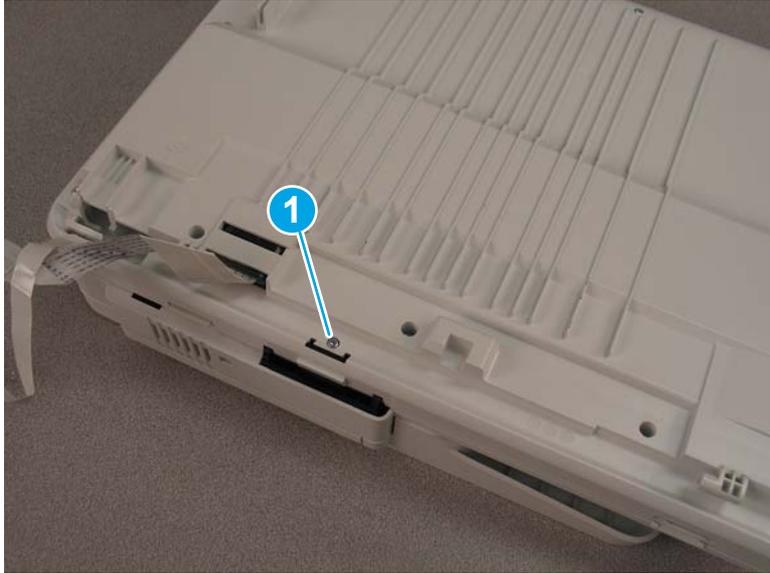


2. Turn the document feeder and scanner over so that the top is facing up, and then open the top cover.

Figure 1-466 Open the top cover

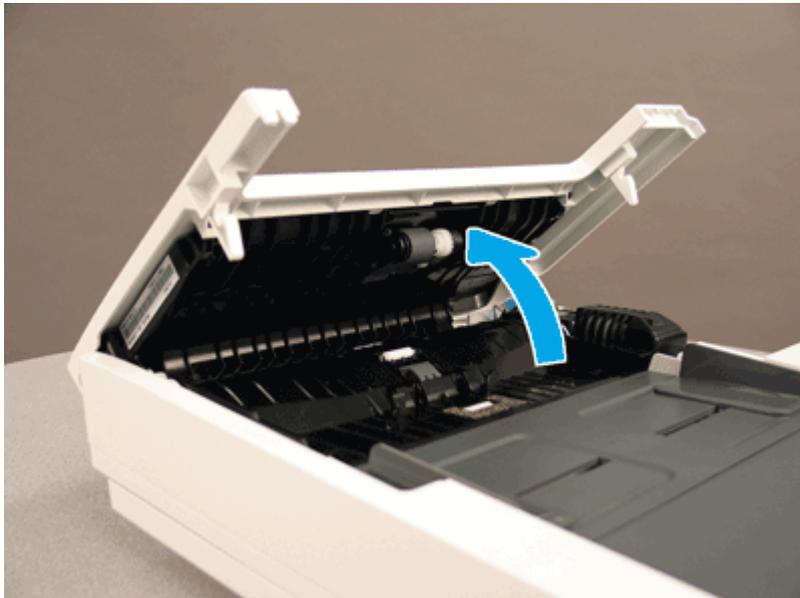

3. Remove one Torx T10 screw (callout 1).


Figure 1-467 Remove one screw

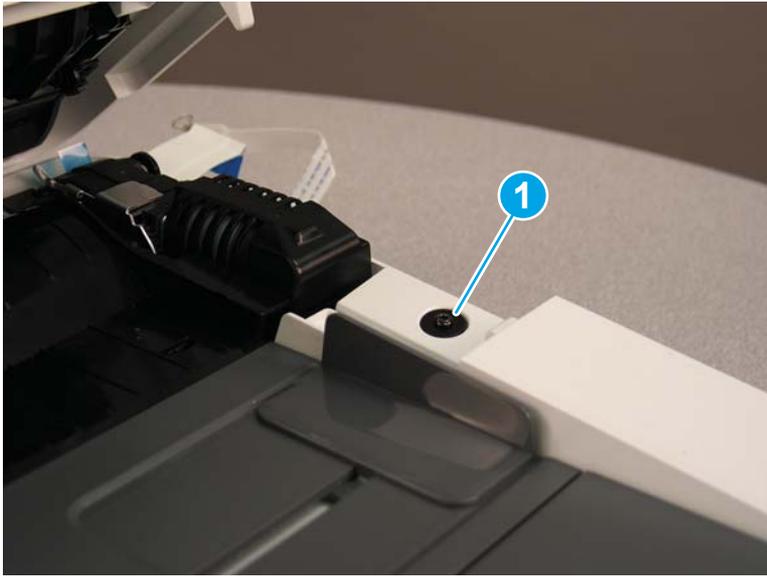

4. Open the document feeder, and then lift up to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-468 Remove the document feeder

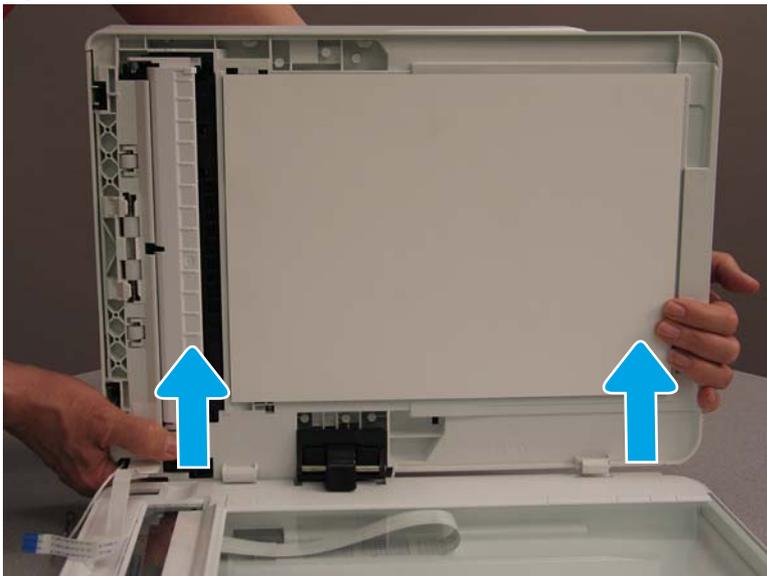

### Step 6: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Image scanner lift assembly and slider pin (M278-M281)

- [Introduction](#)
- [Step 1: Remove the image scanner slider pin \(M278-M281\)](#)
- [Step 2: Remove the image scanner lift assembly \(M278-M281\)](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the image scanner lift assembly and slider pin for the M278-M281 models.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Image scanner lift assembly and slider pin (M278-M281) part numbers	
B3Q10-60128	ISA lift assembly
B3Q10-40041	Slider pin, ISA lift assembly

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Verify that the document feeder and scanner are correctly functioning (copy a page).


### Step 1: Remove the image scanner slider pin (M278-M281)

1. Open the image scanner, release one tab (callout 1), and then rotate the slider pin (callout 2) towards the front of the printer to release it.



**TIP:** Use a Phillips head screwdriver in the end of the slider pin to rotate it.

Figure 1-469 Release one tab and rotate the slider pin

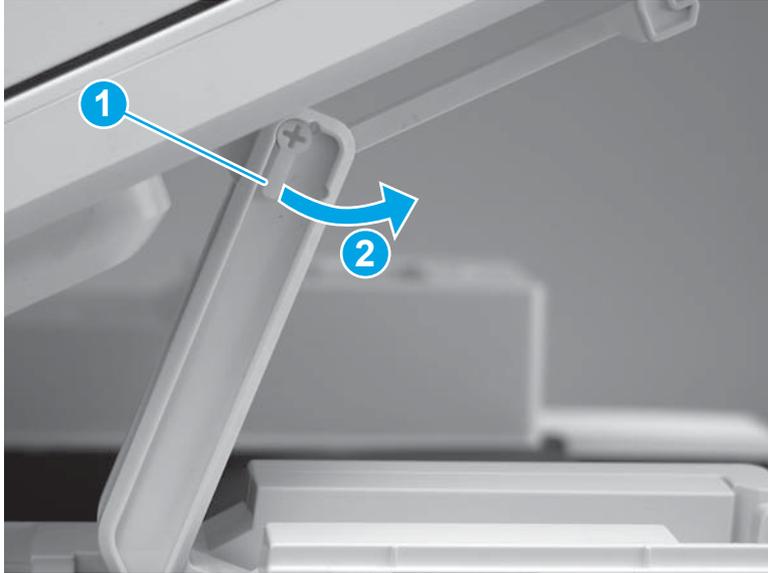

2. Remove the slider pin.

Figure 1-470 Remove the slider pin



### Step 2: Remove the image scanner lift assembly (M278-M281)


1. Support the image scanner assembly with one hand, and then lower the support arm to the closed position.

---

**⚠ CAUTION:** The image scanner hinges are not captive in the top cover mounting bosses. Do not allow the image scanner to slip off of the printer.

---


Figure 1-471 Lower the support arm

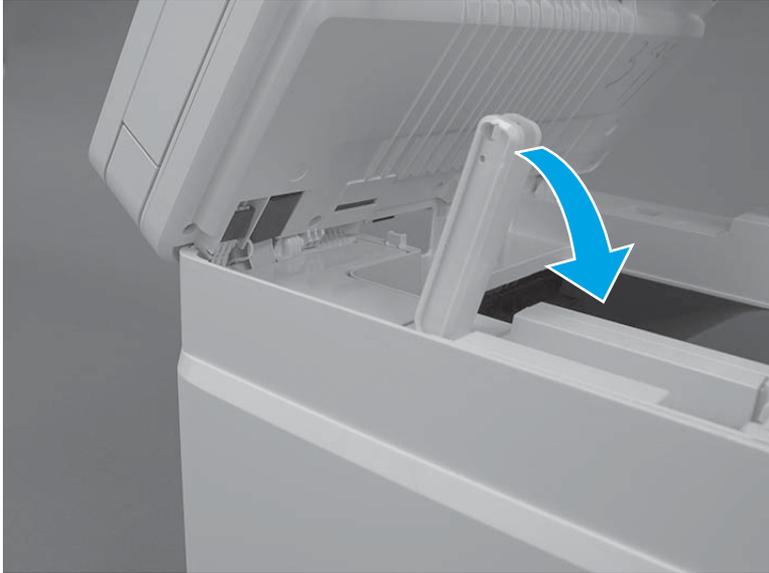

2. Before proceeding, take note of the following.

**⚠ CAUTION:** The support arm is spring loaded and can unexpectedly spring into the open position. To avoid injury, do not place a finger in the screw well when the support arm is in the closed position.

Figure 1-472 Before proceeding take note

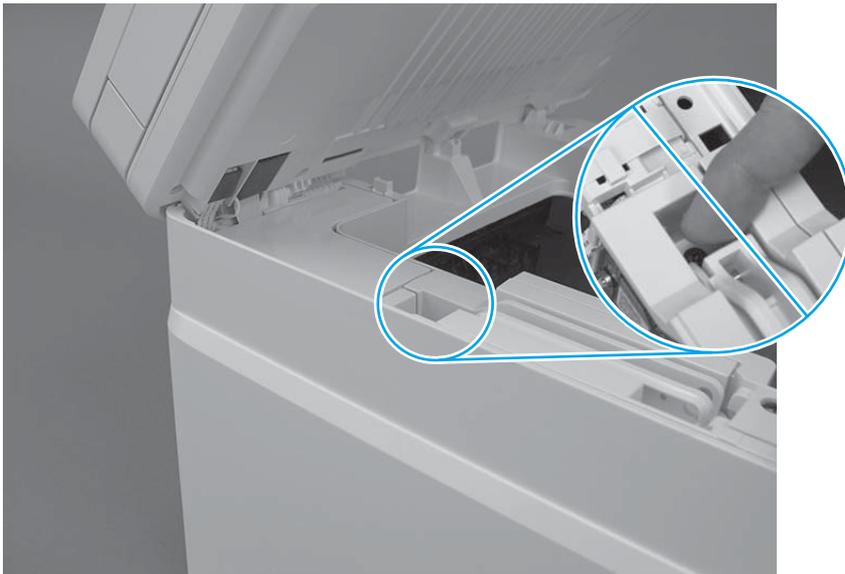

3. Remove one screw (callout 1).

**Figure 1-473** Remove one screw



4. Remove the support arm.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-474** Remove the support arm



### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Document feeder front cover (M278-M281)

- [Introduction](#)
- [Step 1: Remove the document feeder front cover \(M278-M281\)](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the document feeder front cover for the M278-M281 models.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.

 **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.

- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Document feeder front cover (M278-M281) part number	
B3Q10-40042	ADF front cap (M278-M281)

### Required tools

- Torx T10 screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Verify that the document feeder is correctly functioning (copy a page).

### Step 1: Remove the document feeder front cover (M278-M281)

1. Open the document feeder top cover.

Figure 1-475 Open the document feeder top cover




2. Release the hinge on the top cover by flexing the hinge retainer outward, and then fully open the cover.

Figure 1-476 Release the hinge



3. Remove two Torx T10 screws (callout 1).


Figure 1-477 Remove two screws

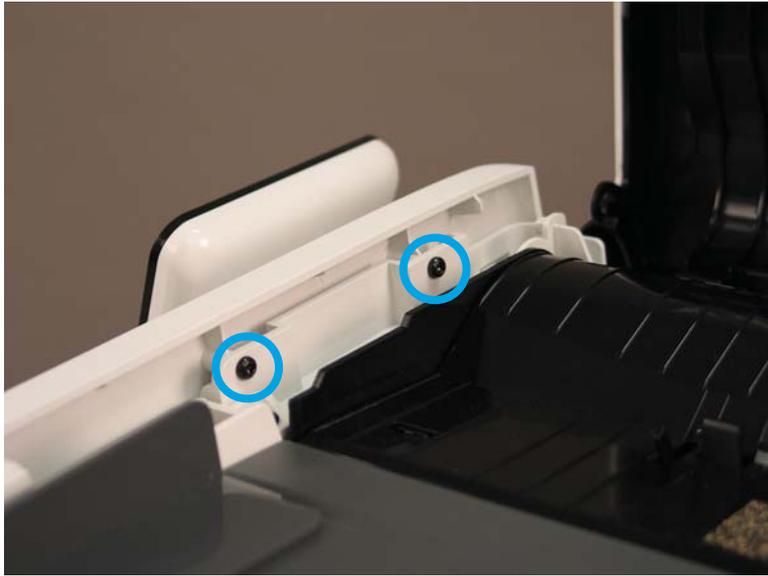

4. Slide the front cover towards the open top cover to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-478 Remove the front cover

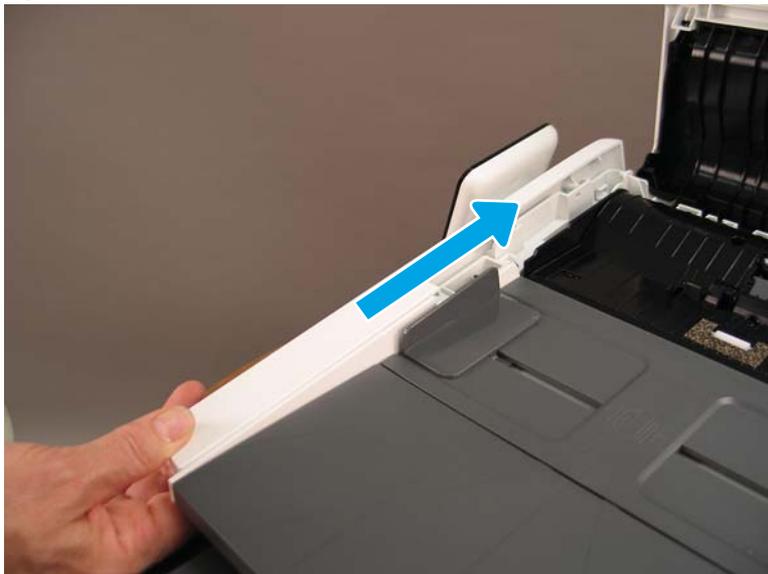

## Step 2: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Document feeder input tray (M278-M281)

- [Introduction](#)
- [Step 1: Remove the document feeder front cover\(M278-M281\)](#)
- [Step 2: Remove the document feeder input tray \(M278-M281\)](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the document feeder input tray for the M278-M281 models.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Document feeder input tray (M278-M281) part number	
B3Q10-60164	ADF input tray assembly (M278-M281)

### Required tools

- Torx T10 screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Verify that the document feeder is correctly functioning (copy a page).

### Step 1: Remove the document feeder front cover(M278-M281)

1. Open the document feeder top cover.

Figure 1-479 Open the document feeder top cover




2. Release the hinge on the top cover by flexing the hinge retainer outward, and then fully open the cover.

Figure 1-480 Release the hinge



3. Remove two Torx T10 screws (callout 1).

**Figure 1-481** Remove two screws

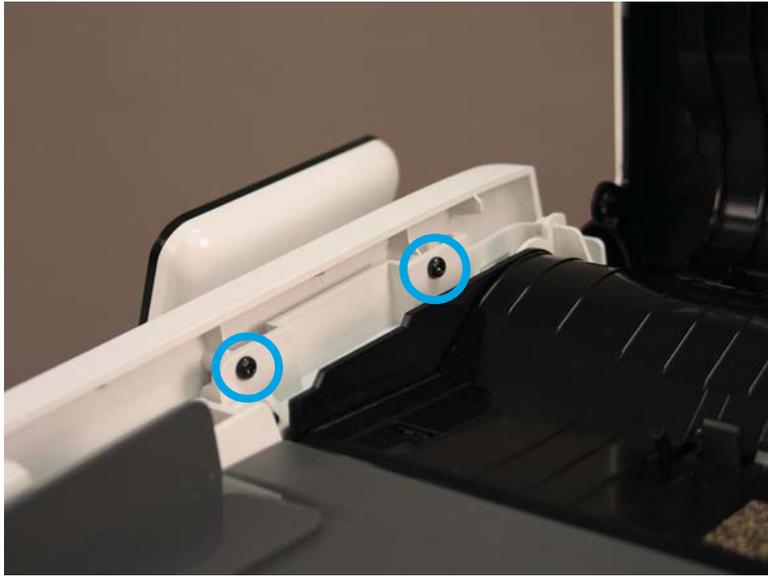

4. Slide the front cover towards the open top cover to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-482** Remove the front cover



## Step 2: Remove the document feeder input tray (M278-M281)

1. Remove four Torx T10 screws (callout 1).

Figure 1-483 Remove four screws

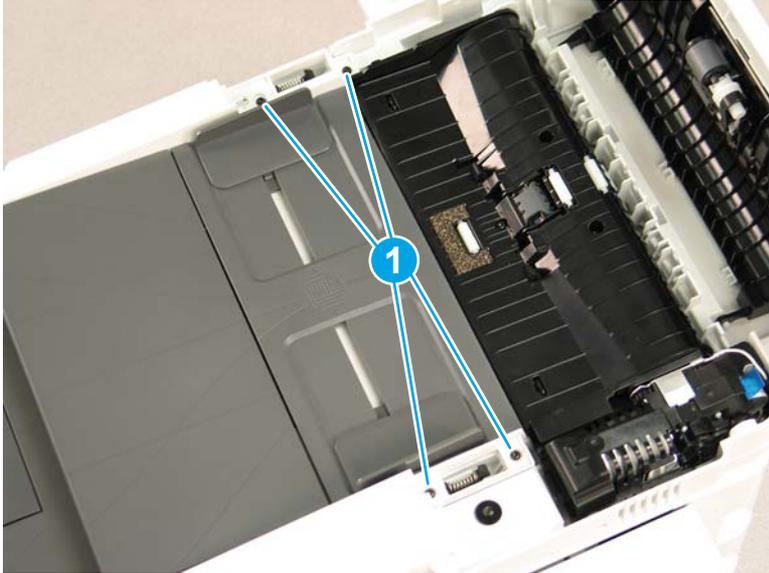

2. Remove the input tray.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-484 Remove the input tray



### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Document feeder inner cover or outer cover (M278-M281)

- [Introduction](#)
- [Step 1: Remove the document feeder top cover\(M278-M281\)](#)
- [Step 2: Remove the document feeder inner cover or outer cover \(M278-M281\)](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the document feeder inner cover or outer cover for the M278-M281 models.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### Document feeder inner cover and outer cover (M278-M281) part numbers

---

B3Q10-40012	ADF inner cover (M278-M281)
B3Q10-40013	ADF outer cover (M278-M281)

---

### Required tools

- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Verify that the document feeder is correctly functioning (copy a page).

### Step 1: Remove the document feeder top cover(M278-M281)

1. Open the document feeder top cover.

Figure 1-485 Open the document feeder top cover




2. Release the hinge on the top cover by flexing the hinge retainer outward, and then fully open the cover.

Figure 1-486 Release the hinge




3. At the front of the printer, use a small, flat-blade screwdriver to flex the inner cover away from the outer cover (callout 1), and then lift up to release the arm from the hinge pin (callout 2).

Figure 1-487 Release the front hinge

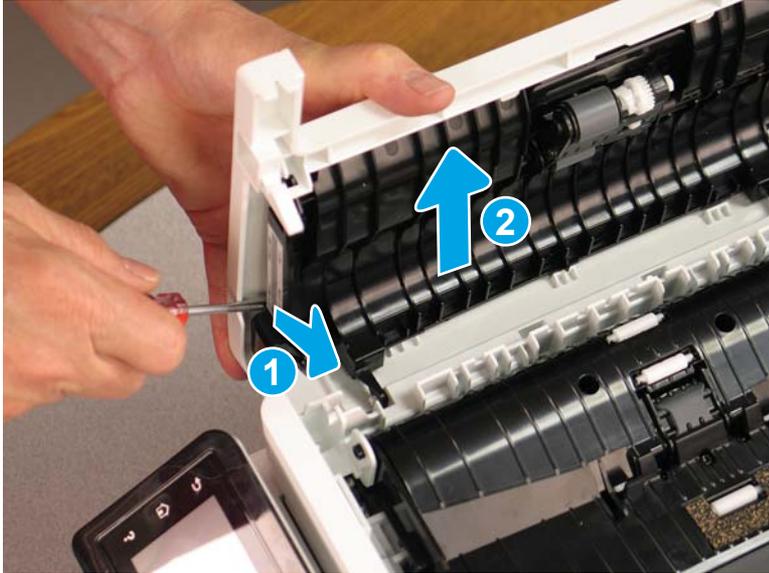

4. At the back of the printer, use a small, flat-blade screwdriver to flex the inner cover away from the outer cover (callout 1), and then lift up to release the arm from the hinge pin (callout 2). Remove the top cover.


Figure 1-488 Release the back hinge

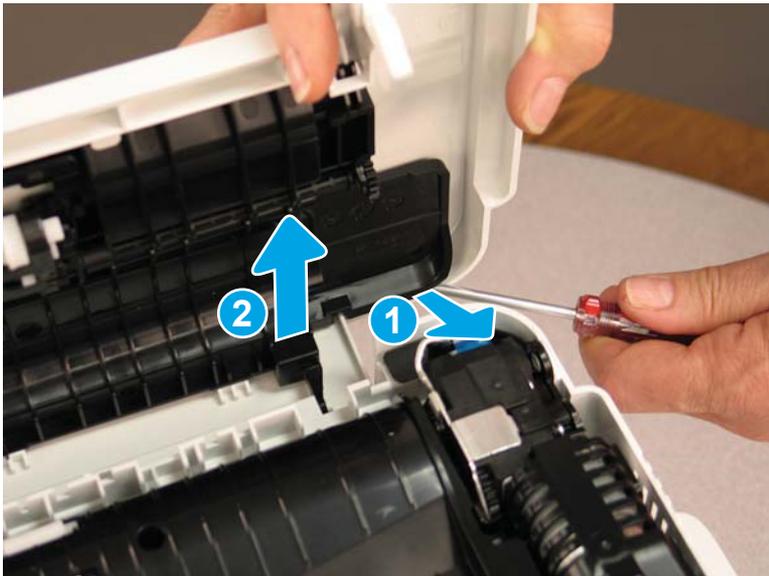

#### Step 2: Remove the document feeder inner cover or outer cover (M278-M281)

1. Use a small, flat-blade screwdriver to flex the inner cover and release three tabs (callout 1).

Figure 1-489 Release three tabs

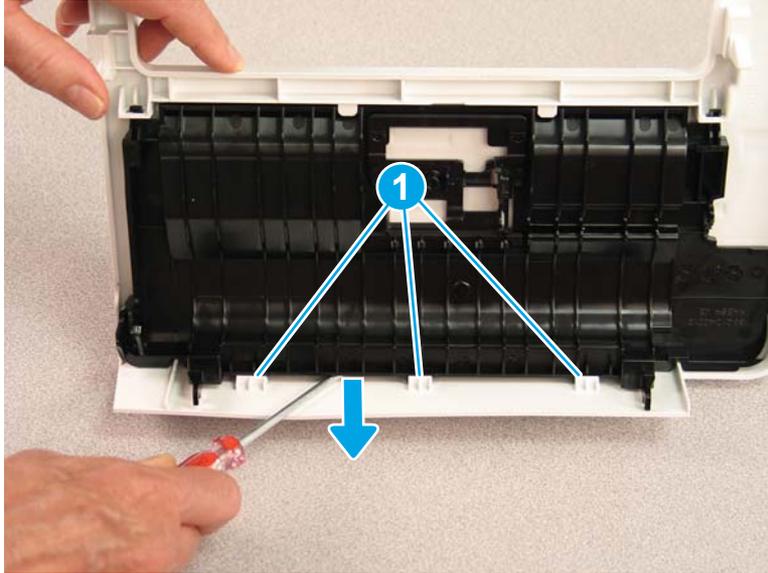


2. Slide the inner cover (callout 1) away from the outer cover (callout 2) to remove it.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-490 Remove the inner cover

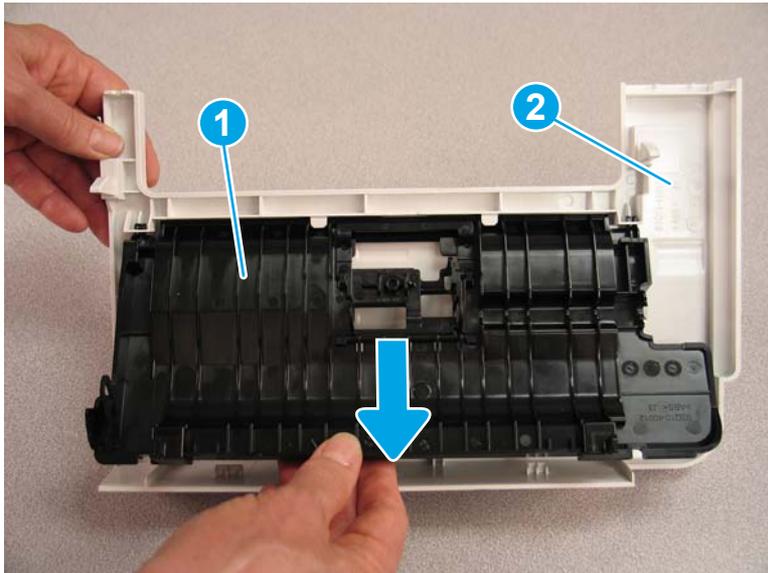

### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Document feeder pick extension shaft (M278-M281)

- [Introduction](#)
- [Step 1: Remove the document feeder top cover\(M278-M281\)](#)
- [Step 2: Remove the document feeder pick extension shaft \(M278-M281\)](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the document feeder pick extension shaft for the M278-M281 models.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Document feeder pick extension shaft (M278-M281) part number	
B3Q10-40081	ADF pick extension shaft (M278-M281)

### Required tools

- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Verify that the document feeder is correctly functioning (copy a page).

### Step 1: Remove the document feeder top cover(M278-M281)

1. Open the document feeder top cover.

Figure 1-491 Open the document feeder top cover




2. Release the hinge on the top cover by flexing the hinge retainer outward, and then fully open the cover.

Figure 1-492 Release the hinge




3. At the front of the printer, use a small, flat-blade screwdriver to flex the inner cover away from the outer cover (callout 1), and then lift up to release the arm from the hinge pin (callout 2).

Figure 1-493 Release the front hinge

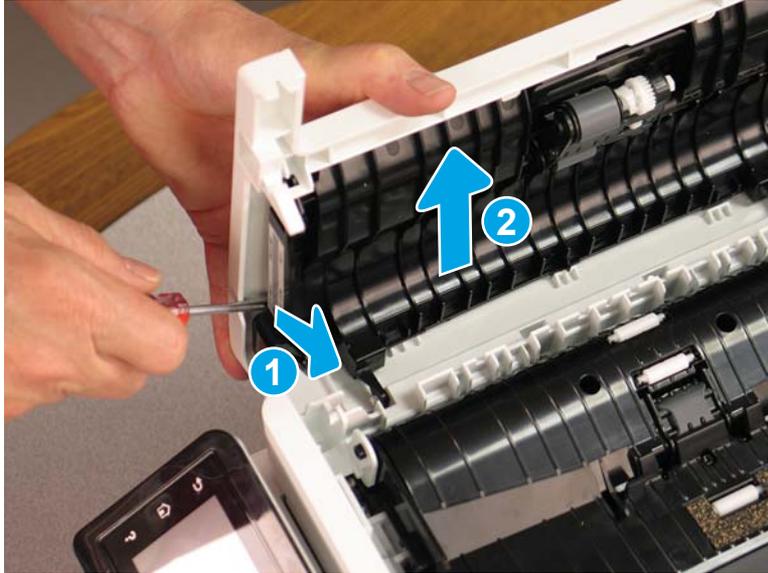

4. At the back of the printer, use a small, flat-blade screwdriver to flex the inner cover away from the outer cover (callout 1), and then lift up to release the arm from the hinge pin (callout 2). Remove the top cover.

Figure 1-494 Release the back hinge

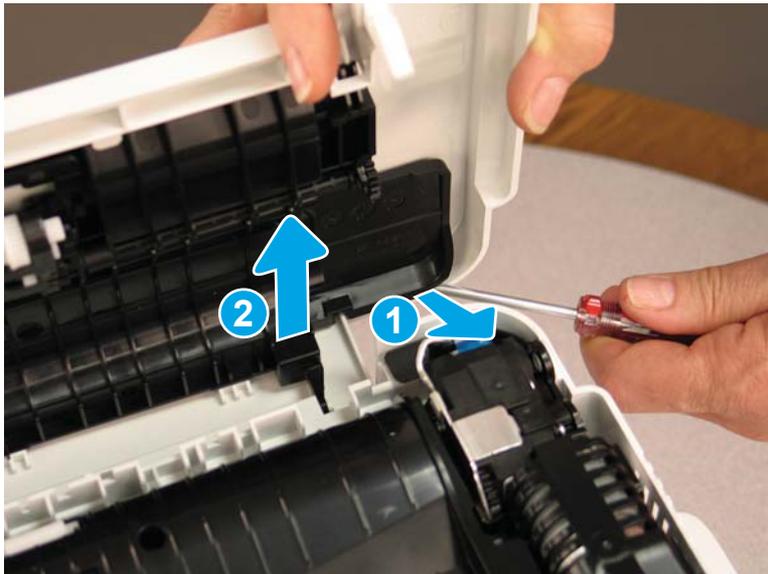


#### Step 2: Remove the document feeder pick extension shaft (M278-M281)

- ▲ Lift the end of the pick extension shaft (callout 1) to release it from the retainers, and then slide the shaft away from the pickup roller (callout 2) to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-495 Remove the pick extension shaft

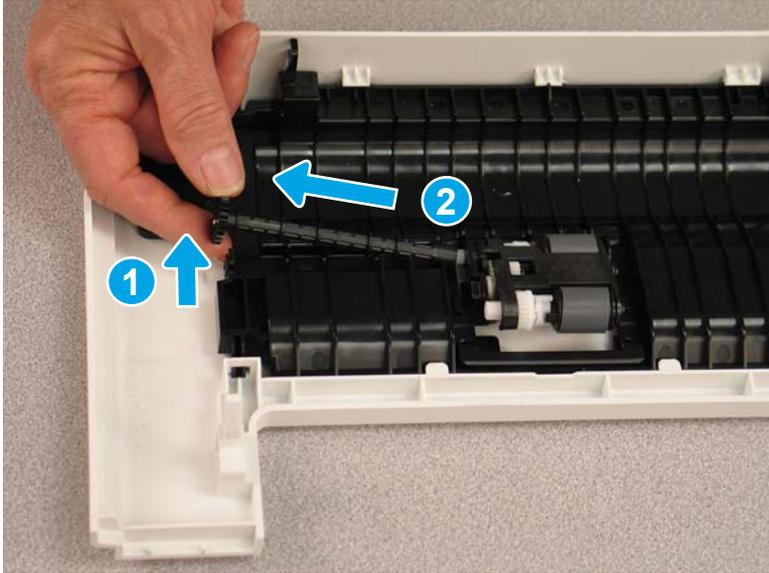

### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Document feeder extension bearing (M278-M281)

- [Introduction](#)
- [Step 1: Remove the document feeder top cover\(M278-M281\)](#)
- [Step 2: Remove the document feeder pick extension shaft \(M278-M281\)](#)
- [Step 3: Remove the document feeder extension bearing](#)
- [Step 4: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the document feeder extension bearing for the M278-M281 models.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Document feeder extension bearing (M278-M281) part number	
B3Q10-40074	Extension bearing (M278-M281)

### Required tools

- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Verify that the document feeder is correctly functioning (copy a page).

### Step 1: Remove the document feeder top cover(M278-M281)

1. Open the document feeder top cover.

Figure 1-496 Open the document feeder top cover




2. Release the hinge on the top cover by flexing the hinge retainer outward, and then fully open the cover.

Figure 1-497 Release the hinge




3. At the front of the printer, use a small, flat-blade screwdriver to flex the inner cover away from the outer cover (callout 1), and then lift up to release the arm from the hinge pin (callout 2).

Figure 1-498 Release the front hinge

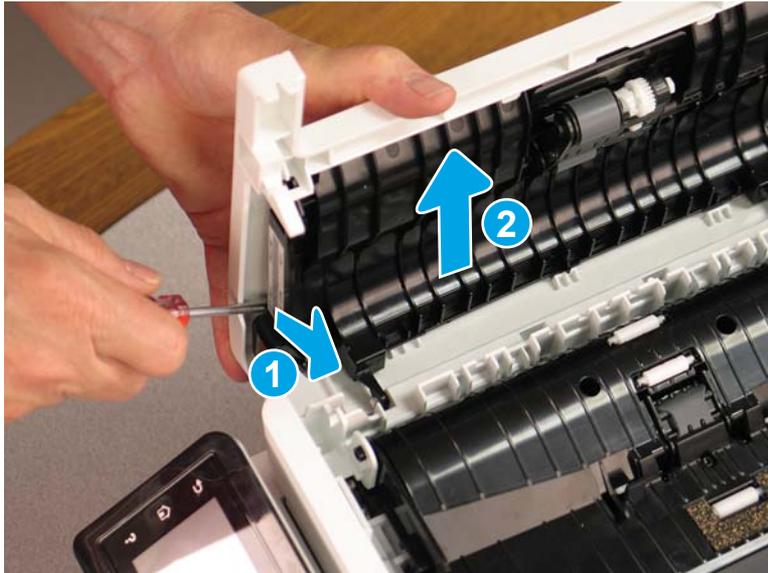

4. At the back of the printer, use a small, flat-blade screwdriver to flex the inner cover away from the outer cover (callout 1), and then lift up to release the arm from the hinge pin (callout 2). Remove the top cover.

Figure 1-499 Release the back hinge

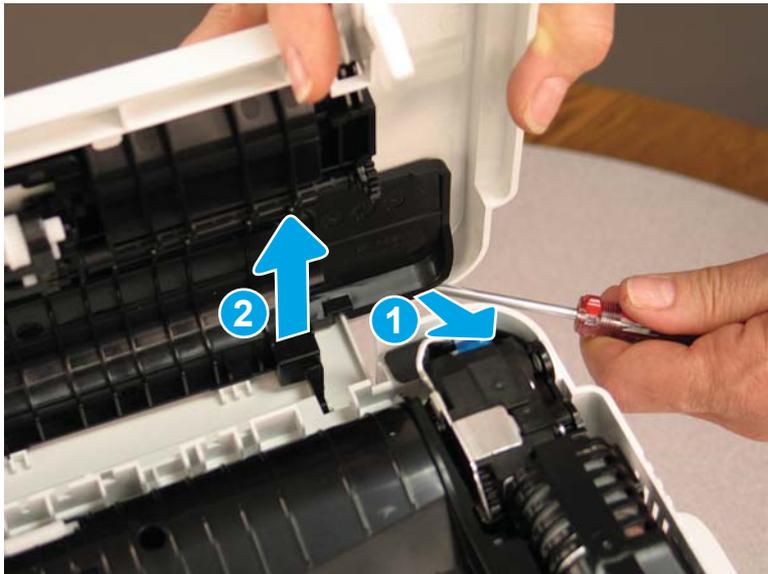


#### Step 2: Remove the document feeder pick extension shaft (M278-M281)

- ▲ Lift the end of the pick extension shaft (callout 1) to release it from the retainers, and then slide the shaft away from the pickup roller (callout 2) to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-500 Remove the pick extension shaft

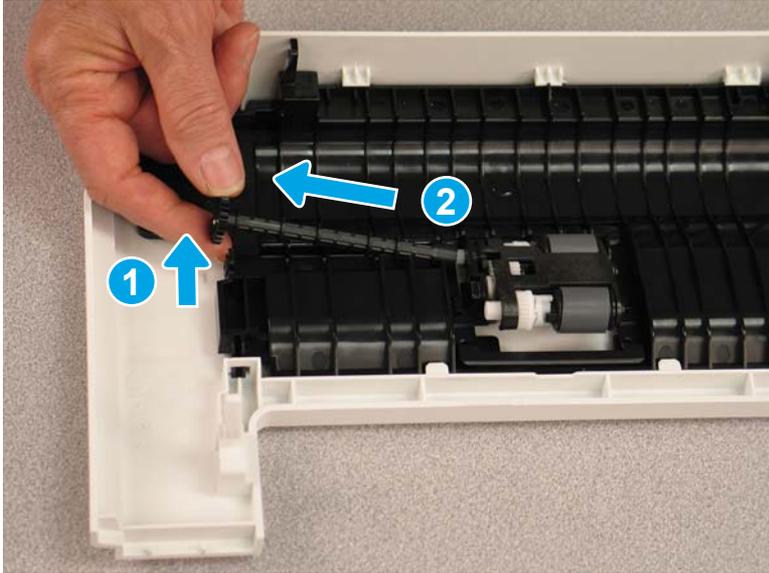

Step 3: Remove the document feeder extension bearing

1. Locate the extension bearing on the top cover.

Figure 1-501 Locate the extension bearing

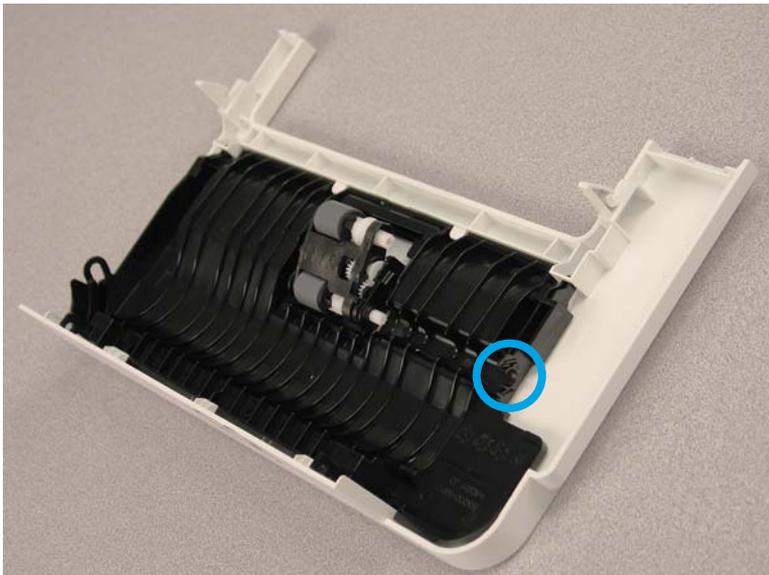

2. Release two tabs (callout 1).

Figure 1-502 Release two tabs



3. Remove the bearing from the top cover.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-503 Remove the bearing



#### Step 4: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Document feeder pick assembly (M278-M281)

- [Introduction](#)
- [Step 1: Remove the document feeder top cover\(M278-M281\)](#)
- [Step 2: Remove the document feeder pick extension shaft \(M278-M281\)](#)
- [Step 3: Remove the document feeder pick assembly \(M278-M281\)](#)
- [Step 4: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the document feeder pick assembly for the M278-M281 models.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Document feeder pick assembly (M278-M281) part number	
B3Q10-60105	ADF pick assembly (M278-M281)

### Required tools

- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Verify that the document feeder is correctly functioning (copy a page).

### Step 1: Remove the document feeder top cover(M278-M281)

1. Open the document feeder top cover.

Figure 1-504 Open the document feeder top cover




2. Release the hinge on the top cover by flexing the hinge retainer outward, and then fully open the cover.

Figure 1-505 Release the hinge




3. At the front of the printer, use a small, flat-blade screwdriver to flex the inner cover away from the outer cover (callout 1), and then lift up to release the arm from the hinge pin (callout 2).

**Figure 1-506** Release the front hinge

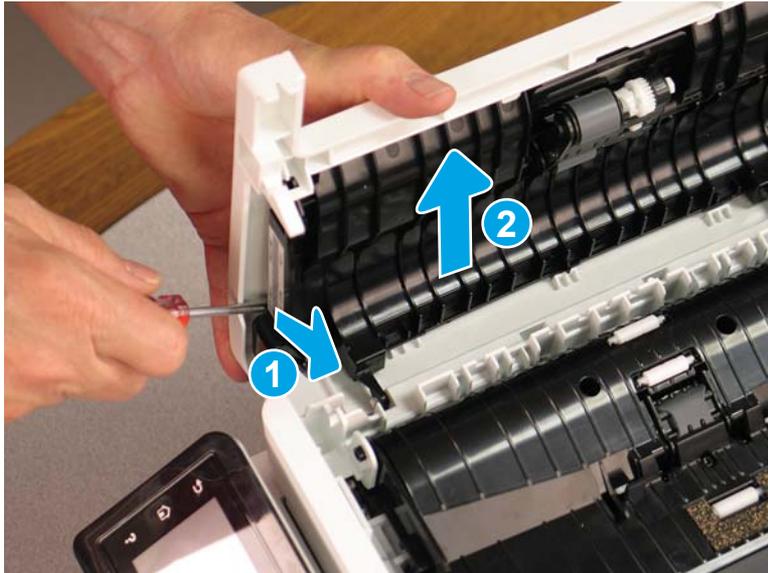

4. At the back of the printer, use a small, flat-blade screwdriver to flex the inner cover away from the outer cover (callout 1), and then lift up to release the arm from the hinge pin (callout 2). Remove the top cover.

**Figure 1-507** Release the back hinge

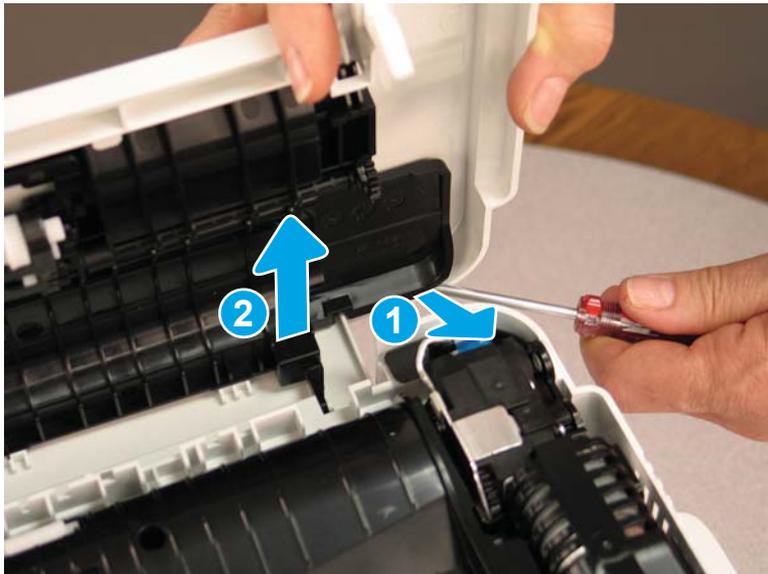

### Step 2: Remove the document feeder pick extension shaft (M278-M281)


- ▲ Lift the end of the pick extension shaft (callout 1) to release it from the retainers, and then slide the shaft away from the pickup roller (callout 2) to remove it.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-508 Remove the pick extension shaft

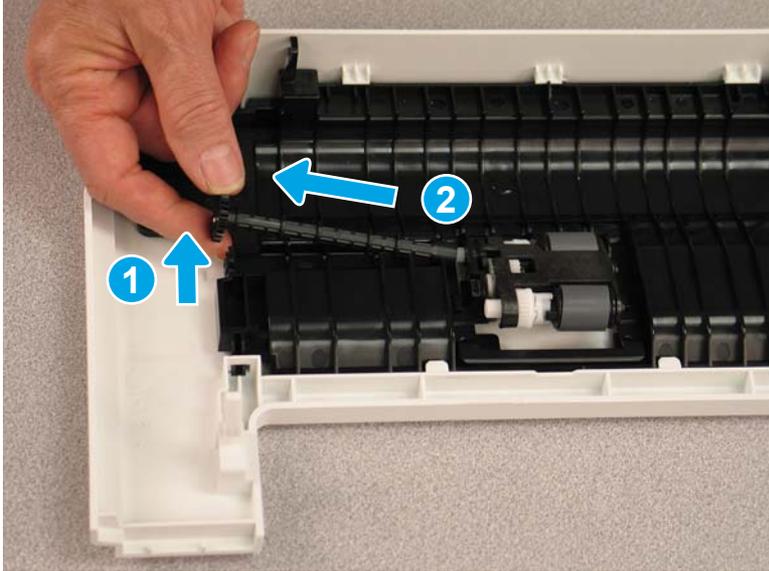

Step 3: Remove the document feeder pick assembly (M278-M281)

1. Before proceeding, note the correct installation of the gears (callout 1) and the spring (callout 2) on the pick assembly. If these items become dislodged when removing or installing the pick assembly, reinstall them in the correct position.

Figure 1-509 Note the gear and spring locations

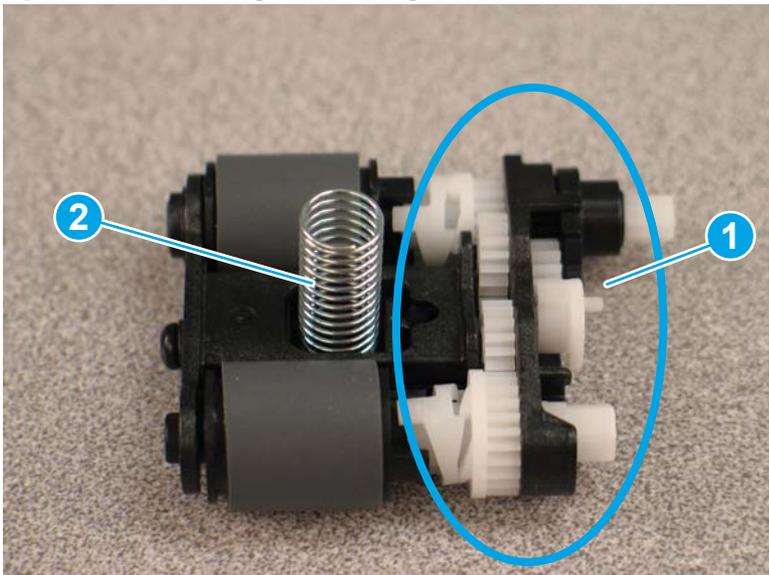

2. Lift the edge of the pick assembly (callout 1), and then slide it away from the top cover (callout 2) to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-510** Remove the pick assembly



#### Step 4: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Document feeder separation pad, support, and spring (M278-M281)

- [Introduction](#)
- [Step 1: Remove the document feeder separation pad, support, and spring \(M278-M281\)](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the document feeder separation pad, support, and spring for the M278-M281 models.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Document feeder separation pad, support, and spring (M278-M281) part number	
B3Q10-40080	Separator pad (M278-M281)
B3Q10-40079	Separator pad support (M278-M281)
B3Q10-00019	Separator pad spring (M278-M281)

### Required tools

- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Verify that the document feeder is correctly functioning (copy a page).

### Step 1: Remove the document feeder separation pad, support, and spring (M278-M281)

1. Open the document feeder top cover.

Figure 1-511 Open the document feeder top cover




2. Release the hinge on the top cover by flexing the hinge retainer outward, and then fully open the cover.

Figure 1-512 Release the hinge




3. Carefully insert a small, flat-blade screwdriver between the separation pad support and the document feeder case. Rotate the end of the screwdriver towards the separation pad to release the support.

**Figure 1-513** Release the separation pad support

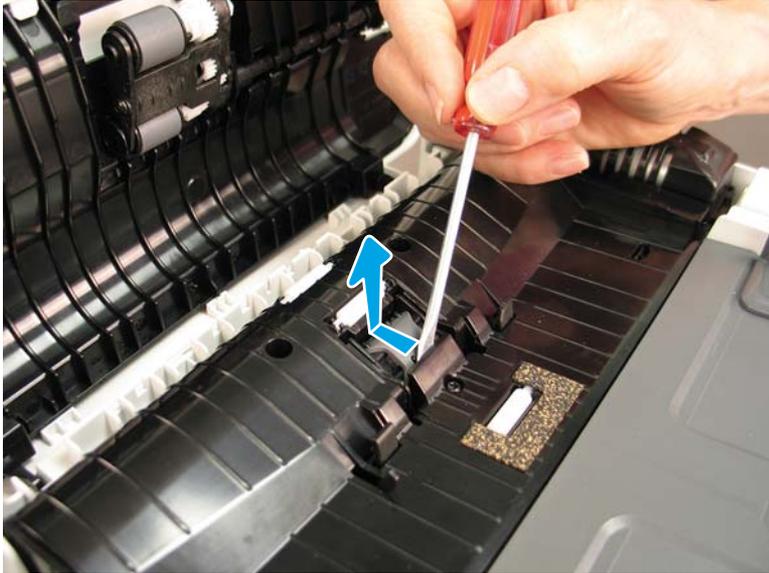

4. Remove the separation pad and support.

**Figure 1-514** Remove the separation pad and support

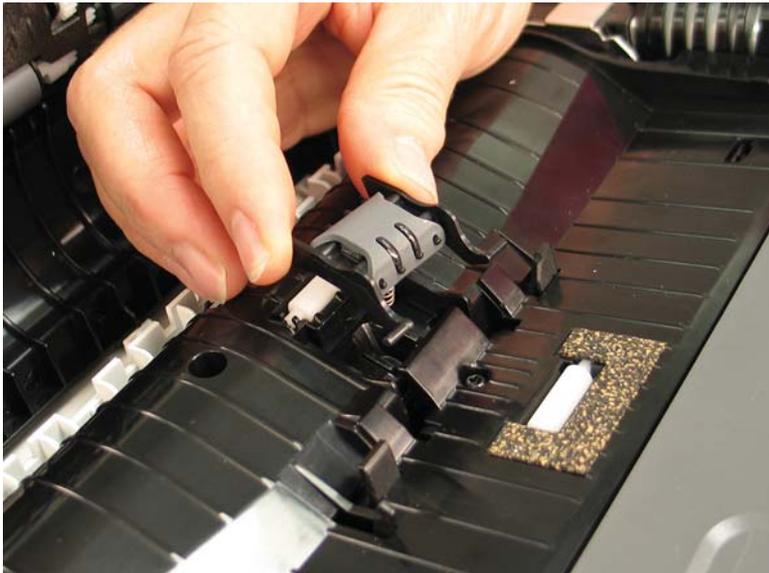

5. To remove the separation pad, release the pad (callout 1) from the tabs on each side.

Figure 1-515 Remove the separation pad




6. To remove the separation pad spring, turn the separation pad support over, and then remove the spring (callout 1).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-516 Remove the separation pad spring

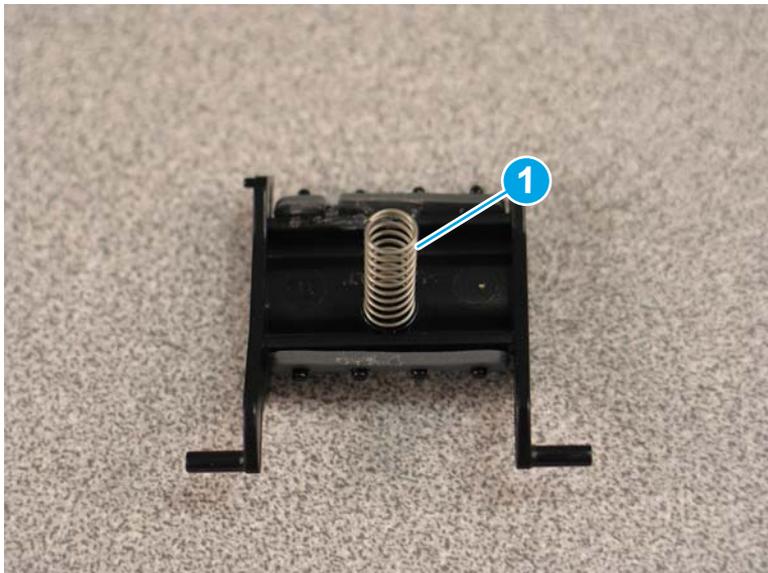

## Step 2: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Document feeder core (M278-M281)

- [Introduction](#)
- [Step 1: Remove the document feeder front cover\(M278-M281\)](#)
- [Step 2: Remove the document feeder input tray \(M278-M281\)](#)
- [Step 3: Remove the document feeder core \(M278-M281\)](#)
- [Step 4: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the document feeder core for the M278-M281 models.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Document feeder core (M278-M281) part number	
B3Q10-60112	ADF core (M278-M281)

### Required tools

- Torx T10 screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Verify that the document feeder is correctly functioning (copy a page).

### Step 1: Remove the document feeder front cover(M278-M281)

1. Open the document feeder top cover.

Figure 1-517 Open the document feeder top cover




2. Release the hinge on the top cover by flexing the hinge retainer outward, and then fully open the cover.

Figure 1-518 Release the hinge



3. Remove two Torx T10 screws (callout 1).

Figure 1-519 Remove two screws

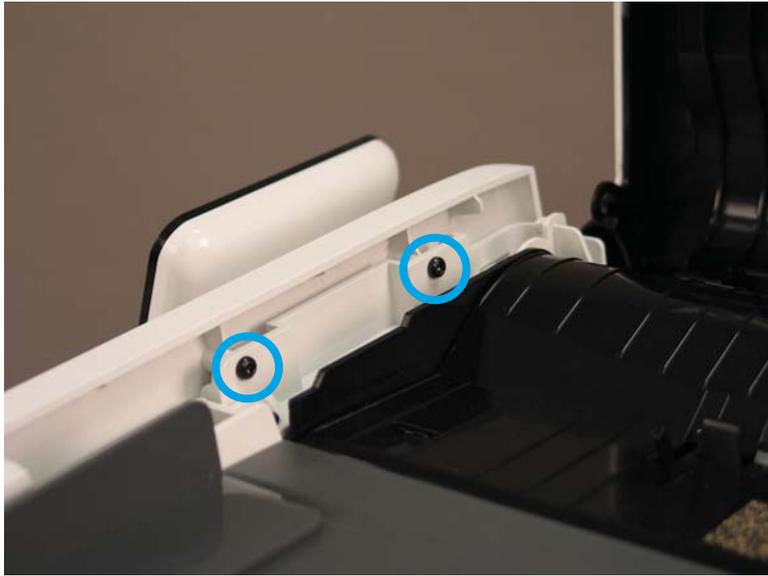

4. Slide the front cover towards the open top cover to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-520 Remove the front cover



## Step 2: Remove the document feeder input tray (M278-M281)

1. Remove four Torx T10 screws (callout 1).

Figure 1-521 Remove four screws

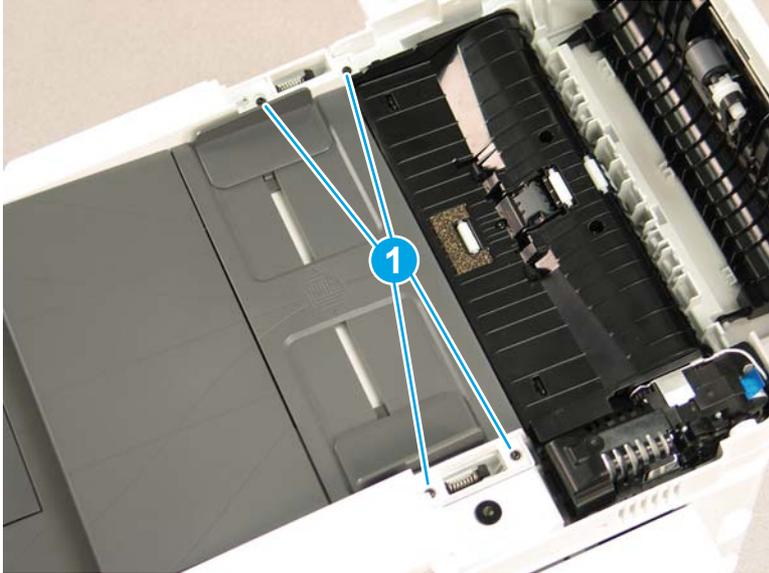

2. Remove the input tray.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-522 Remove the input tray



### Step 3: Remove the document feeder core (M278-M281)


1. Disconnect one flat cable (callout 1) and one slide connector (callout 2).

Figure 1-523 Disconnect two connectors

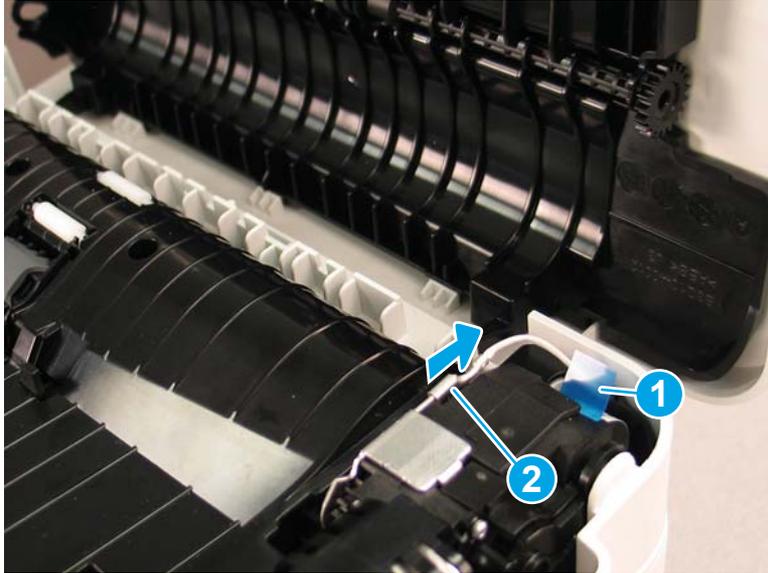


2. Use a small, flat-blade screwdriver to release the hinge (callout 1), and then lift the edge of the core assembly up (callout 2).

Figure 1-524 Release the hinge

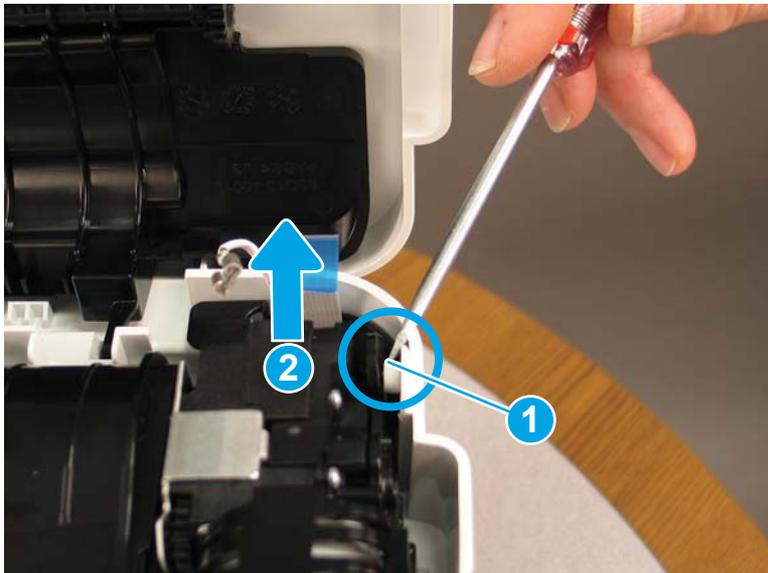

3. Rotate the core assembly toward the top cover.


Figure 1-525 Rotate the core assembly

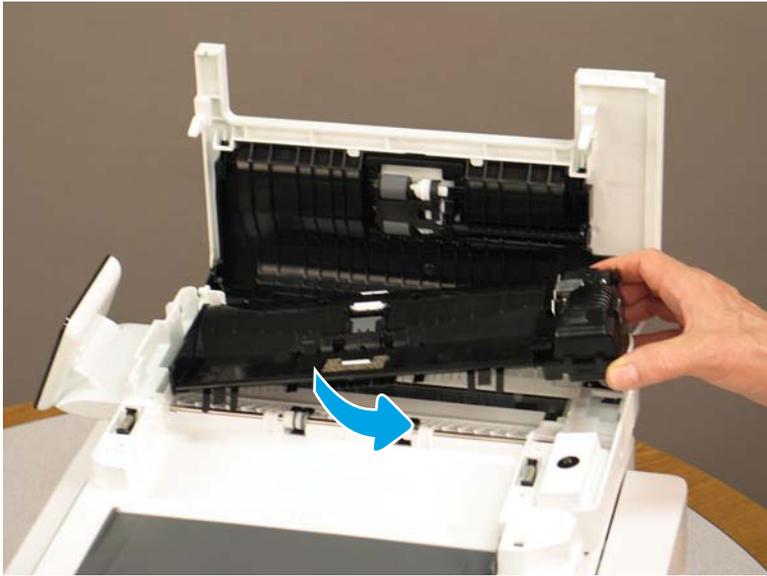

4. Rotate the front edge of the assembly towards the top cover, and then slide the assembly towards the back of the printer to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-526 Remove the core assembly

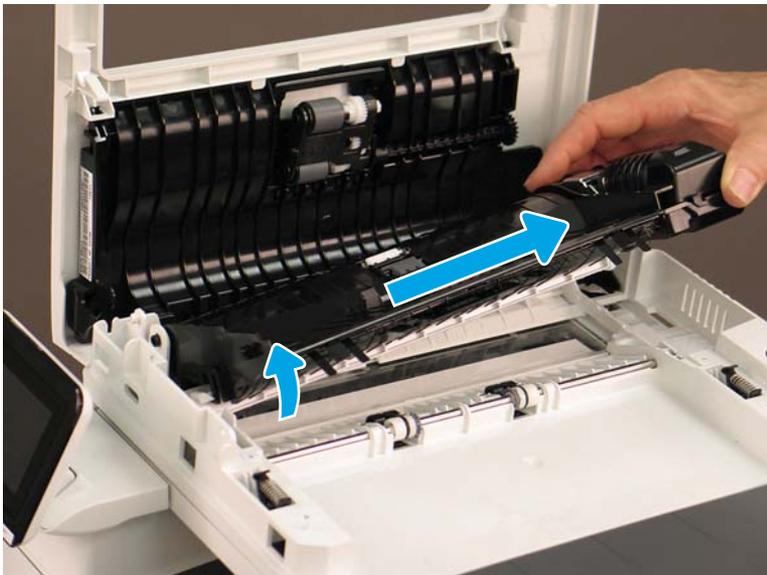

#### Step 4: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Document feeder base (M278-M281)

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and rear doors](#)
- [Step 3: Remove the left cover \(M278-M281\)](#)
- [Step 4: Remove the document feeder and image scanner \(M278-M281\)](#)
- [Step 5: Remove the document feeder front cover \(M278-M281\)](#)
- [Step 6: Remove the document feeder input tray \(M278-M281\)](#)
- [Step 7: Remove the document feeder core \(M278-M281\)](#)
- [Step 8: Remove the document feeder base \(M278-M281\)](#)
- [Step 9: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the document feeder base for the M278-M281 models.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.



**WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.

- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### Document feeder base (M278-M281) part number

---

**B3Q10-60116**

ADF base assembly (M278-M281)

---

### Required tools

- Torx T10 screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


## Post service test

Verify that the document feeder is correctly functioning (copy a page).

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-527 Remove the cassette tray

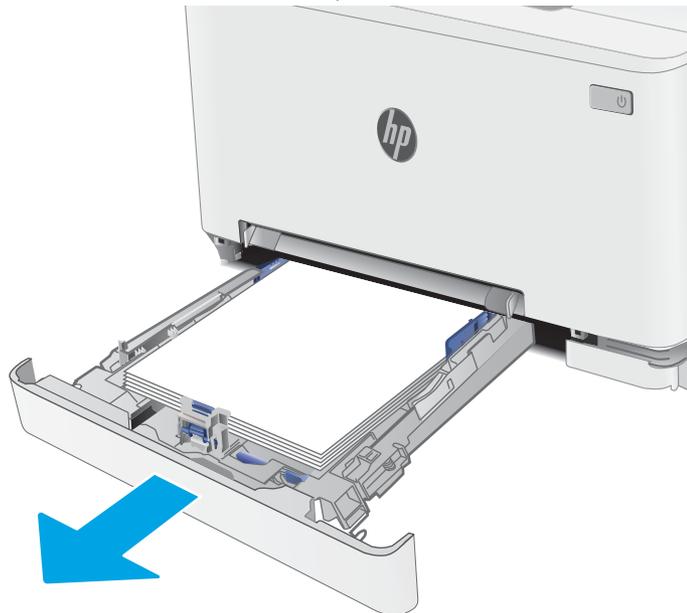

### Step 2: Open the front and rear doors


1. Open the front door.

Figure 1-528 Open the front door




2. **Simplex models only:** Open the rear door.

**Figure 1-529** Open the rear door

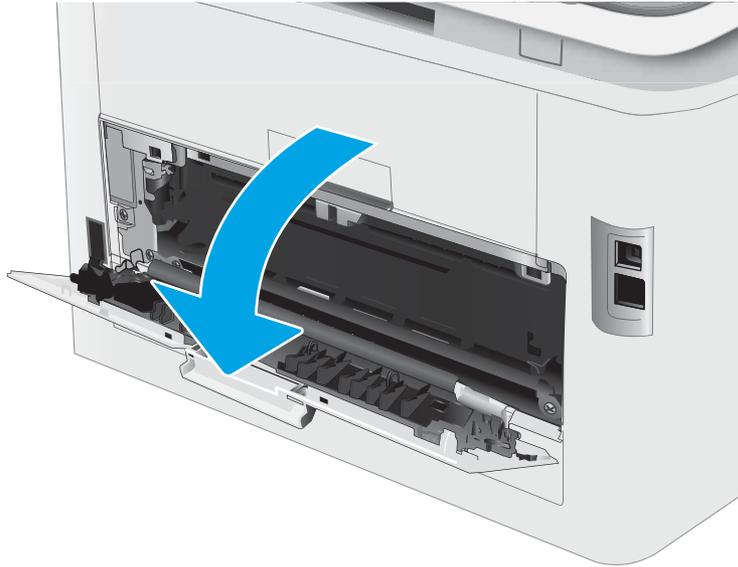

3. **Duplex models only:** Open the duplexer door.


**Figure 1-530** Open the duplexer door

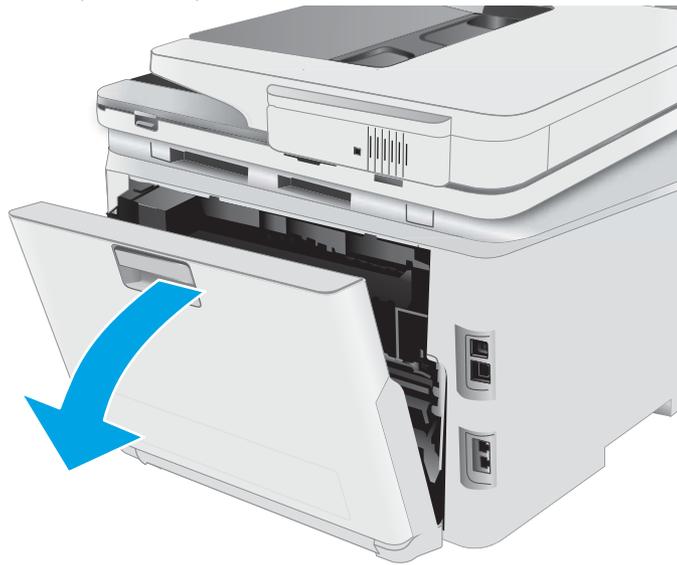

### Step 3: Remove the left cover (M278-M281)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


Figure 1-531 Tab locations

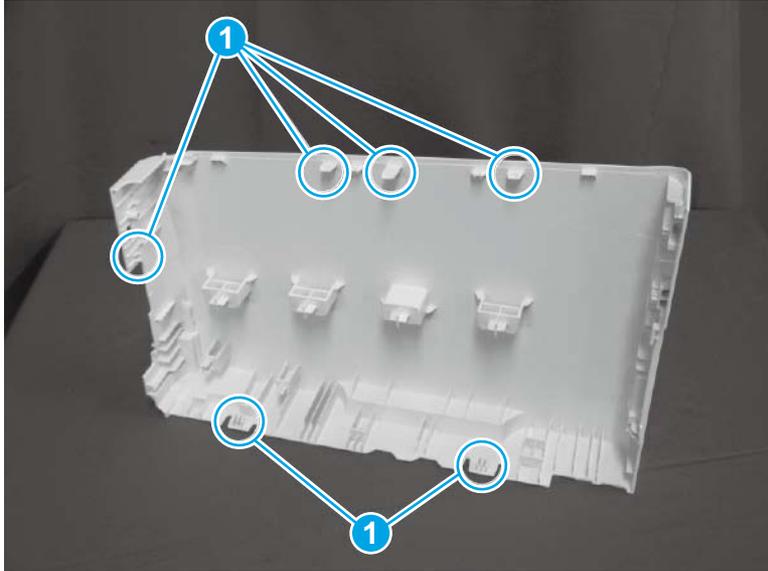

2. At the rear of the printer, remove one screw (callout 1), and then release one tab (callout 2).

 **TIP:** Use a small, flat-blade screwdriver to release the tab.

Figure 1-532 Remove one screw and release tab

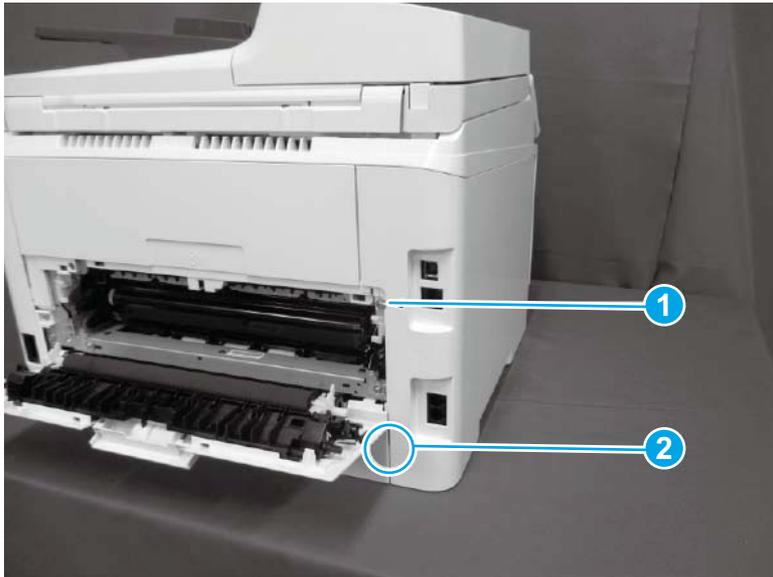


3. Release six tabs (callout 1) along the top, front, and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-533** Remove the left cover

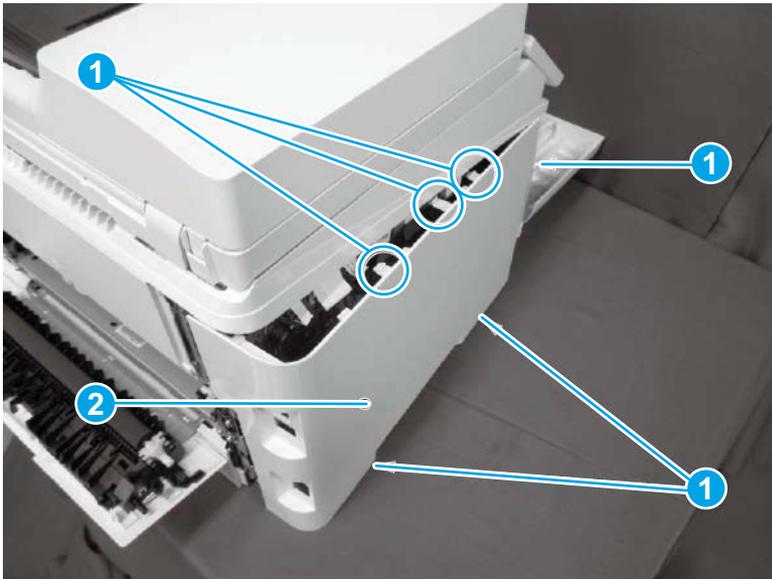

#### Step 4: Remove the document feeder and image scanner (M278-M281)

1. Disconnect two flat cables (callout 1) from the formatter, and then remove one screw (callout 2) to release the grounding wire.


**Figure 1-534** Disconnect two cables and remove one screw

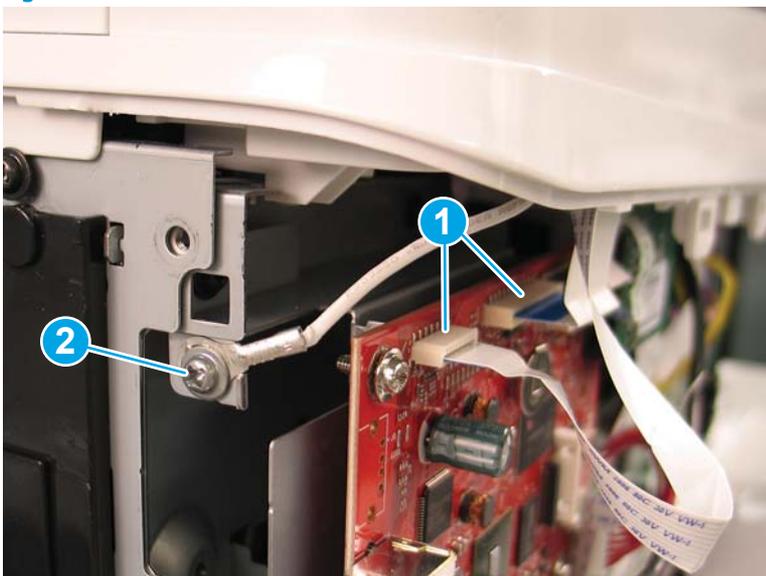

2. Open the scanner. Release one tab (callout 1), and then rotate the slider pin (callout 2) towards the front of the printer to release it.


 **TIP:** Use a Phillips head screwdriver in the end of the slider pin to rotate it.

**Figure 1-535** Release one tab and rotate the slider pin

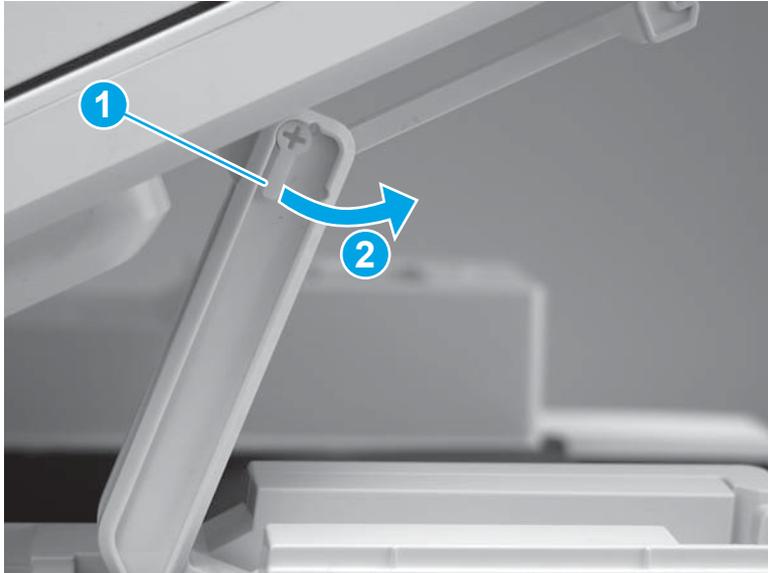

3. Remove the slider pin.


**Figure 1-536** Remove the slider pin

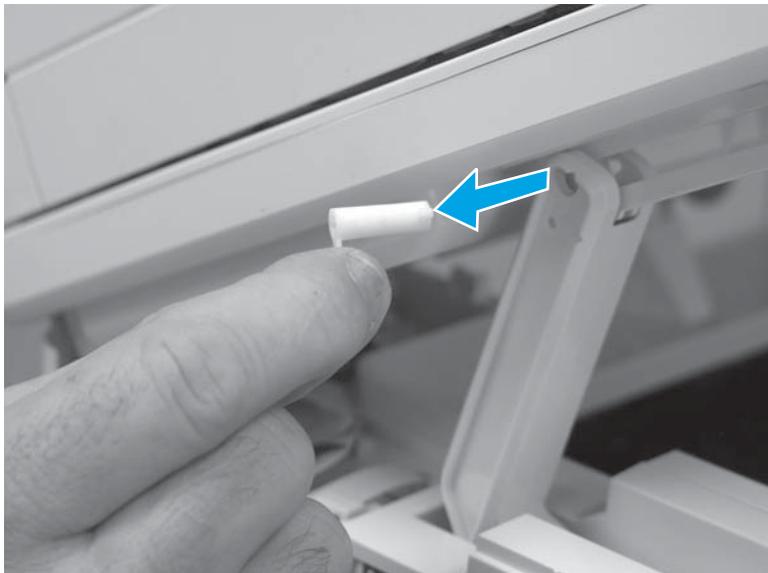

4. Rotate the hinge arm down.


**⚠ WARNING!** The hinge arm is spring-loaded by a strong spring and might snap down suddenly. Be careful not to pinch your fingers between the hinge arm and the top of the printer.

**Figure 1-537** Rotate the hinge arm down

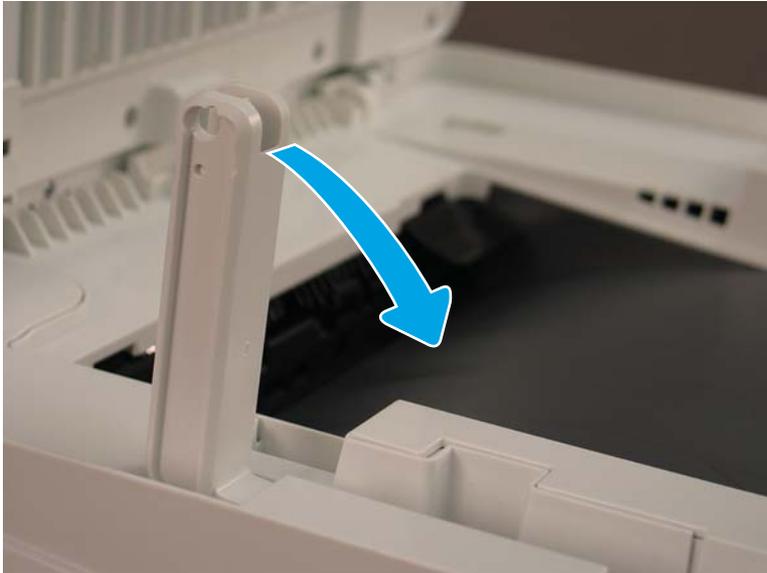


5. On the scanner bed, use a small, flat-blade screwdriver to release one tab (callout 1), and then remove the scanner cable cover (callout 2).

**Figure 1-538** Remove the scanner cable cover

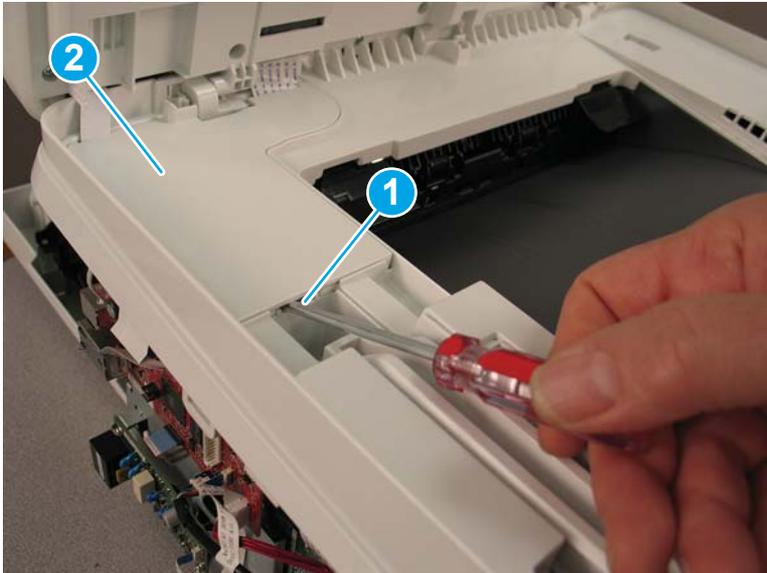

6. Release the flat cable (callout 1) from the guides (callout 2), and then feed the cables (callout 3) through the opening in the scanner.


Figure 1-539 Release the flat cable

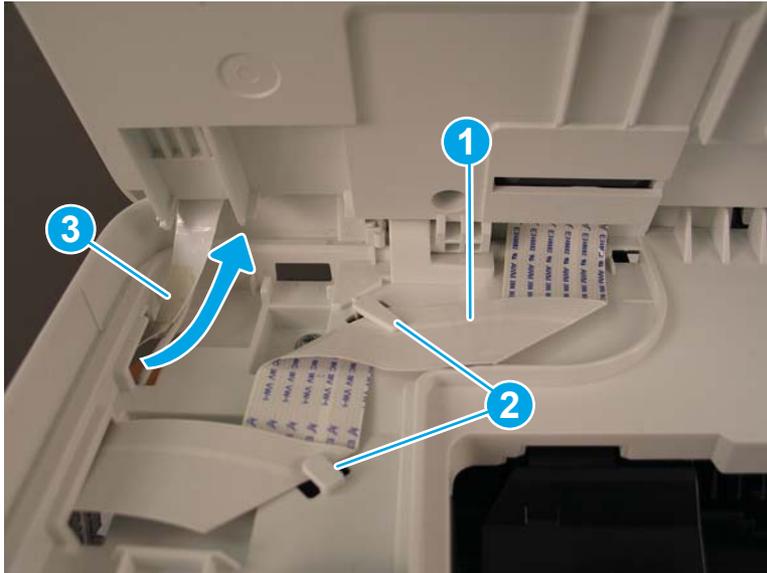

7. Open the scanner assembly fully, slide the assembly to the right (callout 1), and then lift the assembly off of the chassis (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-540 Remove the scanner assembly

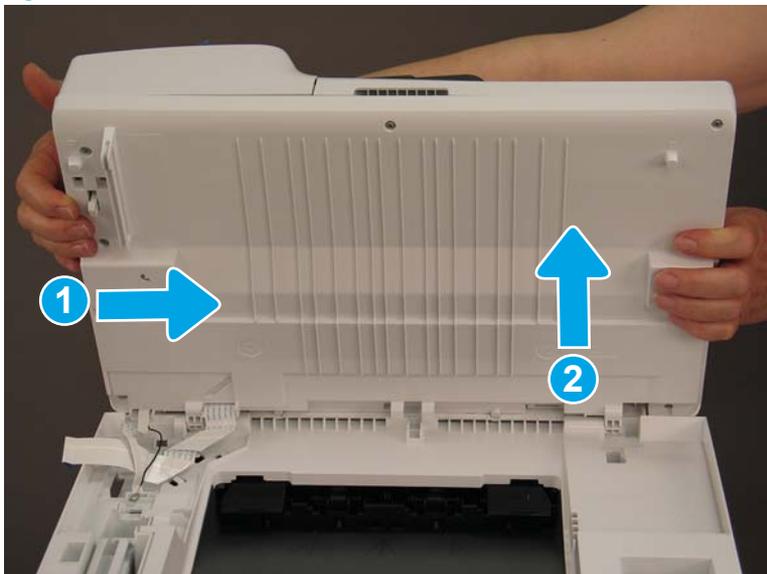

#### Step 5: Remove the document feeder front cover (M278-M281)

1. Open the document feeder top cover.

Figure 1-541 Open the document feeder top cover




2. Release the hinge on the top cover by flexing the hinge retainer outward, and then fully open the cover.

Figure 1-542 Release the hinge



3. Remove two Torx T10 screws (callout 1).

Figure 1-543 Remove two screws

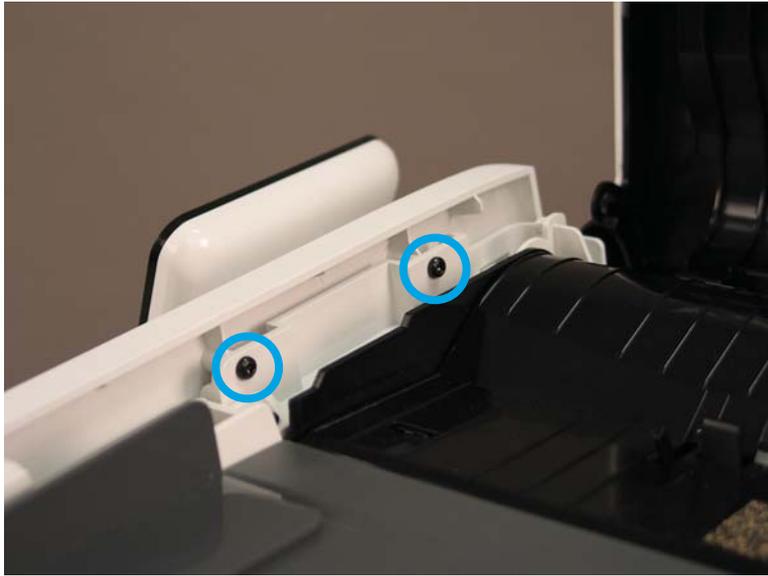

4. Slide the front cover towards the open top cover to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-544 Remove the front cover



#### Step 6: Remove the document feeder input tray (M278-M281)

1. Remove four Torx T10 screws (callout 1).

Figure 1-545 Remove four screws

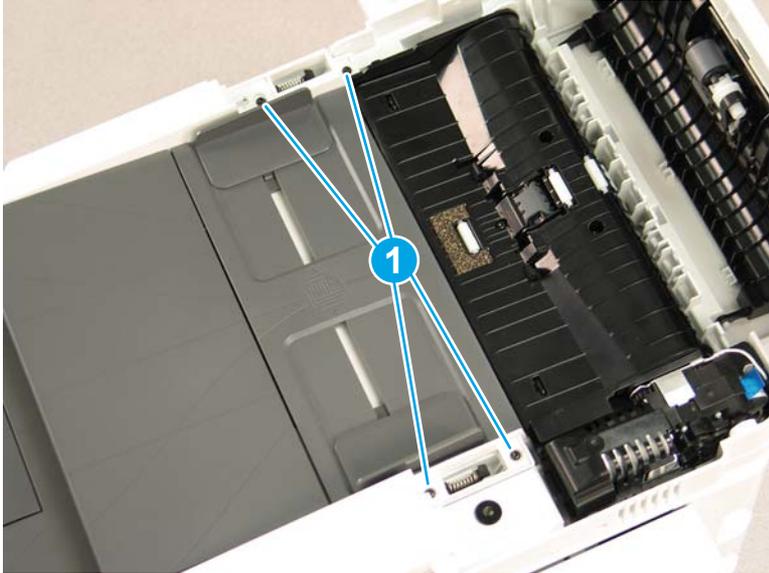


2. Remove the input tray.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-546 Remove the input tray

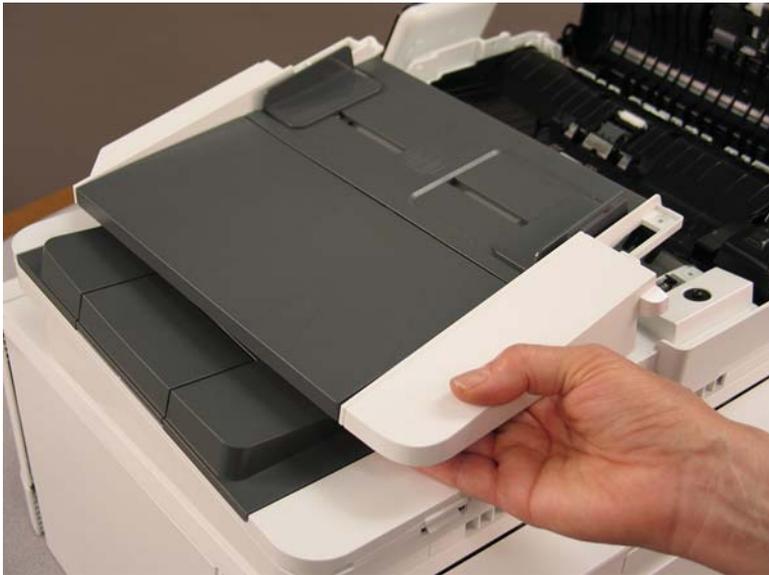

### Step 7: Remove the document feeder core (M278-M281)


1. Disconnect one flat cable (callout 1) and one slide connector (callout 2).

Figure 1-547 Disconnect two connectors

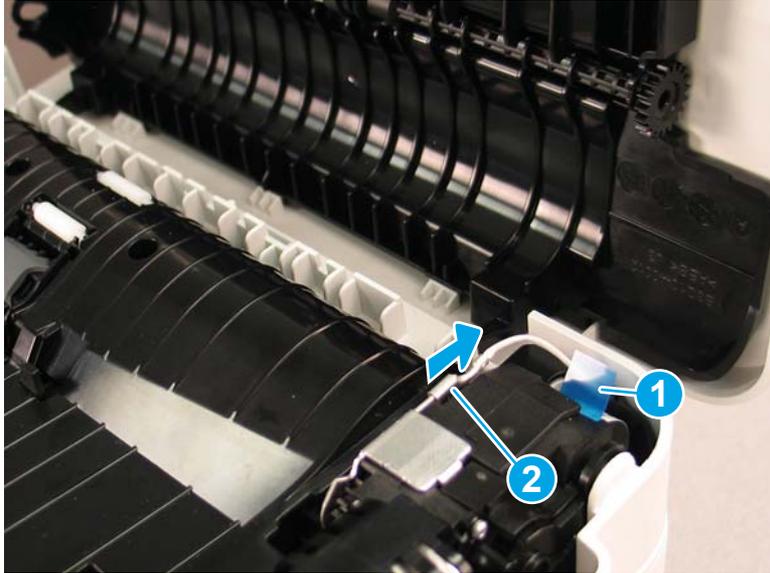


2. Use a small, flat-blade screwdriver to release the hinge (callout 1), and then lift the edge of the core assembly up (callout 2).

Figure 1-548 Release the hinge

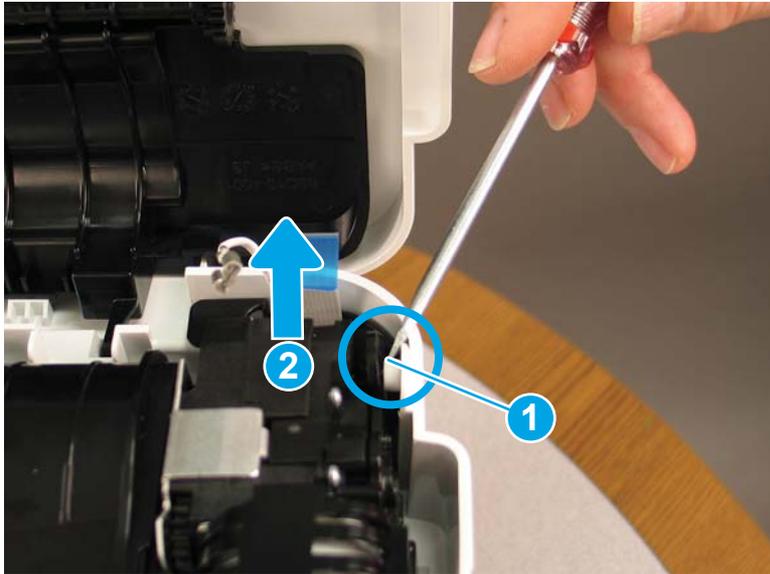

3. Rotate the core assembly toward the top cover.


Figure 1-549 Rotate the core assembly

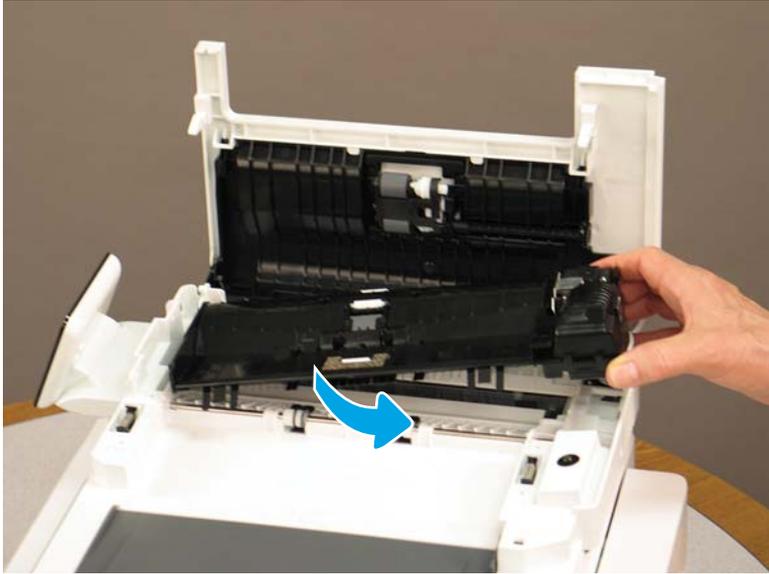

4. Rotate the front edge of the assembly towards the top cover, and then slide the assembly towards the back of the printer to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-550 Remove the core assembly

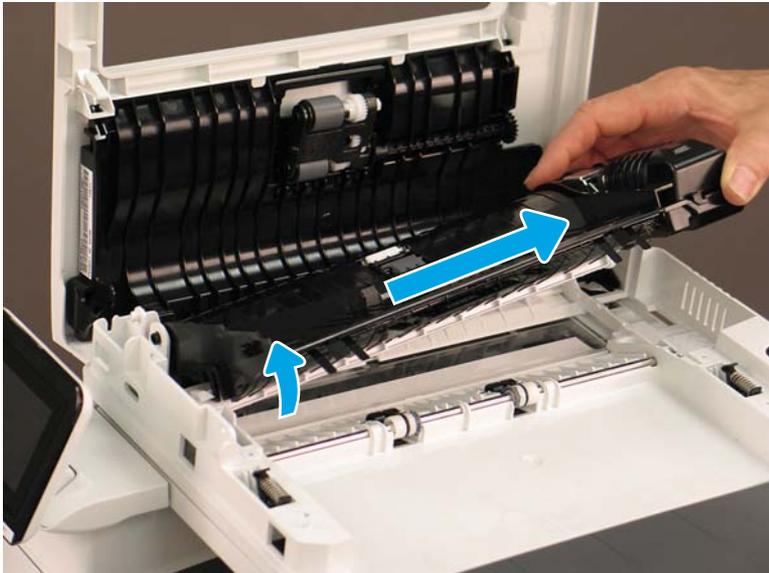

#### Step 8: Remove the document feeder base (M278-M281)


1. At the front of the printer, use a small, flat-blade screwdriver to flex the inner cover away from the outer cover (callout 1), and then lift up to release the arm from the hinge pin (callout 2).

Figure 1-551 Release the front hinge

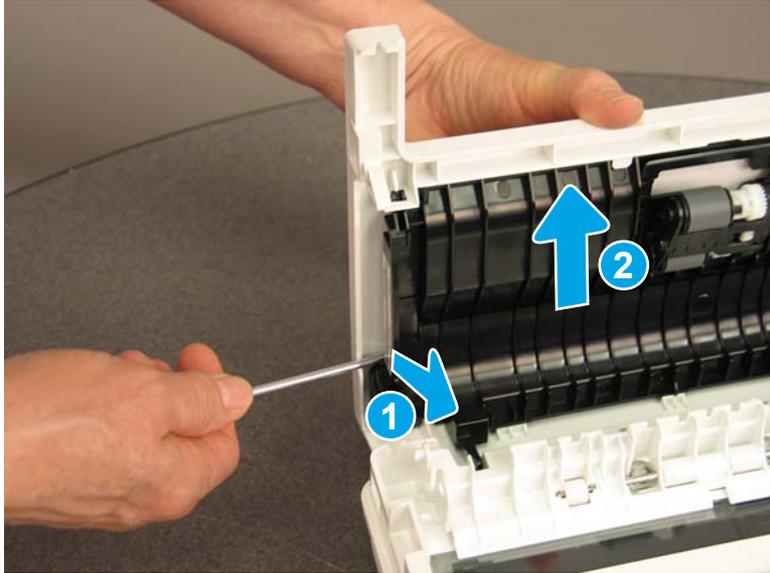


2. At the back of the printer, use a small, flat-blade screwdriver to flex the inner cover away from the outer cover (callout 1), and then lift up to release the arm from the hinge pin (callout 2). Remove the top cover.

Figure 1-552 Release the back hinge

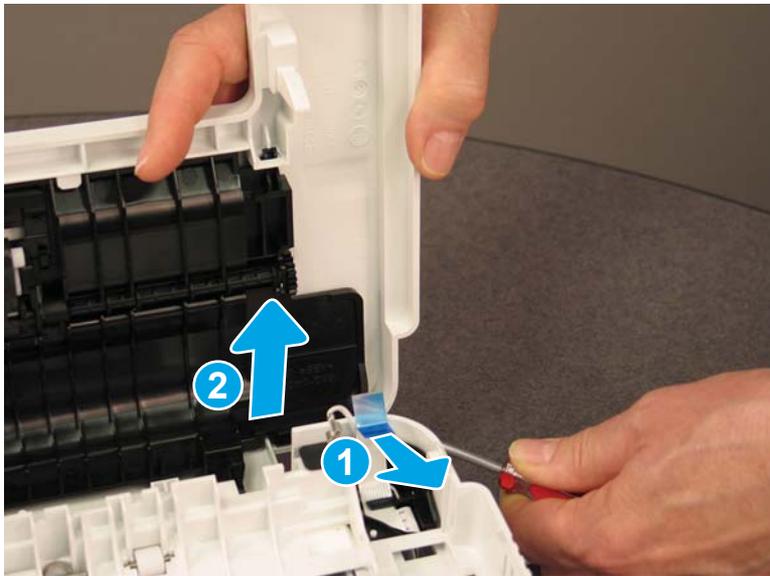


3. Turn the document feeder base and scanner over to rest on the top of the document feeder base with the bottom of the scanner facing up. Remove one Torx T10 screw (callout 1) on the bottom of the scanner assembly.

Figure 1-553 Remove one screw

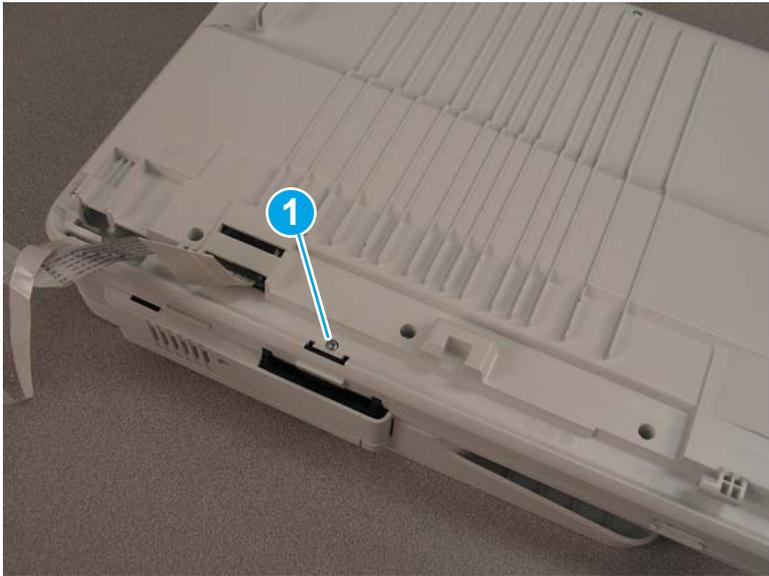


4. Turn the document feeder base and scanner over so that the top is facing up, and then remove one Torx T10 screw (callout 1).

Figure 1-554 Remove one screw

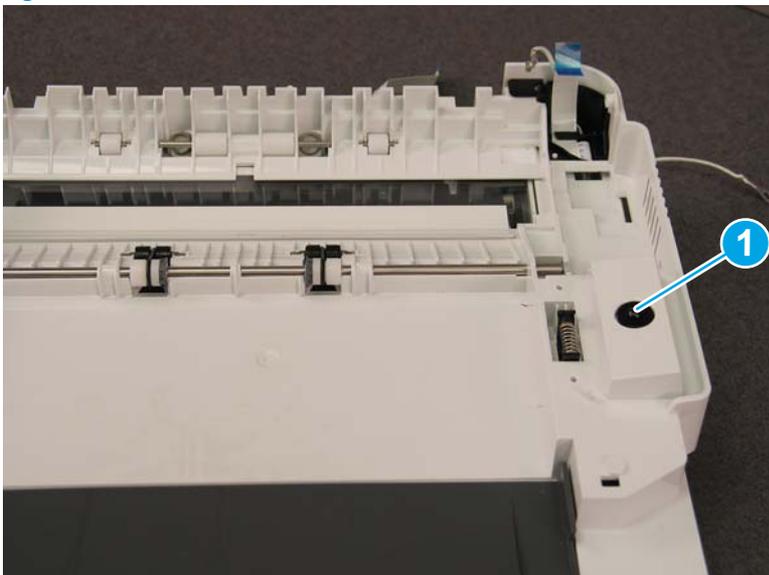


5. Open the document feeder base, and then lift up to remove it.

Figure 1-555 Remove the document feeder base

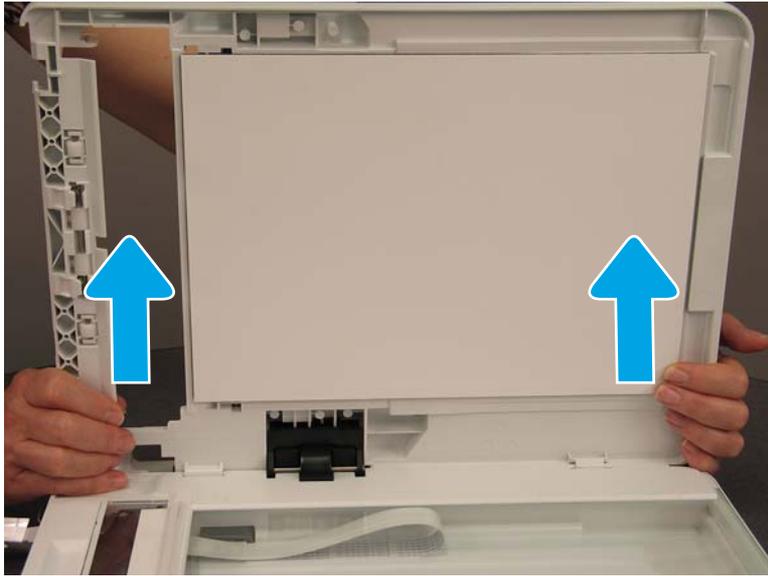


6. Locate the connector holder on the document feeder base.

Figure 1-556 Locate the connector holder

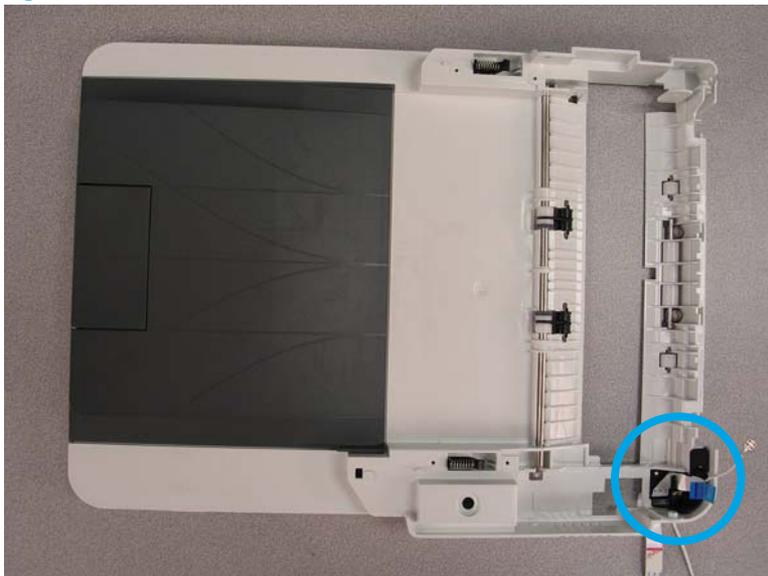

7. Remove one Torx T10 screw (callout 1).

**Figure 1-557** Remove one screw

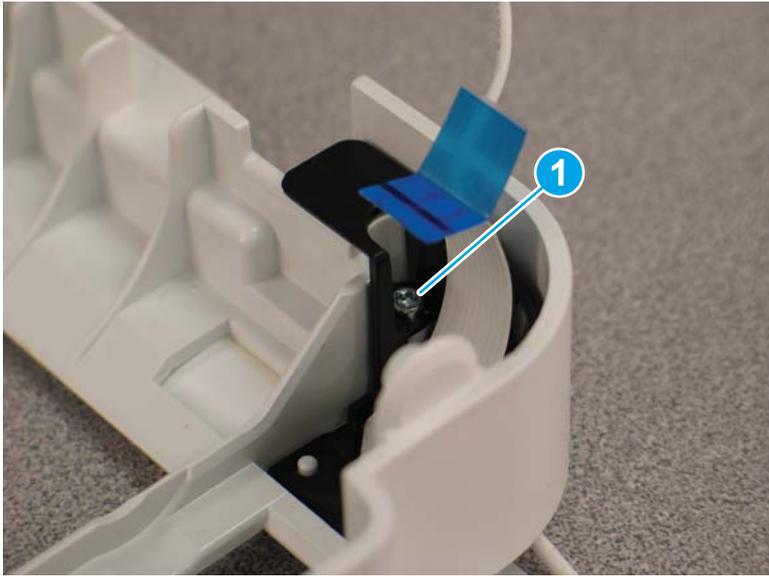


8. Remove the connector holder (callout 1) from the document feeder base.

 **Reinstallation tip:** Save the connector holder and cables to install on the replacement document feeder base.

**Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-558** Remove the connector holder

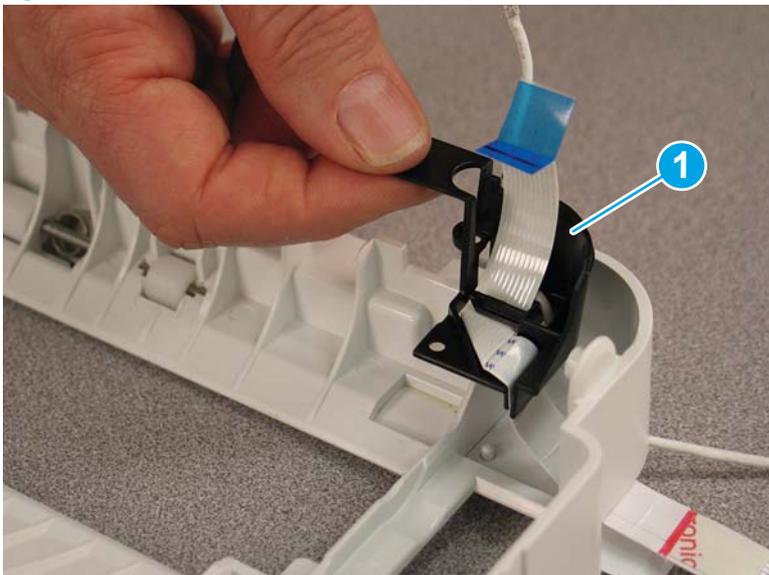

### Step 9: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Document feeder flat cable (M278-M281)

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and rear doors](#)
- [Step 3: Remove the left cover \(M278-M281\)](#)
- [Step 4: Remove the document feeder and image scanner \(M278-M281\)](#)
- [Step 5: Remove the document feeder front cover\(M278-M281\)](#)
- [Step 6: Remove the document feeder input tray \(M278-M281\)](#)
- [Step 7: Remove the document feeder core \(M278-M281\)](#)
- [Step 9: Remove the document feeder flat cable \(M278-M281\)](#)
- [Step 10: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the document feeder flat cable for the M278-M281 models.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.



**WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.

- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### Document feeder flat cable (M278-M281) part number

---

**B3Q10-60162**

ADF FFC cable assembly (M278-M281)

---

### Required tools

- Torx T10 screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

## Post service test

Verify that the document feeder is correctly functioning (copy a page).

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-559 Remove the cassette tray



### Step 2: Open the front and rear doors


1. Open the front door.

Figure 1-560 Open the front door




2. **Simplex models only:** Open the rear door.

**Figure 1-561** Open the rear door

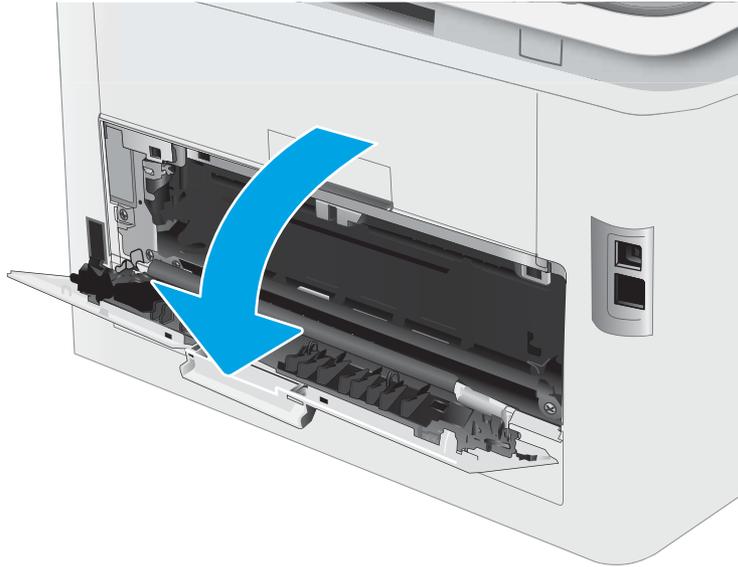

3. **Duplex models only:** Open the duplexer door.


**Figure 1-562** Open the duplexer door

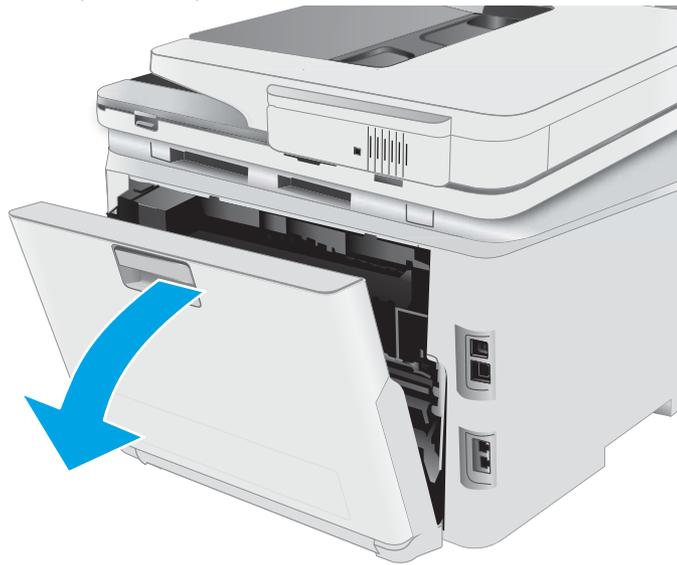

### Step 3: Remove the left cover (M278-M281)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


Figure 1-563 Tab locations

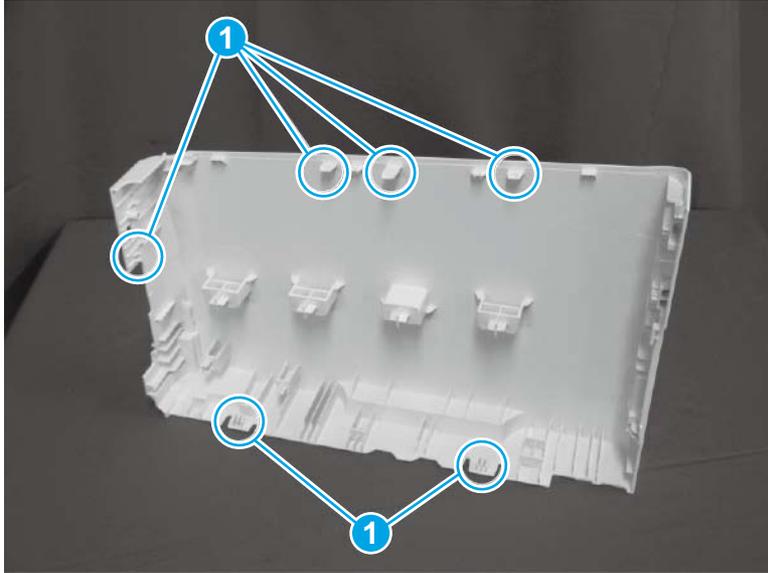

2. At the rear of the printer, remove one screw (callout 1), and then release one tab (callout 2).

 **TIP:** Use a small, flat-blade screwdriver to release the tab.

Figure 1-564 Remove one screw and release tab

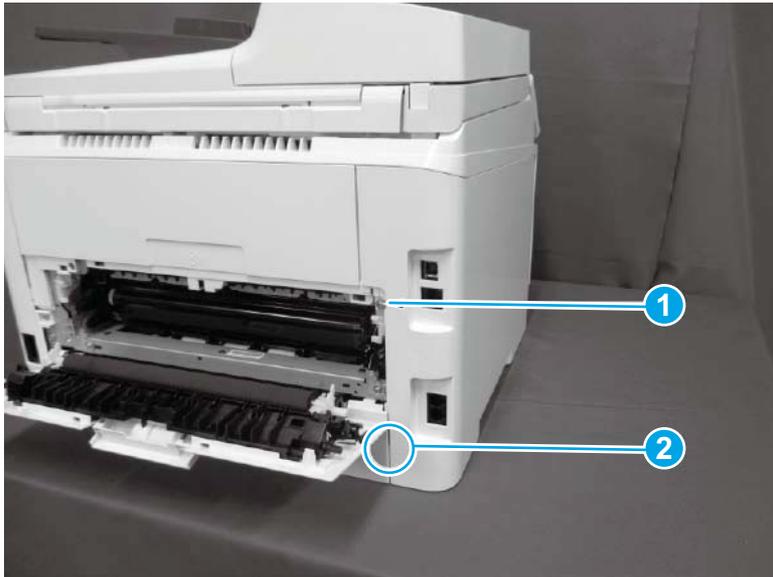


3. Release six tabs (callout 1) along the top, front, and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-565** Remove the left cover

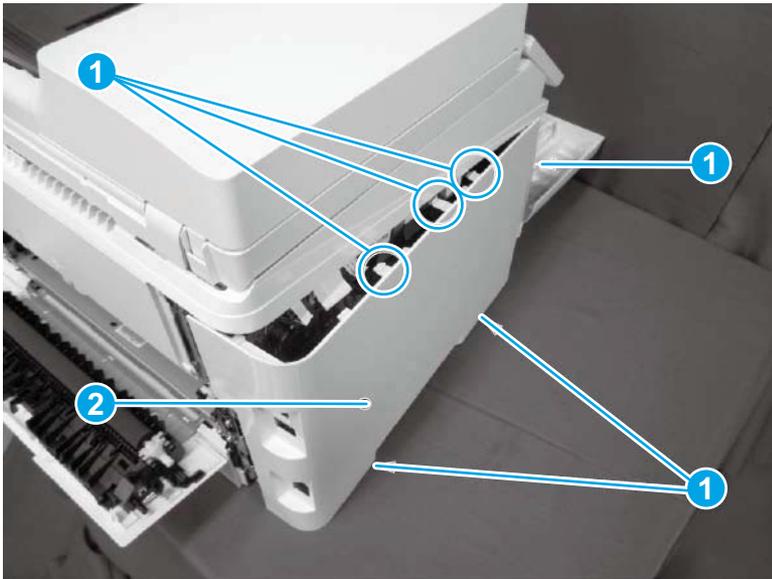

#### Step 4: Remove the document feeder and image scanner (M278-M281)

1. Disconnect two flat cables (callout 1) from the formatter, and then remove one screw (callout 2) to release the grounding wire.


**Figure 1-566** Disconnect two cables and remove one screw

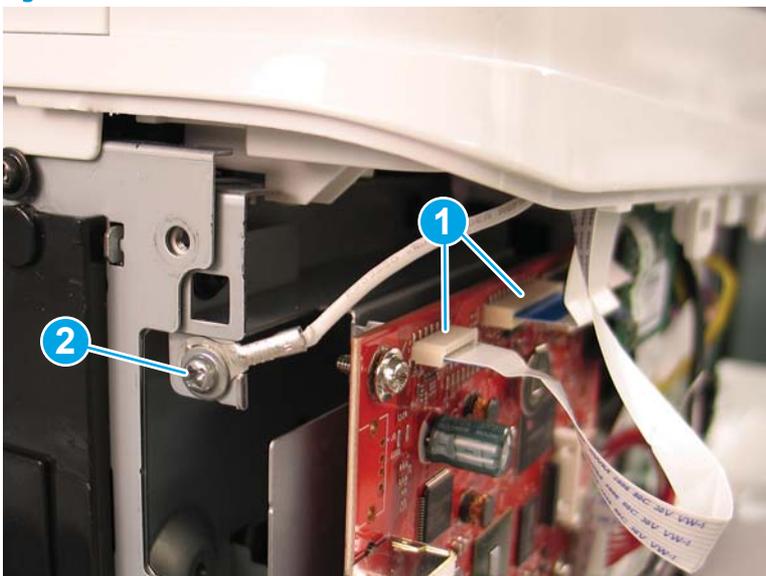

2. Open the scanner. Release one tab (callout 1), and then rotate the slider pin (callout 2) towards the front of the printer to release it.


 **TIP:** Use a Phillips head screwdriver in the end of the slider pin to rotate it.

**Figure 1-567** Release one tab and rotate the slider pin

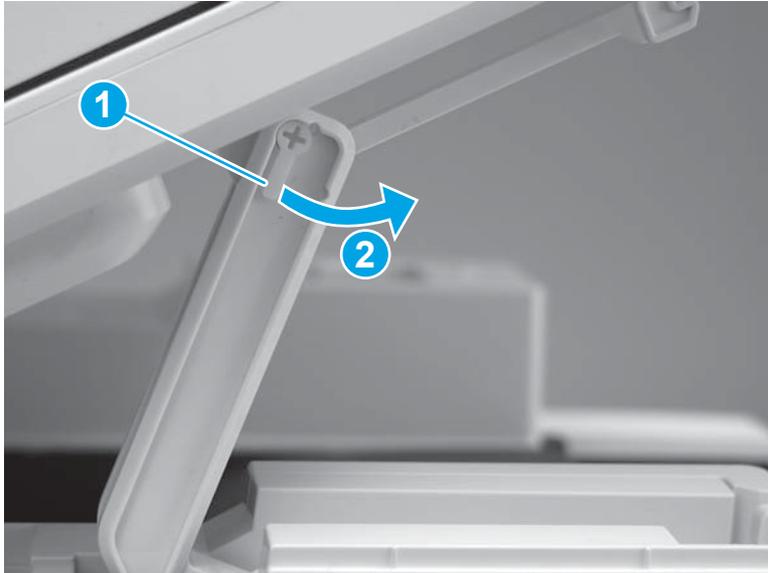

3. Remove the slider pin.


**Figure 1-568** Remove the slider pin

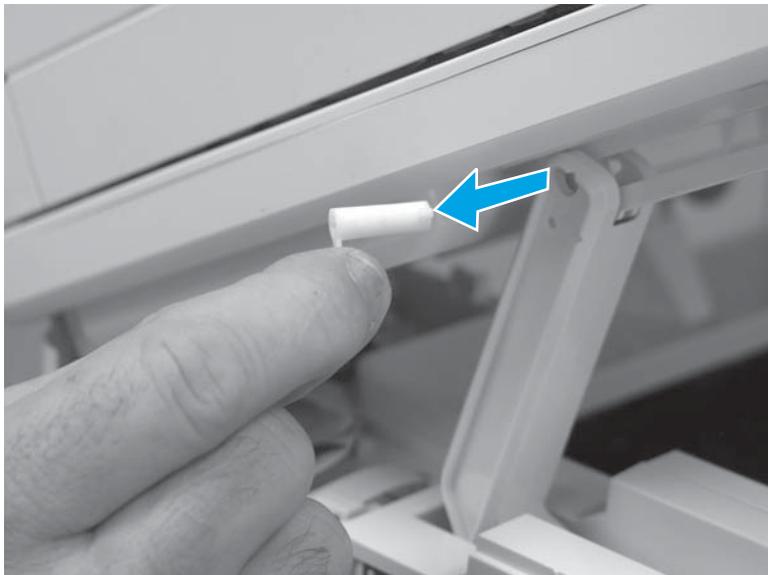

4. Rotate the hinge arm down.


**⚠ WARNING!** The hinge arm is spring-loaded by a strong spring and might snap down suddenly. Be careful not to pinch your fingers between the hinge arm and the top of the printer.

Figure 1-569 Rotate the hinge arm down

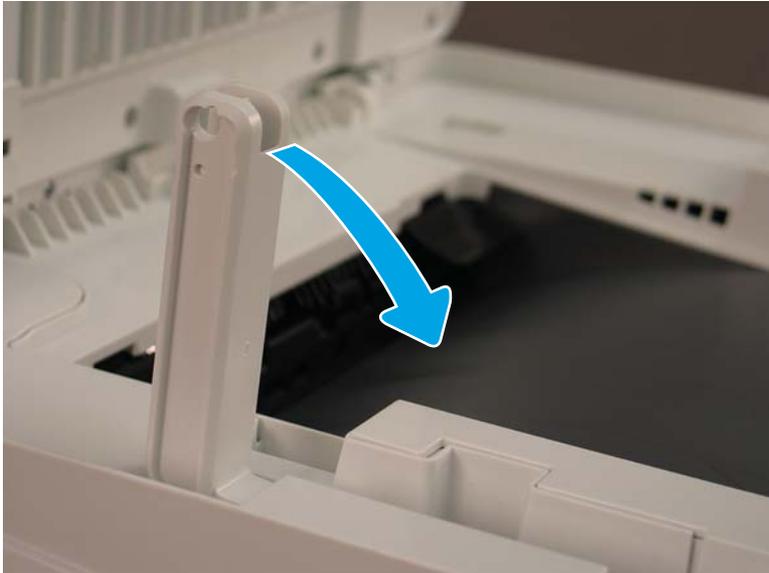


5. On the scanner bed, use a small, flat-blade screwdriver to release one tab (callout 1), and then remove the scanner cable cover (callout 2).

Figure 1-570 Remove the scanner cable cover

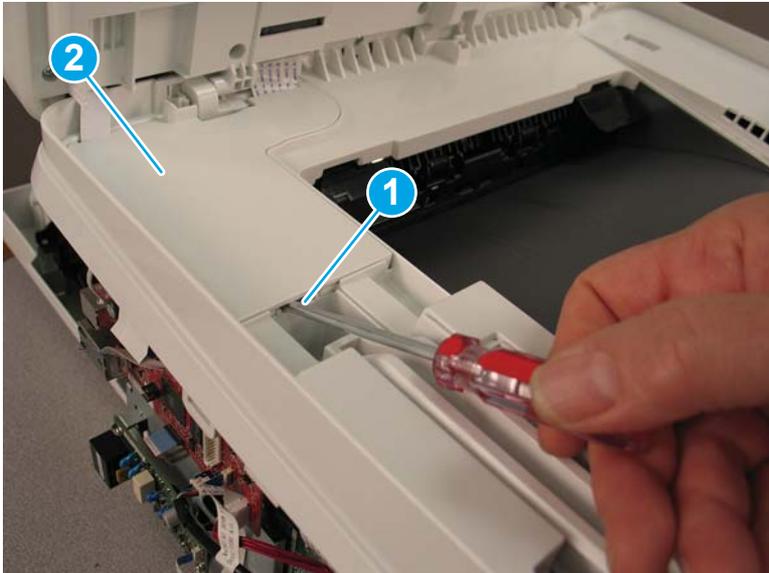

6. Release the flat cable (callout 1) from the guides (callout 2), and then feed the cables (callout 3) through the opening in the scanner.


Figure 1-571 Release the flat cable

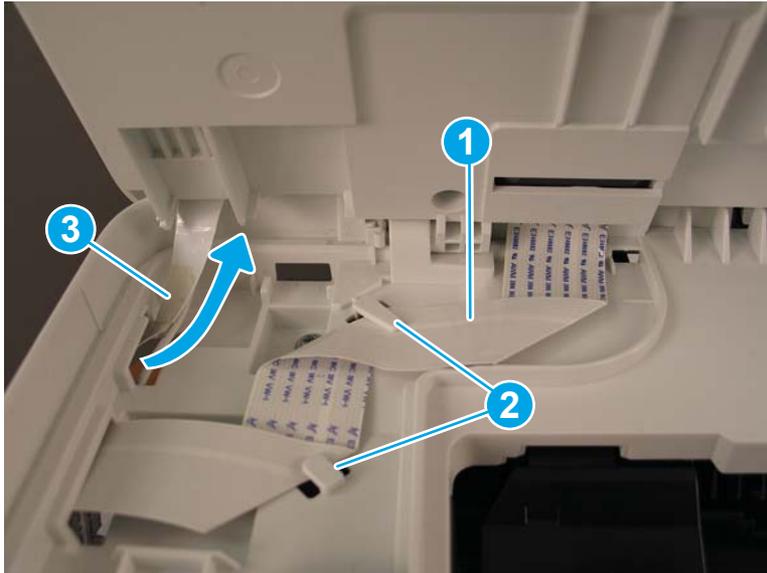

7. Open the scanner assembly fully, slide the assembly to the right (callout 1), and then lift the assembly off of the chassis (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-572 Remove the scanner assembly

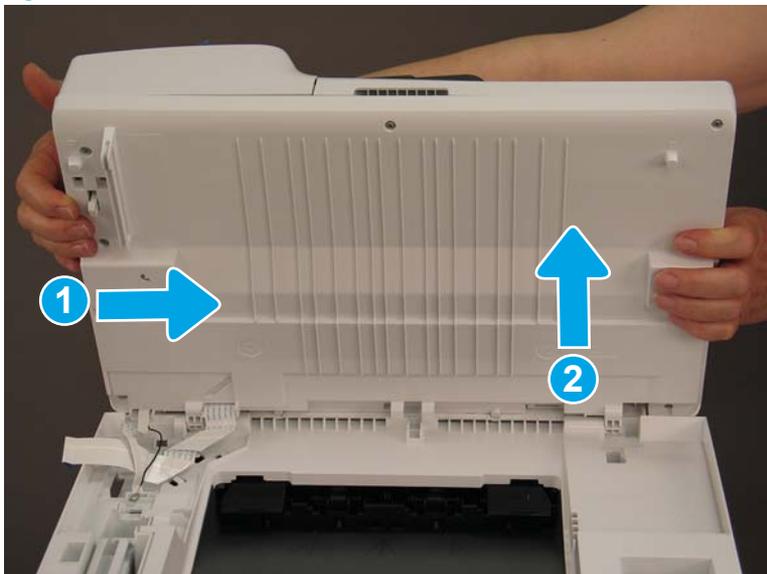

#### Step 5: Remove the document feeder front cover(M278-M281)

1. Open the document feeder top cover.

Figure 1-573 Open the document feeder top cover




2. Release the hinge on the top cover by flexing the hinge retainer outward, and then fully open the cover.

Figure 1-574 Release the hinge



3. Remove two Torx T10 screws (callout 1).

Figure 1-575 Remove two screws

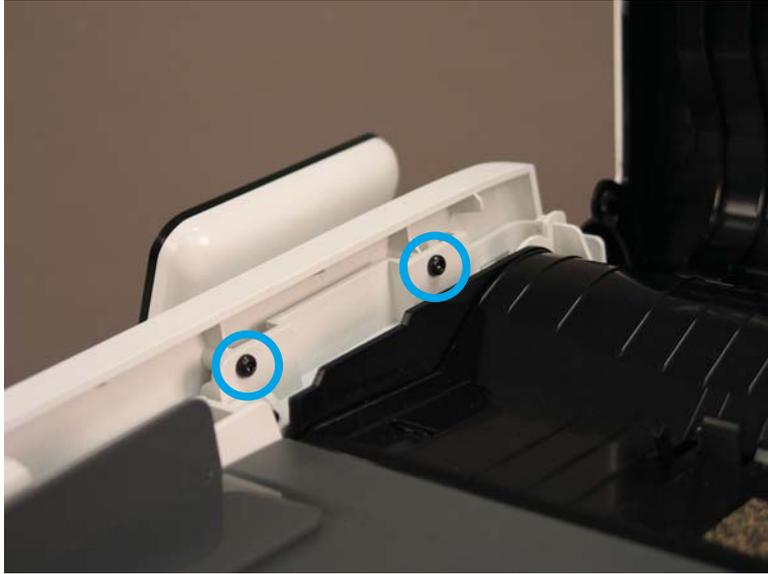

4. Slide the front cover towards the open top cover to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-576 Remove the front cover



### Step 6: Remove the document feeder input tray (M278-M281)

1. Remove four Torx T10 screws (callout 1).

Figure 1-577 Remove four screws

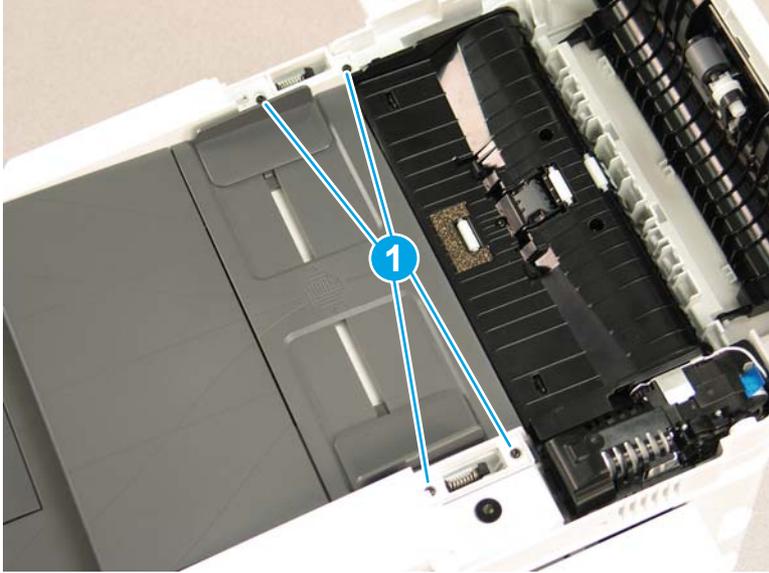

2. Remove the input tray.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-578 Remove the input tray



### Step 7: Remove the document feeder core (M278-M281)


1. Disconnect one flat cable (callout 1) and one slide connector (callout 2).

Figure 1-579 Disconnect two connectors

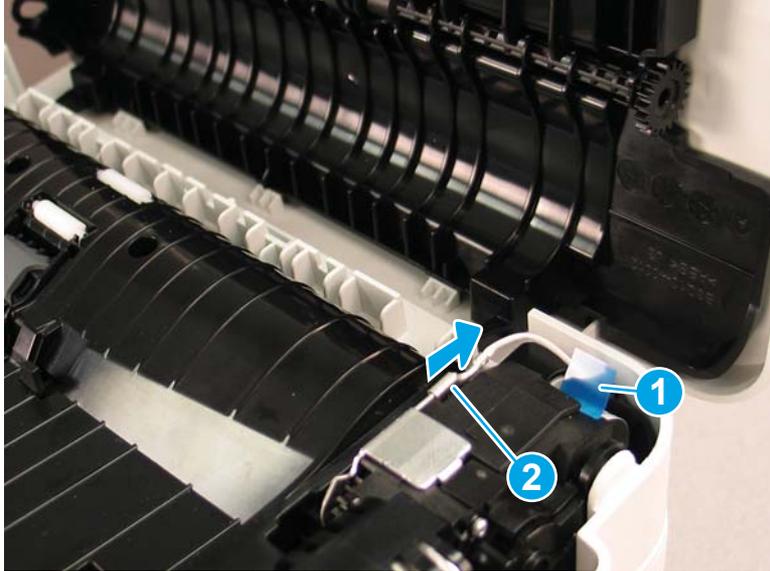


2. Use a small, flat-blade screwdriver to release the hinge (callout 1), and then lift the edge of the core assembly up (callout 2).

Figure 1-580 Release the hinge

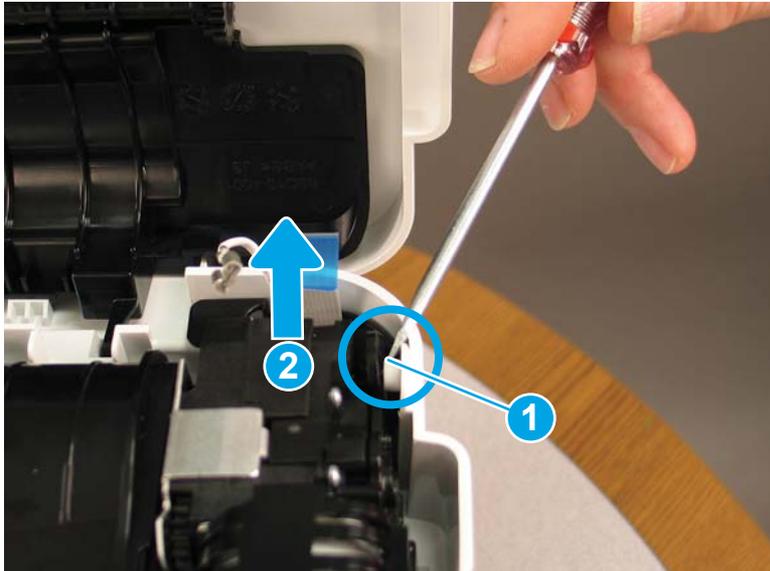

3. Rotate the core assembly toward the top cover.


**Figure 1-581** Rotate the core assembly

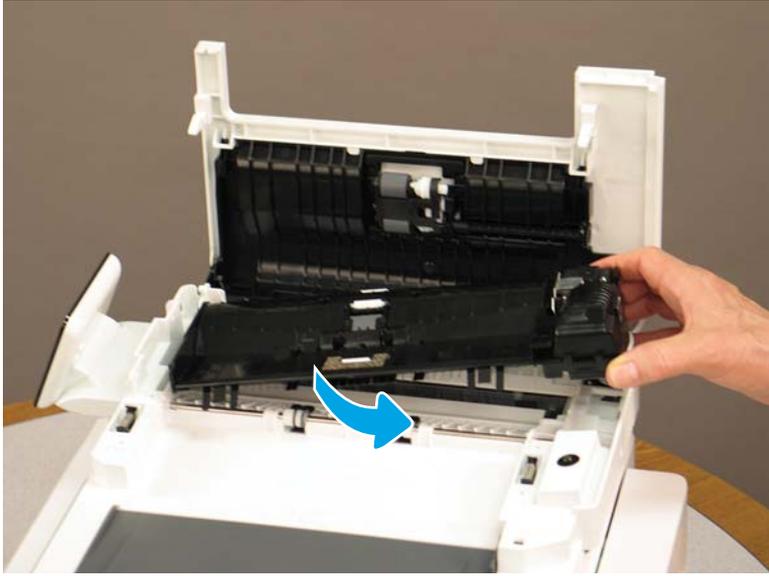

4. Rotate the front edge of the assembly towards the top cover, and then slide the assembly towards the back of the printer to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-582** Remove the core assembly

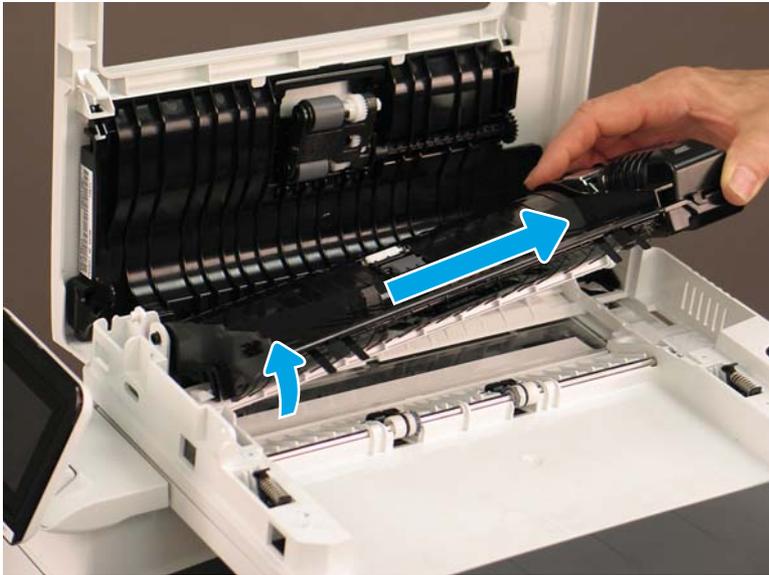

### Step 9: Remove the document feeder flat cable (M278-M281)


1. At the front of the printer, use a small, flat-blade screwdriver to flex the inner cover away from the outer cover (callout 1), and then lift up to release the arm from the hinge pin (callout 2).

Figure 1-583 Release the front hinge

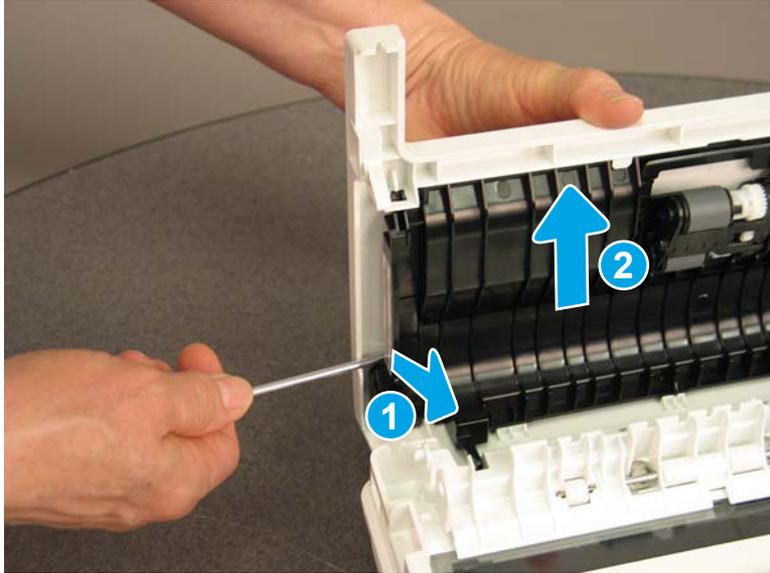


2. At the back of the printer, use a small, flat-blade screwdriver to flex the inner cover away from the outer cover (callout 1), and then lift up to release the arm from the hinge pin (callout 2). Remove the top cover.

Figure 1-584 Release the back hinge

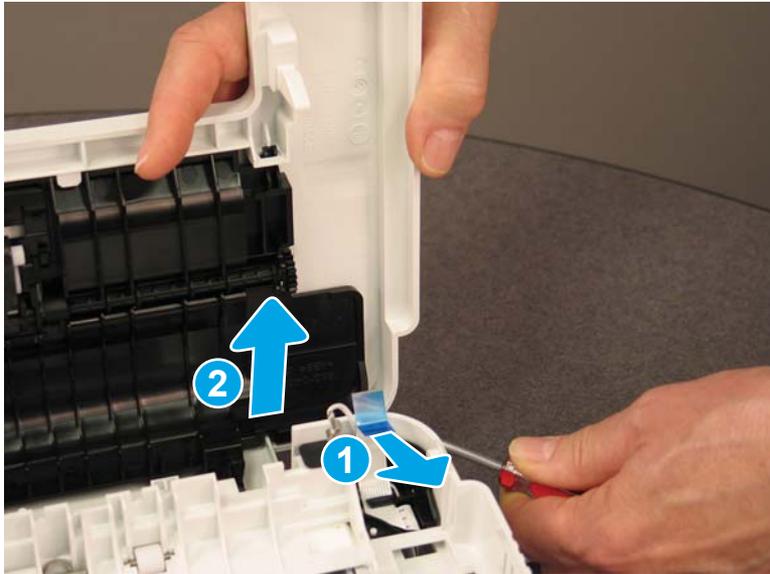


3. Turn the document feeder base and scanner over to rest on the top of the document feeder base with the bottom of the scanner facing up. Remove one Torx T10 screw (callout 1) on the bottom of the scanner assembly.

Figure 1-585 Remove one screw

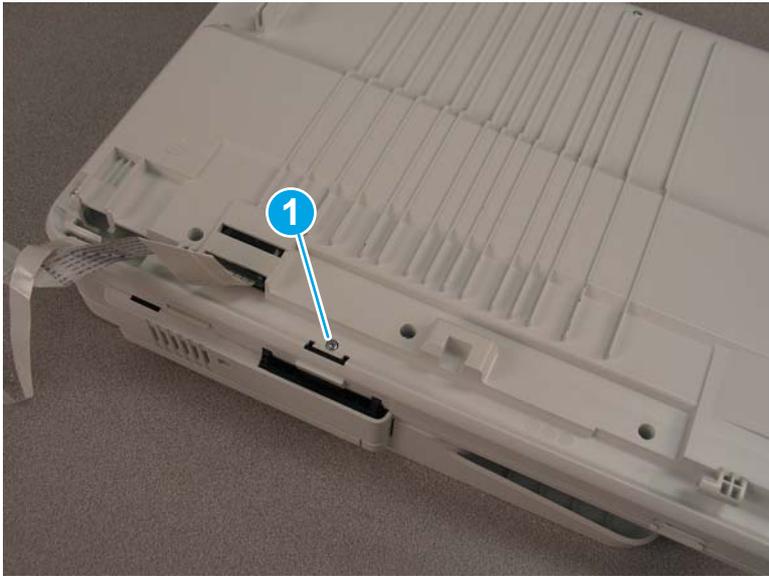


4. Turn the document feeder base and scanner over so that the top is facing up, and then remove one Torx T10 screw (callout 1).

Figure 1-586 Remove one screw

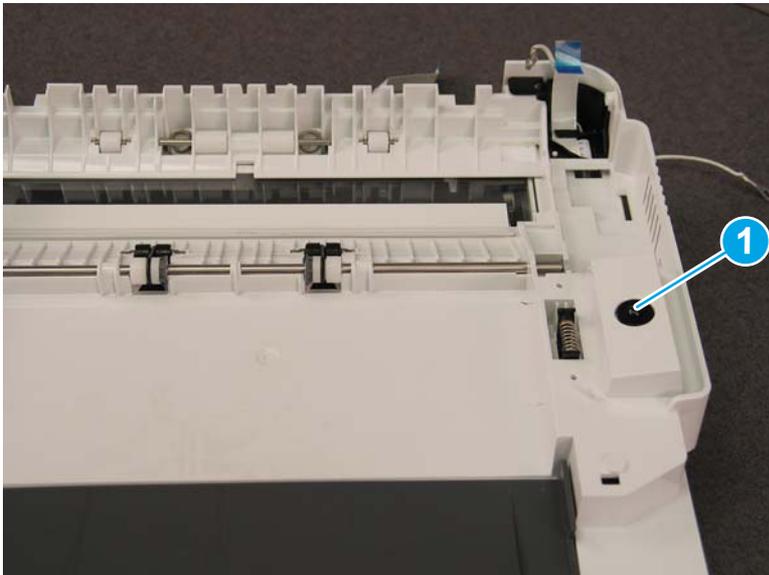


5. Open the document feeder base, and then lift up to remove it.

Figure 1-587 Remove the document feeder base

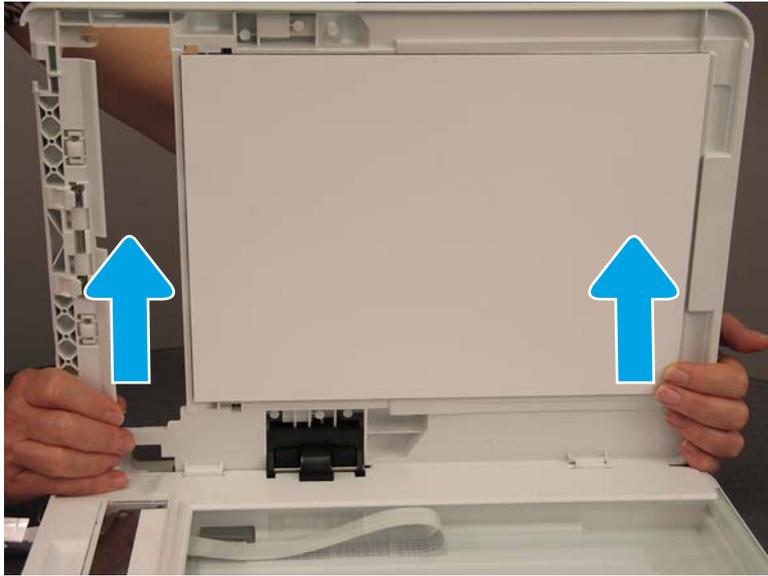


6. Locate the connector holder on the document feeder base.

Figure 1-588 Locate the connector holder

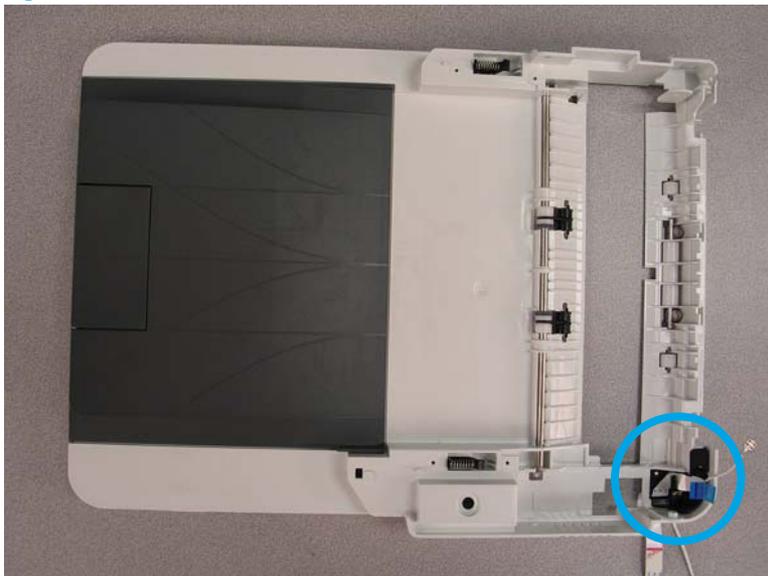


7. Remove one Torx T10 screw (callout 1).

Figure 1-589 Remove one screw

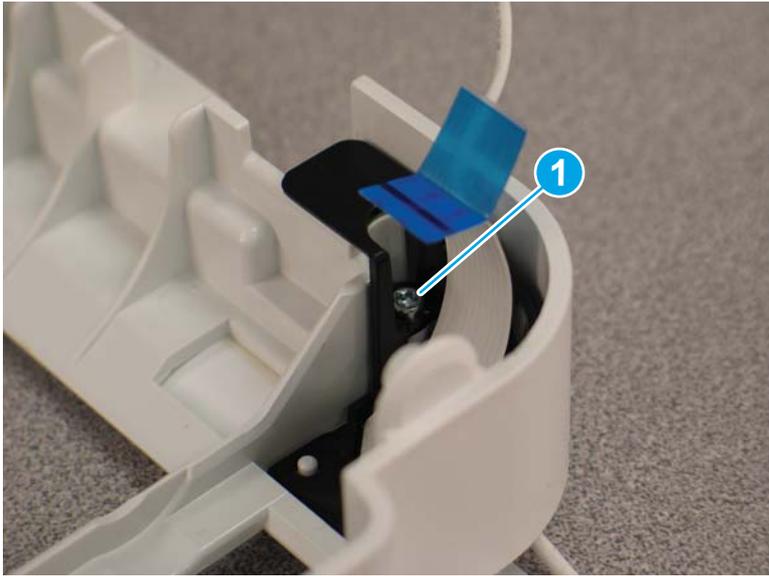

8. Remove the connector holder (callout 1) from the document feeder base.

Figure 1-590 Remove the connector holder

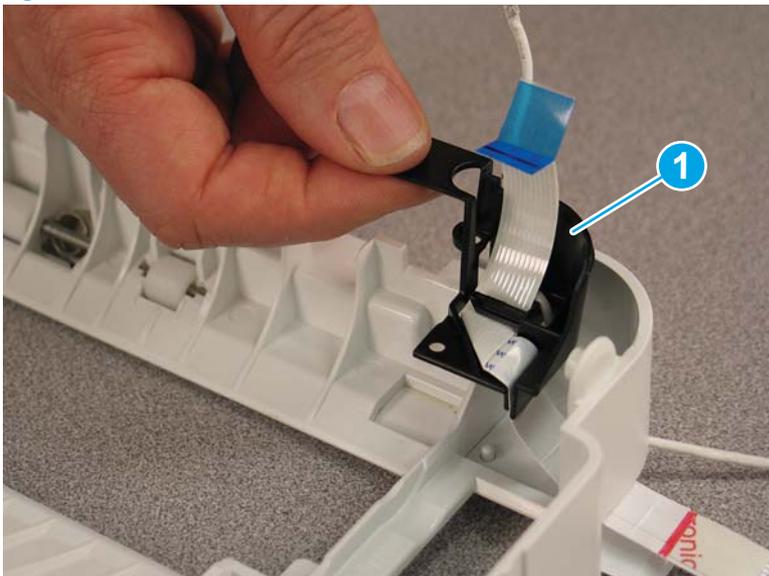

9. Remove the flat cable (callout 1) from the connector holder.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-591** Remove the flat cable



### Step 10: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Internal parts and assemblies

- [Removal and replacement: Wireless PCA \(M153-M154, M253-M254, and M278-M281\)](#)
- [Removal and replacement: Wireless PCA \(M178-M181\)](#)
- [Removal and replacement: Fax PCA \(M181 and M281\)](#)
- [Removal and replacement: Formatter PCA \(M153-M154 and M253-M254\)](#)
- [Removal and replacement: Formatter PCA \(M178-M181 and M278-M281\)](#)
- [Removal and replacement: Engine controller unit \(M153-M154 and M253-M254\)](#)
- [Removal and replacement: Engine controller unit \(M178-M181 and M278-M281\)](#)
- [Removal and replacement: Intermediate transfer belt \(ITB\)](#)
- [Removal and replacement: Density detect sensor assembly](#)
- [Removal and replacement: Duplexing drive assembly \(duplex models\)](#)
- [Removal and replacement: Output sensor assembly \(M178-M181\)](#)
- [Removal and replacement: Power supply switch assembly](#)
- [Removal and replacement: Low-voltage power supply \(LVPS\)](#)
- [Removal and replacement: Fuser](#)
- [Removal and replacement: Main motor](#)
- [Removal and replacement: Fuser motor](#)
- [Removal and replacement: Pickup motor](#)
- [Removal and replacement: Main fan \(M153-M154 and M253-M254\)](#)
- [Removal and replacement: Main fan \(M178-M181 and M278-M281\)](#)

## Removal and replacement: Wireless PCA (M153-M154, M253-M254, and M278-M281)

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and rear doors](#)
- [Step 3: Remove the left cover \(M153-M154 and M253-M254\)](#)
- [Step 4: Remove the left cover \(M278-M281\)](#)
- [Step 5: Remove the wireless PCA \(M153-M154, M253-M254, and M278-M281\)](#)
- [Step 6: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the wireless PCA for the M153-M154, M253-M254, and M278-M281 models.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.



**WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.

- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Wireless PCA (M153-M154, M253-M254, and M278-M281) part number	
0960-3662	Wireless board

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


Make sure that the printer initializes to a **Ready** state.

Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-592 Remove the cassette tray

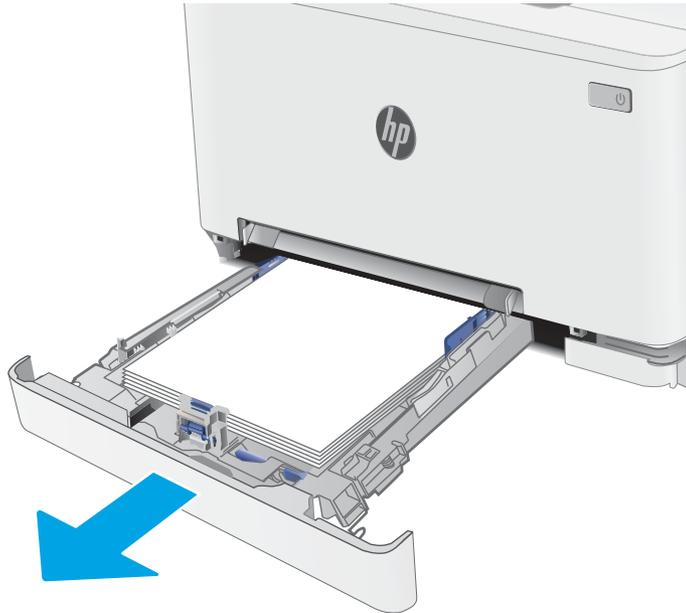

### Step 2: Open the front and rear doors


1. Open the front door.

Figure 1-593 Open the front door




2. **Simplex models only:** Open the rear door.

Figure 1-594 Open the rear door

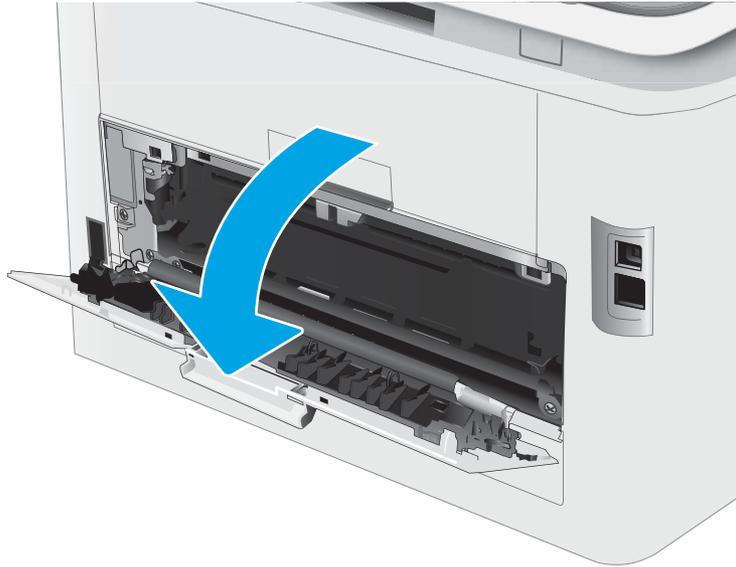

3. **Duplex models only:** Open the duplexer door.

Figure 1-595 Open the duplexer door

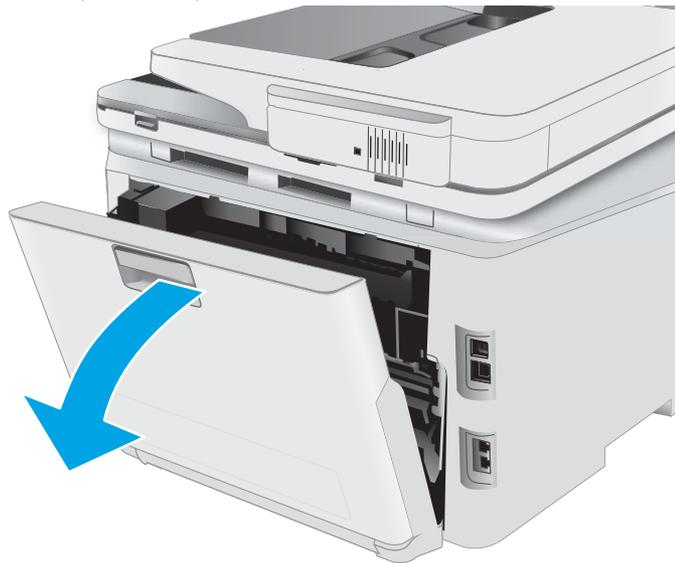


### Step 3: Remove the left cover (M153-M154 and M253-M254)

 **NOTE:** This step is for the M153-M154 and M253-M254 printers. For the M278-M281 printers, skip this step and go to [Step 4: Remove the left cover \(M278-M281\) on page 415](#).

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-596 Tab locations

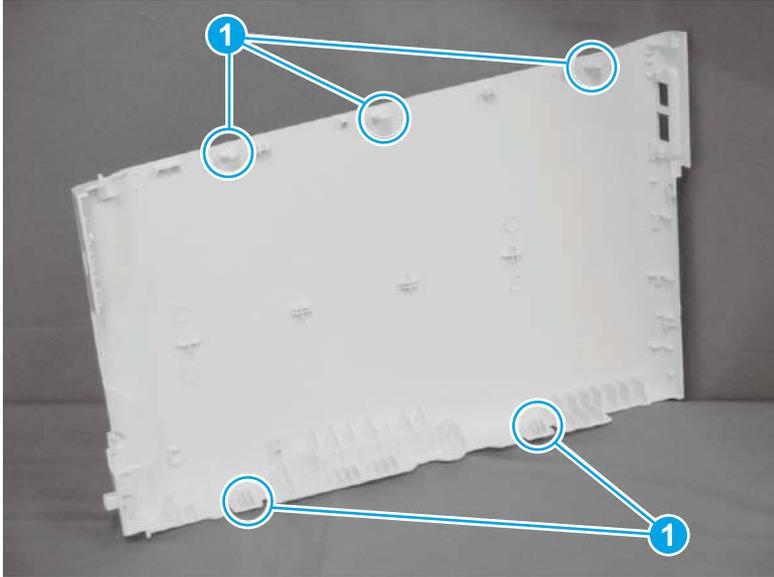


2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

---

Figure 1-597 Remove one screw and release tabs

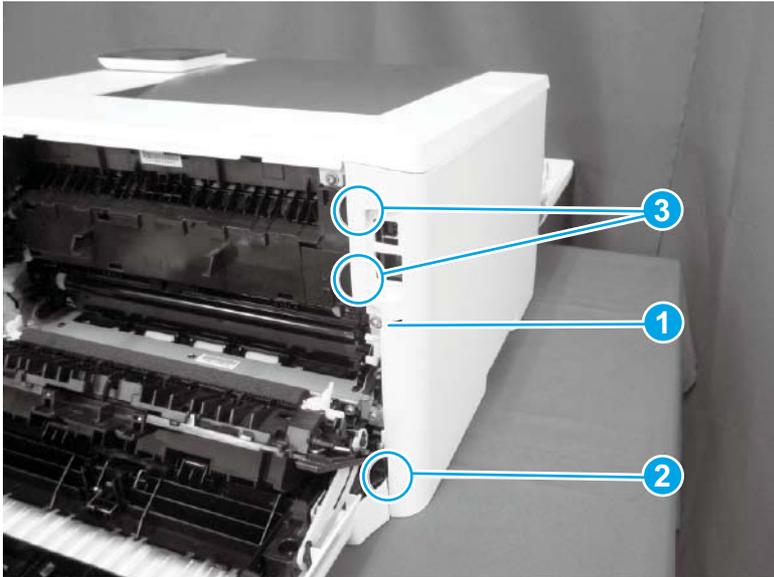

3. Release five tabs (callout 1) along the top and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

---


 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-598** Remove the left cover

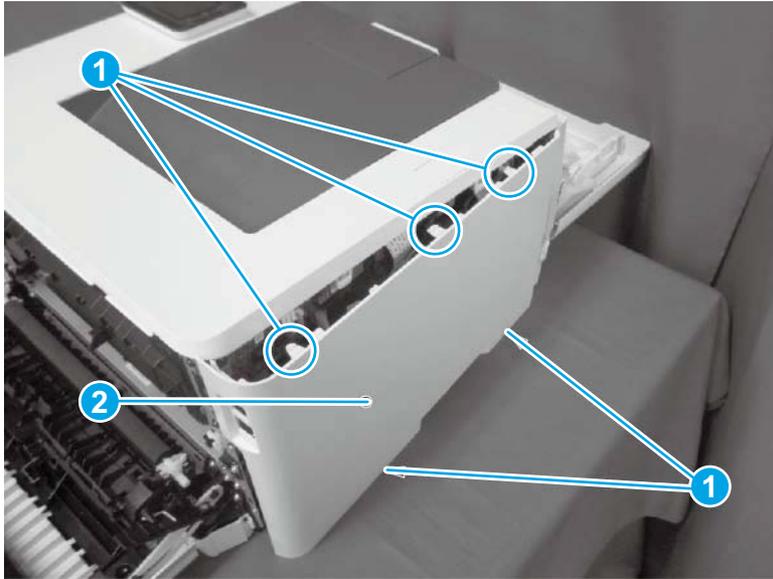

#### Step 4: Remove the left cover (M278-M281)


---

 **NOTE:** This step is for the M278-M281 printers. For the M153-M154 and M253-M254 printers, skip this step and go to [Step 5: Remove the wireless PCA \(M153-M154, M253-M254, and M278-M281\) on page 417.](#)

---

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-599 Tab locations

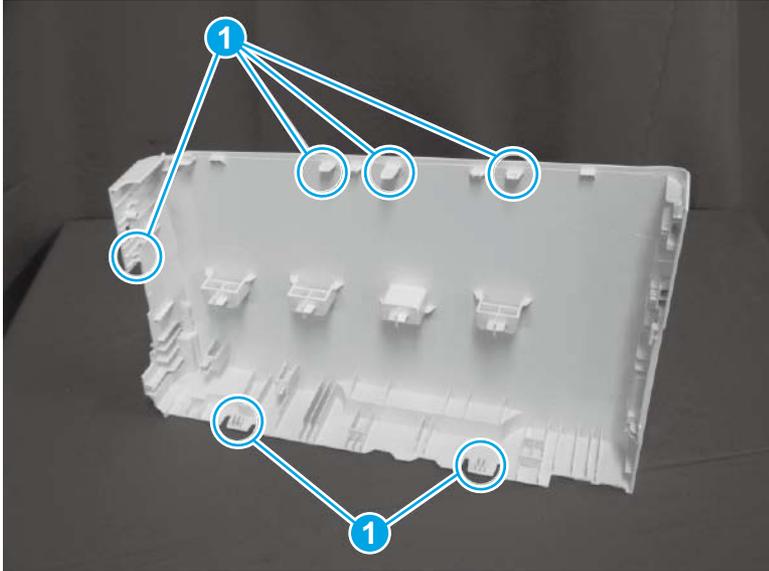


2. At the rear of the printer, remove one screw (callout 1), and then release one tab (callout 2).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab.

---

Figure 1-600 Remove one screw and release tab

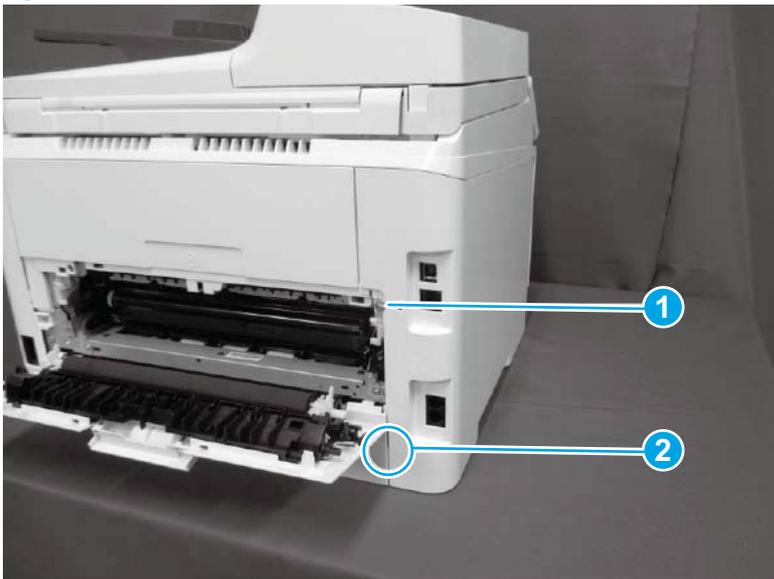


3. Release six tabs (callout 1) along the top, front, and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-601 Remove the left cover

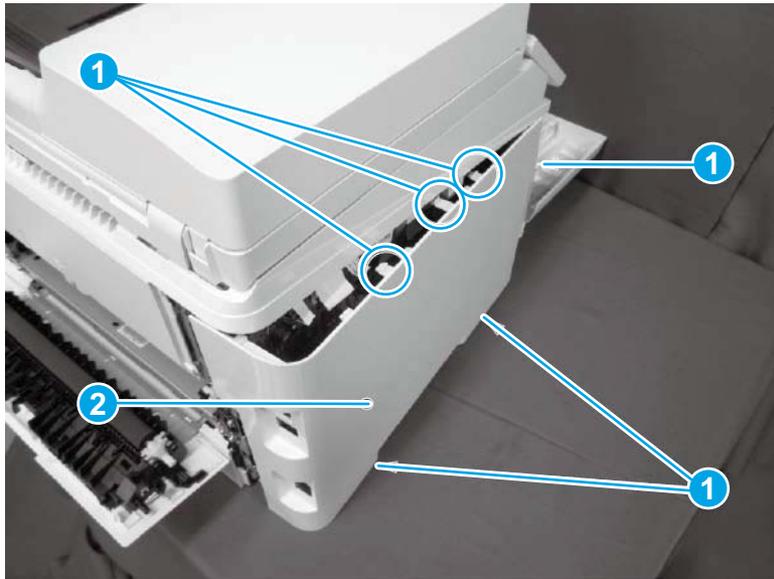


#### Step 5: Remove the wireless PCA (M153-M154, M253-M254, and M278-M281)

 **CAUTION:**  ESD sensitive part.

- ▲ On the left side of the printer, release two tabs (callout 1), and then pull the wireless PCA away from the formatter PCA to disconnect the connector on the back.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-602 Remove the wireless PCA

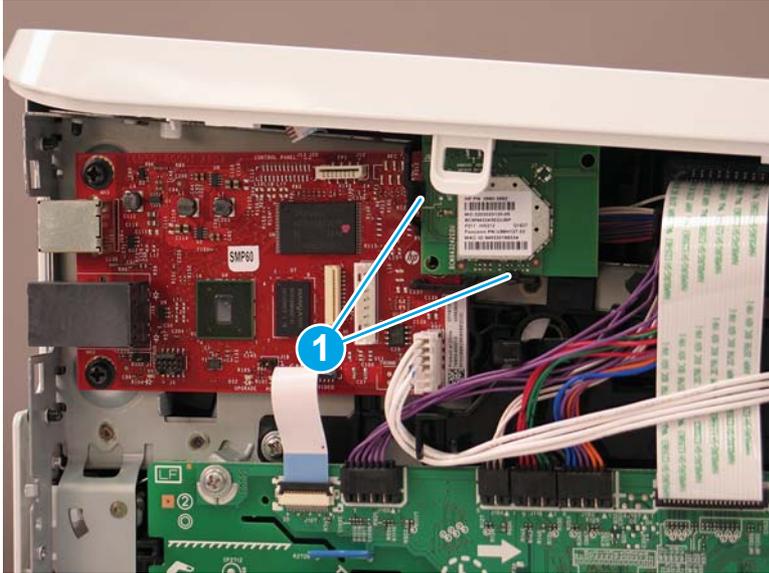

### Step 6: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Wireless PCA (M178-M181)

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and rear doors](#)
- [Step 3: Remove the left cover \(M178-M181\)](#)
- [Step 4: Remove the wireless PCA \(M178-M181\)](#)
- [Step 5: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the wireless PCA for the M178-M181 models.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.  
 **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Wireless PCA (M178-M181) part number	
0960-3662	Wireless board

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


Make sure that the printer initializes to a **Ready** state.

Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-603 Remove the cassette tray

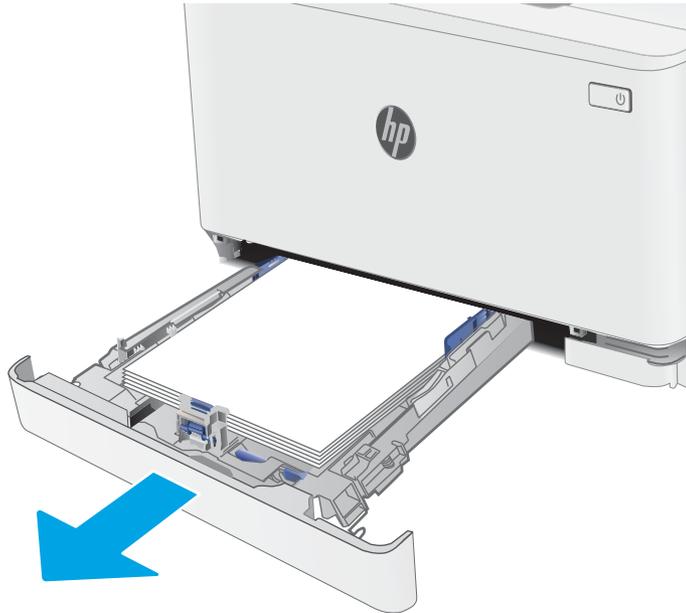

### Step 2: Open the front and rear doors


1. Open the front door.

Figure 1-604 Open the front door



2. Open the rear door.


Figure 1-605 Open the rear door

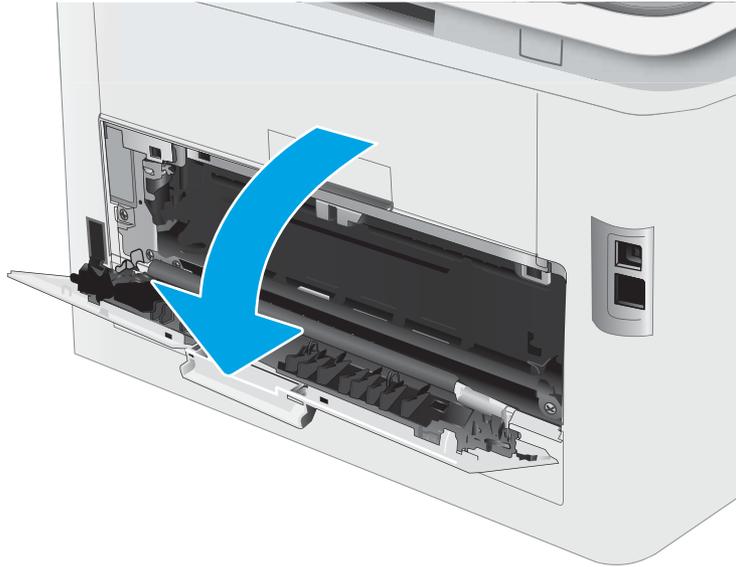

### Step 3: Remove the left cover (M178-M181)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


Figure 1-606 Tab locations

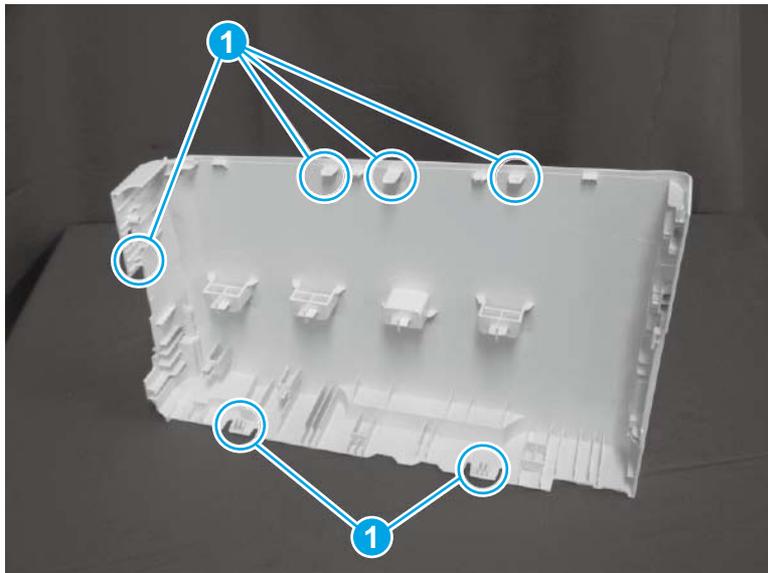

- At the rear of the printer, remove one screw (callout 1), and then release one tab (callout 2).

 **TIP:** Use a small, flat-blade screwdriver to release the tab.

**Figure 1-607** Remove one screw and release tab

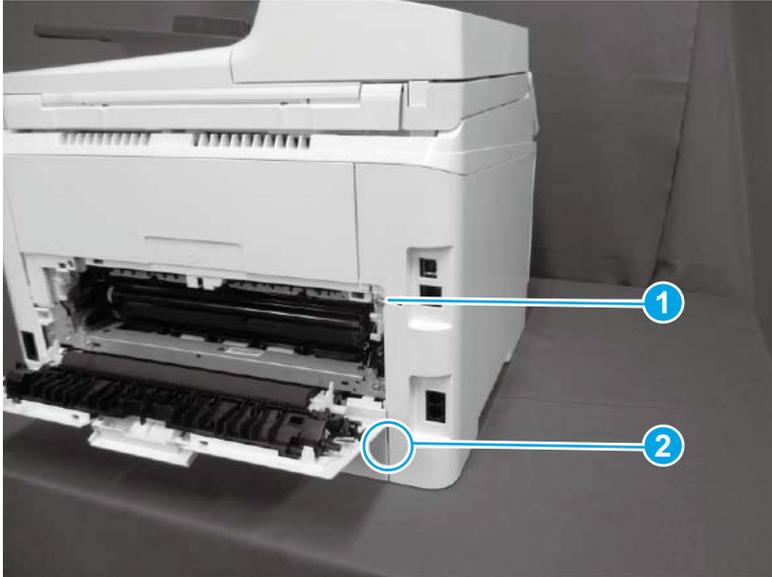


- Release six tabs (callout 1) along the top, front, and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-608** Remove the left cover

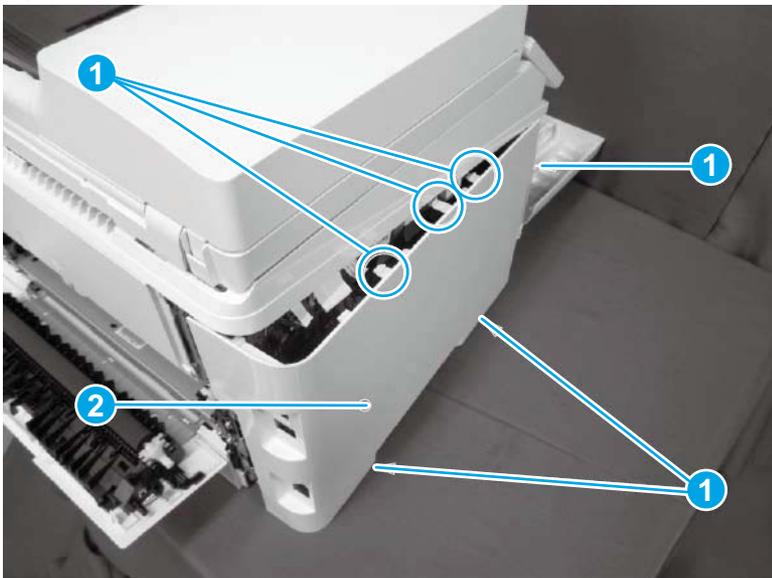


## Step 4: Remove the wireless PCA (M178-M181)

 **CAUTION:**  ESD sensitive part.

- ▲ On the left side of the printer, remove one screw (callout 1), and then pull the wireless PCA away from the formatter PCA to disconnect the connector on the back.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-609 Remove the wireless PCA

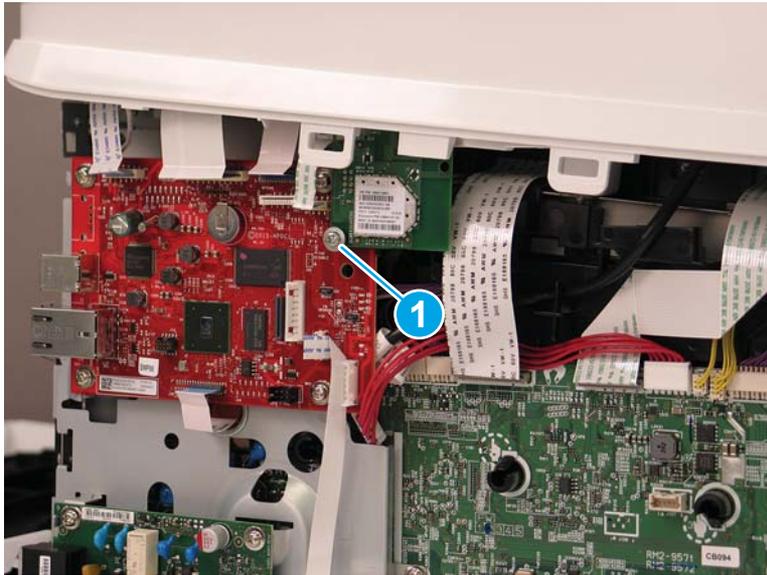

## Step 5: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Fax PCA (M181 and M281)

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and rear doors](#)
- [Step 3: Remove the left cover \(M178-M181 and M278-M281\)](#)
- [Step 4: Remove the fax PCA](#)
- [Step 5: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the fax PCA for the M181 and M182 models.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.  
 **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Fax PCA part numbers	
G3Q60-60001	Fax PCA (WW)
G3Q61-60001	Fax PCA (EU)
G3Q62-60001	Fax PCA (Brazil)

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Make sure that the printer initializes to a **Ready** state.

Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-610 Remove the cassette tray



### Step 2: Open the front and rear doors


1. Open the front door.

Figure 1-611 Open the front door




2. **Simplex models only:** Open the rear door.

Figure 1-612 Open the rear door

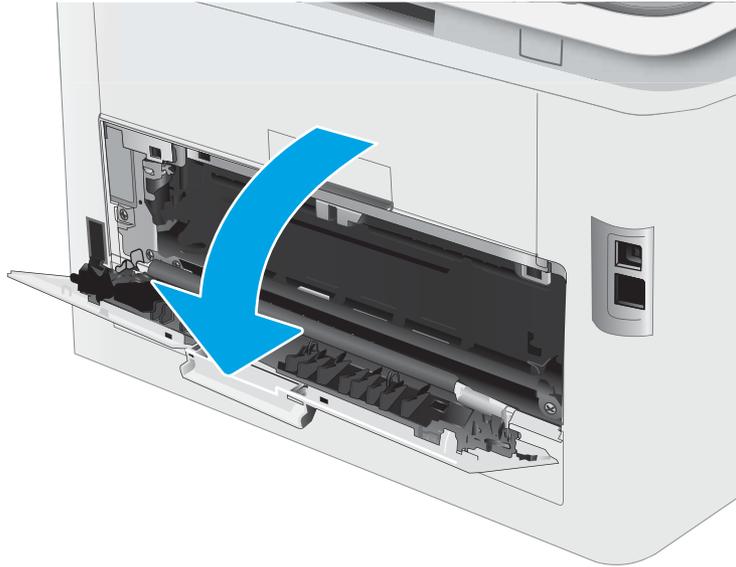

3. **Duplex models only:** Open the duplexer door.


Figure 1-613 Open the duplexer door

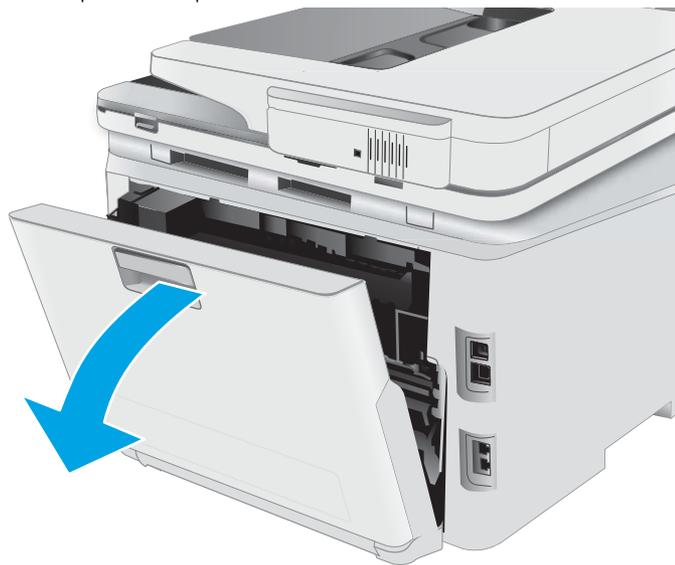

### Step 3: Remove the left cover (M178-M181 and M278-M281)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-614 Tab locations

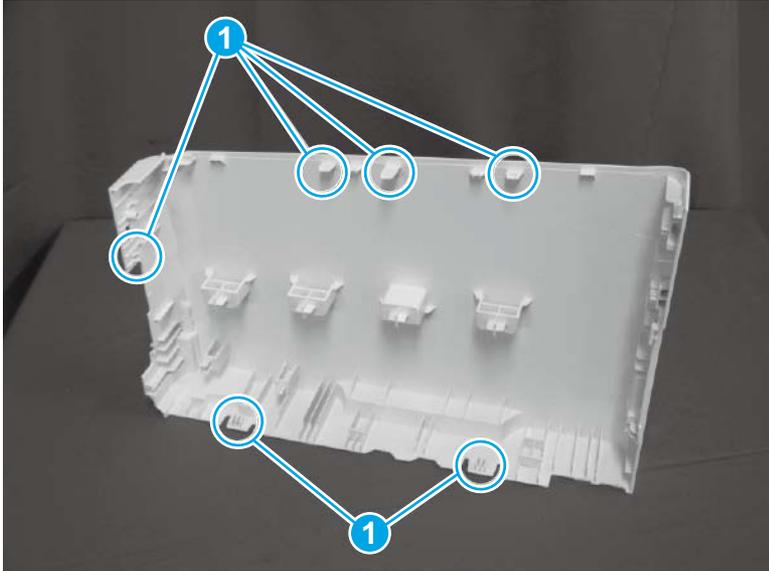


2. At the rear of the printer, remove one screw (callout 1), and then release one tab (callout 2).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab.

---

Figure 1-615 Remove one screw and release tab

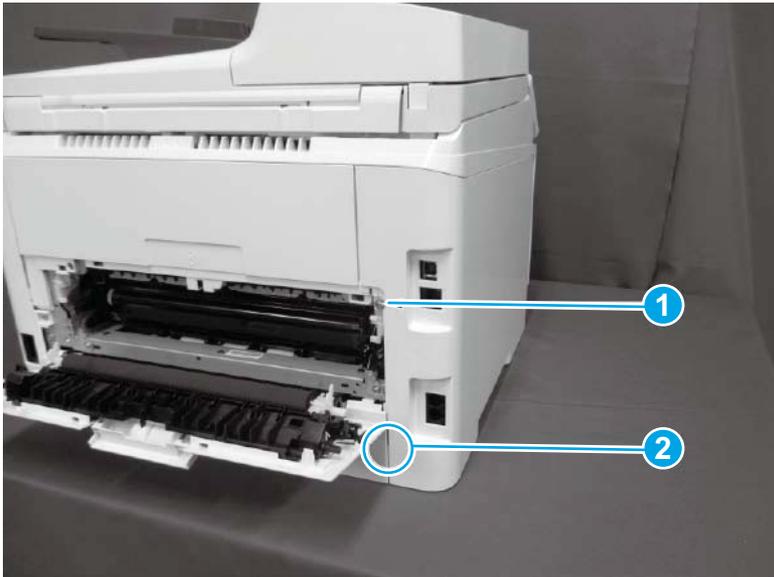


3. Release six tabs (callout 1) along the top, front, and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-616** Remove the left cover

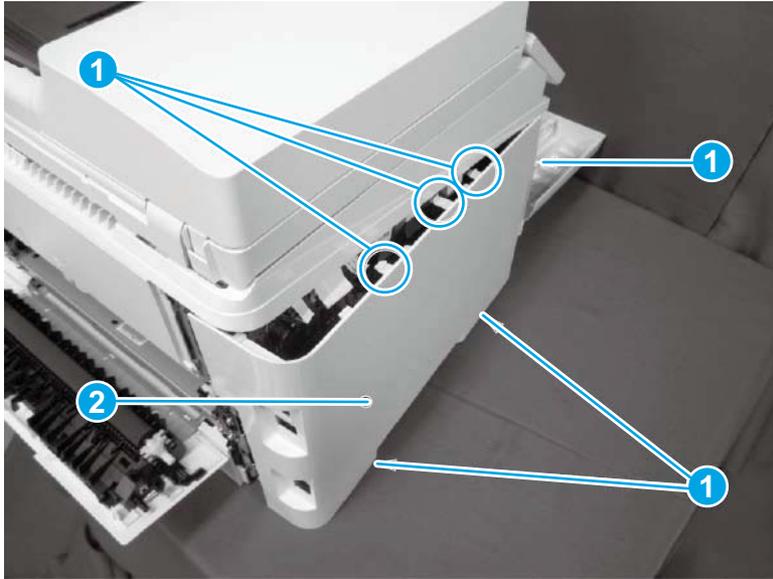


#### Step 4: Remove the fax PCA

- ▲ On the left side of the printer, disconnect one connector (callout 1), and then remove three screws (callout 2) to remove the fax PCA.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-617 Remove the M277 fax PCA

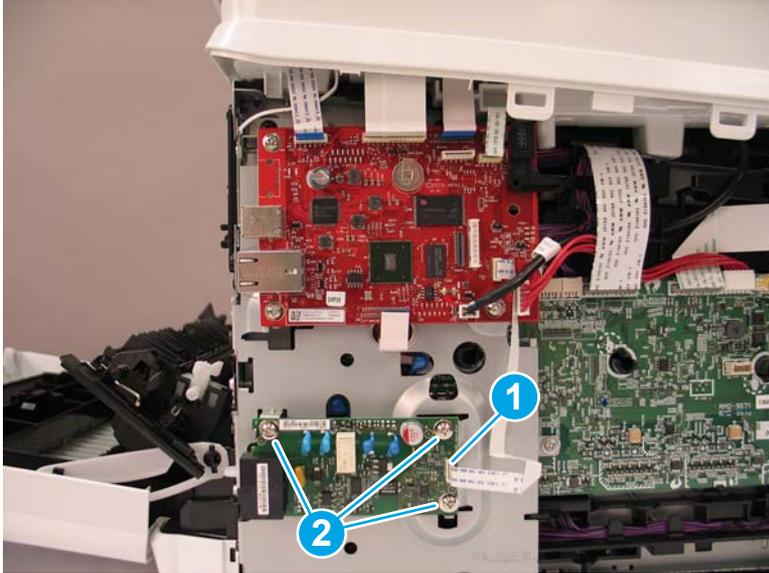

### Step 5: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Formatter PCA (M153-M154 and M253-M254)

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and rear doors](#)
- [Step 3: Remove the left cover \(M153-M154 and M253-M254\)](#)
- [Step 4: Remove the wireless PCA \(wireless models\)](#)
- [Step 5: Remove the formatter PCA \(M153-M154 and M253-M254\)](#)
- [Step 6: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the formatter PCA for the M153-M154 and M253-M254 models.

---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- 
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- 
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Formatter PCA (M153-M154 and M253-M254) part numbers	
T6B51-60001	Formatter PCA (M154a)
T6B59-60001	Formatter PCA (M154nw, M254nw, M254dn)
T6B60-60001	Formatter PCA (M254dw)

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

## Post service test


Make sure that the printer initializes to a **Ready** state.

Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-618 Remove the cassette tray

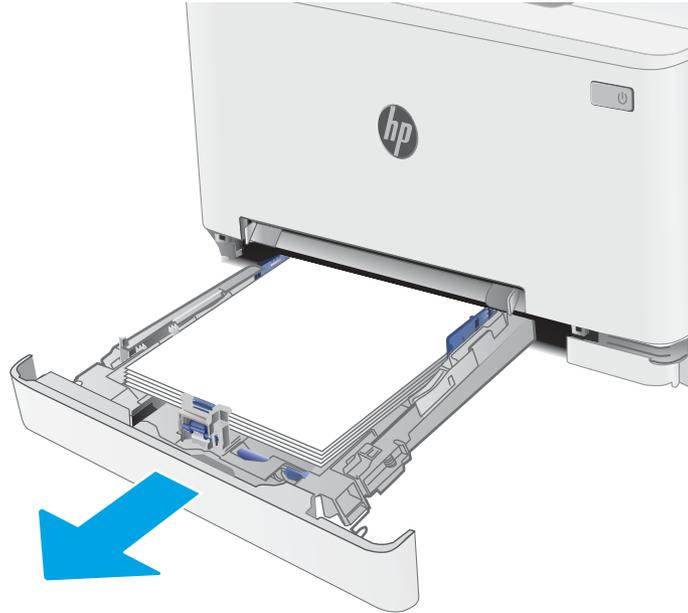

### Step 2: Open the front and rear doors


1. Open the front door.

Figure 1-619 Open the front door




2. **Simplex models only:** Open the rear door.

Figure 1-620 Open the rear door

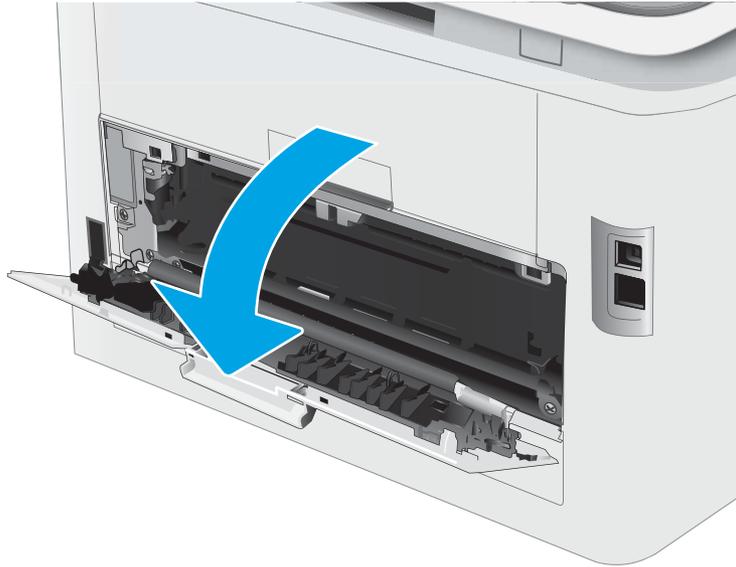

3. **Duplex models only:** Open the duplexer door.


Figure 1-621 Open the duplexer door

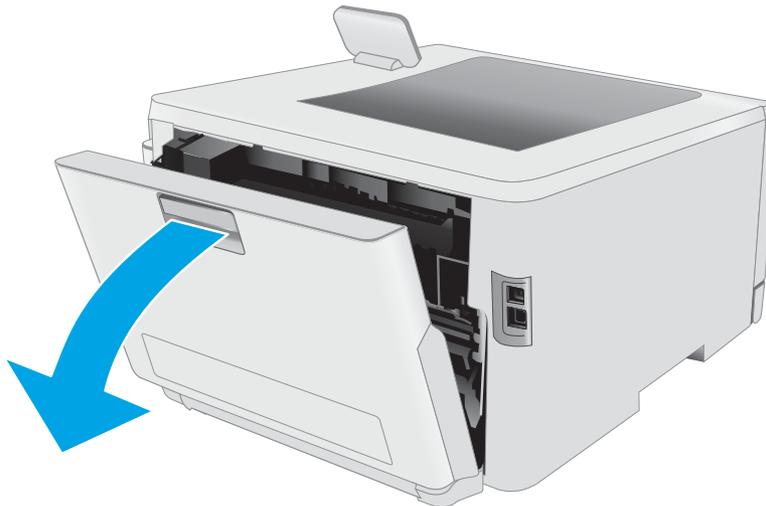

### Step 3: Remove the left cover (M153-M154 and M253-M254)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-622 Tab locations

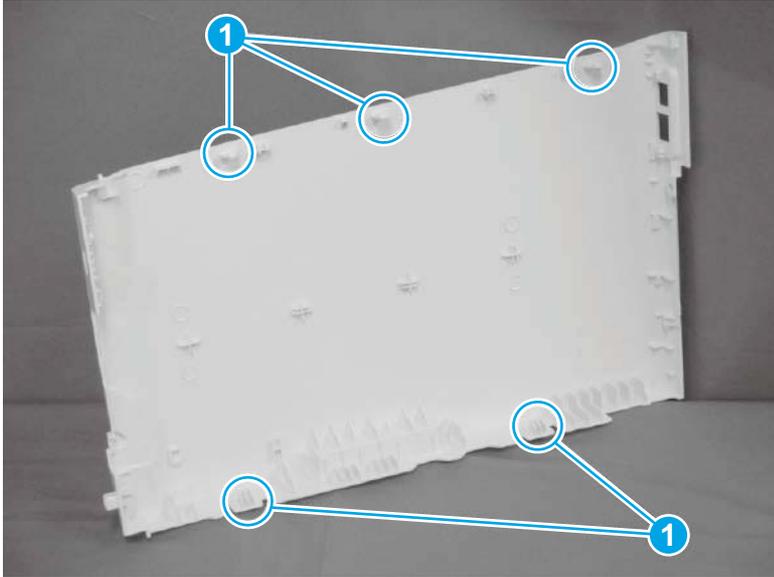


2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

---

Figure 1-623 Remove one screw and release tabs

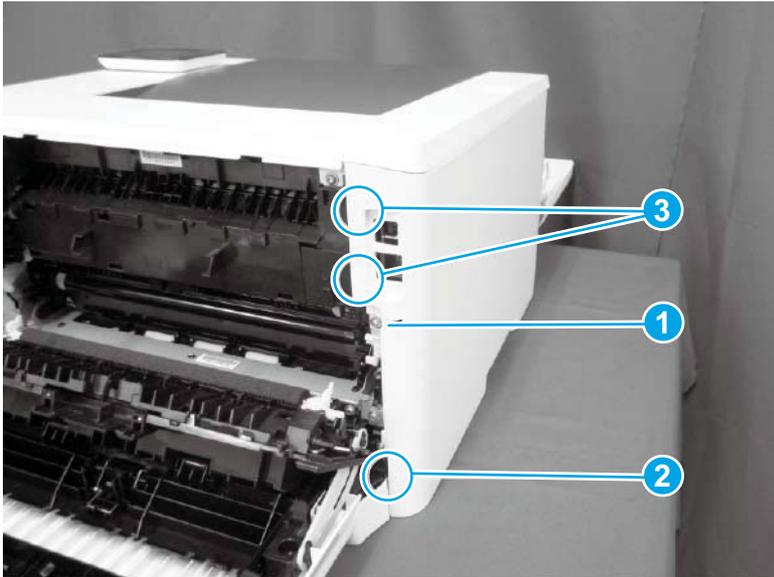


3. Release five tabs (callout 1) along the top and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-624 Remove the left cover

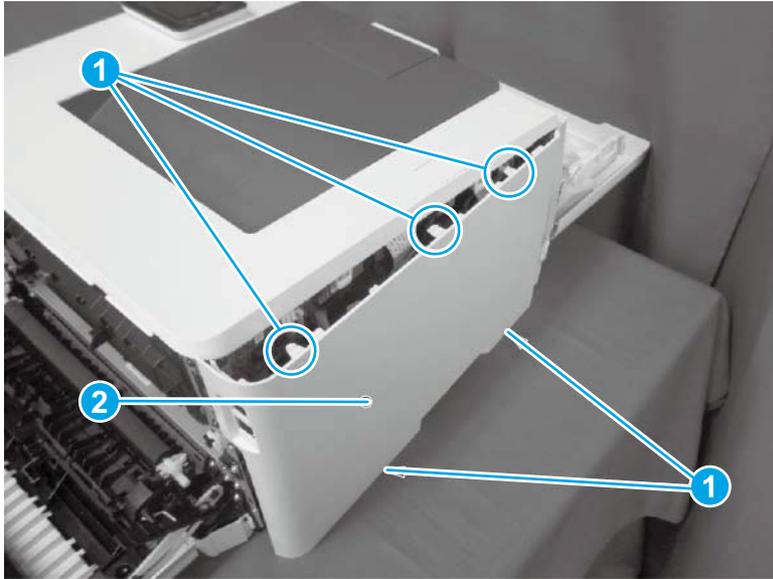


#### Step 4: Remove the wireless PCA (wireless models)

 **CAUTION:**  ESD sensitive part.

- ▲ On the left side of the printer, release two tabs (callout 1), and then pull the wireless PCA away from the formatter PCA to disconnect the connector on the back.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-625 Remove the wireless PCA

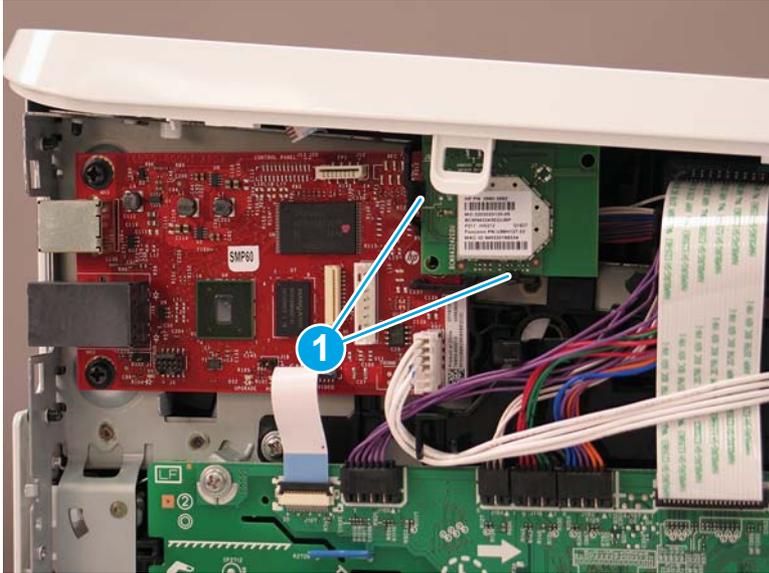

#### Step 5: Remove the formatter PCA (M153-M154 and M253-M254)

1. Disconnect all of the connectors on the formatter PCA.

 **NOTE:** Depending on the model, the formatter might have a different number of connections than in the figure below.


Figure 1-626 Disconnect all connectors



2. Remove three screws (callout 1), and then remove the PCA from the printer.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-627** Remove the formatter PCA (2 of 2)

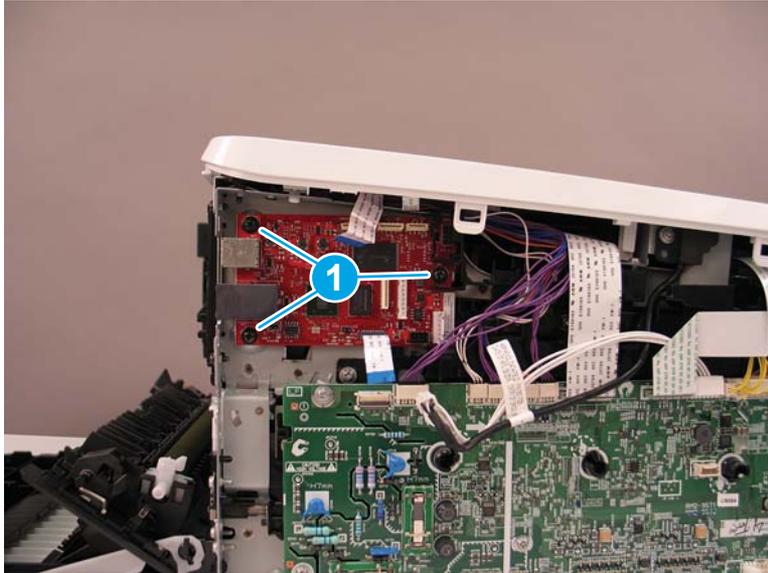

### Step 6: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Formatter PCA (M178-M181 and M278-M281)

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and rear doors](#)
- [Step 3: Remove the left cover \(M178-M181 and M278-M281\)](#)
- [Step 4: Remove the wireless PCA \(M178-M181 wireless models\)](#)
- [Step 5: Remove the wireless PCA \(M278-M281 wireless models\)](#)
- [Step 6: Remove the formatter PCA \(M178-M181 and M278-M281\)](#)
- [Step 7: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the formatter PCA for the M178-M181 and M278-M281 models.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.

**WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.

- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### Formatter PCA (M178-M181 and M278-M281) part numbers

---

T6B70-60001	Formatter PCA (M180n)
T6B71-60001	Formatter PCA (M181fw)
T6B74-60001	Formatter PCA (M180nw)
T6B82-60001	Formatter PCA (M278-M281)

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Make sure that the printer initializes to a **Ready** state.

Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

**Figure 1-628** Remove the cassette tray



### Step 2: Open the front and rear doors


1. Open the front door.

Figure 1-629 Open the front door



2. **Simplex models only:** Open the rear door.

Figure 1-630 Open the rear door

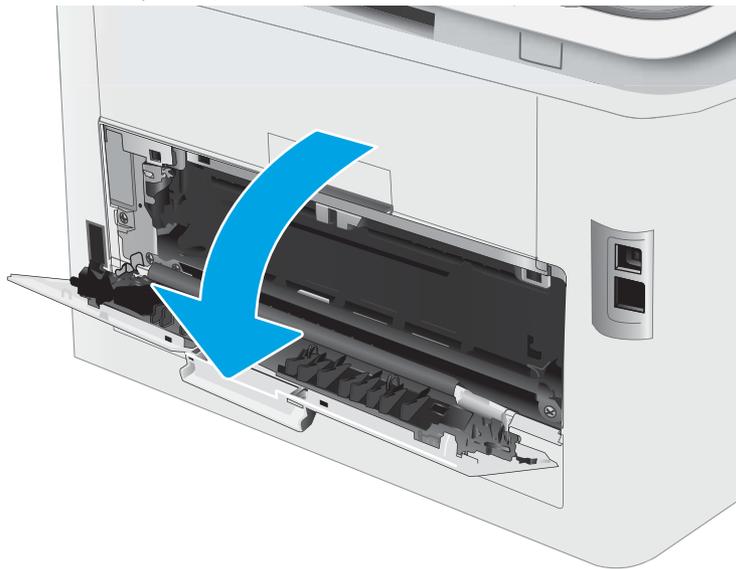

3. **Duplex models only:** Open the duplexer door.


Figure 1-631 Open the duplexer door



### Step 3: Remove the left cover (M178-M181 and M278-M281)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


Figure 1-632 Tab locations

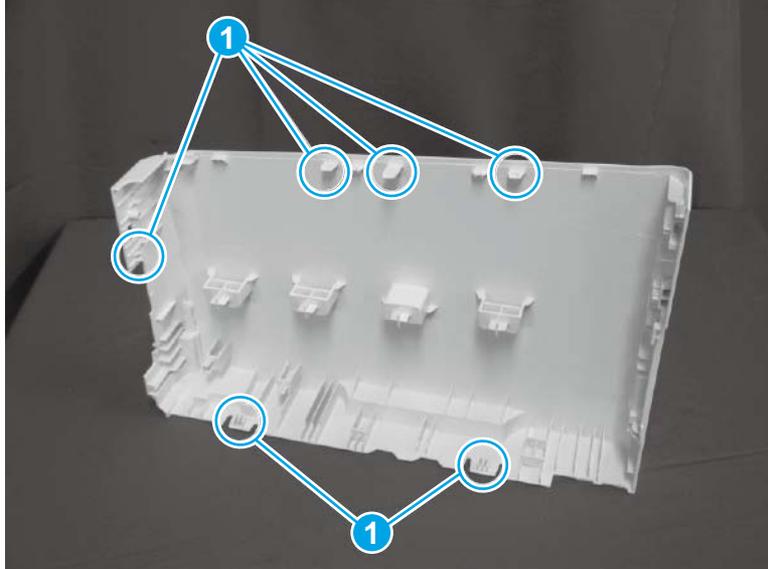

2. At the rear of the printer, remove one screw (callout 1), and then release one tab (callout 2).

 **TIP:** Use a small, flat-blade screwdriver to release the tab.

**Figure 1-633** Remove one screw and release tab

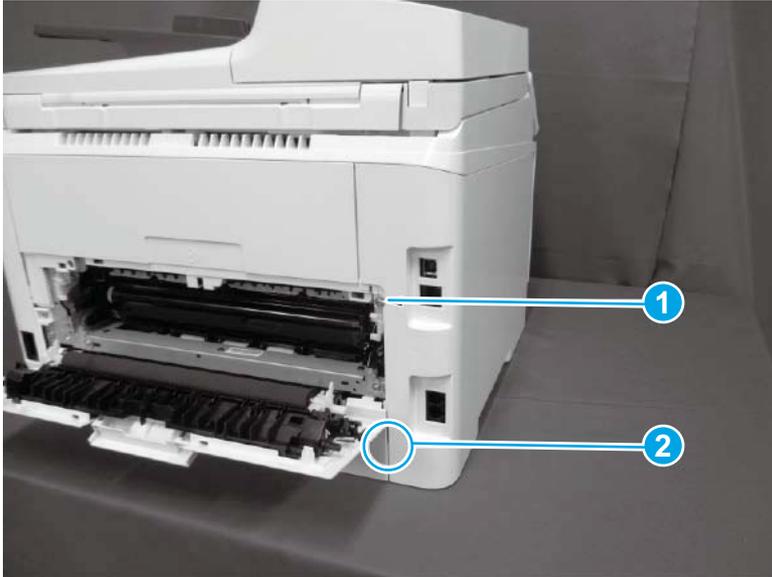


3. Release six tabs (callout 1) along the top, front, and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-634** Remove the left cover

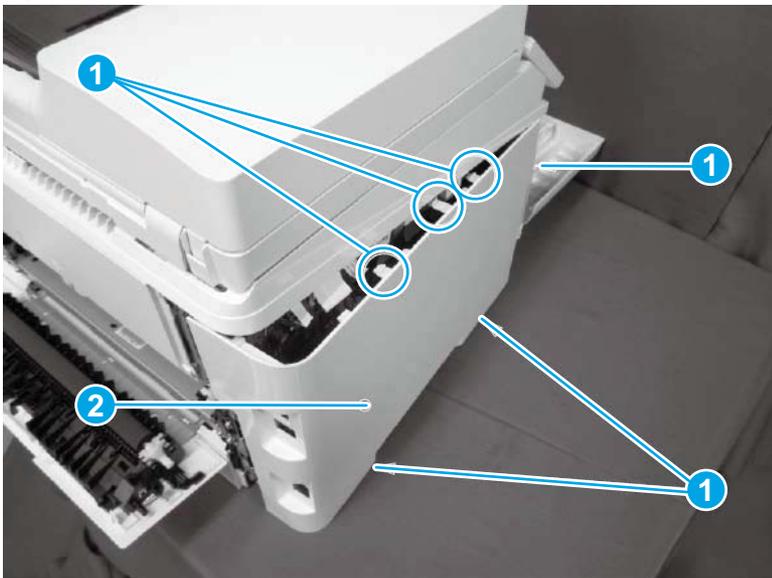


#### Step 4: Remove the wireless PCA (M178-M181 wireless models)

 **CAUTION:**  ESD sensitive part.

- ▲ On the left side of the printer, remove one screw (callout 1), and then pull the wireless PCA away from the formatter PCA to disconnect the connector on the back.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-635 Remove the wireless PCA

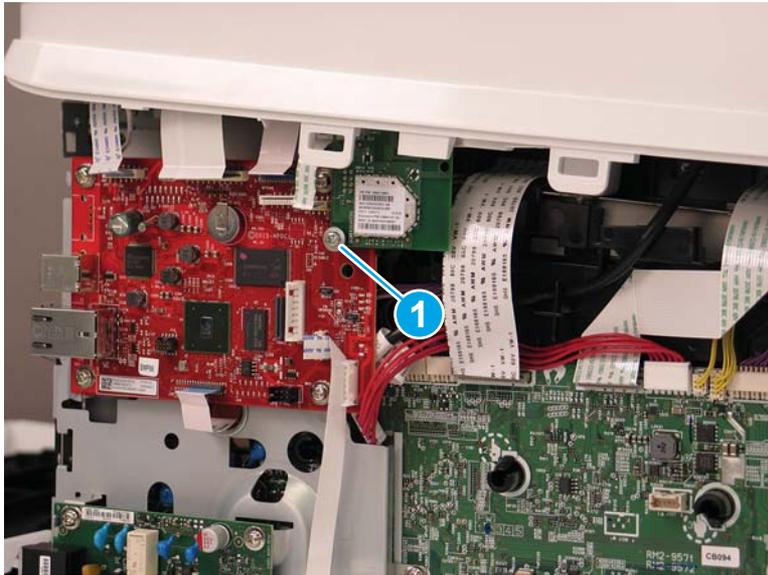


#### Step 5: Remove the wireless PCA (M278-M281 wireless models)

 **CAUTION:**  ESD sensitive part.

- ▲ On the left side of the printer, release two tabs (callout 1), and then pull the wireless PCA away from the formatter PCA to disconnect the connector on the back.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-636 Remove the wireless PCA

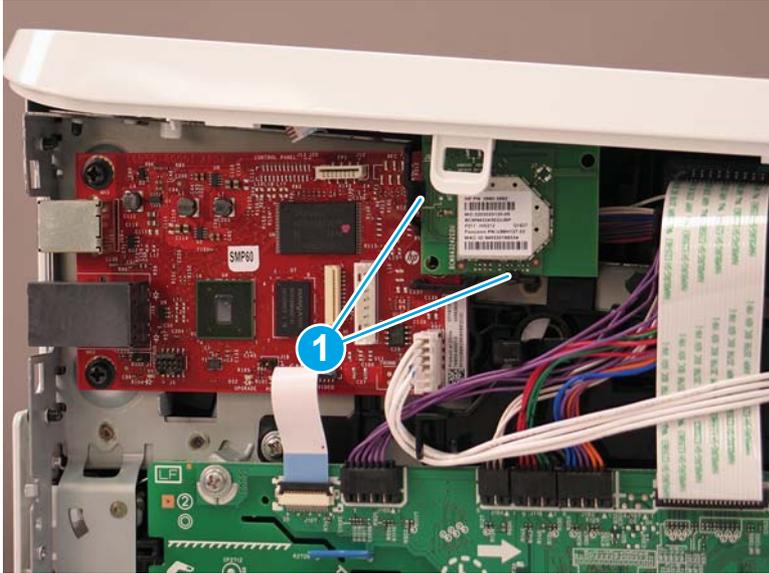


#### Step 6: Remove the formatter PCA (M178-M181 and M278-M281)

1. Disconnect all connectors on the formatter PCA.

 **NOTE:** Depending on the model being serviced, the formatter might have a different number of connections than in the figure below.

Figure 1-637 Disconnect all connectors

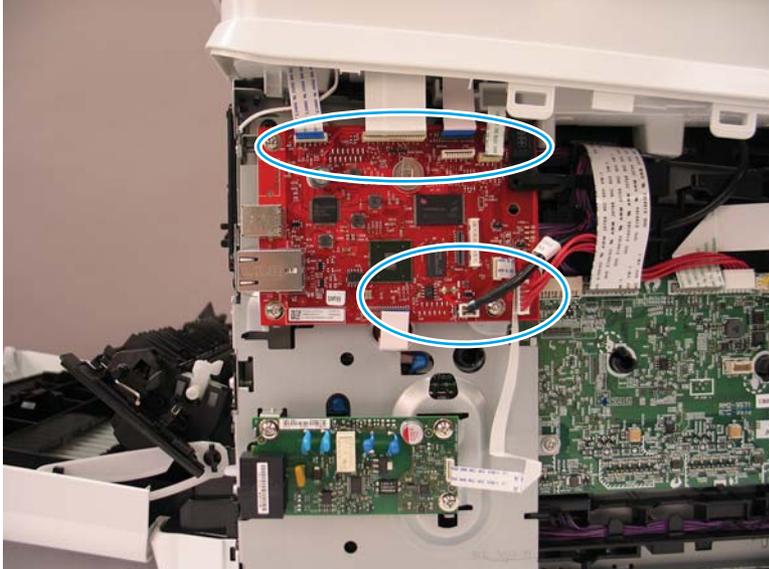

2. Remove four black screws (callout 1), and then remove the PCA from the printer.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-638** Remove four screws



### Step 7: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Engine controller unit (M153-M154 and M253-M254)

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and rear doors](#)
- [Step 3: Remove the left cover \(M153-M154 and M253-M254\)](#)
- [Step 4: Remove the engine controller unit \(M153-M154 and M253-M254\)](#)
- [Step 5: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the engine controller unit for the M153-M154 and M253-M254 models.

---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.

---

 **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.

---

- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### Engine controller unit (M153-M154 and M253-M254) part numbers

---

RM2-9574-000CN	Engine controller assembly (M253-M254 duplex models)
RM2-9575-000CN	Engine controller assembly (M253-M254 simplex models)
RM2-9576-000CN	Engine controller assembly (M153-M154)

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


Make sure that the printer initializes to a **Ready** state.

Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-639 Remove the cassette tray

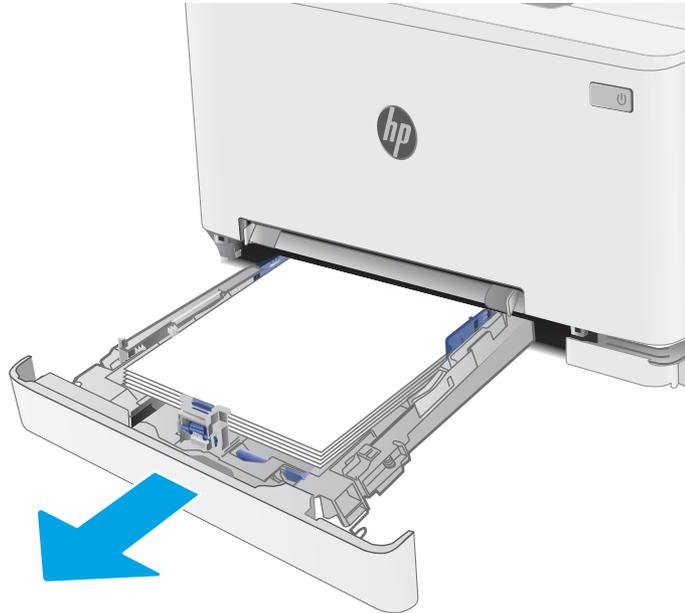

### Step 2: Open the front and rear doors


1. Open the front door.

Figure 1-640 Open the front door



2. **Simplex models only:** Open the rear door.

**Figure 1-641** Open the rear door

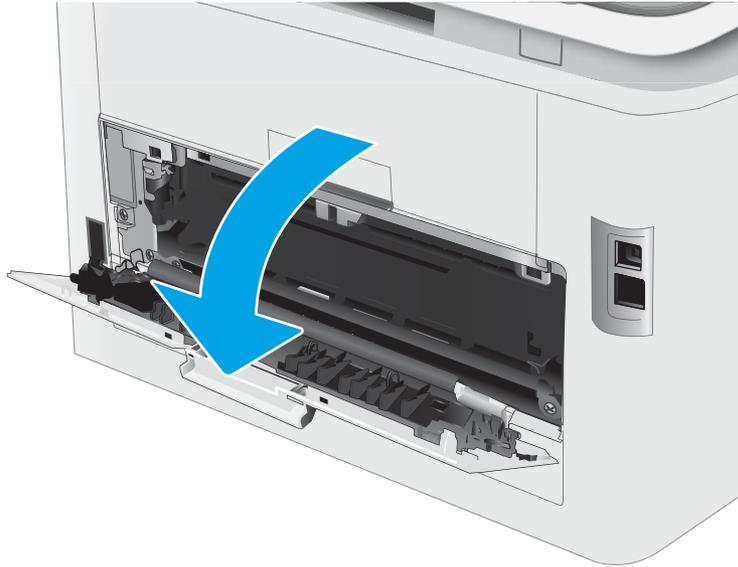

3. **Duplex models only:** Open the duplexer door.


**Figure 1-642** Open the duplexer door



**Step 3: Remove the left cover (M153-M154 and M253-M254)**

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-643 Tab locations

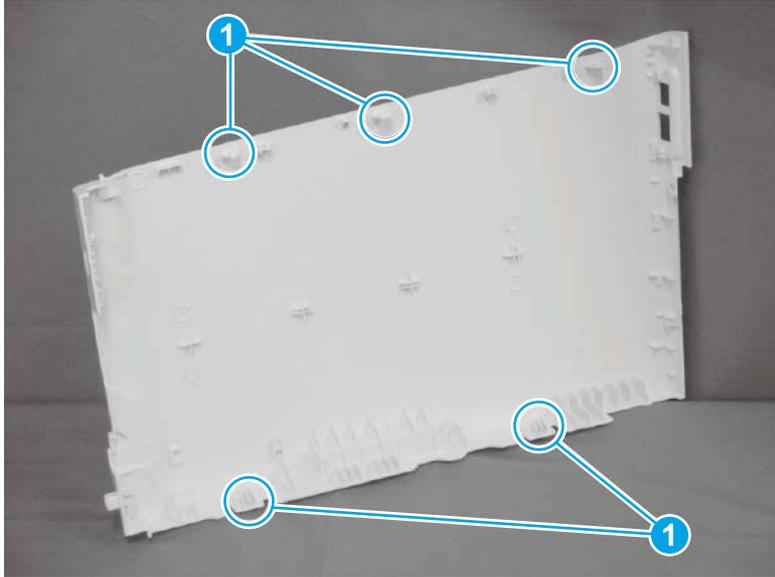


2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

---

Figure 1-644 Remove one screw and release tabs

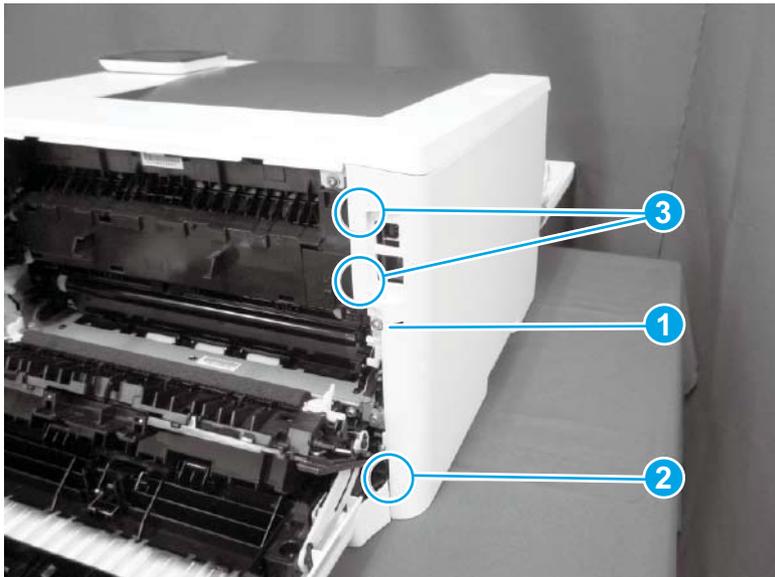

3. Release five tabs (callout 1) along the top and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

---


 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-645** Remove the left cover

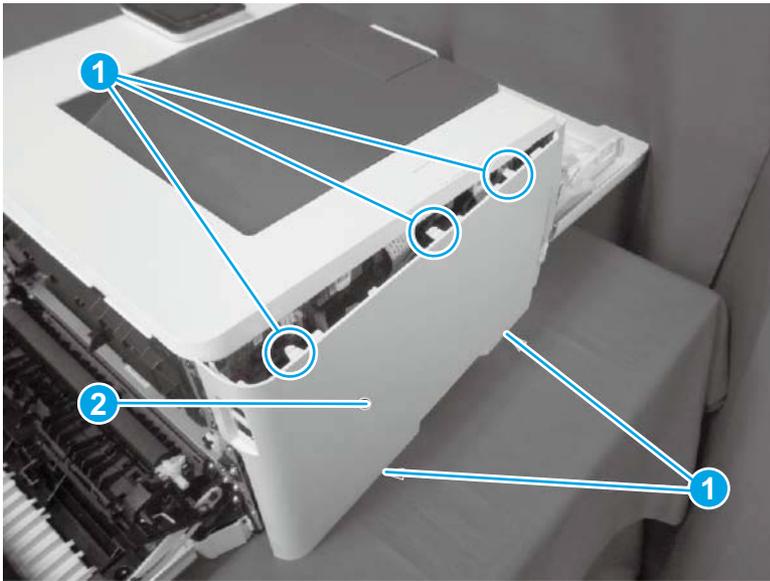

#### Step 4: Remove the engine controller unit (M153-M154 and M253-M254)


1. Disconnect all connectors on the engine controller unit. Release the latch on the flat cable connector (callout 1) before removing the cable from the connector.

---

 **CAUTION:** The two piezoelectric transformers (callout 2) on the engine controller unit can be easily damaged. Do not touch these transformers when removing or installing the assembly.

---


Figure 1-646 Disconnect all connectors

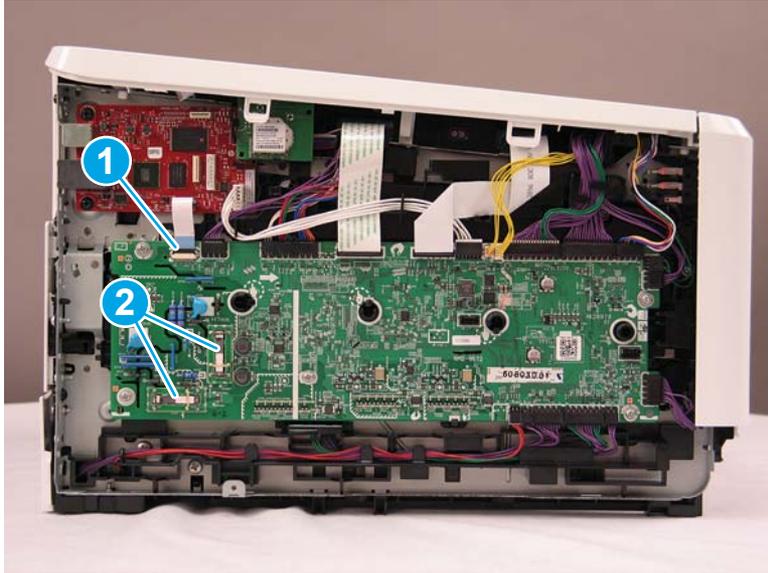

2. Remove five screws (callout 1), and then release four tabs (callout 2) to remove the engine controller unit from the chassis.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-647 Remove five screws and release four tabs

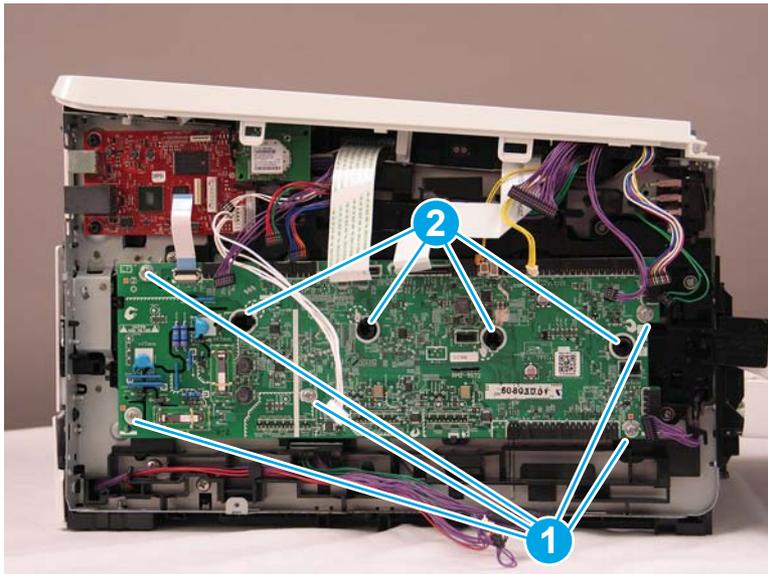

#### Step 5: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Engine controller unit (M178-M181 and M278-M281)

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and rear doors](#)
- [Step 3: Remove the left cover \(M178-M181 and M278-M281\)](#)
- [Step 4: Remove the wireless PCA \(M178-M181 wireless models\)](#)
- [Step 5: Remove the wireless PCA \(M278-M281 wireless models\)](#)
- [Step 6: Remove the formatter PCA \(M178-M181 and M278-M281\)](#)
- [Step 7: Remove the engine controller unit \(M178-M181 and M278-M281\)](#)
- [Step 8: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the engine controller unit for the M178-M181 and M278-M281 models.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Engine controller unit (M178-M181 and M278-M281) part numbers	
RM2-9574-000CN	Engine controller assembly (M278-M281 duplex models)
RM2-9575-000CN	Engine controller assembly (M278-M281 simplex models)
RM2-9576-000CN	Engine controller assembly (M178-M181)

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Make sure that the printer initializes to a **Ready** state.

Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

**Figure 1-648** Remove the cassette tray



### Step 2: Open the front and rear doors


1. Open the front door.

Figure 1-649 Open the front door




2. **Simplex models only:** Open the rear door.

Figure 1-650 Open the rear door

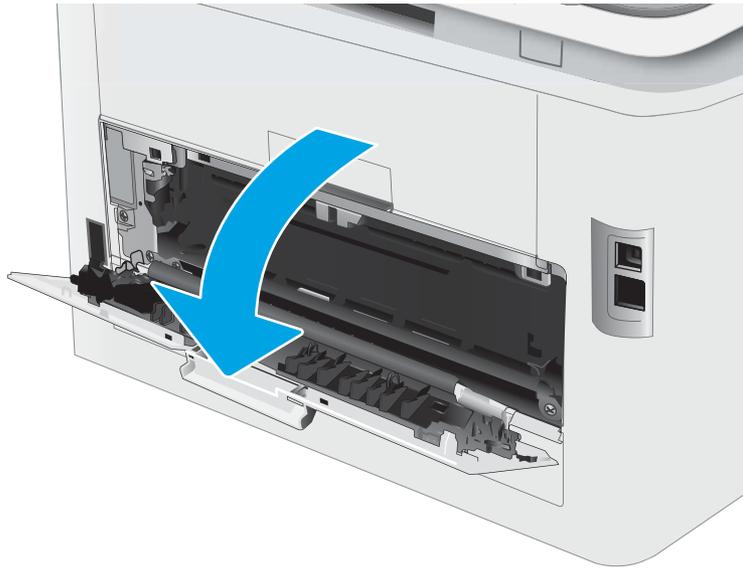

3. **Duplex models only:** Open the duplexer door.


Figure 1-651 Open the duplexer door

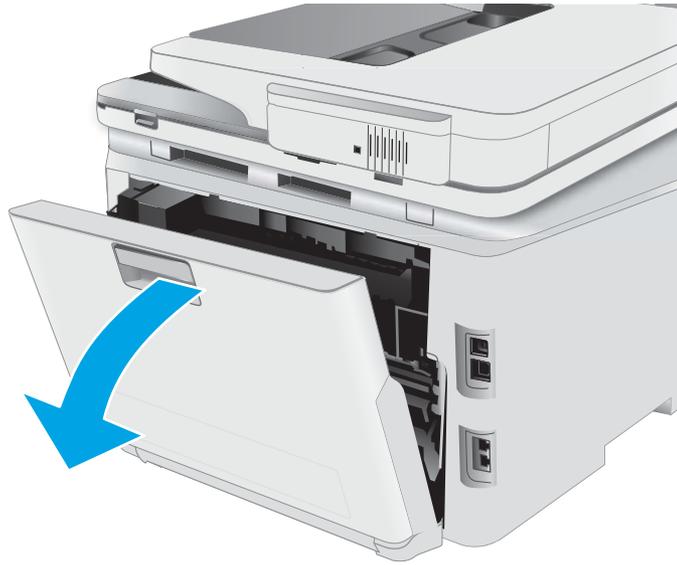

### Step 3: Remove the left cover (M178-M181 and M278-M281)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


Figure 1-652 Tab locations

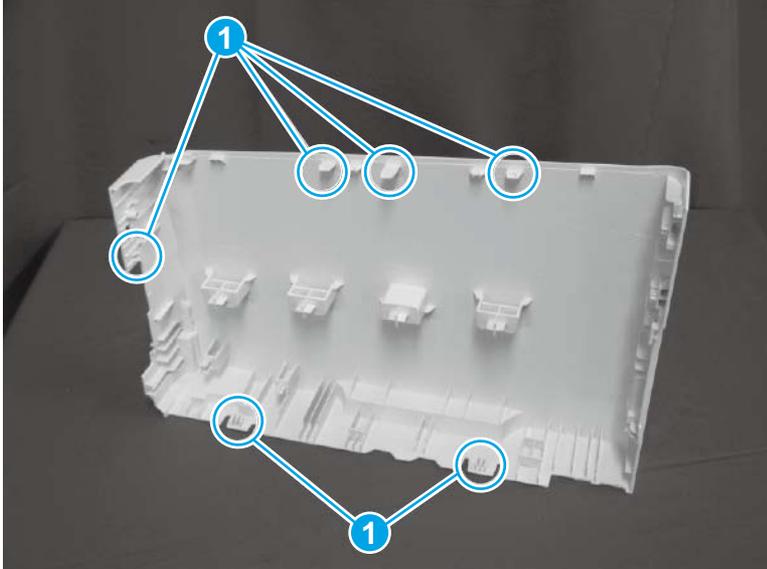

2. At the rear of the printer, remove one screw (callout 1), and then release one tab (callout 2).

 **TIP:** Use a small, flat-blade screwdriver to release the tab.

**Figure 1-653** Remove one screw and release tab

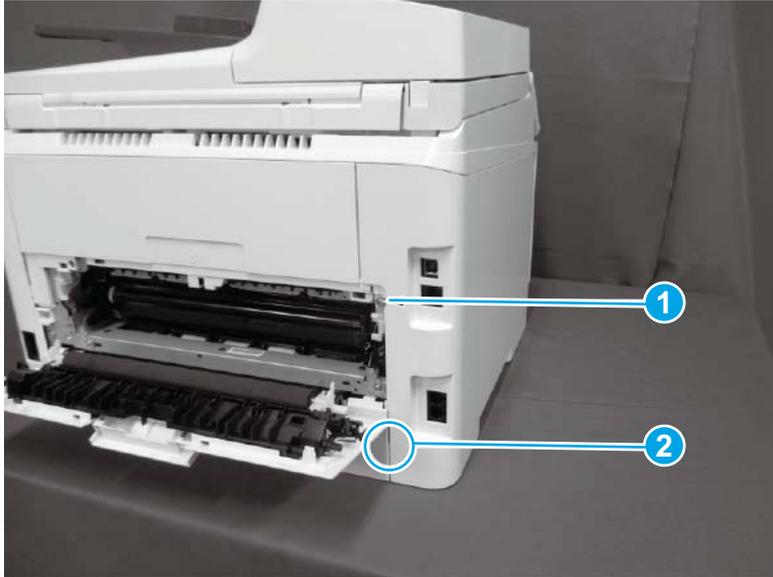


3. Release six tabs (callout 1) along the top, front, and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-654** Remove the left cover

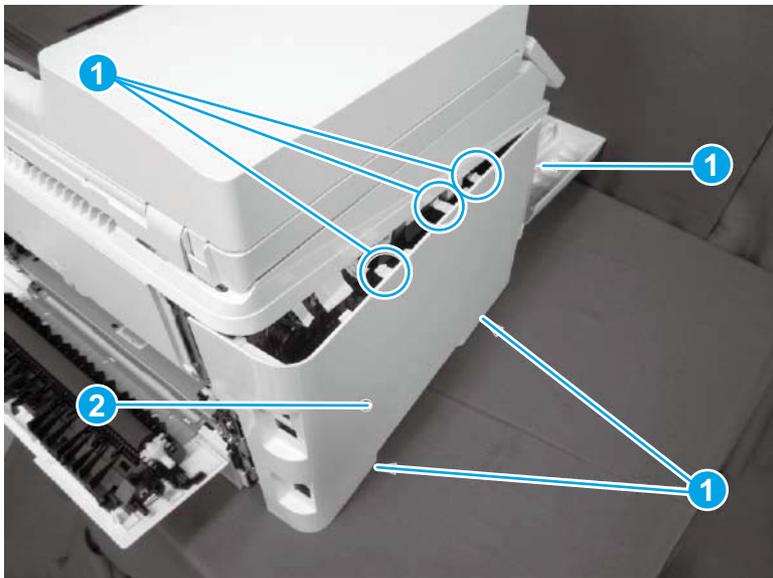


#### Step 4: Remove the wireless PCA (M178-M181 wireless models)

 **CAUTION:**  ESD sensitive part.

- ▲ On the left side of the printer, remove one screw (callout 1), and then pull the wireless PCA away from the formatter PCA to disconnect the connector on the back.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-655 Remove the wireless PCA

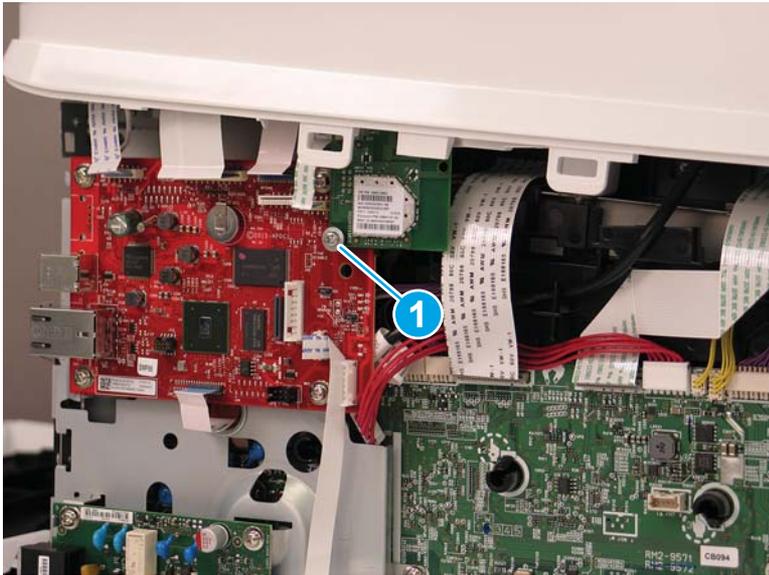


#### Step 5: Remove the wireless PCA (M278-M281 wireless models)

 **CAUTION:**  ESD sensitive part.

- ▲ On the left side of the printer, release two tabs (callout 1), and then pull the wireless PCA away from the formatter PCA to disconnect the connector on the back.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-656 Remove the wireless PCA

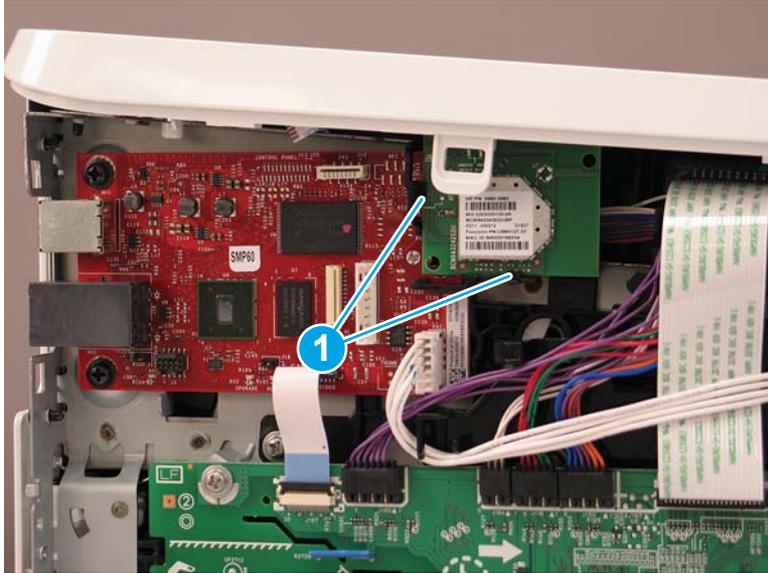


**Step 6: Remove the formatter PCA (M178-M181 and M278-M281)**

1. Disconnect all connectors on the formatter PCA.

 **NOTE:** Depending on the model being serviced, the formatter might have a different number of connections than in the figure below.

Figure 1-657 Disconnect all connectors

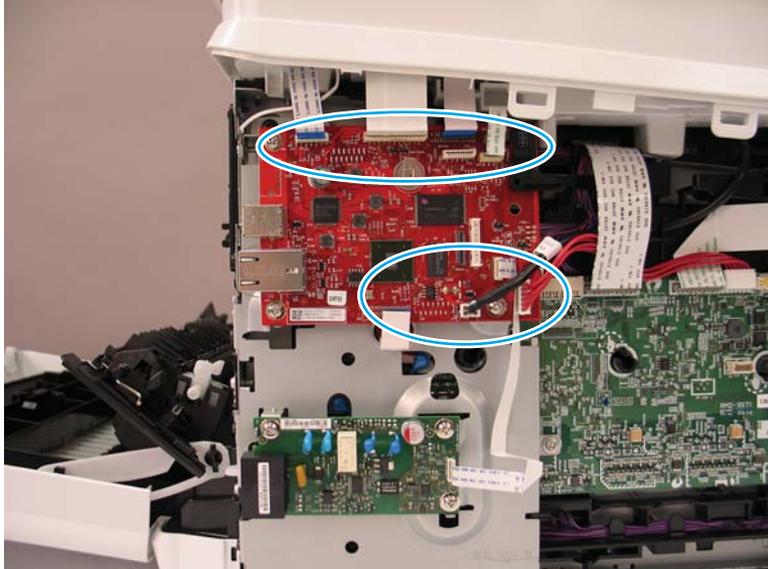

2. Remove four black screws (callout 1), and then remove the PCA from the printer.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-658** Remove four screws



#### Step 7: Remove the engine controller unit (M178-M181 and M278-M281)

1. Disconnect one connector (callout 1), and then remove nine screws (callout 2) to remove the engine controller unit cover.


**Figure 1-659** Disconnect one connector and remove nine screws

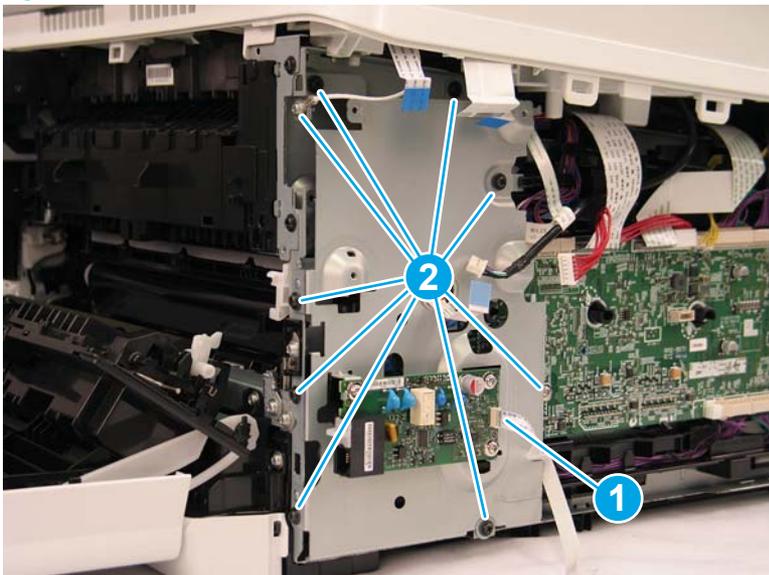

2. Disconnect all connectors on the engine controller unit.

**⚠ CAUTION:** The two piezoelectric transformers (callout 1) on the engine controller unit can be easily damaged. Do not touch these transformers when removing or installing the assembly.


Figure 1-660 Disconnect all connectors

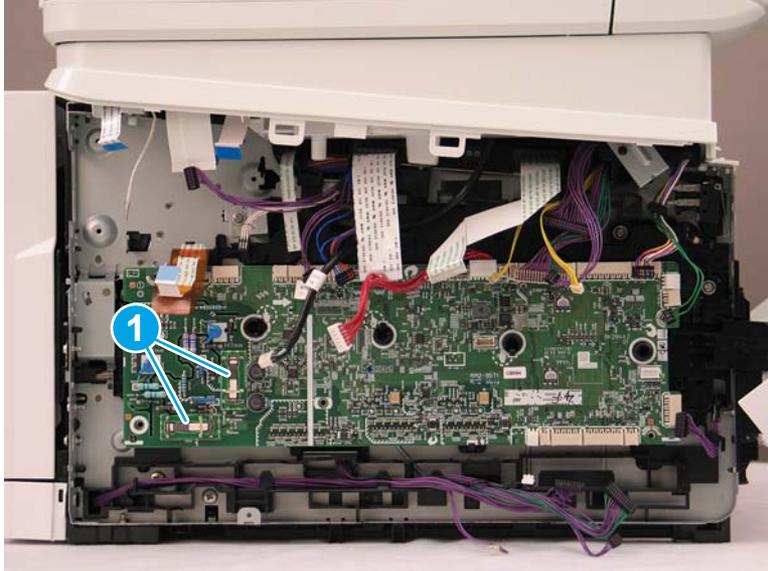

3. Remove four screws (callout 1), and then release four tabs (callout 2) to remove the engine controller unit from the chassis.

**💡 Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-661 Remove four screws and release four tabs

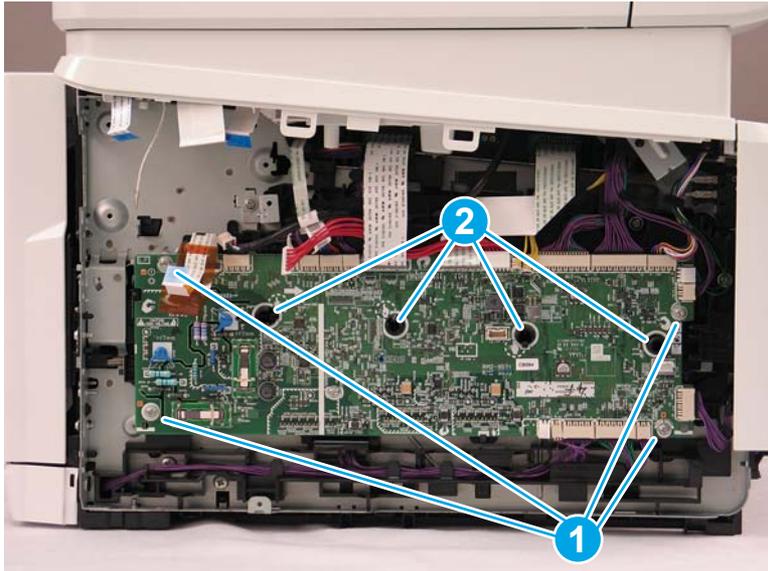

### Step 8: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Intermediate transfer belt (ITB)

- [Introduction](#)
- [Step 1: Remove the toner cartridges](#)
- [Step 2: Remove the cassette tray](#)
- [Step 3: Remove the priority feed slot tray \(M253-M254 and M278-M281\)](#)
- [Step 4: Open the front and rear doors](#)
- [Step 5: Remove the right cover \(M153-M154 and M253-M254\)](#)
- [Step 6: Remove the left cover \(M153-M154 and M253-M254\)](#)
- [Step 7: Remove the right cover \(M178-M181 and M278-M281\)](#)
- [Step 8: Remove the left cover \(M178-M181 and M278-M281\)](#)
- [Step 9: Remove the duplexer door \(duplex models\)](#)
- [Step 10: Remove the rear door assembly \(duplex models\)](#)
- [Step 11: Remove the rear door assembly \(simplex models\)](#)
- [Step 12: Remove the ITB](#)
- [Step 13: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the intermediate transfer belt (ITB).



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
  - ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Intermediate transfer belt part number	
RM2-5907-000CN	Intermediate transfer belt assembly

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Make sure that the printer initializes to a **Ready** state.

Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the toner cartridges

1. Open the front door.



2. Grasp the blue handle on the toner cartridge drawer, and then pull out the drawer.




3. Grasp the handle on the toner cartridge, and then pull the toner cartridge straight up to remove it.



### Step 2: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-662 Remove the cassette tray

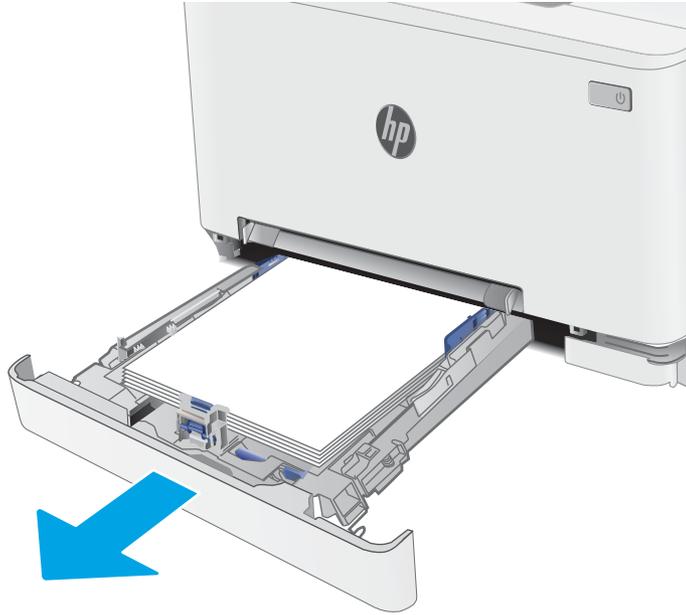

### Step 3: Remove the priority feed slot tray (M253-M254 and M278-M281)

 **NOTE:** This step is for the M253-M254 and M278-M281 printers. For the M153-M154 and M178-M181 printers, skip this step and go to [Step 4: Open the front and rear doors on page 466](#).

- ▲ At the front of the printer, gently push down on the single-sheet priority feed slot tray, and then pull out the feed slot tray.

Figure 1-663 Remove the priority feed slot tray



### Step 4: Open the front and rear doors


1. Open the front door.

Figure 1-664 Open the front door




2. **Simplex models only:** Open the rear door.

Figure 1-665 Open the rear door

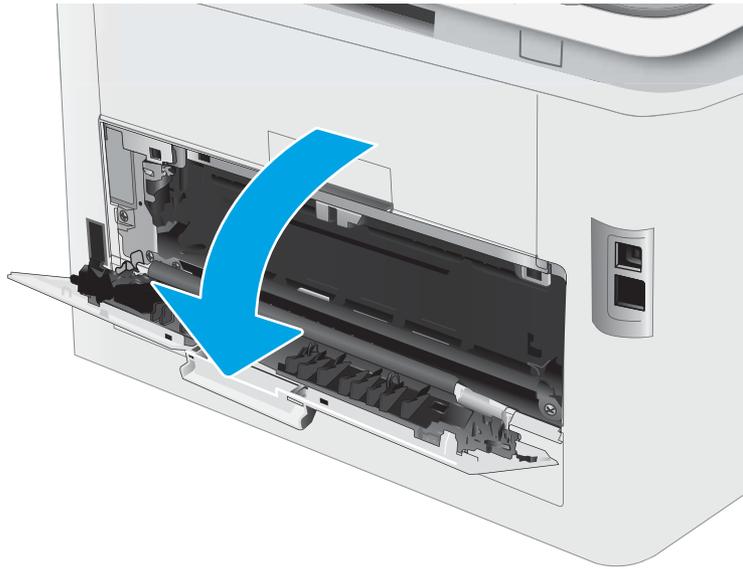

3. **Duplex models only:** Open the duplexer door.

**Figure 1-666** Open the duplexer door

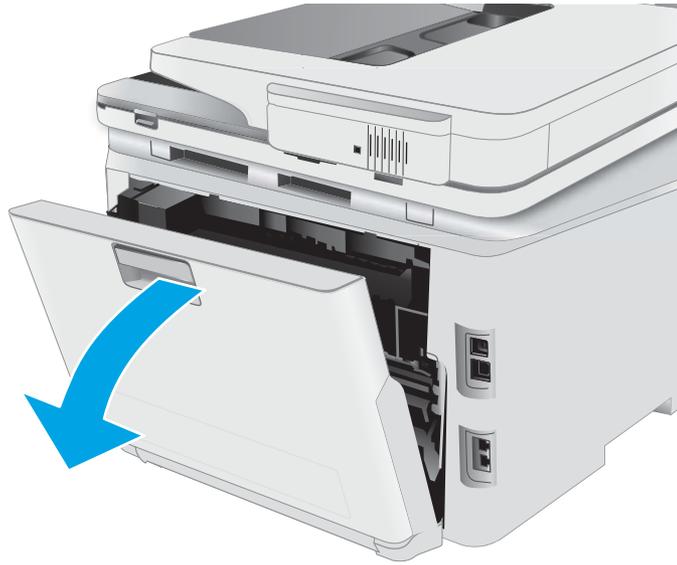


**Step 5: Remove the right cover (M153-M154 and M253-M254)**

 **NOTE:** This step is for the M153-M154 and M253-M254 printers. For the M178-M181 and M278-M281 printers, skip this step and go to [Step 7: Remove the right cover \(M178-M181 and M278-M281\) on page 471](#).

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


**Figure 1-667** Tab locations

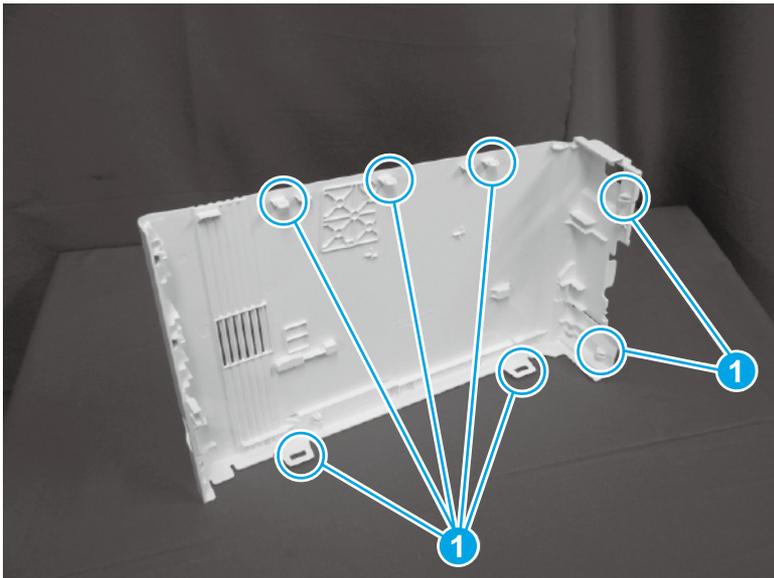

2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

**Figure 1-668** Remove one screw and release tabs

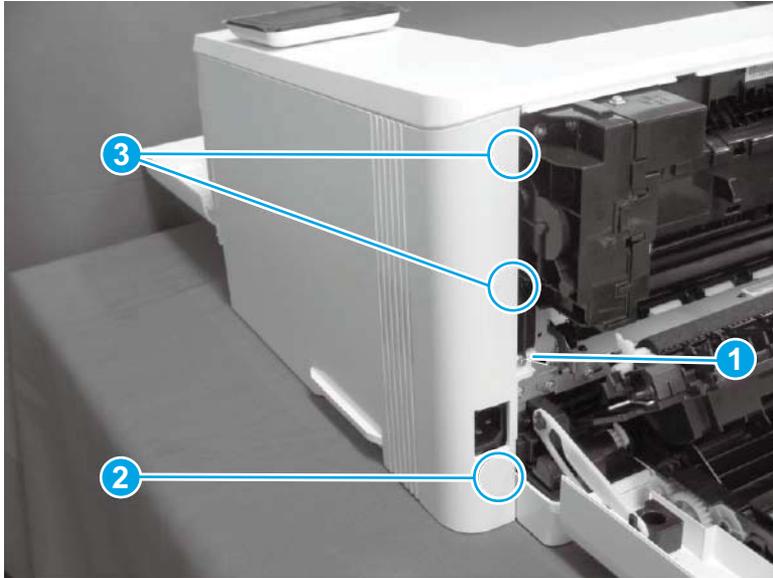


3. Release seven tabs (callout 1) along the top, bottom, and front of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-669** Remove the right cover

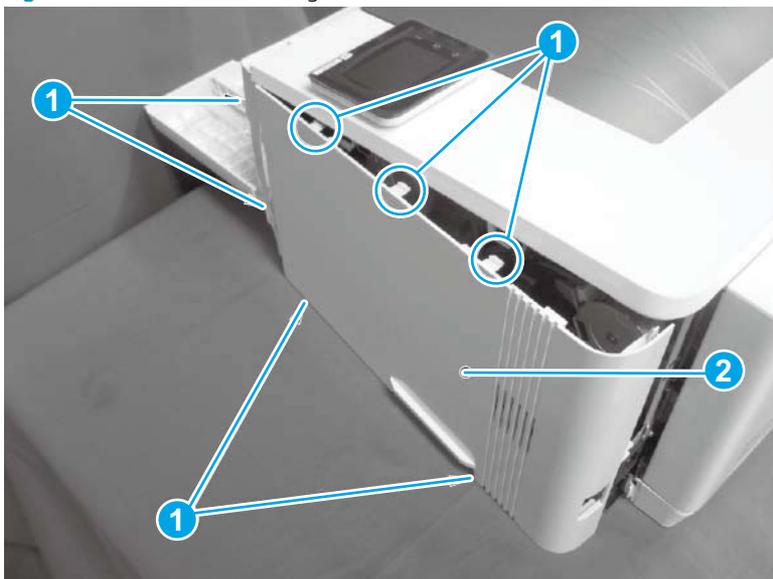


## Step 6: Remove the left cover (M153-M154 and M253-M254)

 **NOTE:** This step is for the M153-M154 and M253-M254 printers. For the M178-M181 and M278-M281 printers, skip this step and go to [Step 7: Remove the right cover \(M178-M181 and M278-M281\) on page 471](#).

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


**Figure 1-670** Tab locations

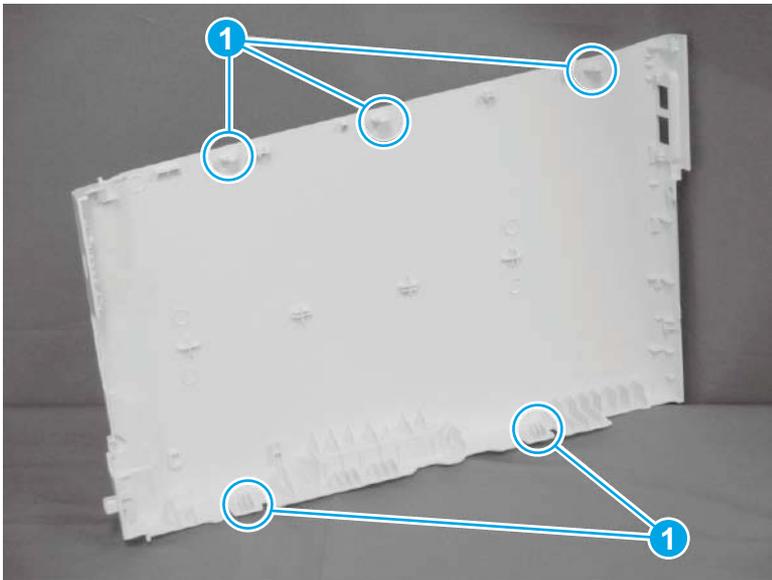

2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

**Figure 1-671** Remove one screw and release tabs

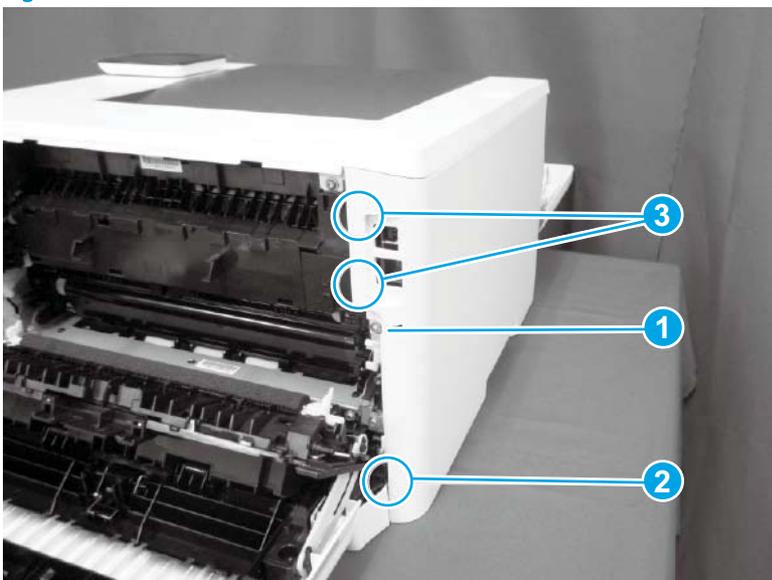

3. Release five tabs (callout 1) along the top and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

---


 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-672 Remove the left cover

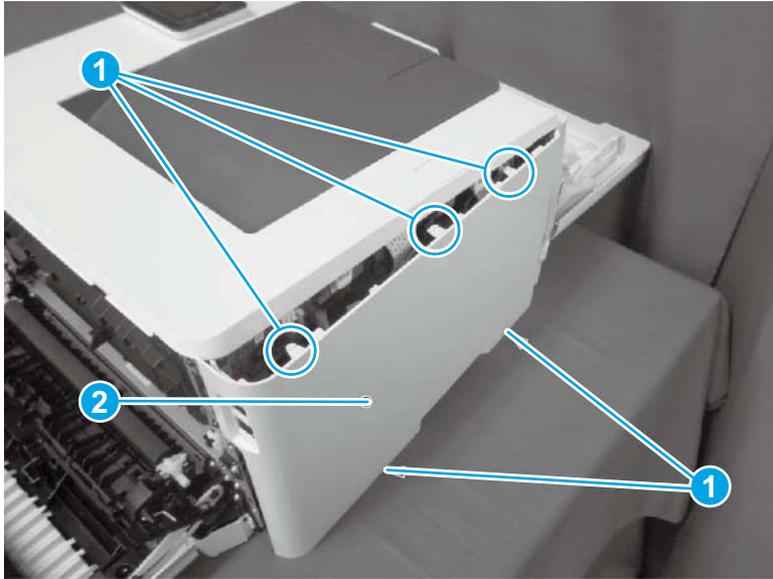

#### Step 7: Remove the right cover (M178-M181 and M278-M281)


---

 **NOTE:** This step is for the M178-M181 and M278-M281 printers. For the M153-M154 and M253-M254 printers, skip this step and go to [Step 9: Remove the duplexer door \(duplex models\) on page 475.](#)

---

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-673 Tab locations

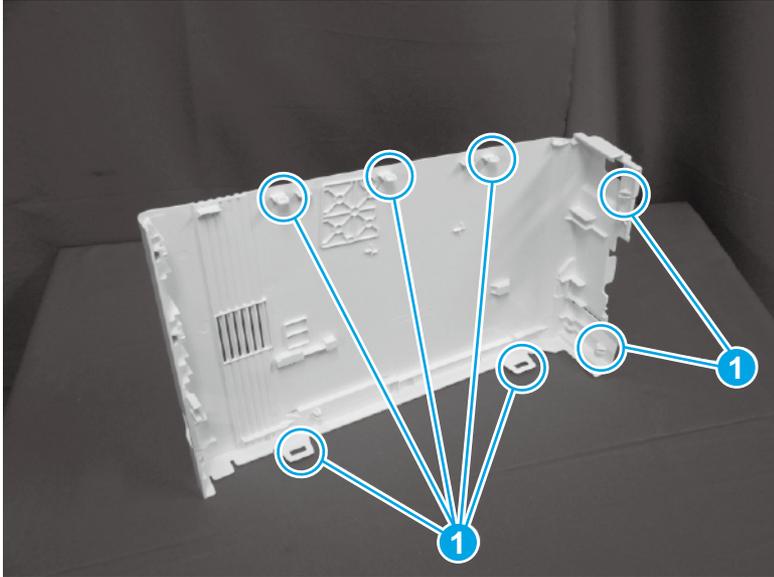


2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

---

Figure 1-674 Remove one screw and release tabs

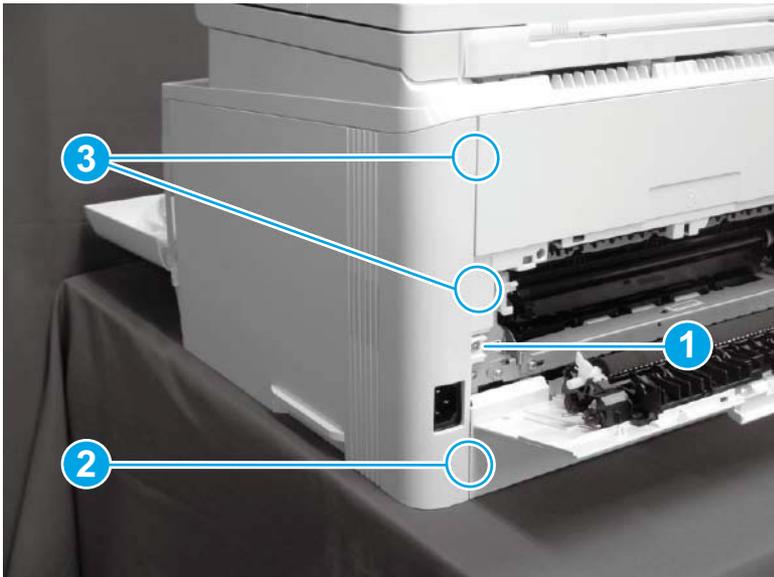

3. Release seven tabs (callout 1) along the top, bottom, and front of the cover. Pull the cover (callout 2) away from the printer to remove it.

---


 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-675** Remove the right cover

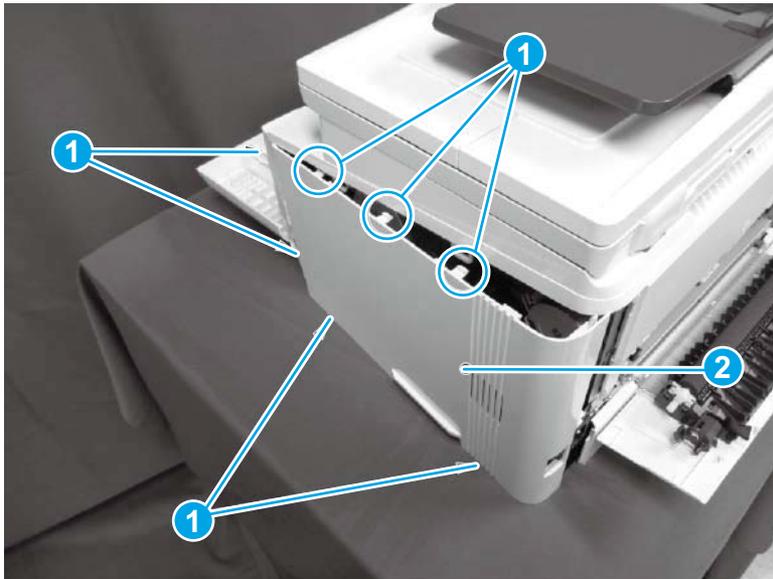

#### Step 8: Remove the left cover (M178-M181 and M278-M281)


---

 **NOTE:** This step is for the M178-M181 and M278-M281 printers. For the M153-M154 and M253-M254 printers, skip this step and go to [Step 9: Remove the duplexer door \(duplex models\) on page 475](#).

---

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-676 Tab locations

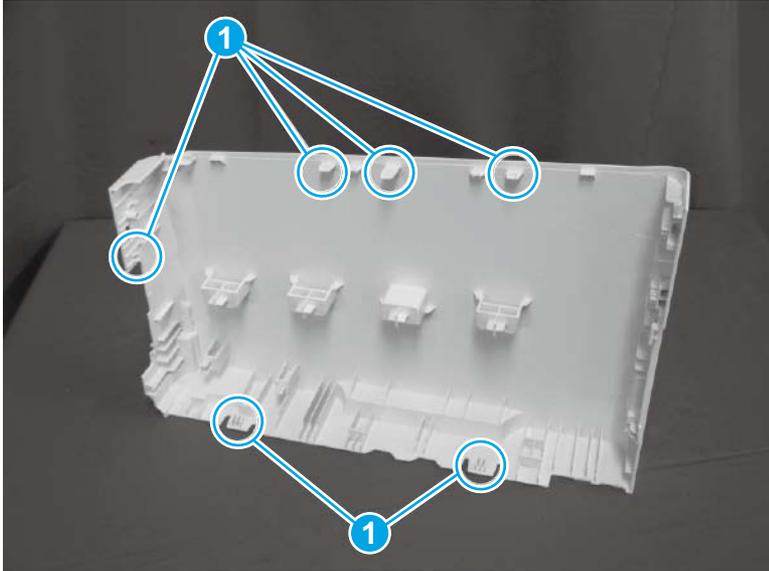


2. At the rear of the printer, remove one screw (callout 1), and then release one tab (callout 2).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab.

---

Figure 1-677 Remove one screw and release tab

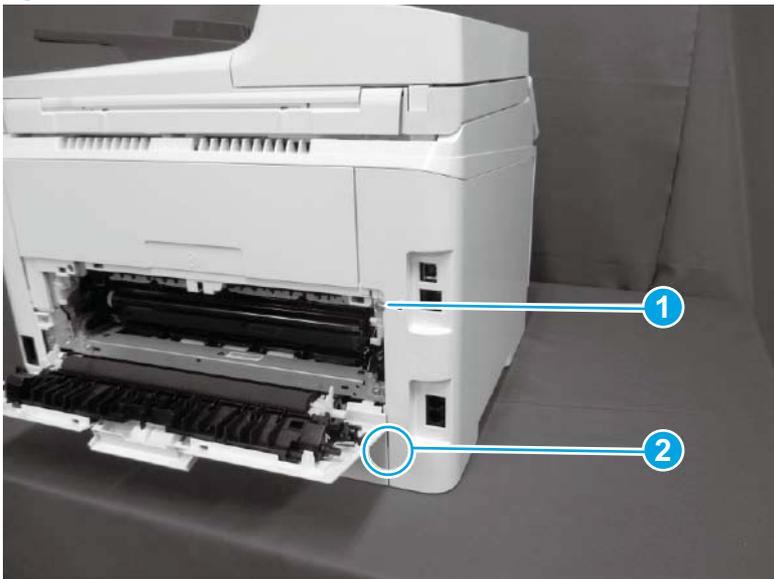

3. Release six tabs (callout 1) along the top, front, and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

---


 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-678** Remove the left cover

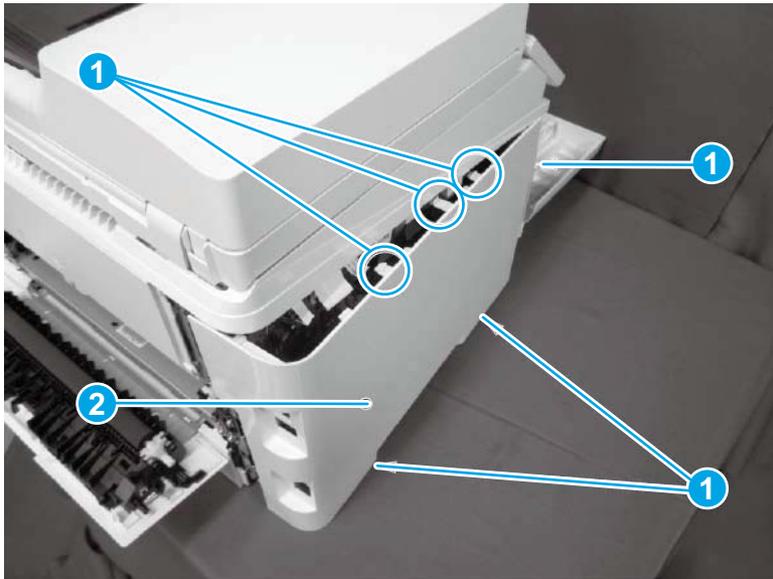

### Step 9: Remove the duplexer door (duplex models)


---

 **NOTE:** This step is for duplex printers. For simplex printers, skip this step and go to [Step 11: Remove the rear door assembly \(simplex models\) on page 479](#).

---


1. At the rear of the printer, at the bottom of the duplexer door, remove two larger M4 tapping screws (callout 1), and then remove the two holders (callout 2) from the door.

Figure 1-679 Remove two screws and holders

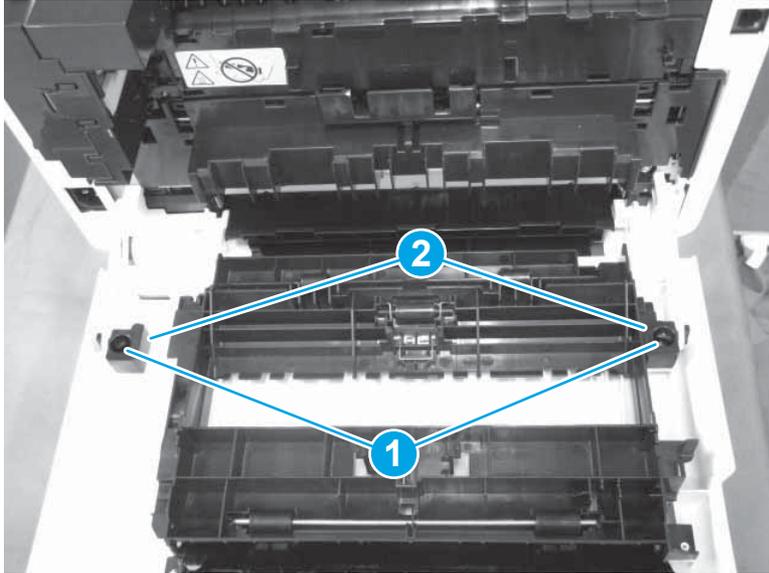


2. Rotate the shaft (callout 1) toward the printer to release it.

Figure 1-680 Rotate the shaft

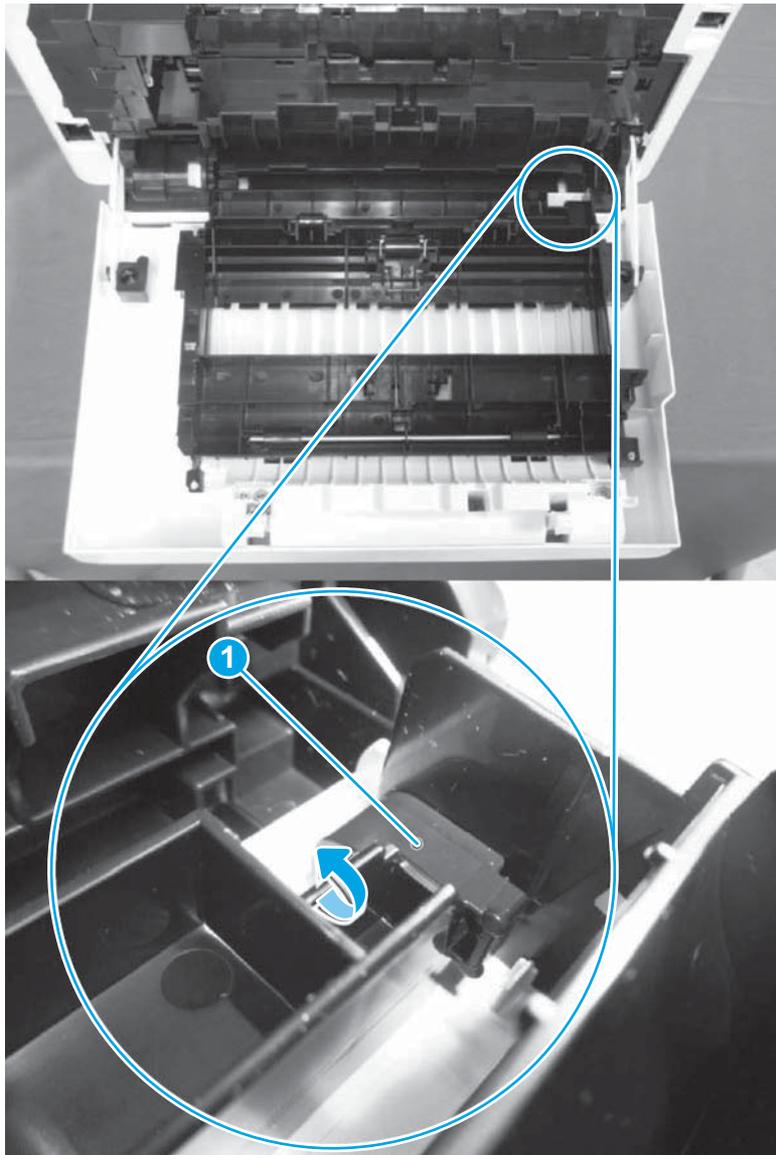

3. Slide the shaft (callout 1) to the left to remove it.

**Figure 1-681** Remove the shaft

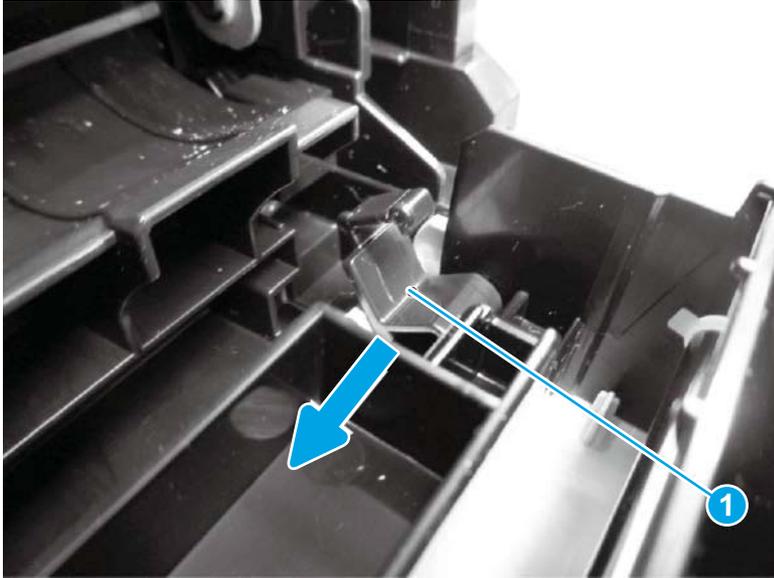


4. Rotate the right side of the door away from the printer, and then release the left shaft (callout 1) to remove the door.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-682** Remove the duplexer door

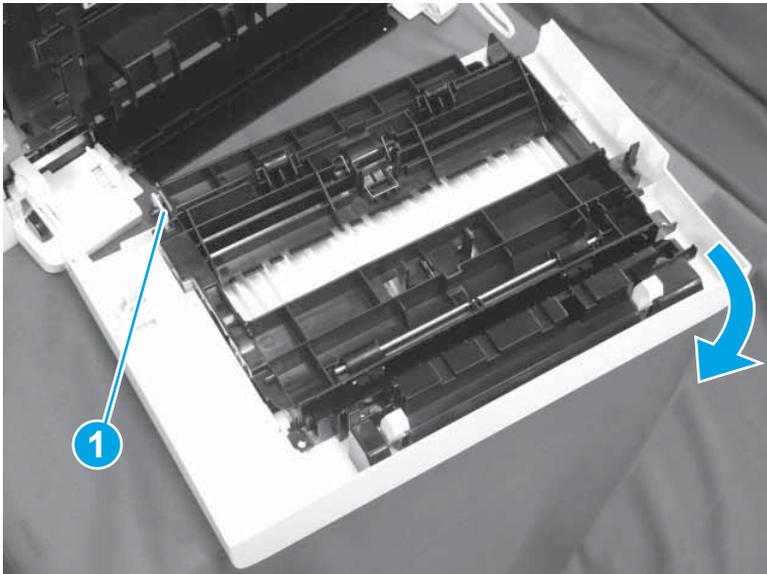


### Step 10: Remove the rear door assembly (duplex models)

 **NOTE:** This step is for duplex printers. For simplex printers, skip this step and go to [Step 11: Remove the rear door assembly \(simplex models\) on page 479](#).

---

1. Remove two screws (callout 1), remove one M4 tapping screw (callout 2), and then remove the cover (callout 3).

Figure 1-683 Remove three screws and the cover

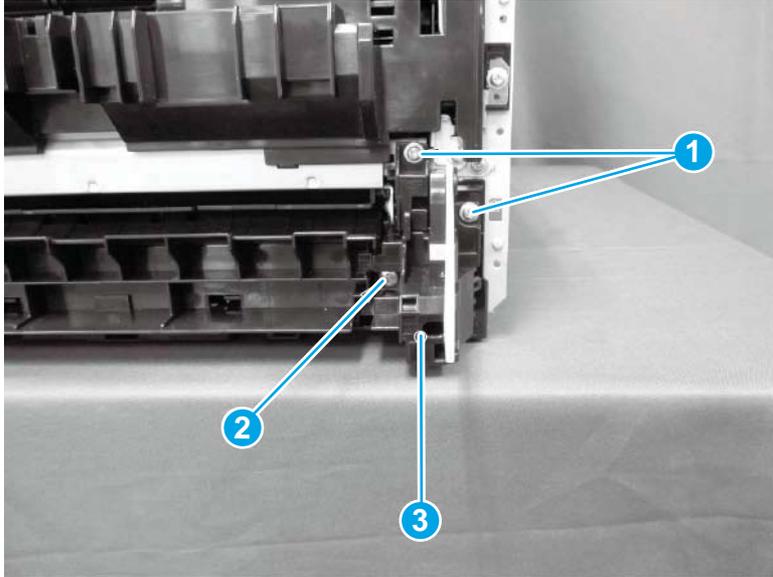


2. Open the rear door assembly. Release the shaft holder (callout 1) to remove it from the rear door assembly. Slide the rear door assembly (callout 2) to the right to remove it.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-684 Remove the rear door assembly

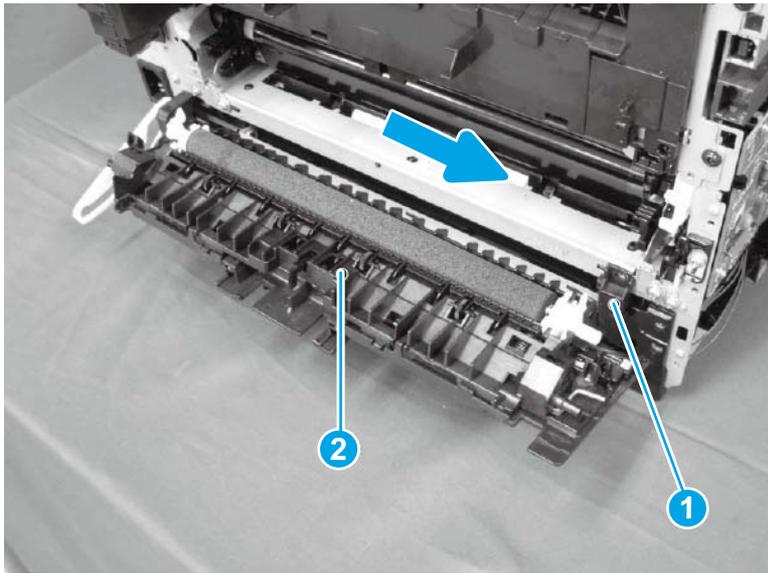

### Step 11: Remove the rear door assembly (simplex models)


---

 **NOTE:** This step is for simplex printers. For duplex printers, skip this step and go to [Step 12: Remove the ITB on page 481](#).

---


1. Remove one screw (callout 1), and then remove one M4 tapping screw (callout 2).

Figure 1-685 Remove two screws

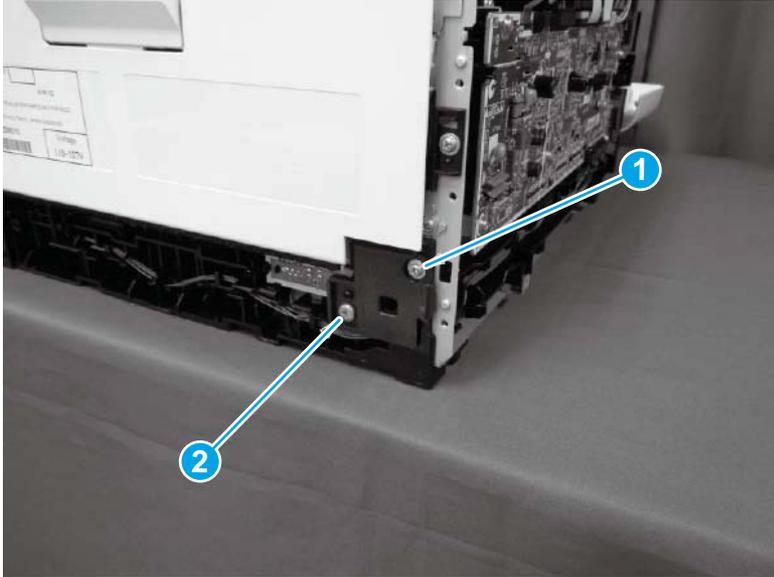

2. Open the rear door. Release the shaft holder (callout 1) to remove it from the rear door.


Figure 1-686 Remove the shaft holder

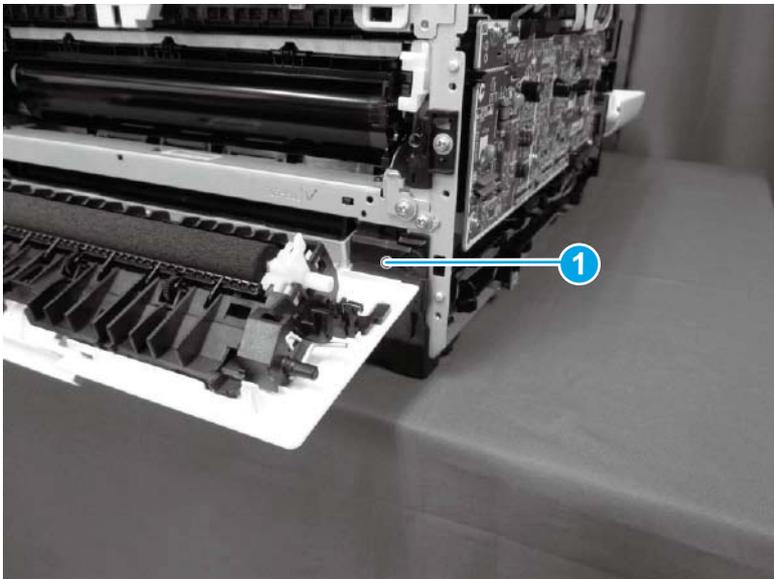

3. Slide the rear door assembly (callout 1) to the right to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-687** Remove the rear door assembly

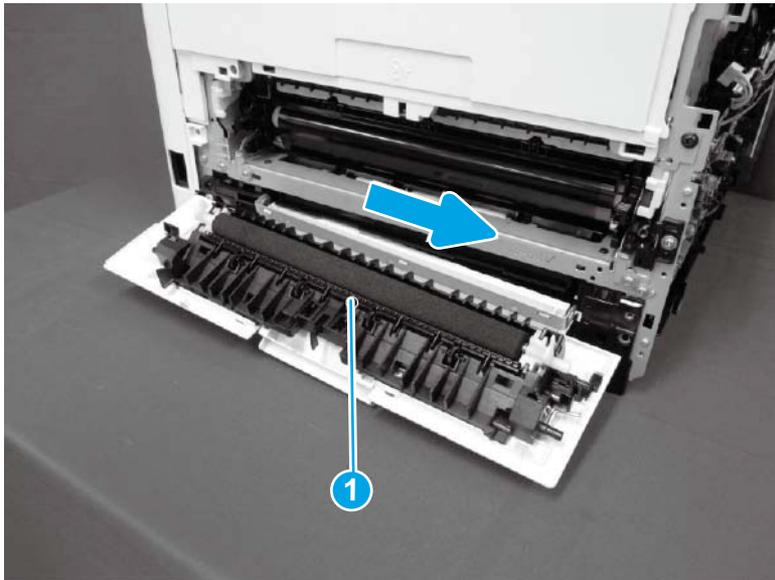

#### Step 12: Remove the ITB


1. On the right side of the printer, use a small, flat-blade screwdriver to release one tab (callout 1) on the front of the fan duct cover.

**Figure 1-688** Release one tab

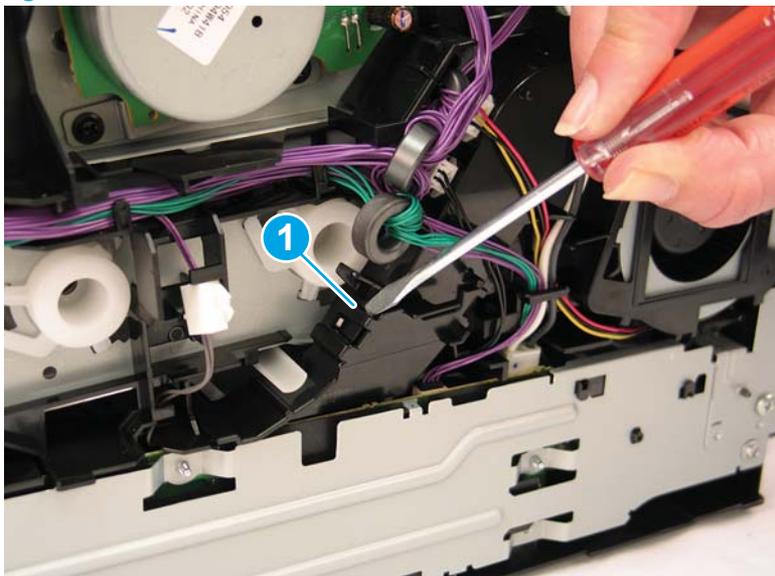


2. Release one tab (callout 1) on the rear of the fan duct cover, and then remove the fan duct cover (callout 2).

Figure 1-689 Release one tab

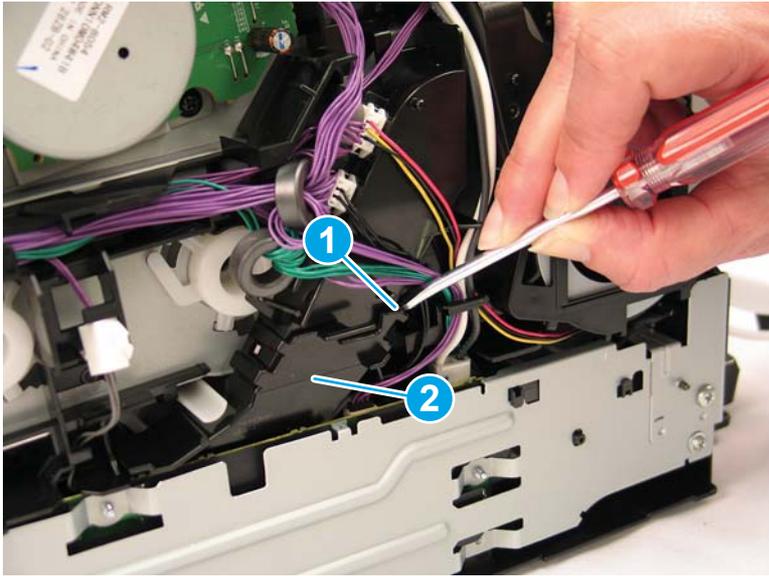


3. Next to the area where the duct cover was located, release the white plastic tab (callout 1). Rotate it toward the front of the printer.

Figure 1-690 Release and rotate one tab

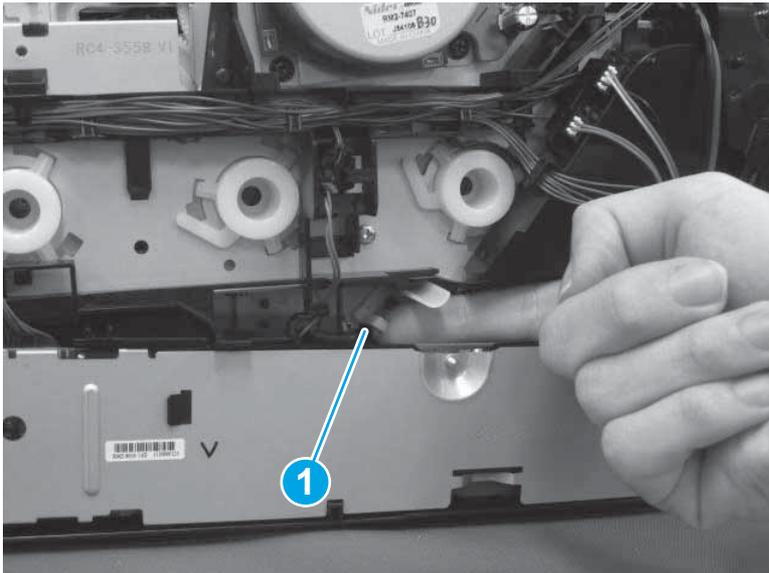


4. Pull the white plastic shaft (callout 1) away from the chassis to loosen it.

Figure 1-691 Loosen the shaft

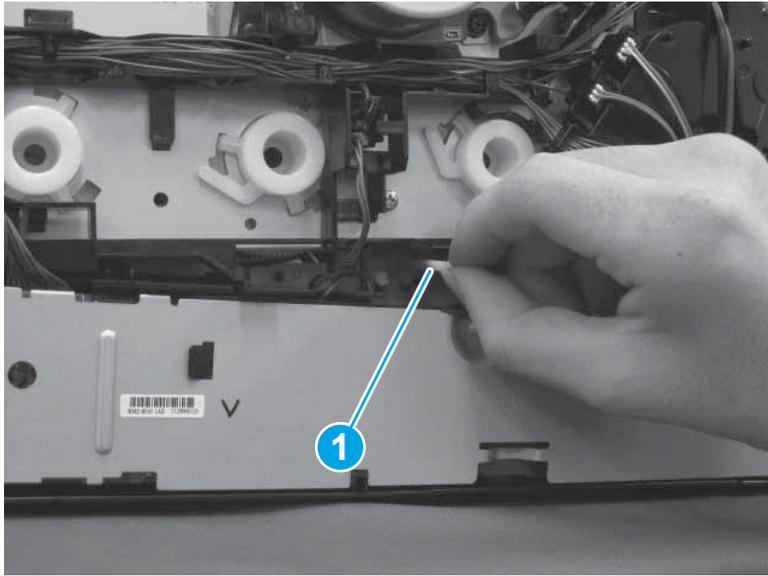


5. Find the ITB service tool and use the graphic below to see how to hold it correctly.

Figure 1-692 Remove the ITB (4 of 8)

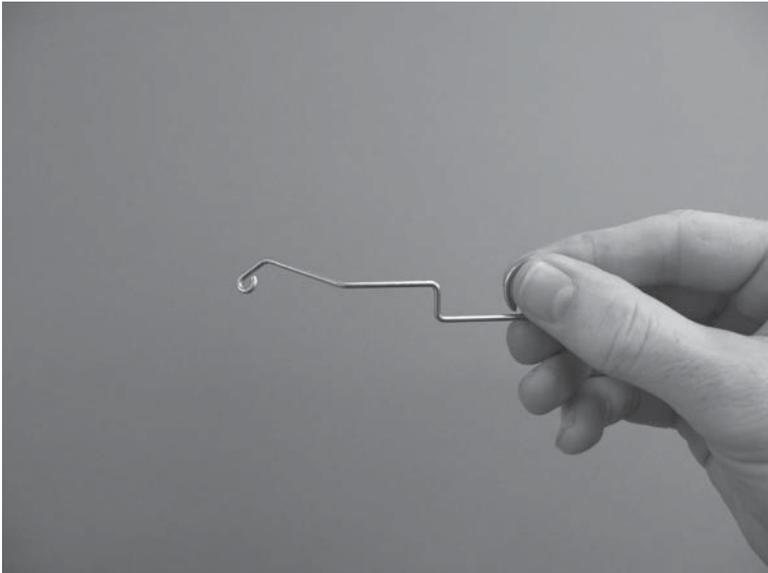


6. At the rear of the printer right side, position the ITB service tool to push the white plastic gear (callout 1) away from the chassis. Using a prying motion, press the ITB service tool toward the chassis to move the gear away from the ITB.

Figure 1-693 Remove the ITB (5 of 8)

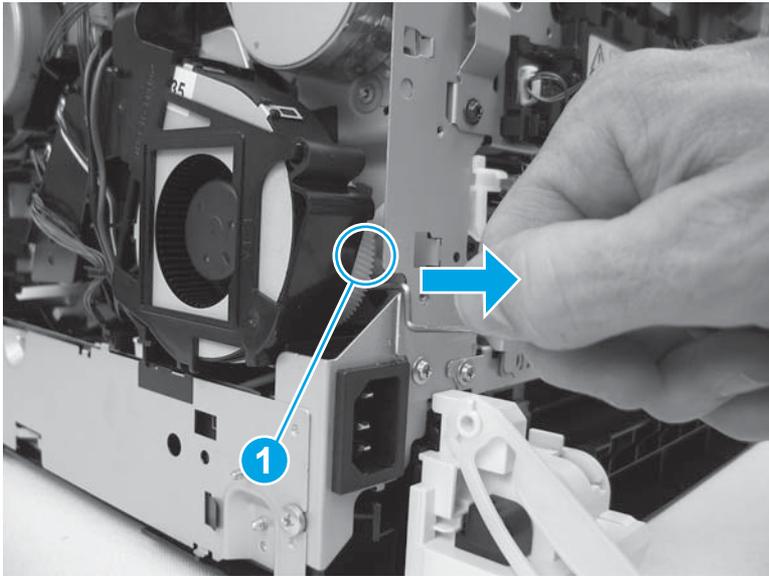

7. On the rear side of the printer, remove two screws (callout 1).

Figure 1-694 Remove two screws

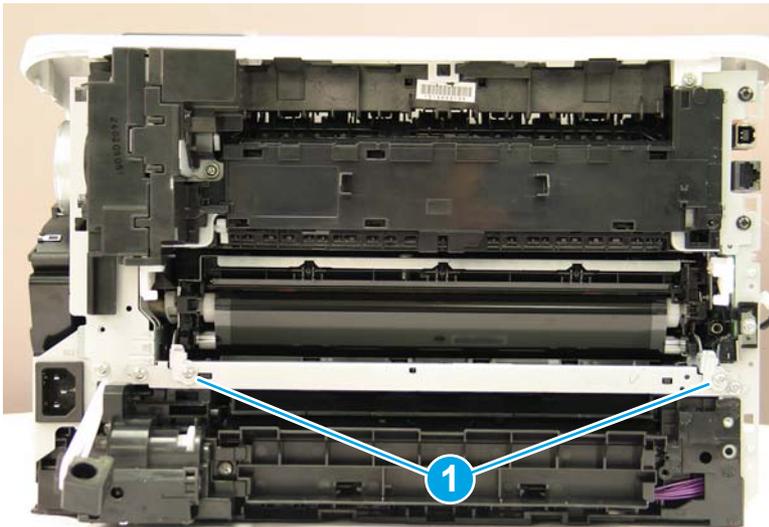


8. Make sure that the front door is open. Using the two tabs (callout 1) that held the screws, pull the ITB assembly (callout 2) out towards you from the rear of the printer.

 **NOTE:** Depending on how much resistance you encounter when pulling the ITB, you might need to open or close the door to help the ITB move clear of some internal parts.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-695** Remove the ITB

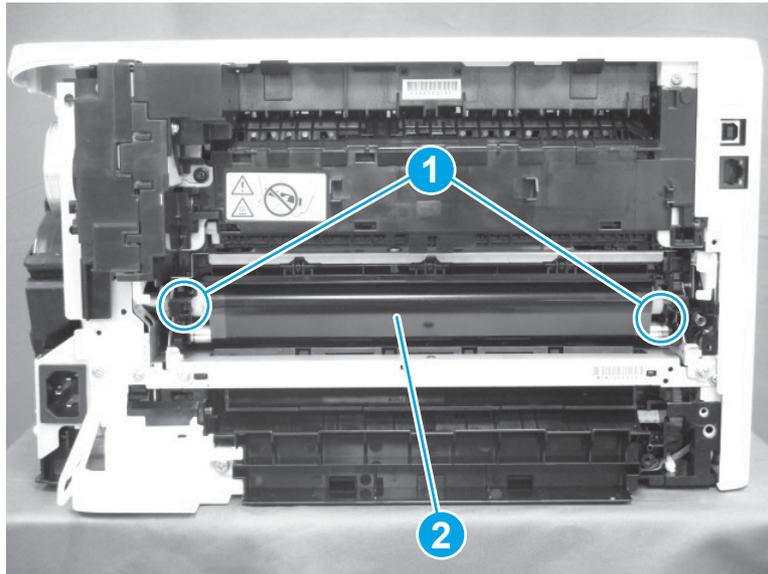

### Step 13: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Density detect sensor assembly

- [Introduction](#)
- [Step 1: Remove the toner cartridges](#)
- [Step 2: Remove the cassette tray](#)
- [Step 3: Remove the priority feed slot tray \(M253-M254 and M278-M281\)](#)
- [Step 4: Open the front and rear doors](#)
- [Step 5: Remove the right cover \(M153-M154 and M253-M254\)](#)
- [Step 6: Remove the left cover \(M153-M154 and M253-M254\)](#)
- [Step 7: Remove the right cover \(M178-M181 and M278-M281\)](#)
- [Step 8: Remove the left cover \(M178-M181 and M278-M281\)](#)
- [Step 9: Remove the duplexer door \(duplex models\)](#)
- [Step 10: Remove the rear door assembly \(duplex models\)](#)
- [Step 11: Remove the rear door assembly \(simplex models\)](#)
- [Step 12: Remove the intermediate transfer belt \(ITB\)](#)
- [Step 13: Remove the density detect sensor assembly](#)
- [Step 14: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the density detect sensor assembly.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.  
 **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

**Density detect sensor assembly part number**

---

**RM2-5874-000CN**Density detect sensor assembly

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Make sure that the printer initializes to a **Ready** state.

Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the toner cartridges

1. Open the front door.



2. Grasp the blue handle on the toner cartridge drawer, and then pull out the drawer.




3. Grasp the handle on the toner cartridge, and then pull the toner cartridge straight up to remove it.



### Step 2: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-696 Remove the cassette tray

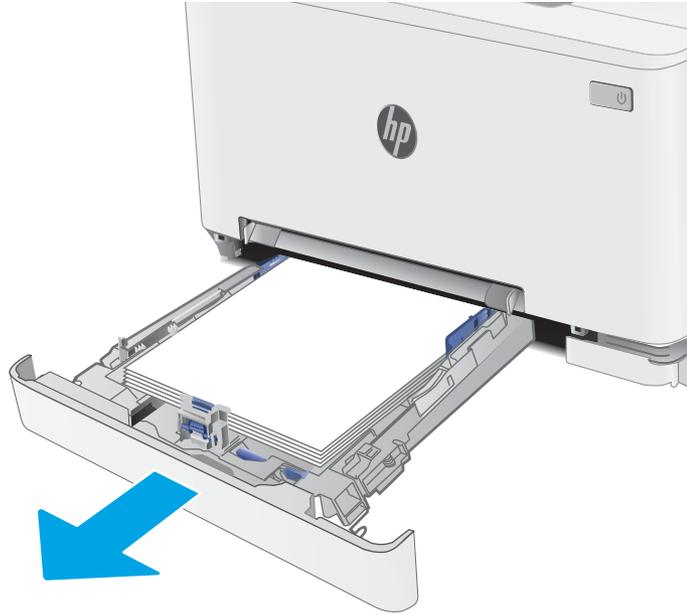

### Step 3: Remove the priority feed slot tray (M253-M254 and M278-M281)

 **NOTE:** This step is for the M253-M254 and M278-M281 printers. For the M153-M154 and M178-M181 printers, skip this step and go to [Step 4: Open the front and rear doors on page 489](#).

- ▲ At the front of the printer, gently push down on the single-sheet priority feed slot tray, and then pull out the feed slot tray.

Figure 1-697 Remove the priority feed slot tray



### Step 4: Open the front and rear doors


1. Open the front door.

Figure 1-698 Open the front door



2. **Simplex models only:** Open the rear door.

Figure 1-699 Open the rear door

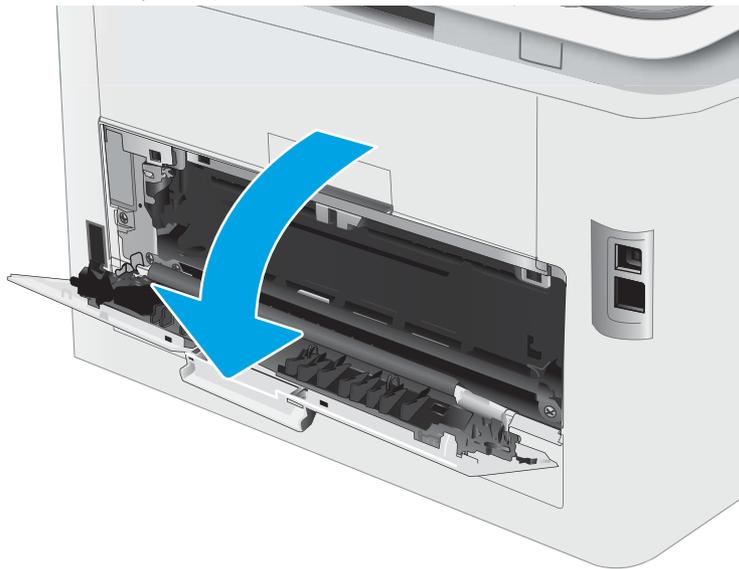

3. **Duplex models only:** Open the duplexer door.

**Figure 1-700** Open the duplexer door




#### Step 5: Remove the right cover (M153-M154 and M253-M254)

 **NOTE:** This step is for the M153-M154 and M253-M254 printers. For the M178-M181 and M278-M281 printers, skip this step and go to [Step 7: Remove the right cover \(M178-M181 and M278-M281\) on page 494](#).

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


**Figure 1-701** Tab locations

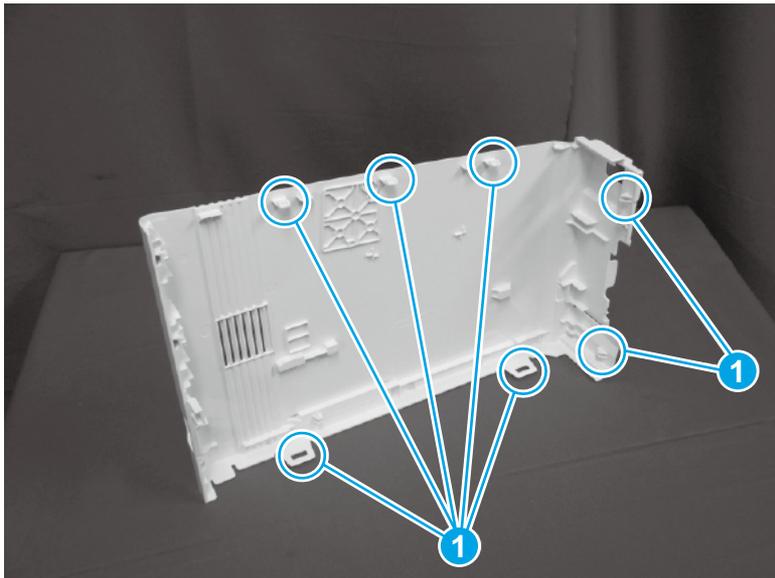

2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

**Figure 1-702** Remove one screw and release tabs

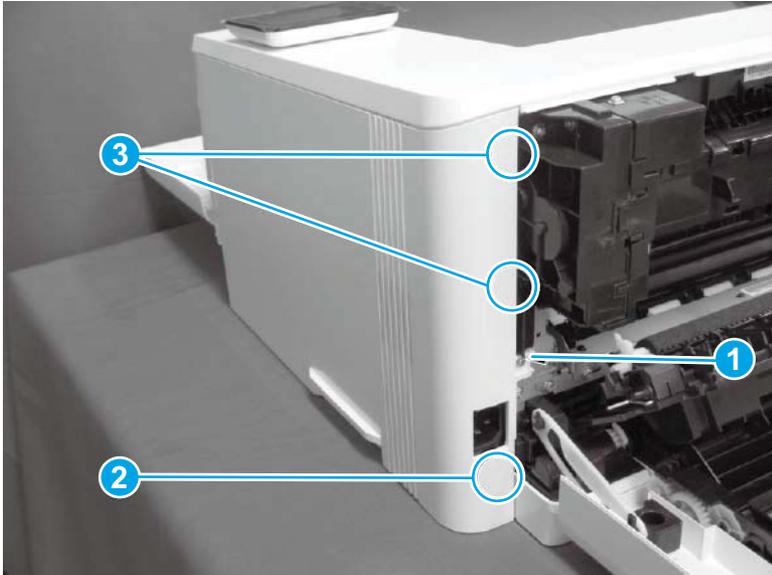


3. Release seven tabs (callout 1) along the top, bottom, and front of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-703** Remove the right cover

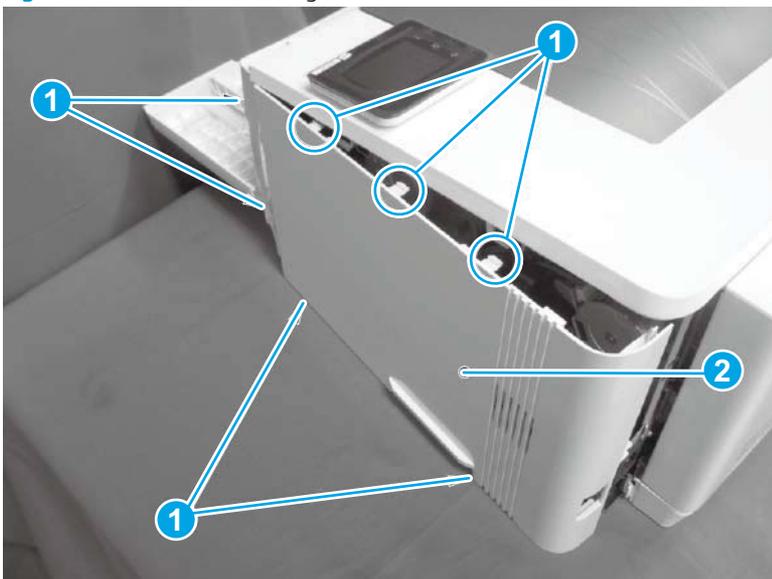


## Step 6: Remove the left cover (M153-M154 and M253-M254)

 **NOTE:** This step is for the M153-M154 and M253-M254 printers. For the M178-M181 and M278-M281 printers, skip this step and go to [Step 7: Remove the right cover \(M178-M181 and M278-M281\) on page 494](#).

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


**Figure 1-704** Tab locations

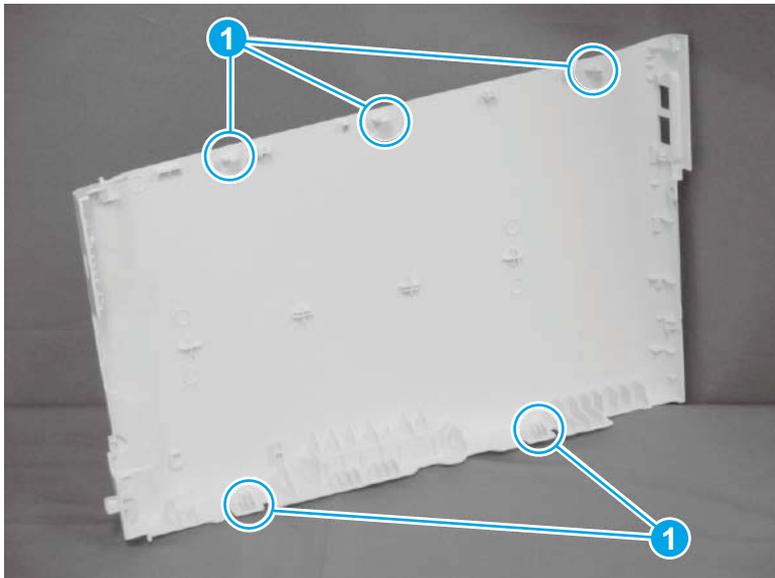

2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

**Figure 1-705** Remove one screw and release tabs

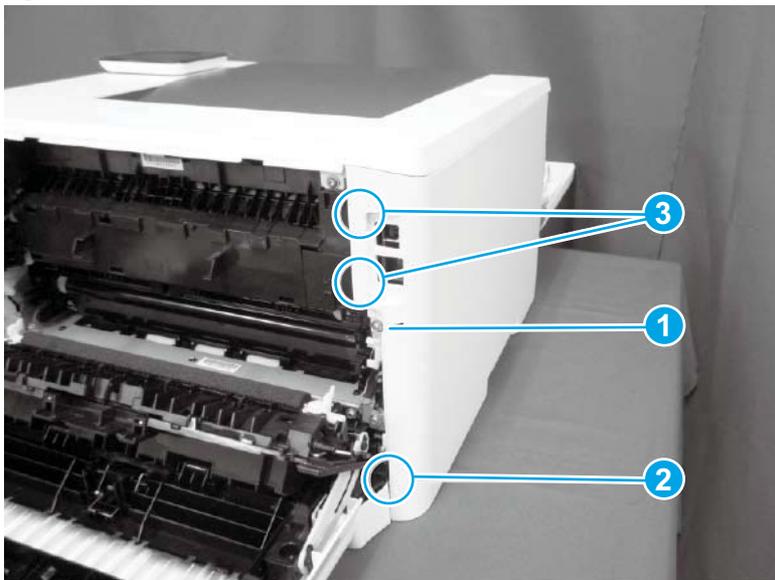

3. Release five tabs (callout 1) along the top and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

---


 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-706** Remove the left cover

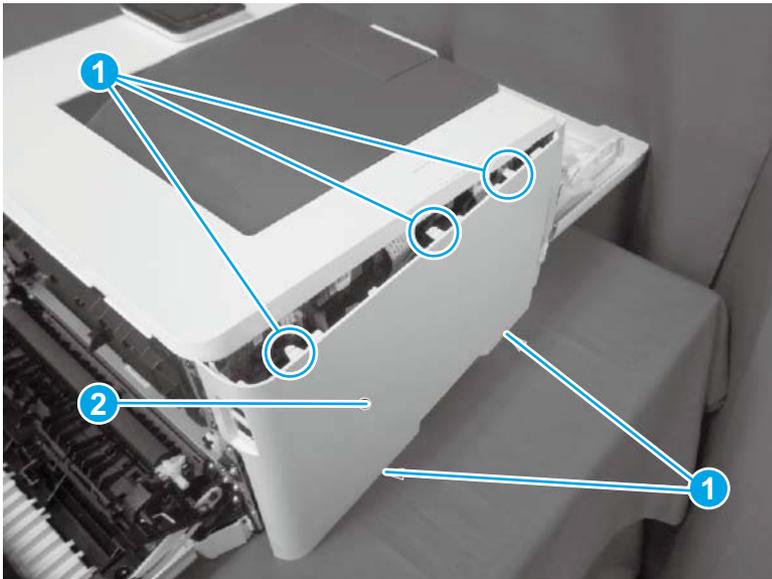

#### Step 7: Remove the right cover (M178-M181 and M278-M281)


---

 **NOTE:** This step is for the M178-M181 and M278-M281 printers. For the M153-M154 and M253-M254 printers, skip this step and go to [Step 9: Remove the duplexer door \(duplex models\) on page 498](#).

---

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-707 Tab locations

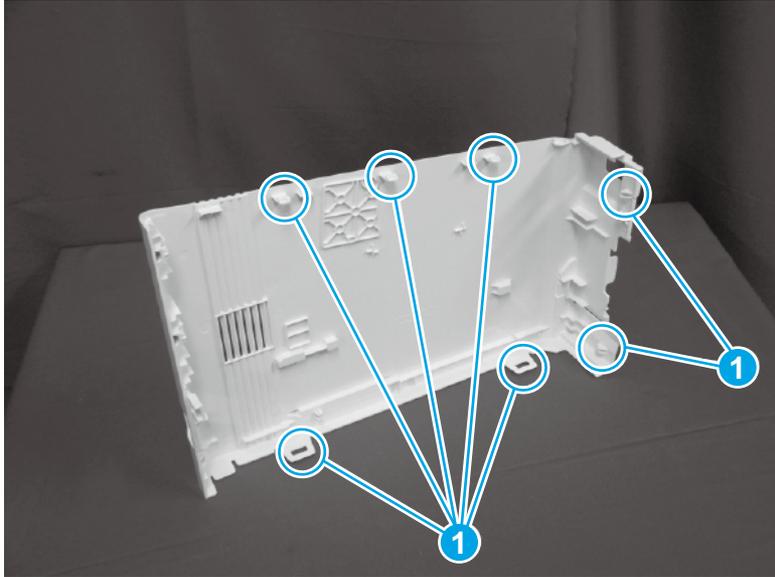


2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

---

Figure 1-708 Remove one screw and release tabs

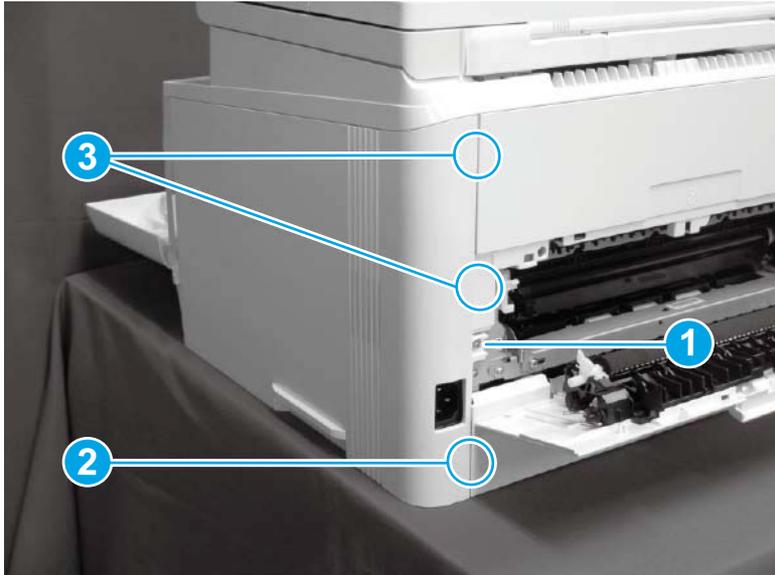

3. Release seven tabs (callout 1) along the top, bottom, and front of the cover. Pull the cover (callout 2) away from the printer to remove it.

---


 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-709** Remove the right cover

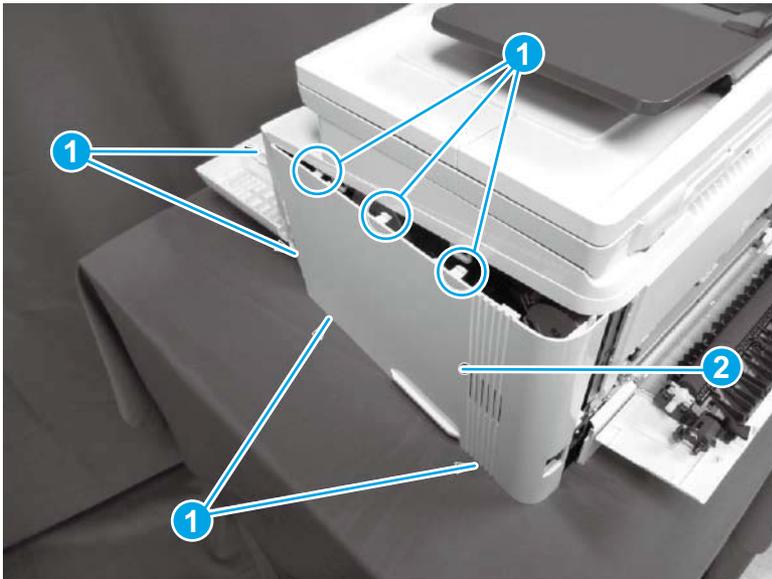

#### Step 8: Remove the left cover (M178-M181 and M278-M281)


---

 **NOTE:** This step is for the M178-M181 and M278-M281 printers. For the M153-M154 and M253-M254 printers, skip this step and go to [Step 9: Remove the duplexer door \(duplex models\) on page 498](#).

---

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


Figure 1-710 Tab locations

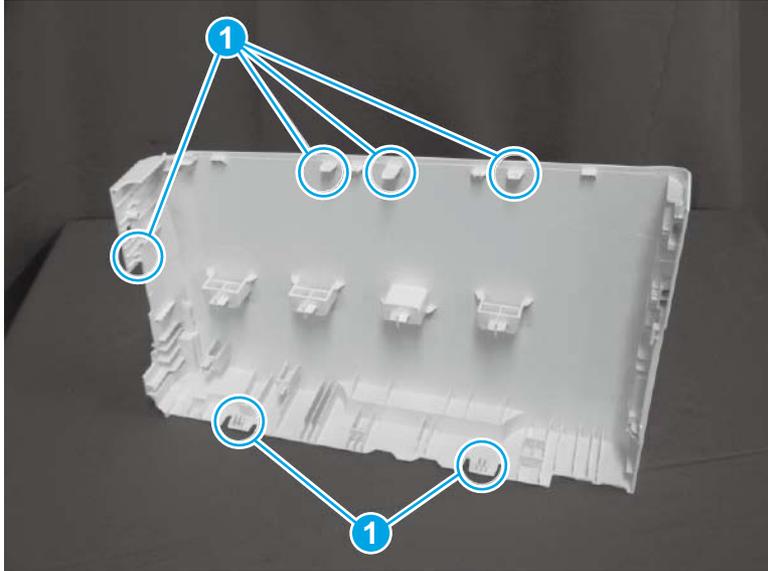

2. At the rear of the printer, remove one screw (callout 1), and then release one tab (callout 2).

 **TIP:** Use a small, flat-blade screwdriver to release the tab.

Figure 1-711 Remove one screw and release tab

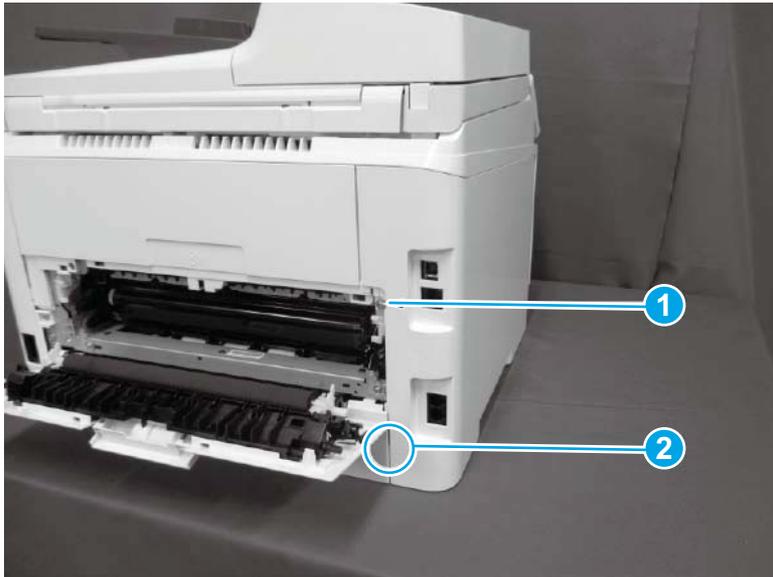

3. Release six tabs (callout 1) along the top, front, and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

---


 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-712** Remove the left cover

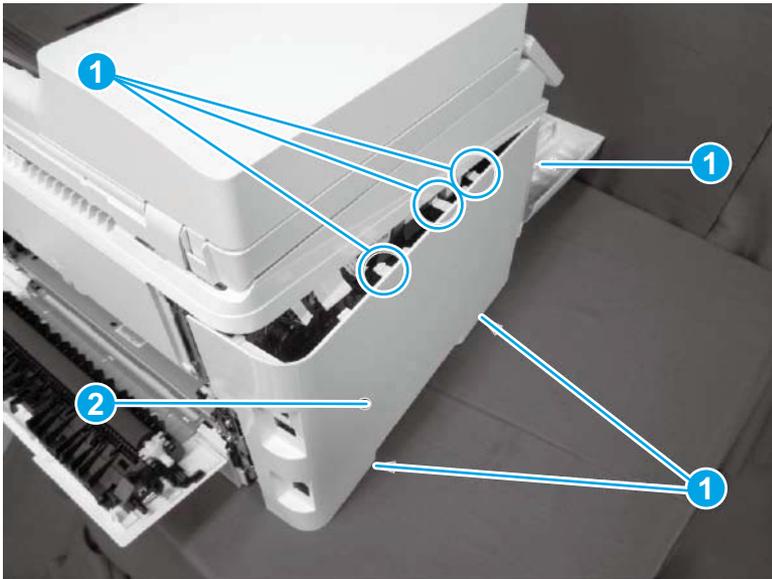

### Step 9: Remove the duplexer door (duplex models)


---

 **NOTE:** This step is for duplex printers. For simplex printers, skip this step and go to [Step 11: Remove the rear door assembly \(simplex models\) on page 502](#).

---


1. At the rear of the printer, at the bottom of the duplexer door, remove two larger M4 tapping screws (callout 1), and then remove the two holders (callout 2) from the door.

Figure 1-713 Remove two screws and holders

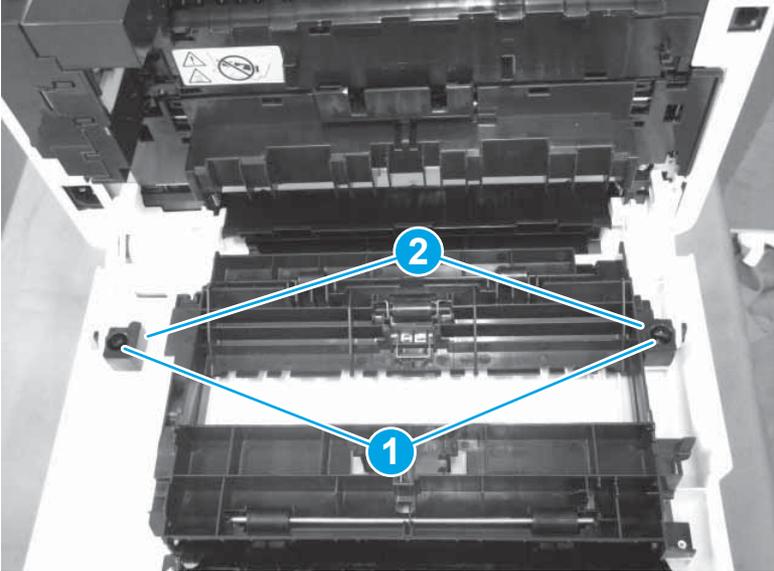


2. Rotate the shaft (callout 1) toward the printer to release it.

Figure 1-714 Rotate the shaft

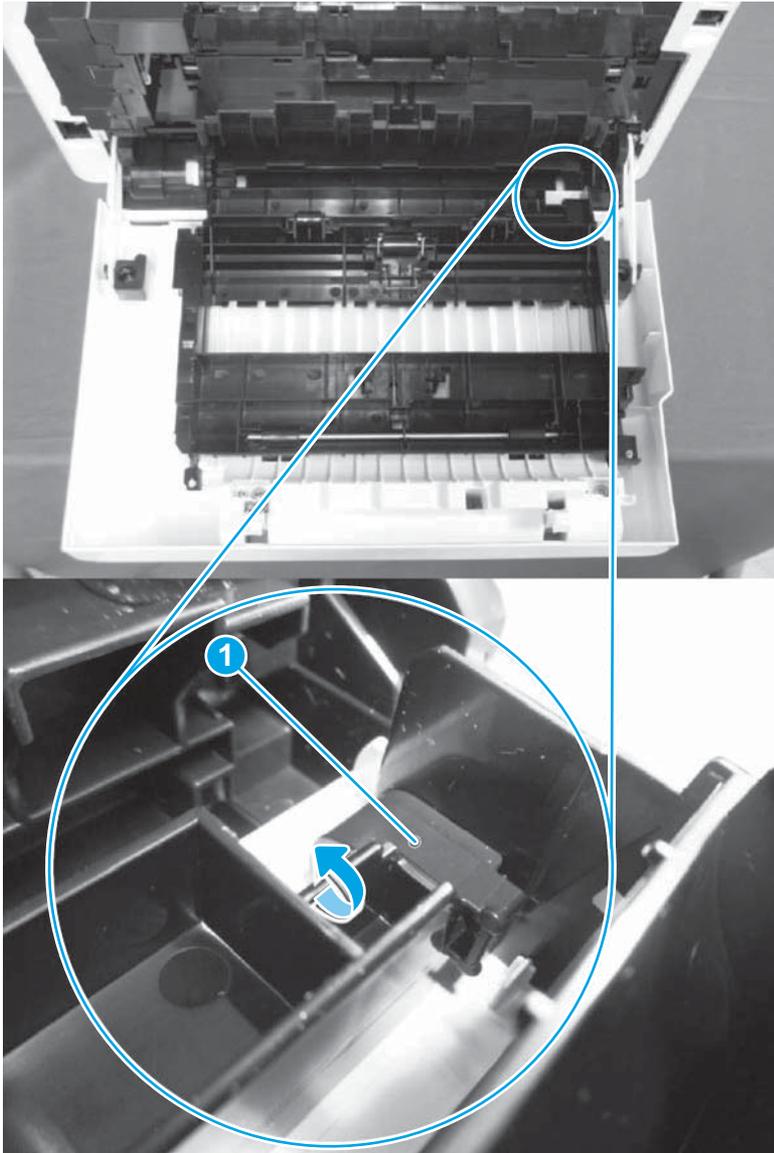

3. Slide the shaft (callout 1) to the left to remove it.

Figure 1-715 Remove the shaft

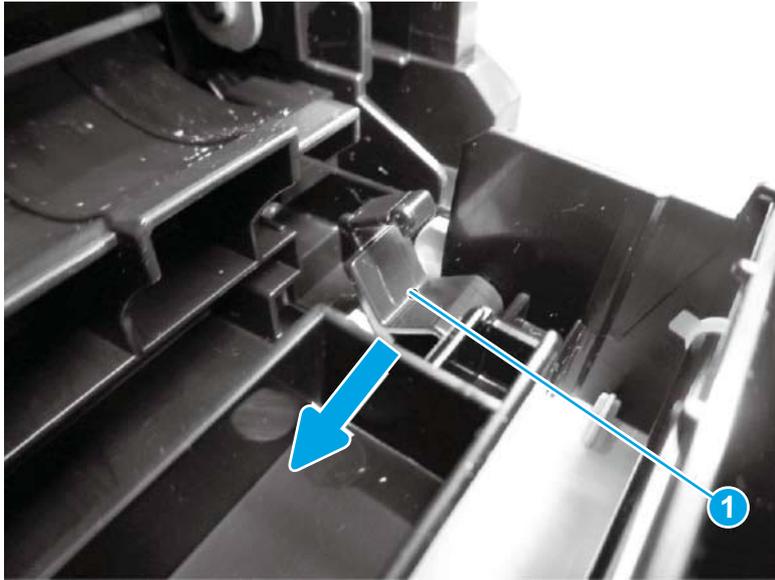


4. Rotate the right side of the door away from the printer, and then release the left shaft (callout 1) to remove the door.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-716 Remove the duplexer door

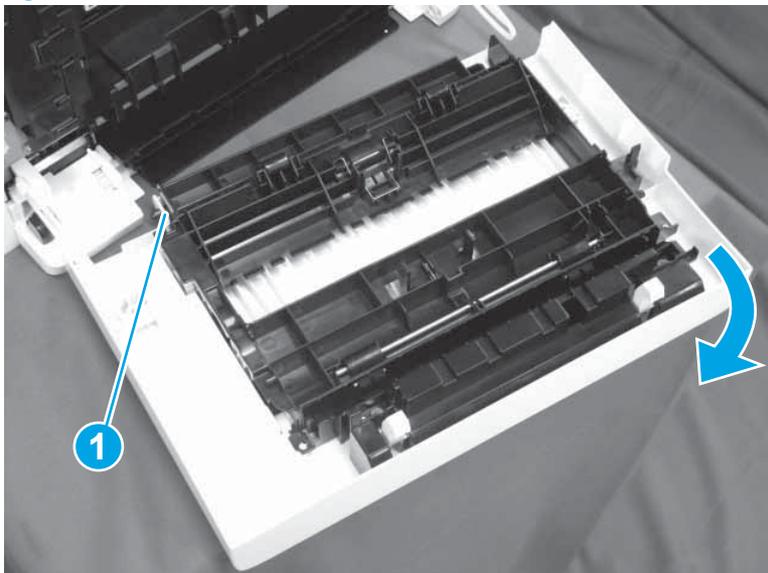

### Step 10: Remove the rear door assembly (duplex models)


---

 **NOTE:** This step is for duplex printers. For simplex printers, skip this step and go to [Step 11: Remove the rear door assembly \(simplex models\) on page 502](#).

---

1. Remove two screws (callout 1), remove one M4 tapping screw (callout 2), and then remove the cover (callout 3).

Figure 1-717 Remove three screws and the cover

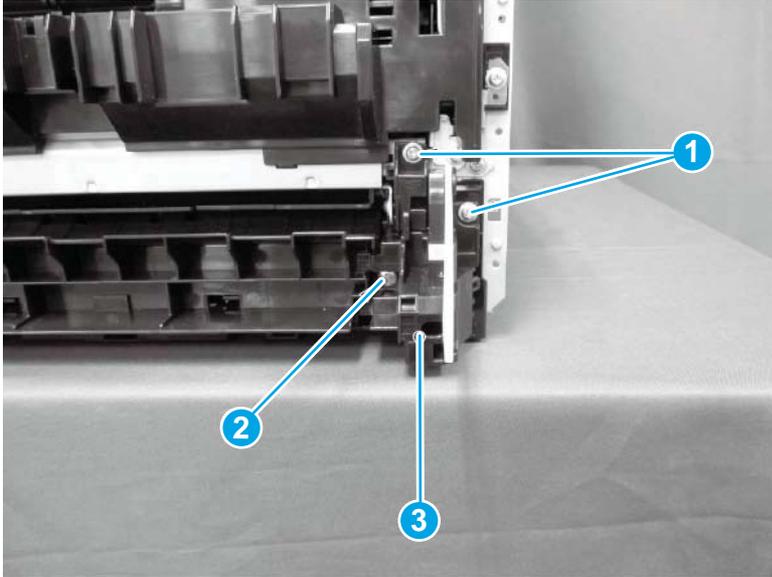


2. Open the rear door assembly. Release the shaft holder (callout 1) to remove it from the rear door assembly. Slide the rear door assembly (callout 2) to the right to remove it.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-718 Remove the rear door assembly

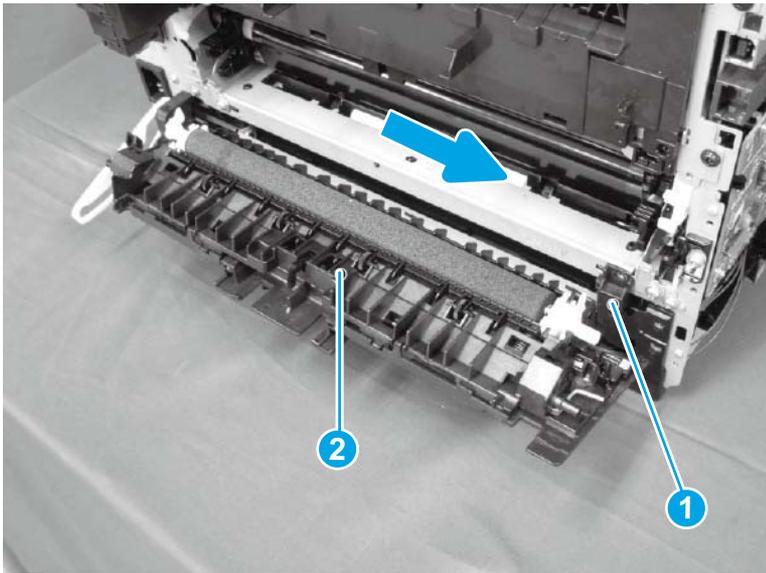

#### Step 11: Remove the rear door assembly (simplex models)


---

 **NOTE:** This step is for simplex printers. For duplex printers, skip this step and go to [Step 12: Remove the intermediate transfer belt \(ITB\) on page 504](#).

---


1. Remove one screw (callout 1), and then remove one M4 tapping screw (callout 2).

Figure 1-719 Remove two screws

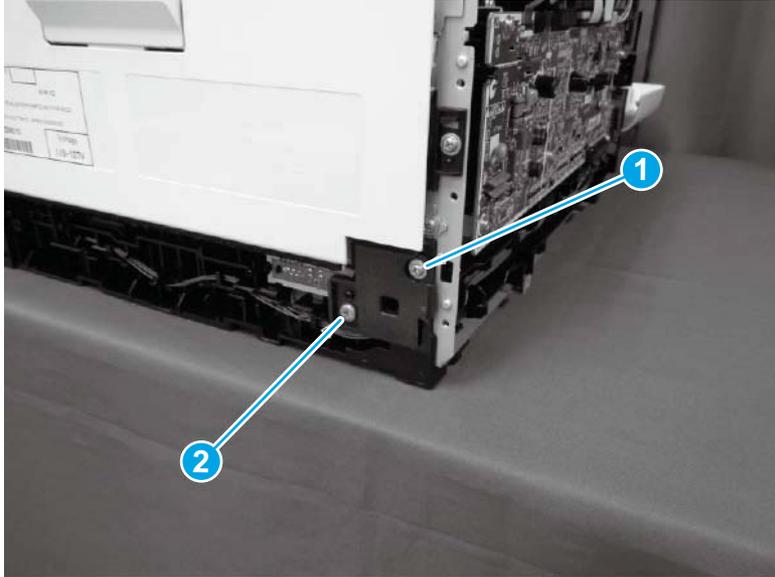

2. Open the rear door. Release the shaft holder (callout 1) to remove it from the rear door.


Figure 1-720 Remove the shaft holder

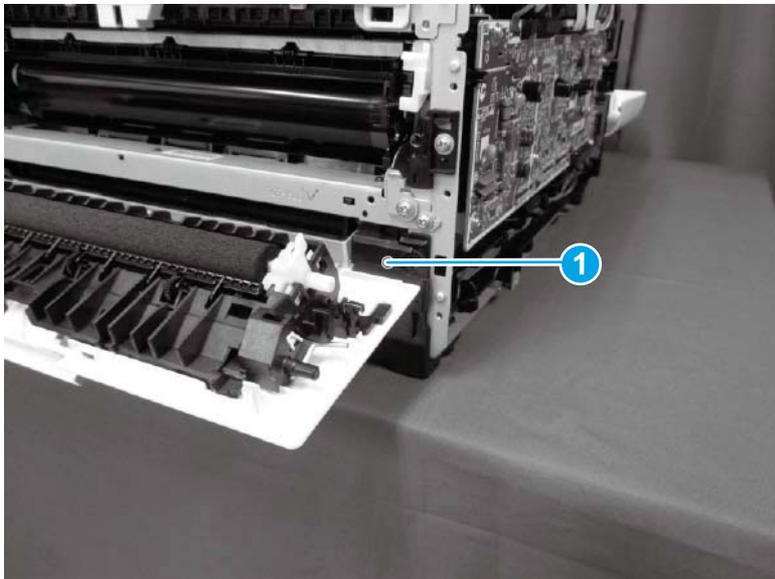

3. Slide the rear door assembly (callout 1) to the right to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-721** Remove the rear door assembly

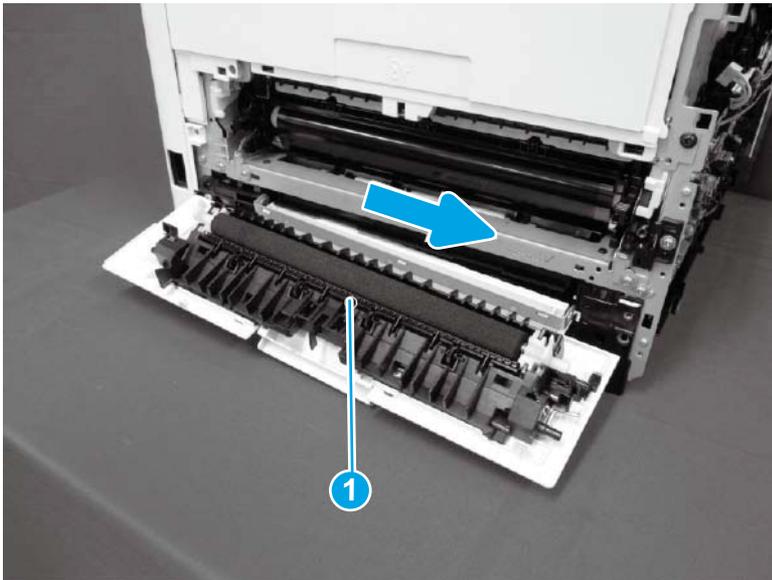

#### Step 12: Remove the intermediate transfer belt (ITB)


1. On the right side of the printer, use a small, flat-blade screwdriver to release one tab (callout 1) on the front of the fan duct cover.

**Figure 1-722** Release one tab

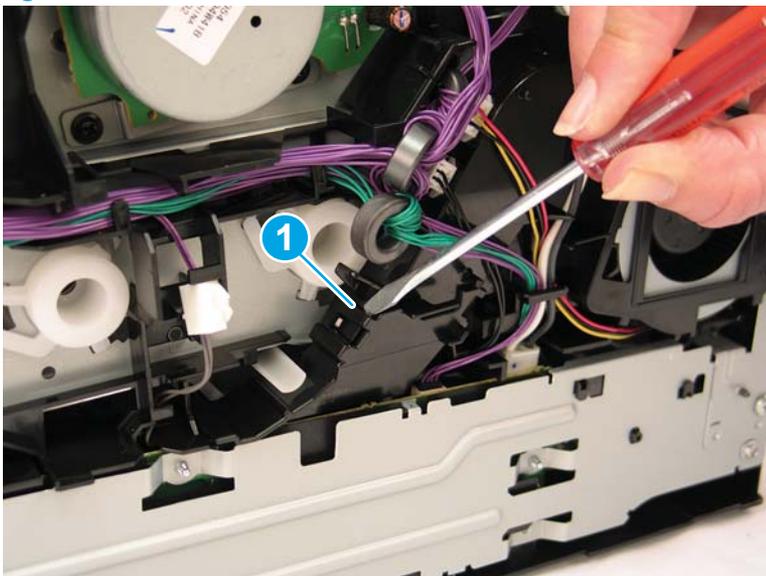


2. Release one tab (callout 1) on the rear of the fan duct cover, and then remove the fan duct cover (callout 2).

Figure 1-723 Release one tab

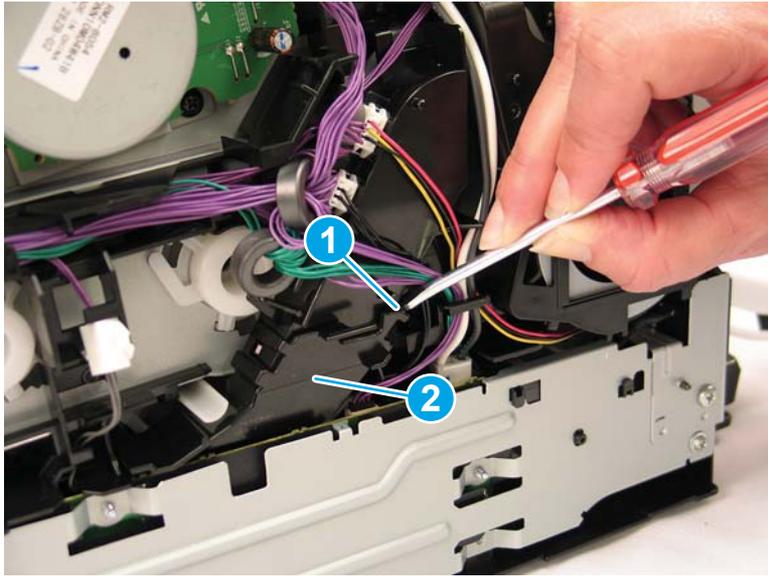


3. Next to the area where the duct cover was located, release the white plastic tab (callout 1). Rotate it toward the front of the printer.

Figure 1-724 Release and rotate one tab

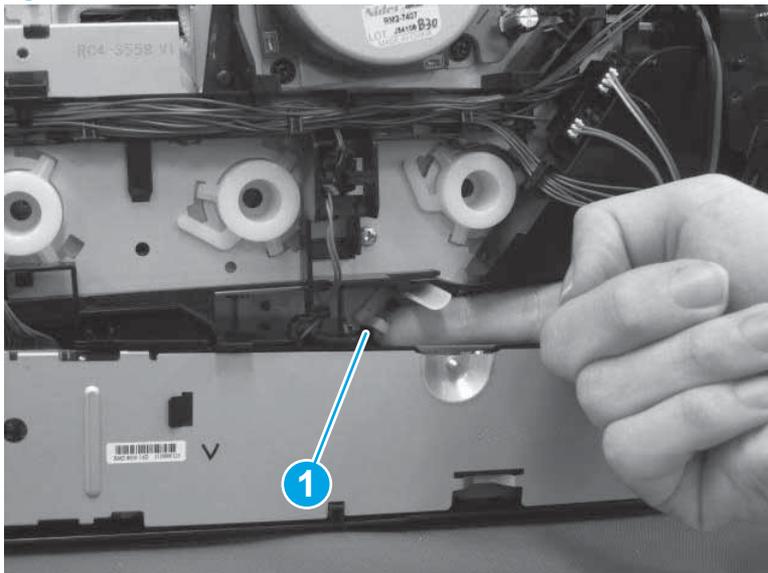


4. Pull the white plastic shaft (callout 1) away from the chassis to loosen it.

Figure 1-725 Loosen the shaft

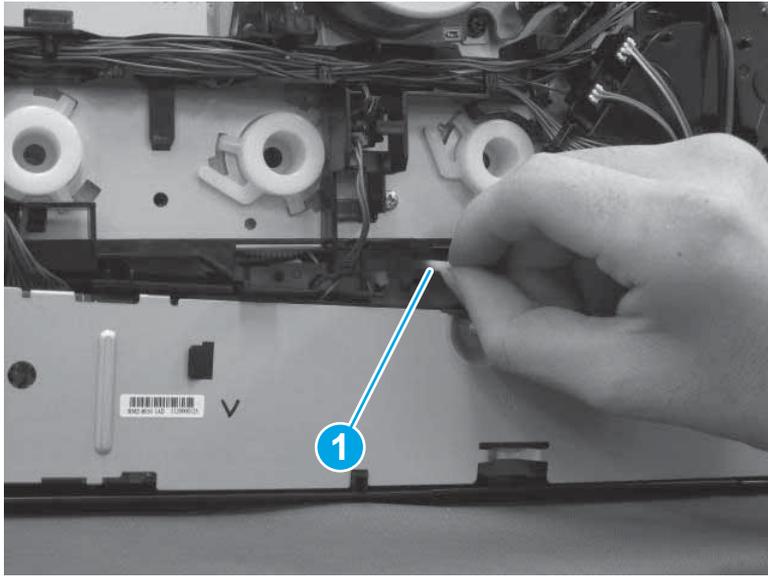


5. Find the ITB service tool and use the graphic below to see how to hold it correctly.

Figure 1-726 Remove the ITB (4 of 8)

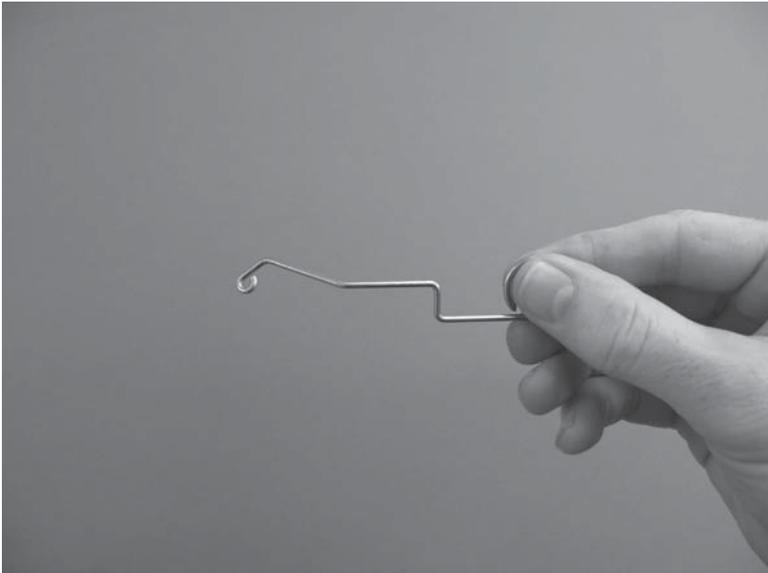


6. At the rear of the printer right side, position the ITB service tool to push the white plastic gear (callout 1) away from the chassis. Using a prying motion, press the ITB service tool toward the chassis to move the gear away from the ITB.

Figure 1-727 Remove the ITB (5 of 8)

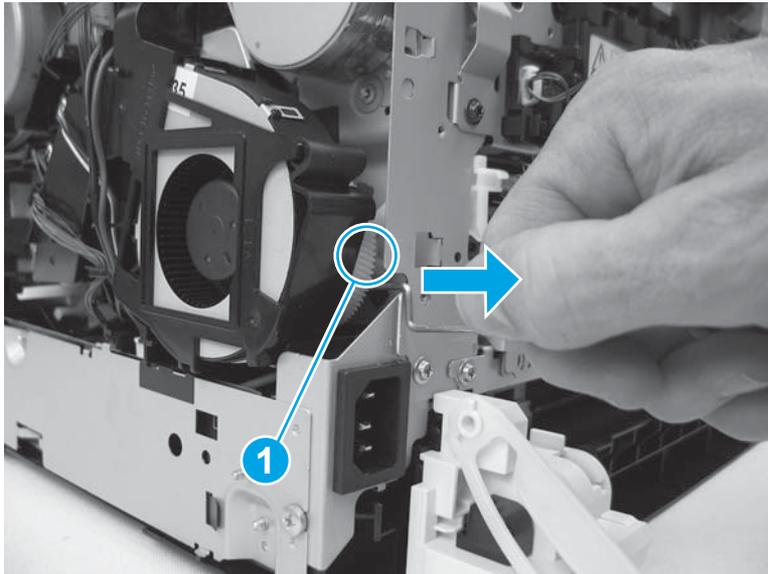

7. On the rear side of the printer, remove two screws (callout 1).

Figure 1-728 Remove two screws

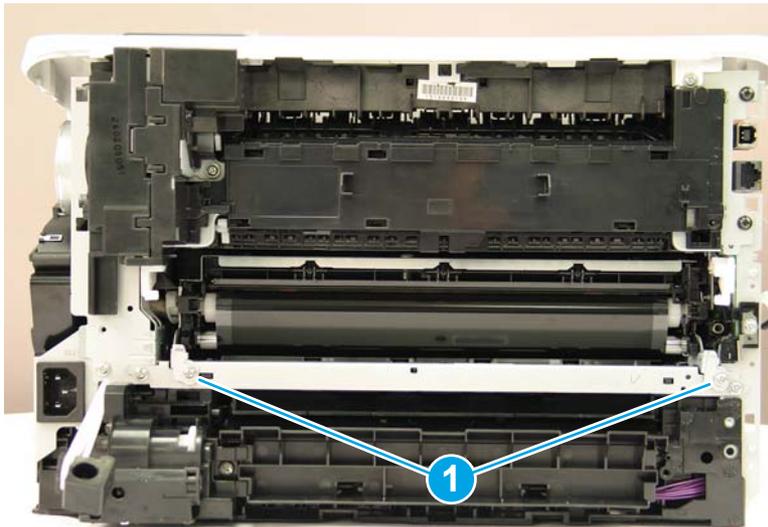


8. Make sure that the front door is open. Using the two tabs (callout 1) that held the screws, pull the ITB assembly (callout 2) out towards you from the rear of the printer.

 **NOTE:** Depending on how much resistance you encounter when pulling the ITB, you might need to open or close the door to help the ITB move clear of some internal parts.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-729** Remove the ITB

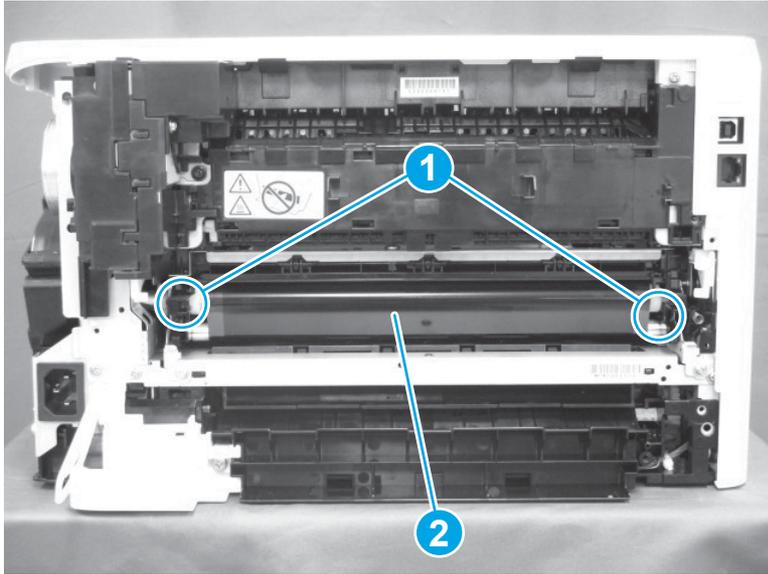

### Step 13: Remove the density detect sensor assembly

1. On the left side of the printer, disconnect one connector (callout 1) on the engine controller unit.


**Figure 1-730** Disconnect one connector

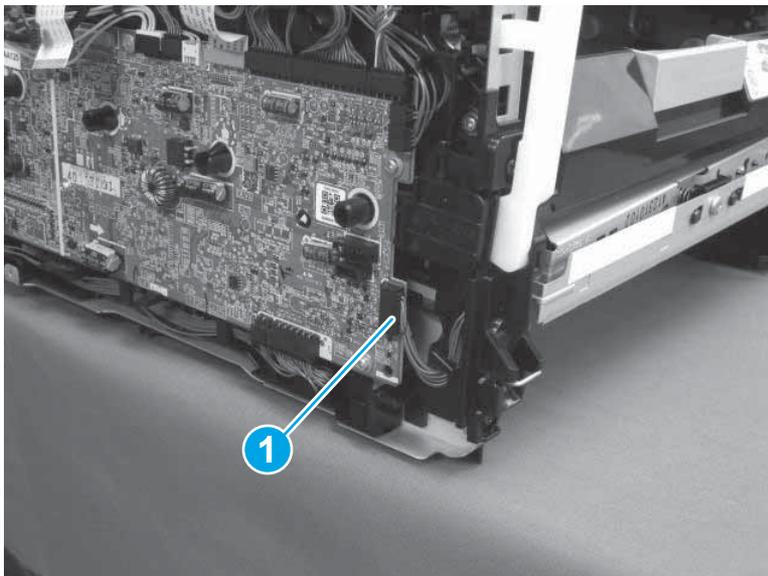

2. On the front of the printer, remove one M4 tapping screw (callout 1), and then pull the cartridge door out partially. Use a small, flat-blade screwdriver to press inward on the black tab (callout 2), and then slide the density detect sensor assembly (callout 3) to the right to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-731** Remove the registration density sensor

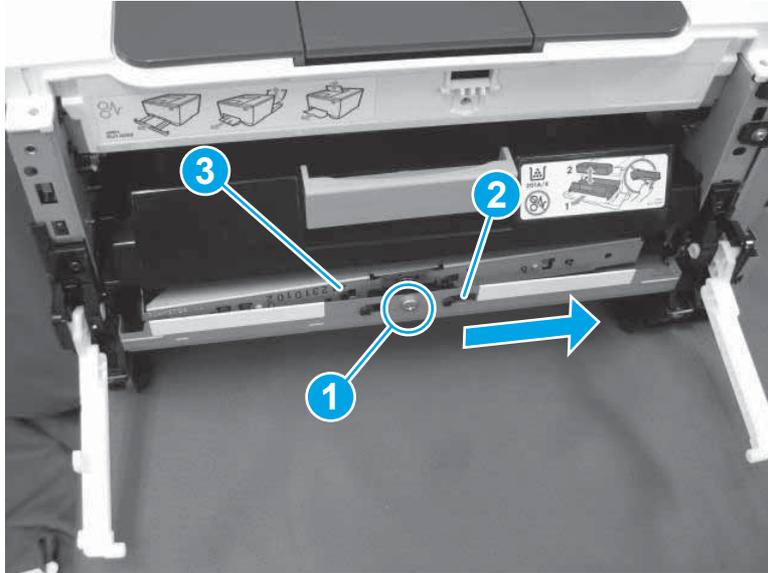

#### Step 14: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Duplexing drive assembly (duplex models)

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front door and duplexer door](#)
- [Step 3: Remove the right cover \(M253-M254\)](#)
- [Step 4: Remove the left cover \(M253-M254\)](#)
- [Step 5: Remove the right cover \(M278-M281\)](#)
- [Step 6: Remove the left cover \(M278-M281\)](#)
- [Step 7: Remove the control panel \(M278-M281\)](#)
- [Step 8: Remove the document feeder and scanner assembly \(M278-M281\)](#)
- [Step 9: Remove the top cover \(M278-M281\)](#)
- [Step 10: Remove the top cover \(M253-M254\)](#)
- [Step 11: Remove the duplex drive assembly](#)
- [Step 12: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the duplexing drive assembly.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Duplexing drive assembly part number	
RM2-5872-000CN	Duplexing drive assembly

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Make sure that the printer initializes to a **Ready** state.

Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-732 Remove the cassette tray



### Step 2: Open the front door and duplexer door


1. Open the front door.

Figure 1-733 Open the front door



2. Open the duplexer door.

Figure 1-734 Open the duplexer door

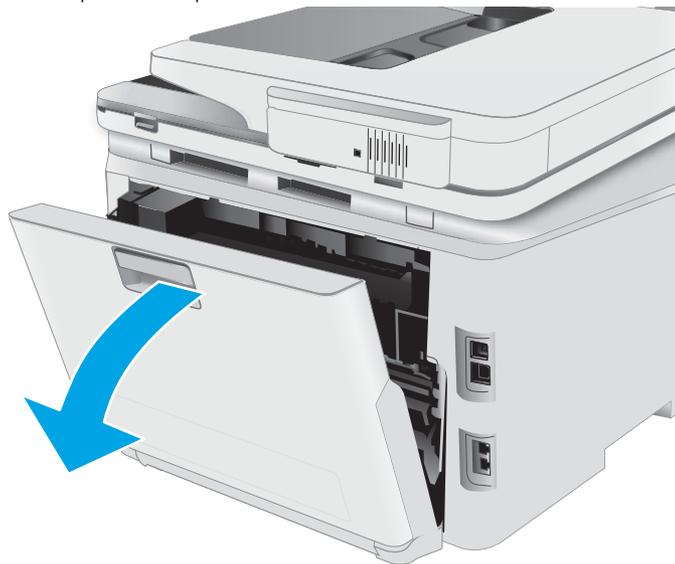


### Step 3: Remove the right cover (M253-M254)

 **NOTE:** This step is for the M253-M254 printers. For the M278-M281 printers, skip this step and go to [Step 5: Remove the right cover \(M278-M281\) on page 516.](#)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-735 Tab locations

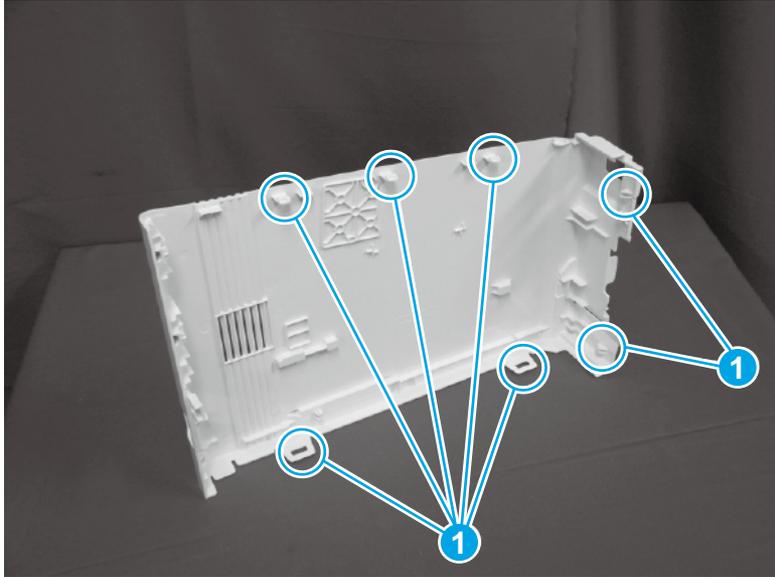


2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

---

Figure 1-736 Remove one screw and release tabs

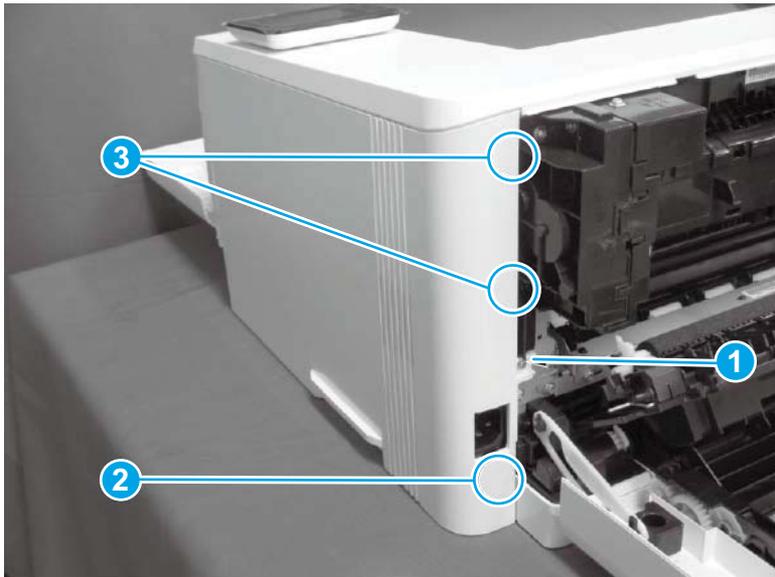

3. Release seven tabs (callout 1) along the top, bottom, and front of the cover. Pull the cover (callout 2) away from the printer to remove it.

---


 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-737** Remove the right cover

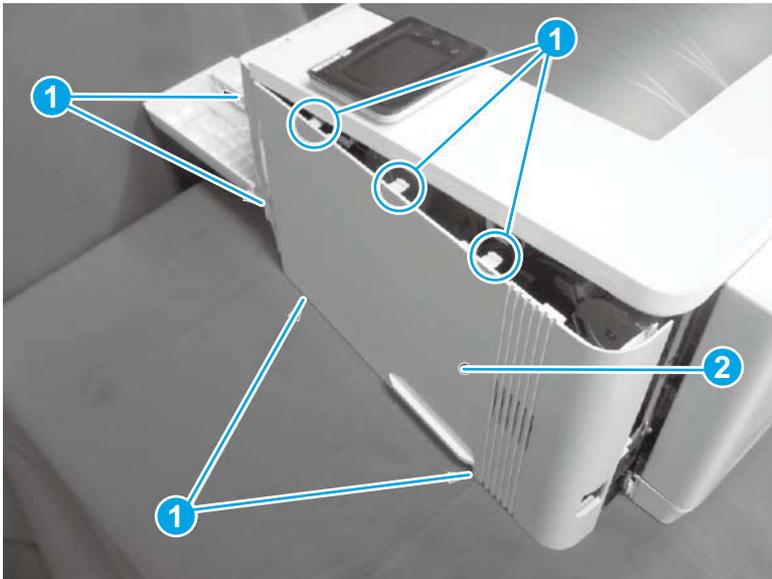

#### Step 4: Remove the left cover (M253-M254)


---

 **NOTE:** This step is for the M253-M254 printers. For the M278-M281 printers, skip this step and go to [Step 5: Remove the right cover \(M278-M281\) on page 516](#).

---

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-738 Tab locations

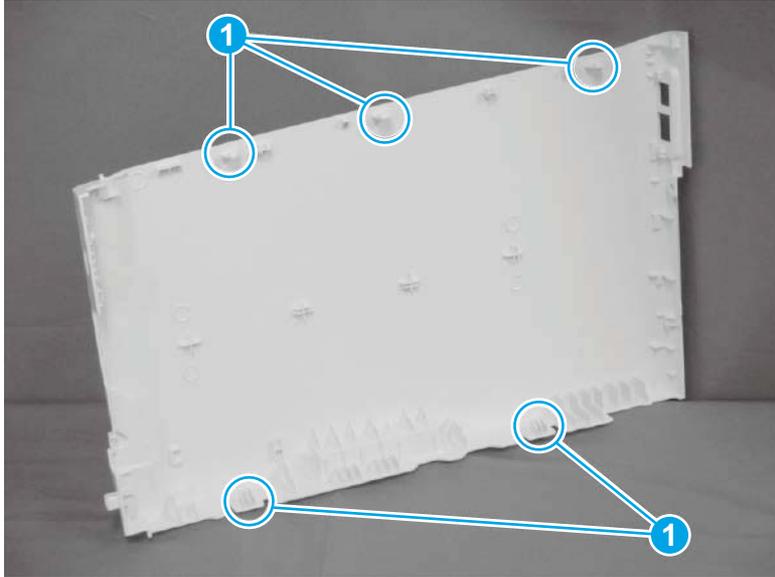


2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

---

Figure 1-739 Remove one screw and release tabs

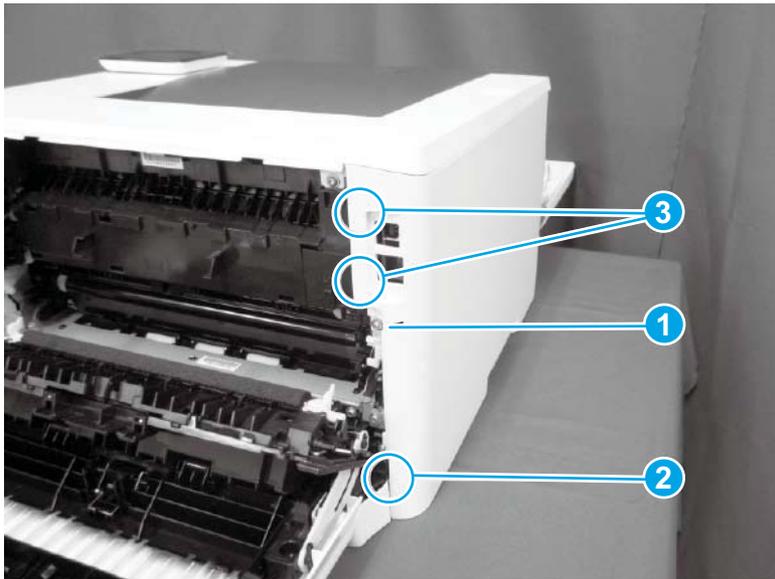

3. Release five tabs (callout 1) along the top and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

---


 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-740** Remove the left cover

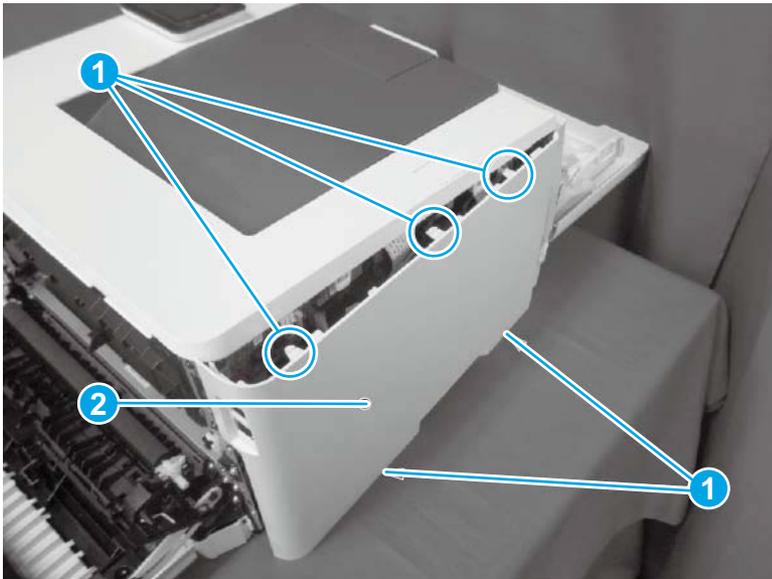

#### Step 5: Remove the right cover (M278-M281)


---

 **NOTE:** This step is for the M278-M281 printers. For the M253-M254 printers, skip this step and go to [Step 10: Remove the top cover \(M253-M254\) on page 528](#).

---

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-741 Tab locations

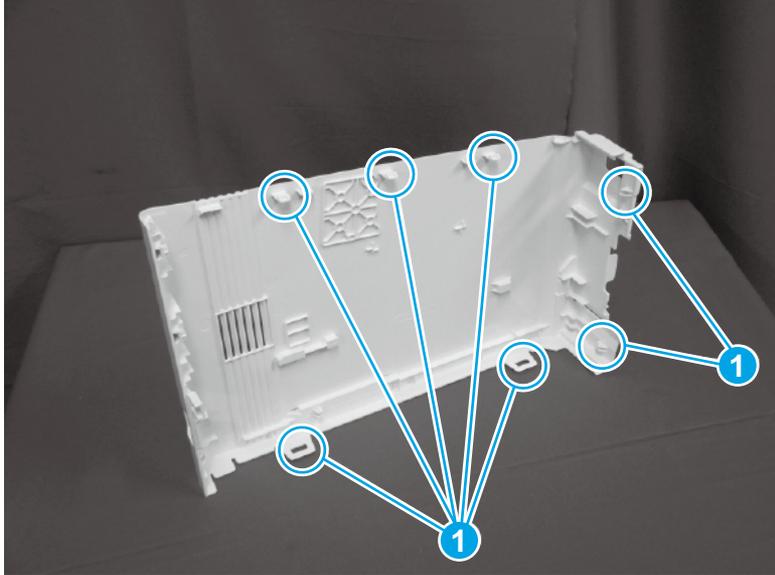


2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

---

Figure 1-742 Remove one screw and release tabs

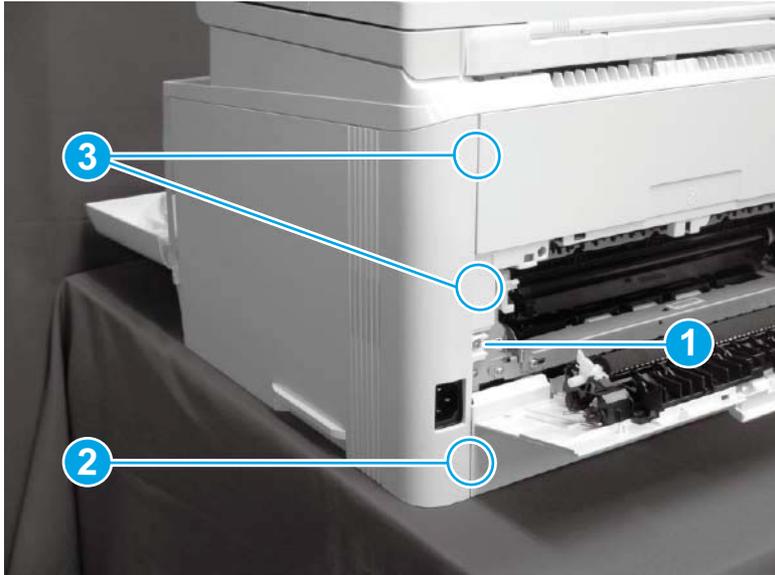

3. Release seven tabs (callout 1) along the top, bottom, and front of the cover. Pull the cover (callout 2) away from the printer to remove it.

---


 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-743** Remove the right cover

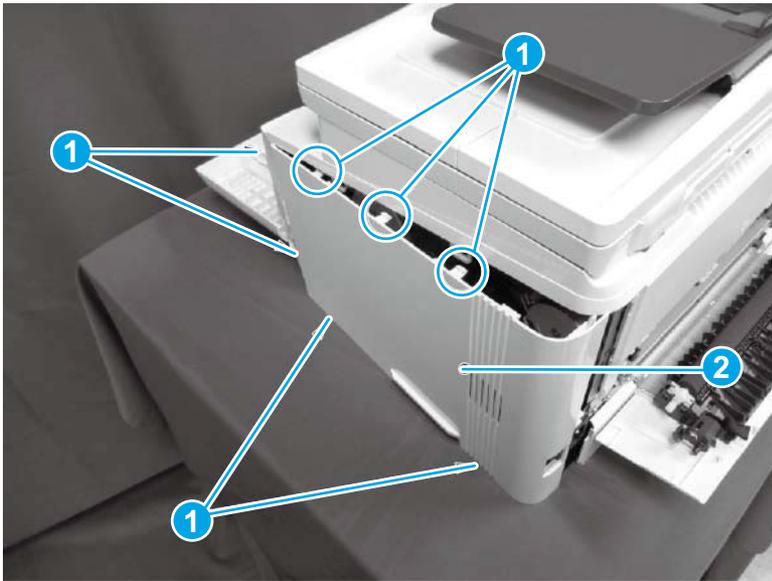

#### Step 6: Remove the left cover (M278-M281)


---

 **NOTE:** This step is for the M278-M281 printers. For the M253-M254 printers, skip this step and go to [Step 10: Remove the top cover \(M253-M254\) on page 528](#).

---

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


Figure 1-744 Tab locations

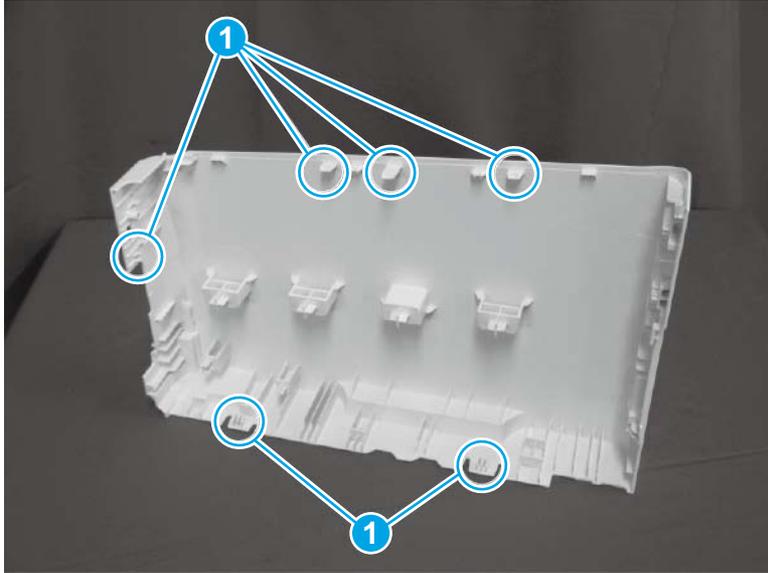

2. At the rear of the printer, remove one screw (callout 1), and then release one tab (callout 2).

 **TIP:** Use a small, flat-blade screwdriver to release the tab.

Figure 1-745 Remove one screw and release tab

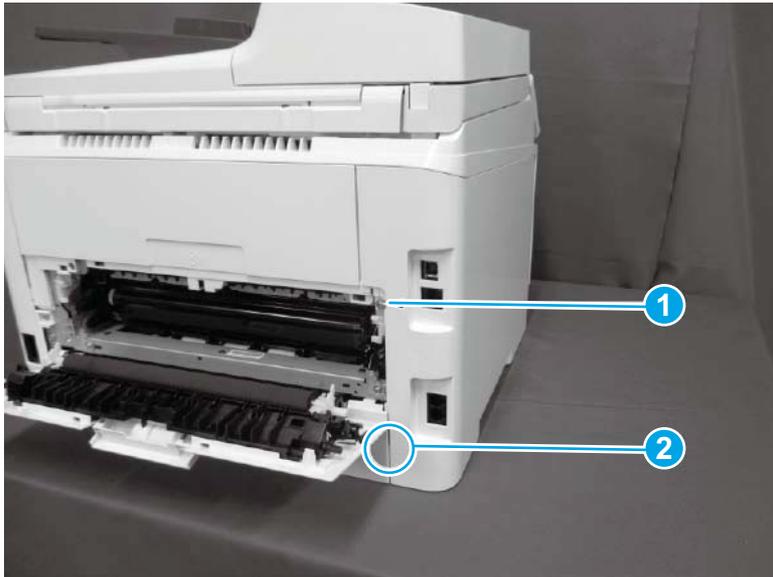

3. Release six tabs (callout 1) along the top, front, and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

---


 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-746** Remove the left cover

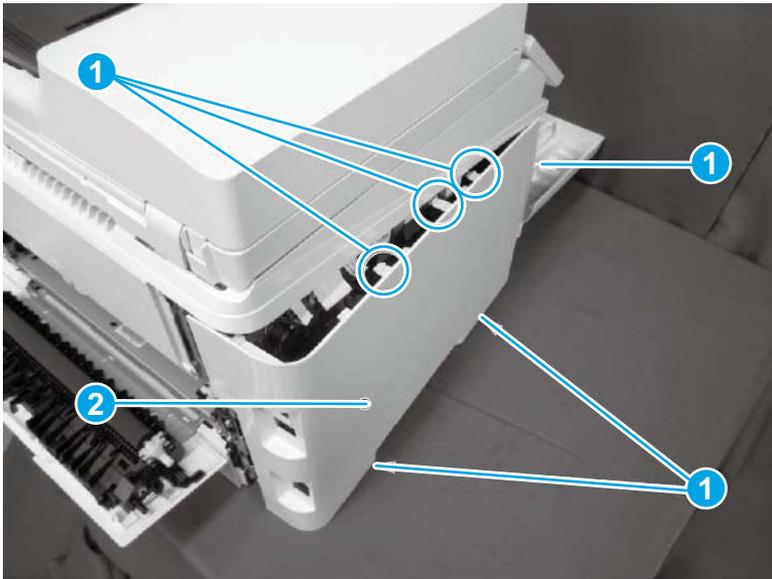

#### Step 7: Remove the control panel (M278-M281)

---

 **NOTE:** This step is for the M278-M281 printers. For the M253-M254 printers, skip this step and go to [Step 10: Remove the top cover \(M253-M254\) on page 528](#).

---


1. Open the scanner

Figure 1-747 Open the scanner




2. At the back of the control panel, remove one screw (callout 1), and then use a small flat-blade screwdriver in the two pry points (callout 2) to remove the cover.

Figure 1-748 Remove one screw and the cover

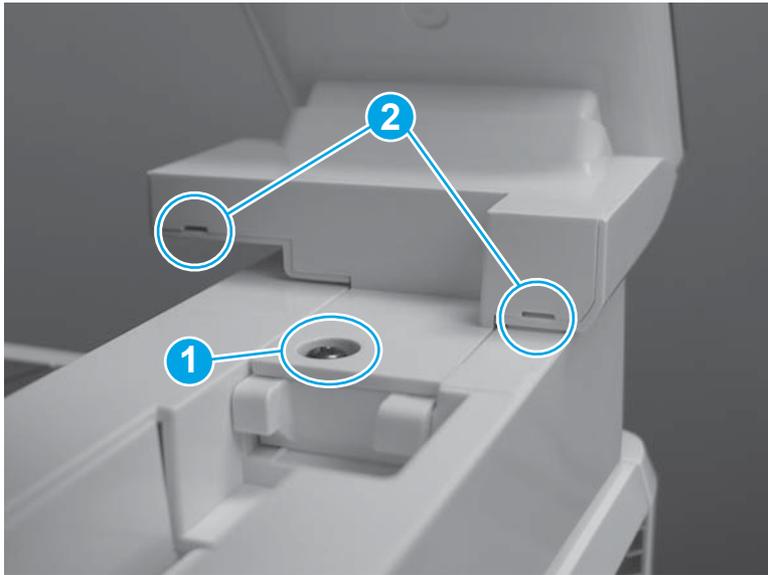


3. Remove the flat cable (callout 1) from the guides, and then remove three screws (callout 2).

Figure 1-749 Remove three screws

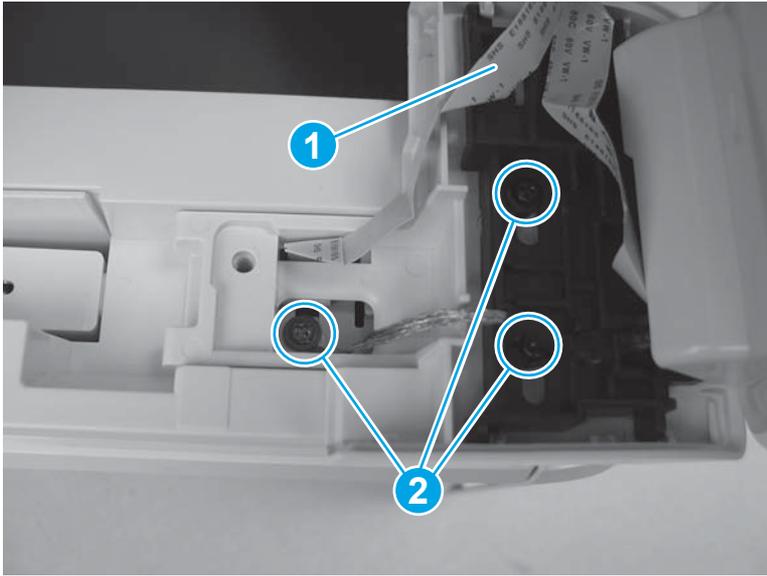

4. Move the control panel to the fully opened position (callout 1), and then rotate it back about 20 degrees (callout 2).

Figure 1-750 Rotate the control panel

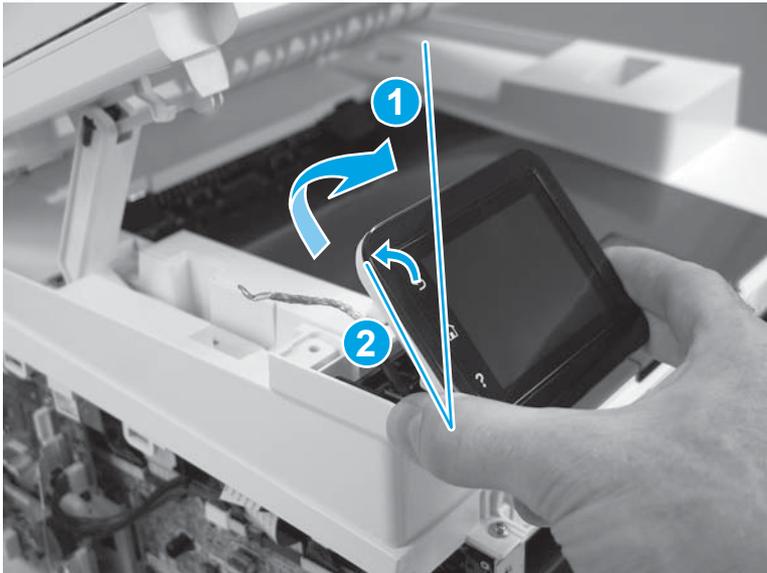

5. Firmly move the assembly to the right 7-8 mm (0.26-0.31 in) (callout 1) to release two tabs from the posts at the base of the control panel.

Figure 1-751 Release two tabs



6. Rotate the control panel forward to release it (callout 1), and then lift it slightly away from the printer.

---

**⚠ CAUTION:** The control panel is still attached to the printer. Do not remove it completely.

---


Figure 1-752 Release the control panel



7. Use a small, flat-blade screw driver to unclasp the flat cable connector in the control panel.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-753** Disconnect the flat cable

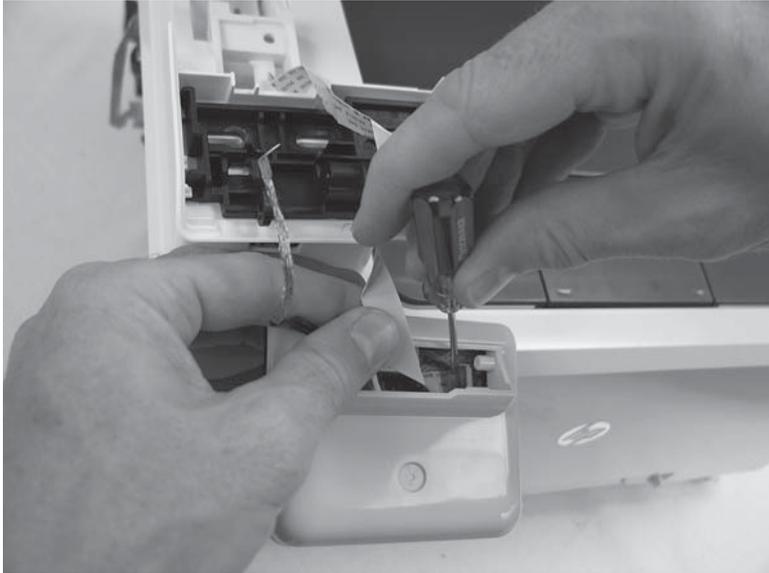


#### Step 8: Remove the document feeder and scanner assembly (M278-M281)

 **NOTE:** This step is for the M278-M281 printers. For the M253-M254 printers, skip this step and go to [Step 10: Remove the top cover \(M253-M254\) on page 528](#).

1. Disconnect two flat cables (callout 1) from the formatter, and then remove one screw (callout 2) to release the grounding wire.


**Figure 1-754** Disconnect two cables and remove one screw

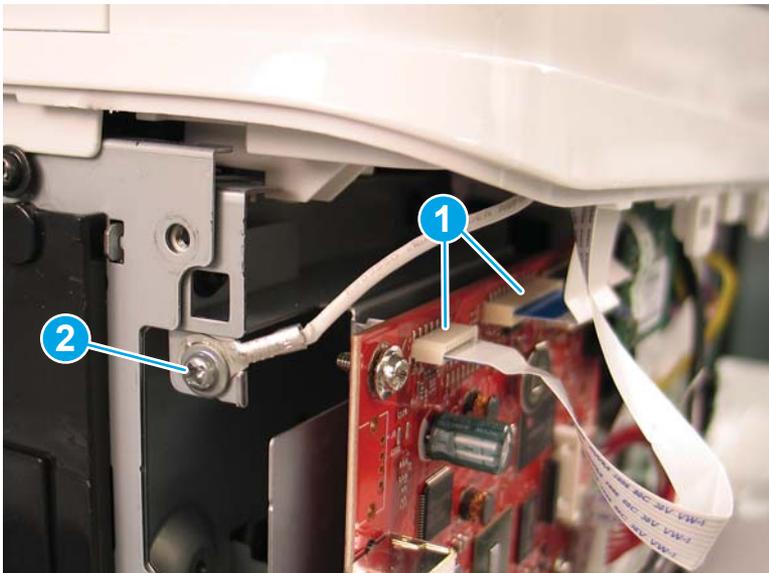

2. Open the scanner. Release one tab (callout 1), and then rotate the slider pin (callout 2) towards the front of the printer to release it.


 **TIP:** Use a Phillips head screwdriver in the end of the slider pin to rotate it.

**Figure 1-755** Release one tab and rotate the slider pin

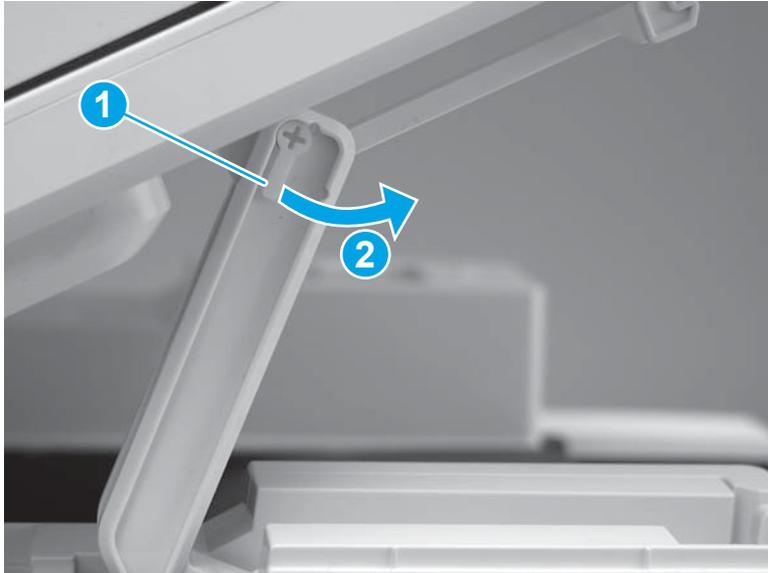

3. Remove the slider pin.


**Figure 1-756** Remove the slider pin

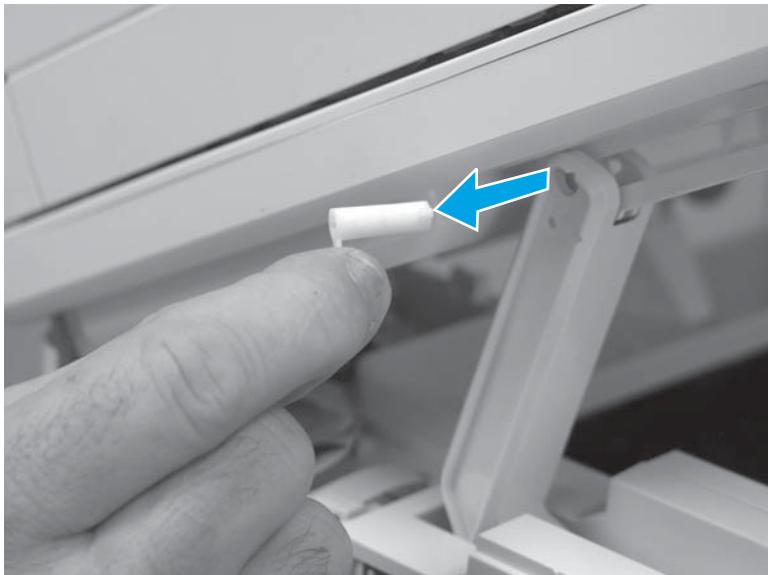

4. Rotate the hinge arm down.


**⚠ WARNING!** The hinge arm is spring-loaded by a strong spring and might snap down suddenly. Be careful not to pinch your fingers between the hinge arm and the top of the printer.

**Figure 1-757** Rotate the hinge arm down

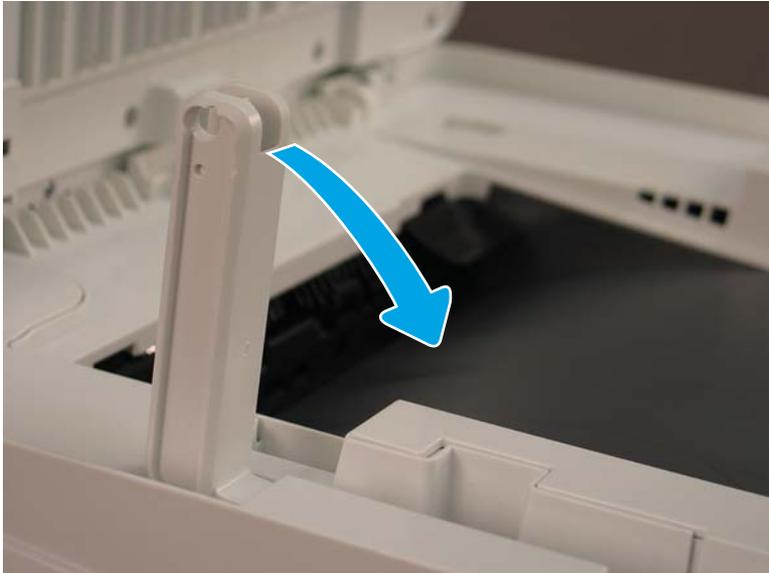


5. On the scanner bed, use a small, flat-blade screwdriver to release one tab (callout 1), and then remove the scanner cable cover (callout 2).

**Figure 1-758** Remove the scanner cable cover

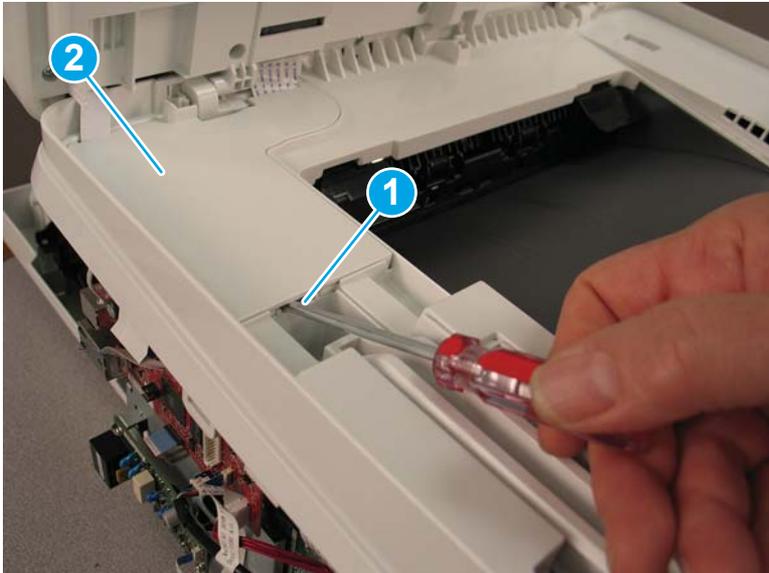

6. Release the flat cable (callout 1) from the guides (callout 2), and then feed the cables (callout 3) through the opening in the scanner.


Figure 1-759 Release the flat cable

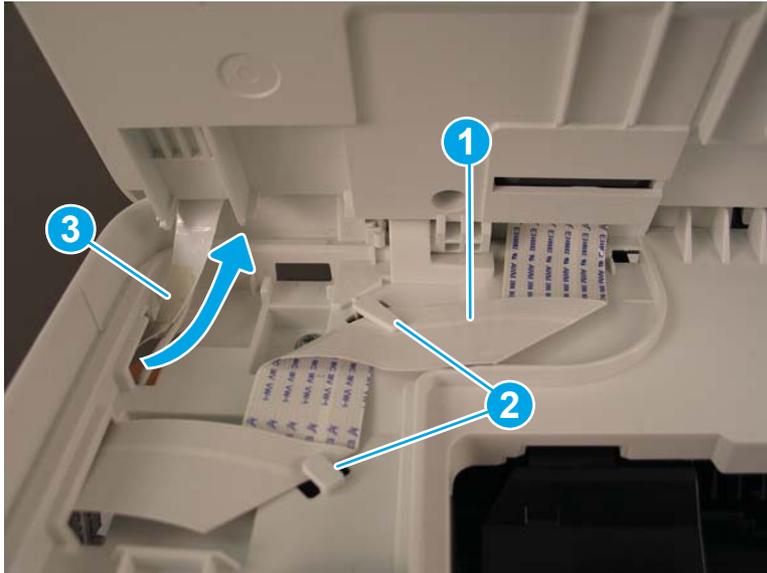

7. Open the scanner assembly fully, slide the assembly to the right (callout 1), and then lift the assembly off of the chassis (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-760 Remove the scanner assembly

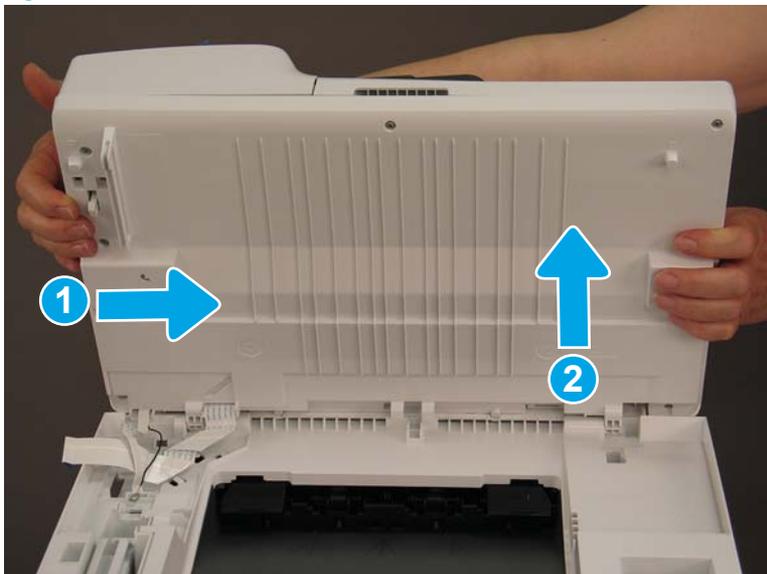


### Step 9: Remove the top cover (M278-M281)

 **NOTE:** This step is for the M278-M281 printers. For the M253-M254 printers, skip this step and go to [Step 10: Remove the top cover \(M253-M254\) on page 528](#).

1. Disconnect one flat cable (callout 1) from the formatter.


Figure 1-761 Disconnect one cable

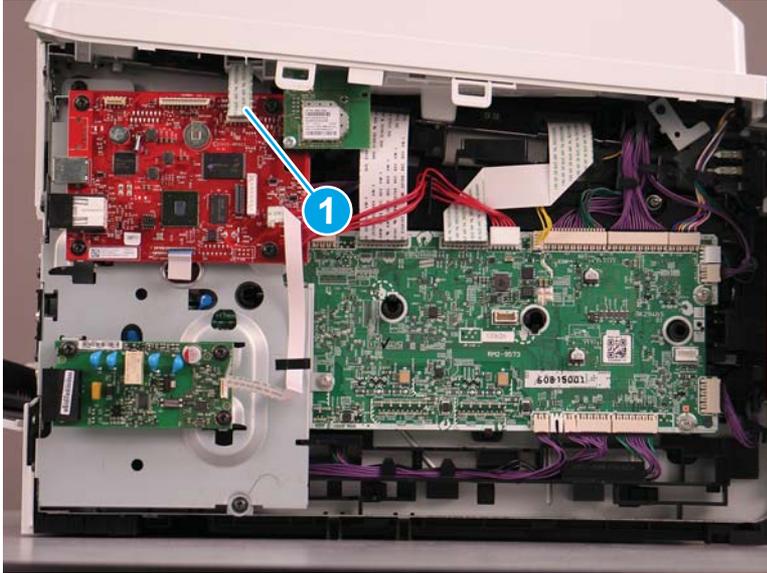

2. Remove seven screws (callout 1), and then remove the top cover (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-762 Remove seven screws and the top cover

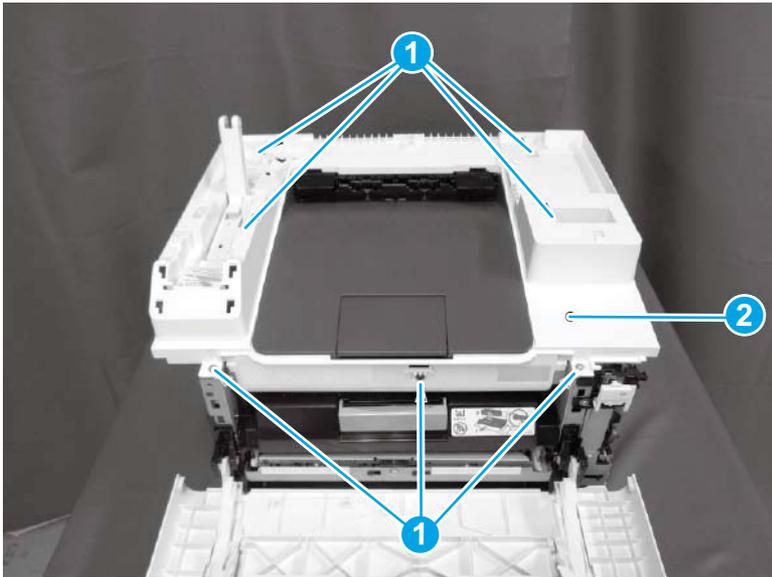


#### Step 10: Remove the top cover (M253-M254)

 **NOTE:** This step is for the M253-M254 printers. For the M278-M281 printers, skip this step and go to [Step 11: Remove the duplex drive assembly on page 530.](#)


1. On the left side of the printer, on the formatter, disconnect one flat cable (callout 1).

Figure 1-763 Disconnect one connector

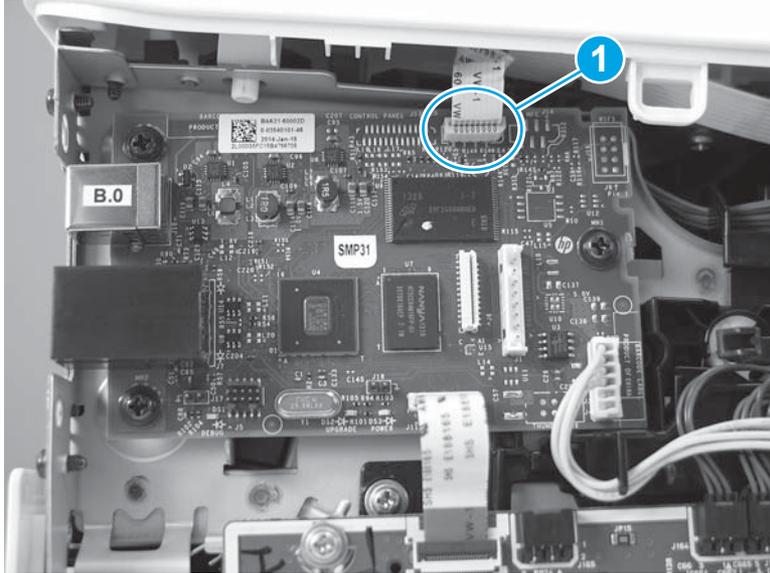


2. **Duplex models only:** Remove one screw (callout 1), and then release the grounding cable. Remove one M4 tapping screw (callout 2), and then pull the guide (callout 3) toward the front of the printer to remove it.

Figure 1-764 Remove two screws and the guide

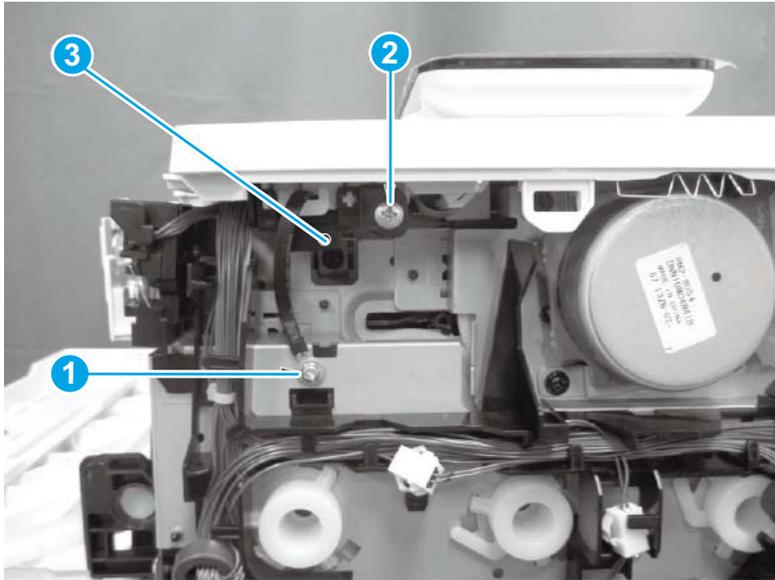

3. Remove two screws (callout 1), and then release one tab (callout 2).

Figure 1-765 Remove two screws

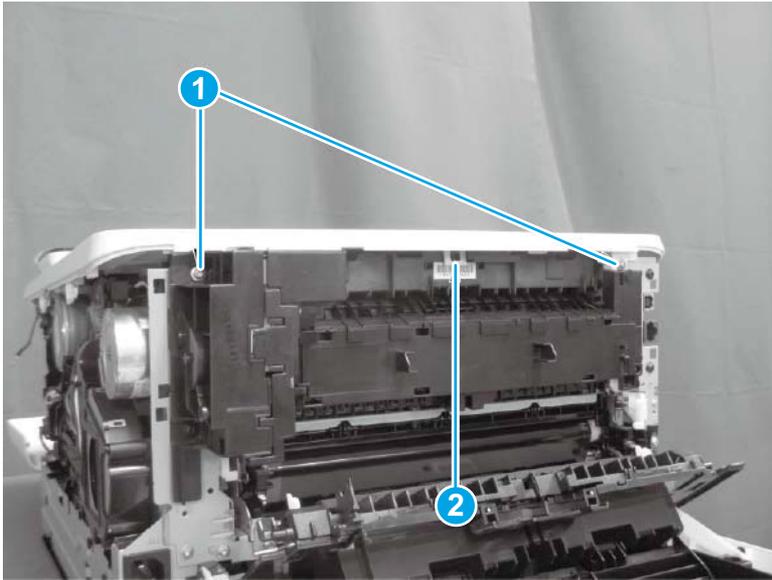


4. Remove three screws (callout 1), and then remove the top cover (callout 2).



**NOTE:** Do not touch the parts around the main motor when removing the top cover


Figure 1-766 Remove three screws and the top cover

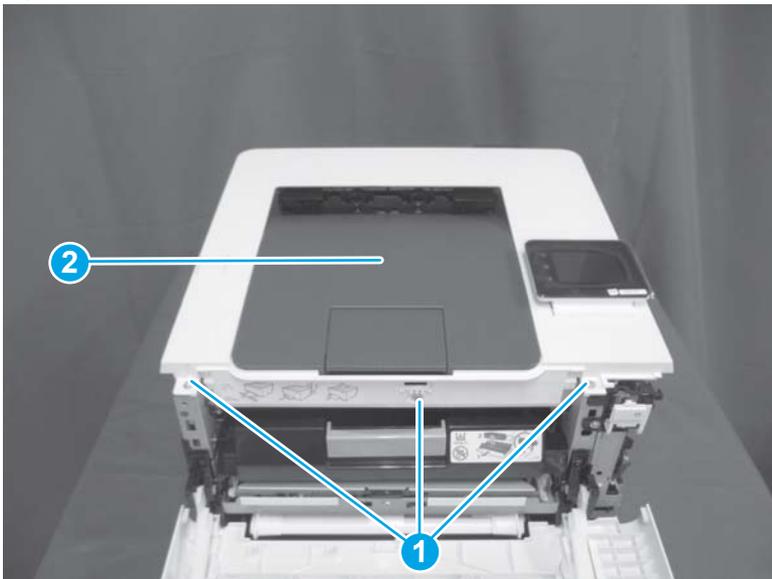

### Step 11: Remove the duplex drive assembly


1. Use a flat-blade screwdriver to release one tab (callout 1), and then remove the cover (callout 2).

Figure 1-767 Remove the cover

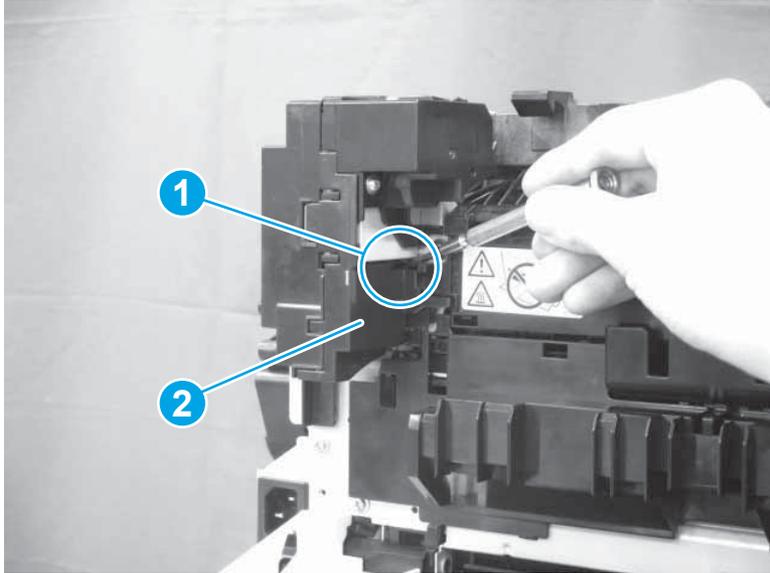


2. Remove two black screws (callout 1).

Figure 1-768 Remove two screws

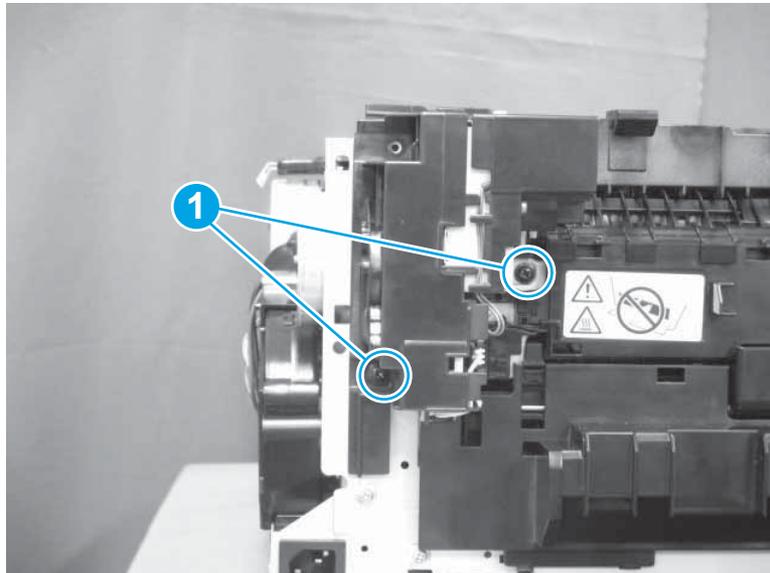

3. Disconnect two connectors (callout 1). Pulling the connectors away from the drive assembly first might make disconnecting them easier.

**Figure 1-769** Disconnect two connectors

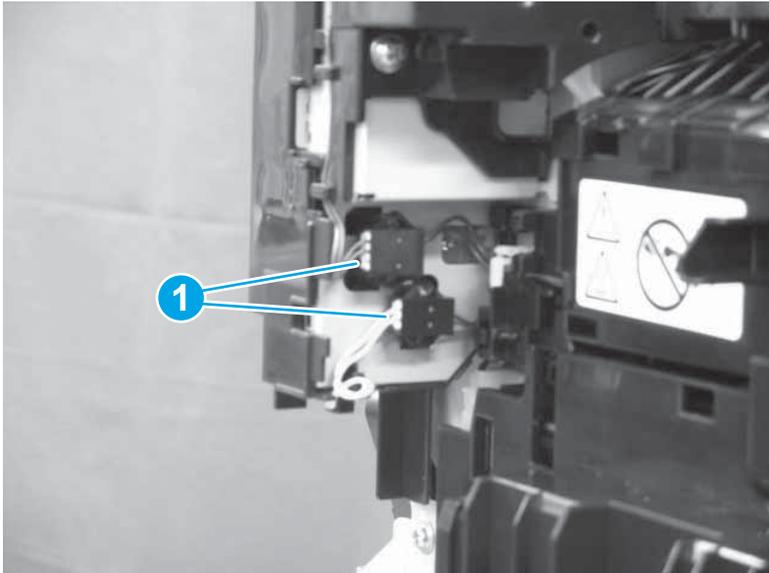


4. On the right side of the printer, just above the fuser motor, release one tab (callout 1), and then pull the duplexing drive assembly away from the chassis in the direction indicated below.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-770** Remove the duplex drive assembly

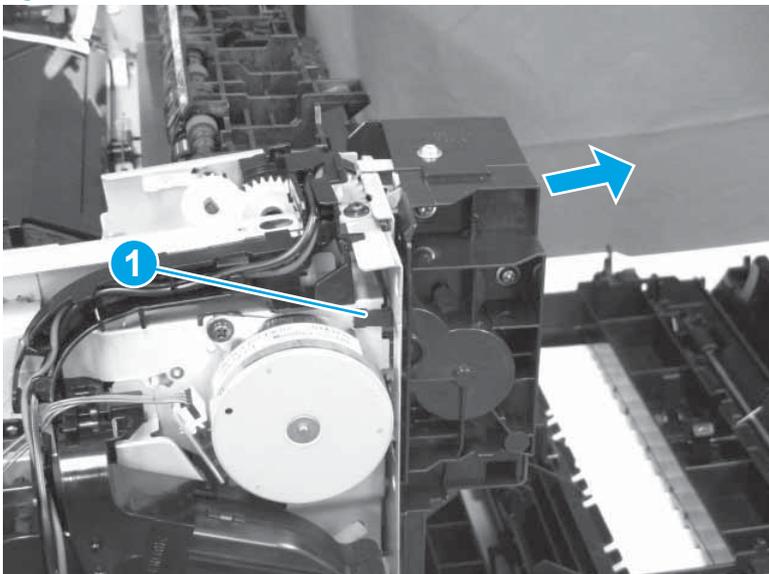

### Step 12: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Output sensor assembly (M178-M181)

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and rear doors](#)
- [Step 3: Remove the right cover \(M178-M181\)](#)
- [Step 4: Remove the left cover \(M178-M181\)](#)
- [Step 5: Remove the flatbed scanner assembly \(M180n\)](#)
- [Step 6: Remove the document feeder and scanner assembly \(M180nw and M181fw\)](#)
- [Step 7: Remove the control panel \(M178-M181\)](#)
- [Step 8: Remove the top cover \(M178-M181\)](#)
- [Step 9: Remove the output sensor assembly \(M178-M181\)](#)
- [Step 10: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the output sensor assembly.

---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### Output sensor assembly part number

---

RM2-5895-000CN

Paper delivery sensor assembly

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Make sure that the printer initializes to a **Ready** state.

Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-771 Remove the cassette tray



### Step 2: Open the front and rear doors


1. Open the front door.

Figure 1-772 Open the front door



2. Open the rear door.


Figure 1-773 Open the rear door

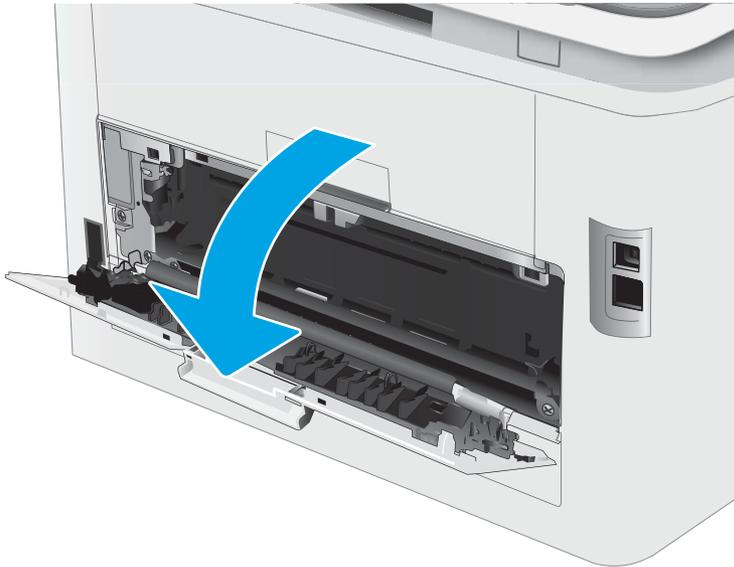

### Step 3: Remove the right cover (M178-M181)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-774 Tab locations

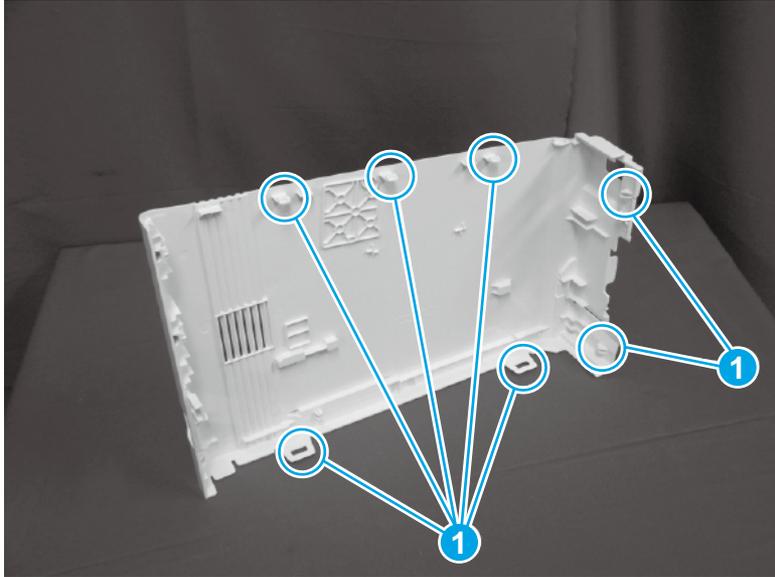


2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

---

Figure 1-775 Remove one screw and release tabs

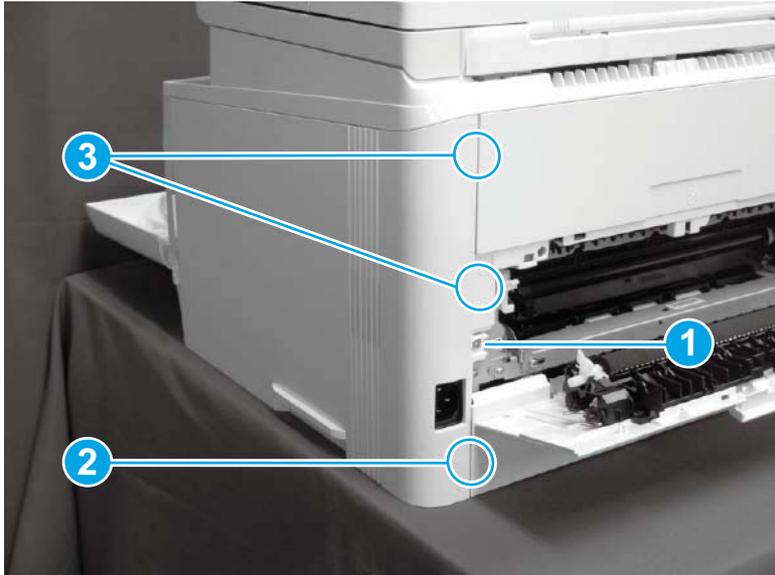


3. Release seven tabs (callout 1) along the top, bottom, and front of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-776** Remove the right cover

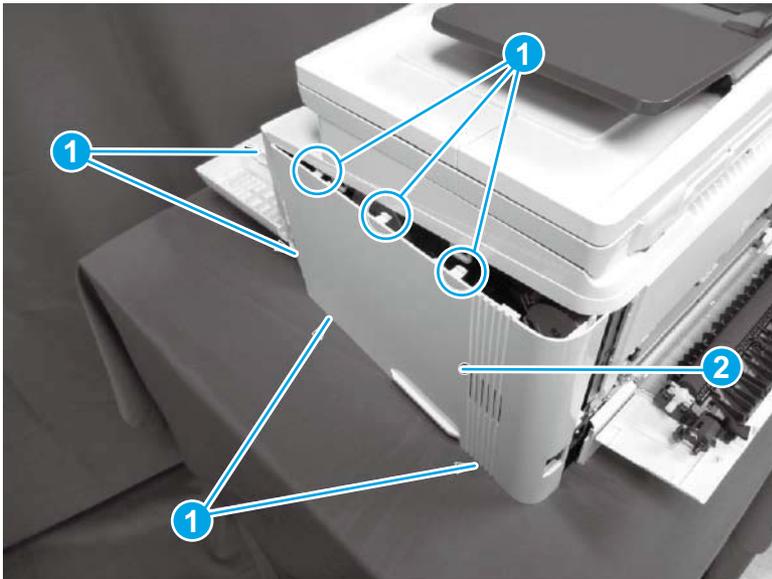

#### Step 4: Remove the left cover (M178-M181)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


**Figure 1-777** Tab locations

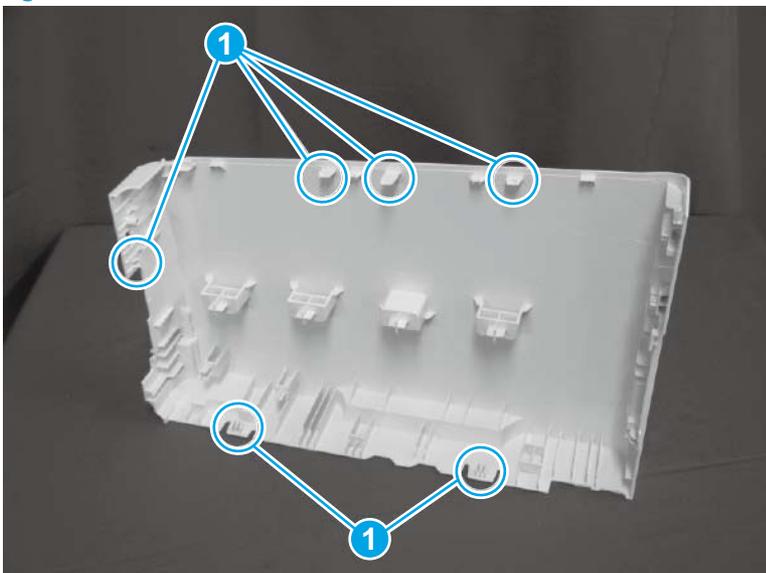

2. At the rear of the printer, remove one screw (callout 1), and then release one tab (callout 2).

 **TIP:** Use a small, flat-blade screwdriver to release the tab.

**Figure 1-778** Remove one screw and release tab

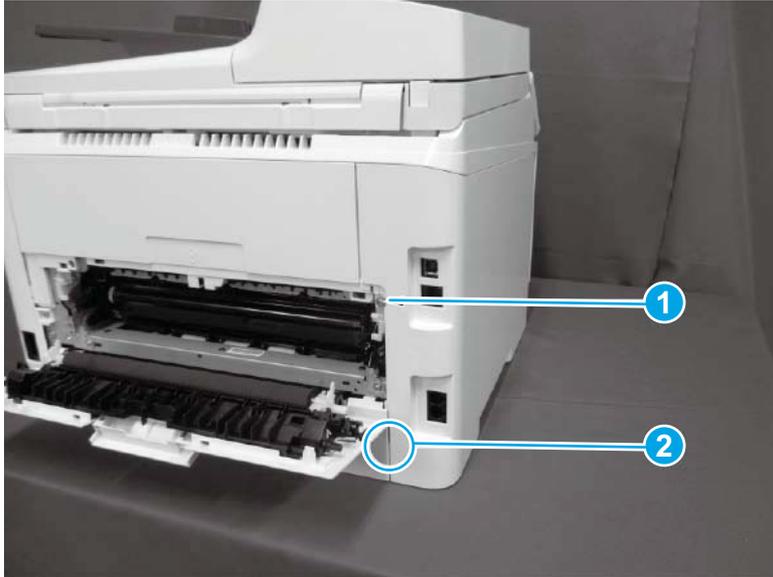


3. Release six tabs (callout 1) along the top, front, and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-779** Remove the left cover

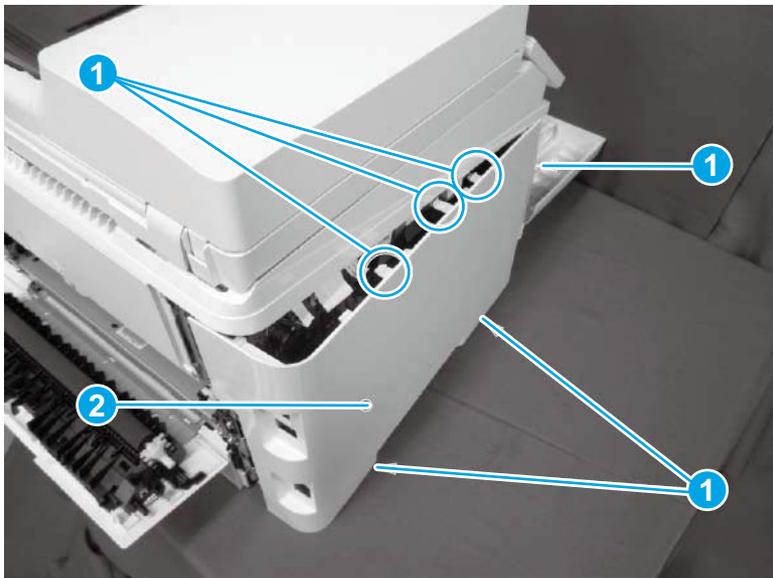


## Step 5: Remove the flatbed scanner assembly (M180n)

 **NOTE:** This step is for the M180n printer. For the M180nw and M181fw printers, skip this step and go to [Step 7: Remove the control panel \(M178-M181\)](#) on page 546.

1. Disconnect one flat cable (callout 1) from the formatter.


**Figure 1-780** Disconnect one flat cable

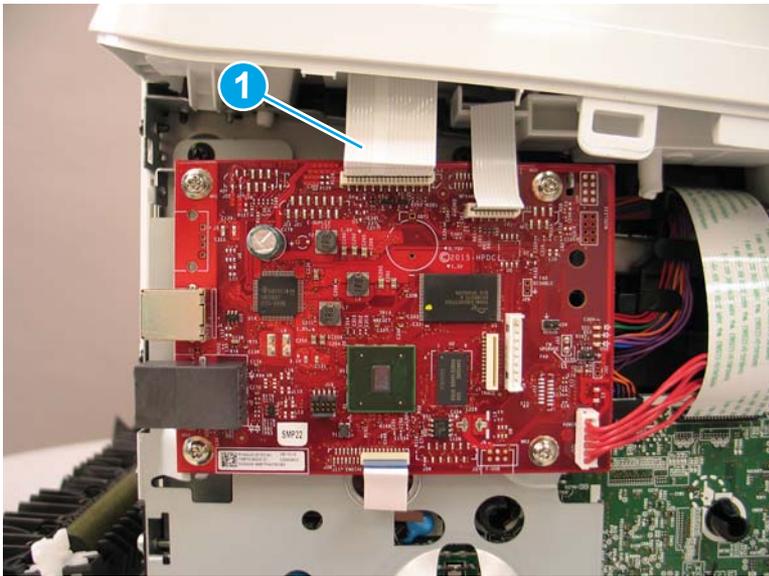

2. Open the scanner. Release one tab (callout 1), and then rotate the slider pin (callout 2) towards the front of the printer to release it.


 **TIP:** Use a Phillips head screwdriver in the end of the slider pin to rotate it.

**Figure 1-781** Release one tab and rotate the slider pin

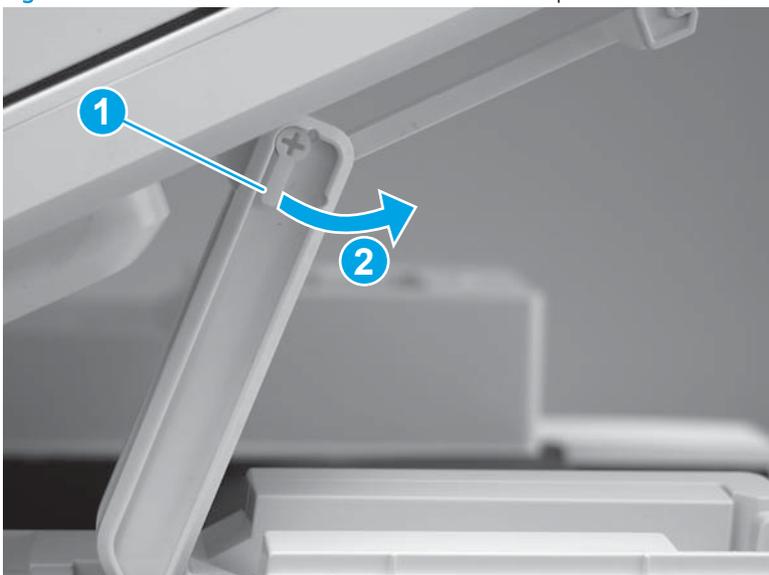

3. Remove the slider pin.

Figure 1-782 Remove the slider pin

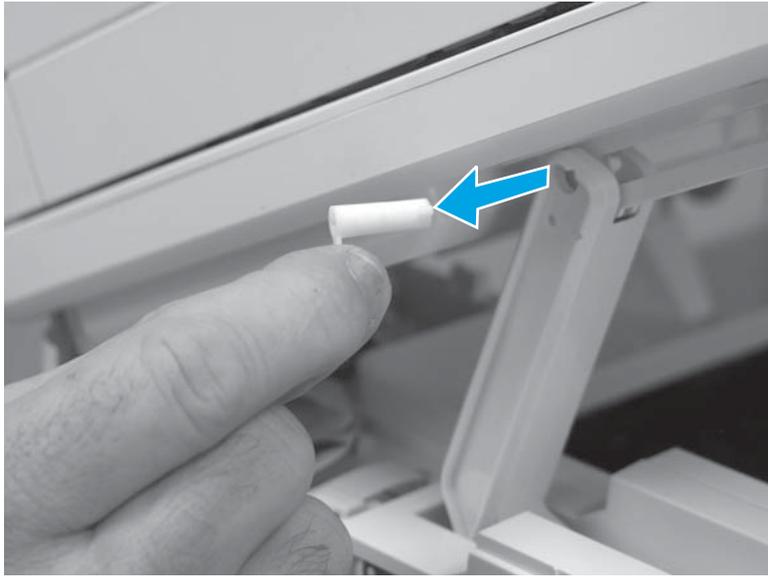

4. Rotate the hinge arm down.

---

**⚠ WARNING!** The hinge arm is spring-loaded by a strong spring and might snap down suddenly. Be careful not to pinch your fingers between the hinge arm and the top of the printer.


---

Figure 1-783 Rotate the hinge arm




5. On the scanner bed, use a small, flat-blade screwdriver to release one tab (callout 1), and then remove the scanner cable cover (callout 2).

Figure 1-784 Remove the scanner cable cover

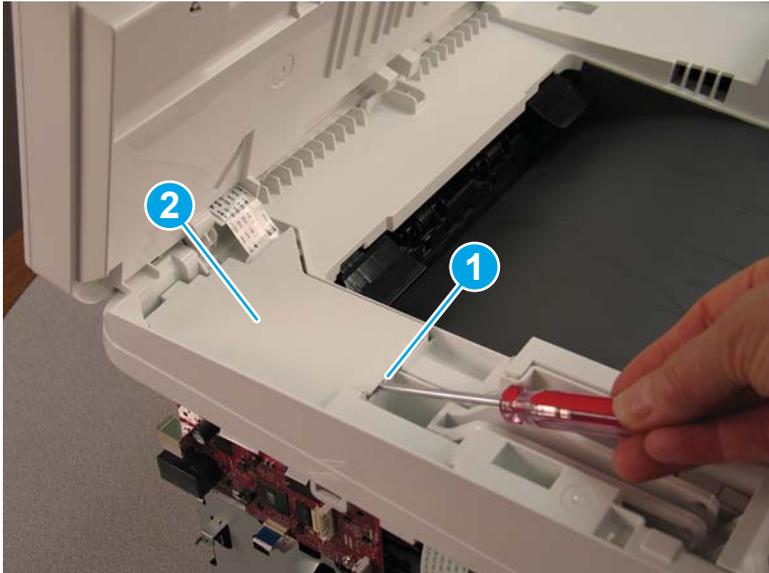

6. Release the flat cable (callout 1) from the guides (callout 2), and then release the flat cable (callout 3) through the opening in the cover.

Figure 1-785 Release the flat cable

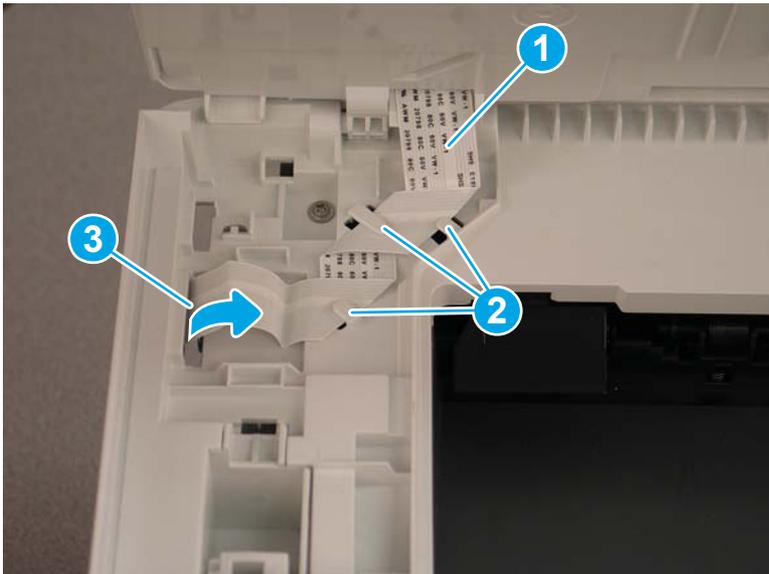


7. Open the scanner assembly fully, slide the assembly to the right (callout 1), and then lift the assembly off of the chassis (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

 **NOTE:** The figure below shows the document feeder scanner. The procedure is also correct for the flatbed scanner.

**Figure 1-786** Remove the scanner assembly

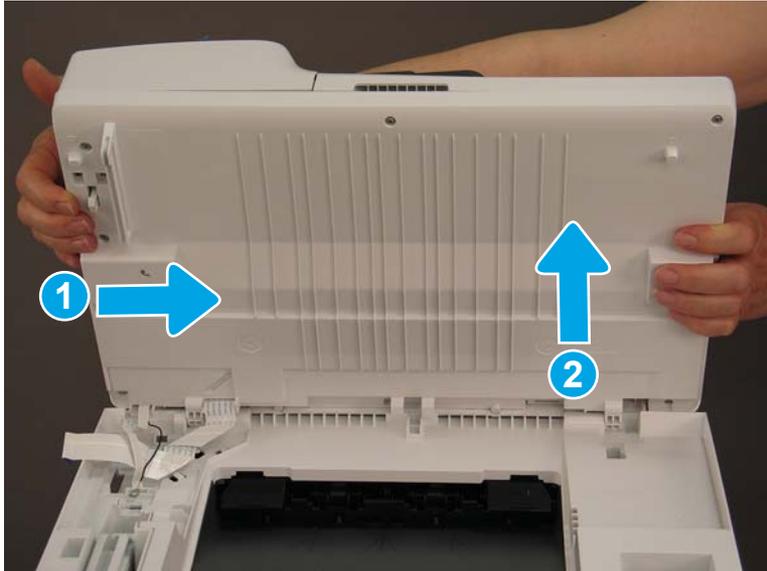


#### Step 6: Remove the document feeder and scanner assembly (M180nw and M181fw)

 **NOTE:** This step is for the M180nw and M181fw printers. For the M180n printer, skip this step and go to [Step 7: Remove the control panel \(M178-M181\) on page 546.](#)

1. Disconnect two flat cables (callout 1) from the formatter, and then remove one screw (callout 2) to release the grounding wire.

**Figure 1-787** Disconnect two cables and remove one screw

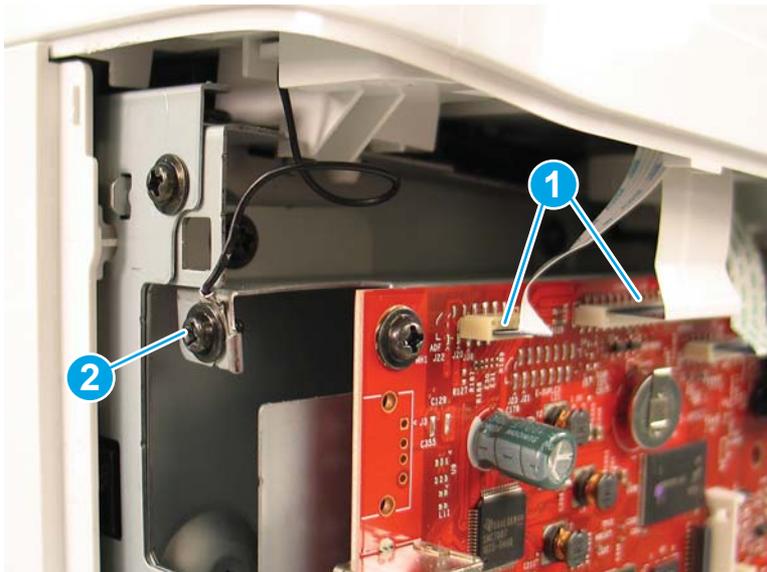


2. Open the scanner. Release one tab (callout 1), and then rotate the ISA slider pin (callout 2) towards the front of the printer to release it.

---

 **TIP:** Use a Phillips head screwdriver in the end of the slider pin to rotate it.


---

**Figure 1-788** Release one tab and rotate the slider pin

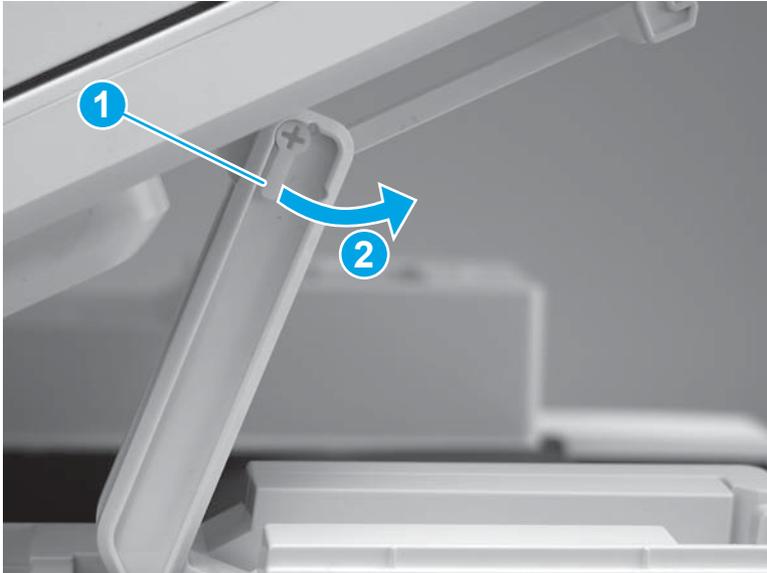

3. Remove the slider pin.

**Figure 1-789** Remove the slider pin

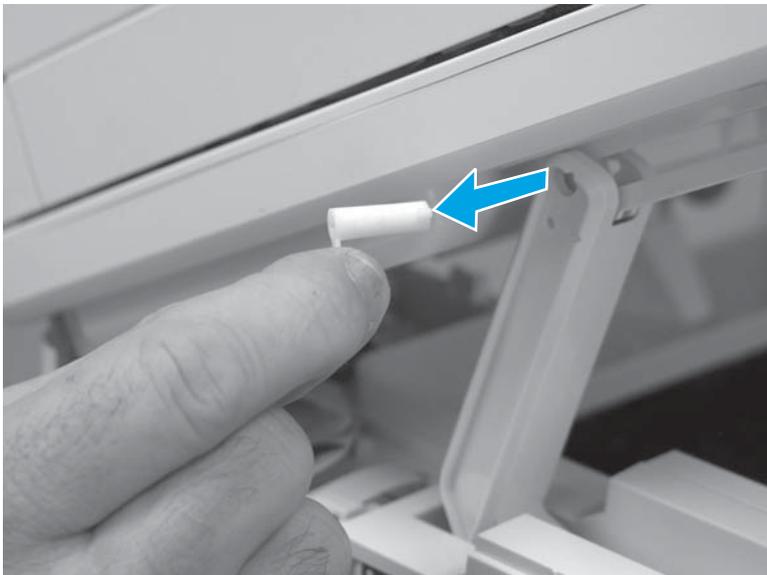

4. Rotate the hinge arm down.


**⚠ WARNING!** The hinge arm is spring-loaded by a strong spring and might snap down suddenly. Be careful not to pinch your fingers between the hinge arm and the top of the printer.

Figure 1-790 Rotate the hinge arm down




5. On the scanner bed, use a small, flat-blade screwdriver to release one tab (callout 1), and then remove the scanner cable cover (callout 2).

Figure 1-791 Remove the scanner cable cover

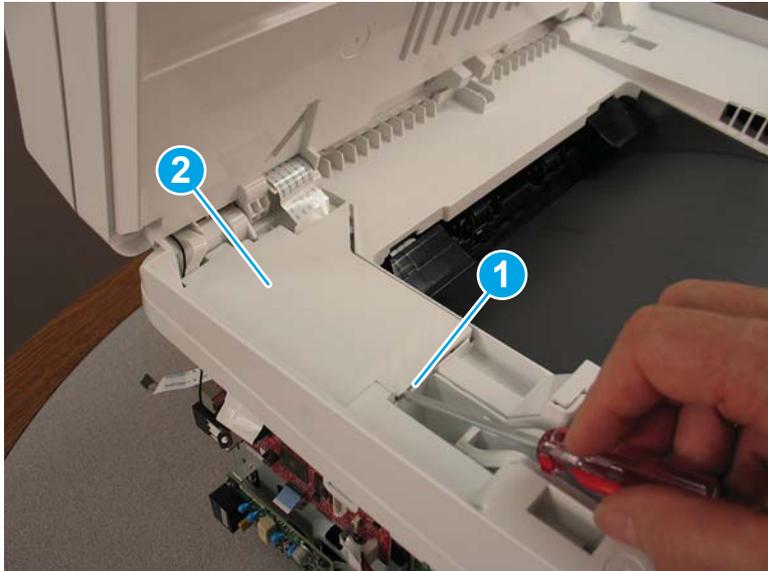

6. Release the flat cable (callout 1) from the guides (callout 2), and then feed the two flat cables (callout 3) through the openings in the scanner.


Figure 1-792 Release the flat cable

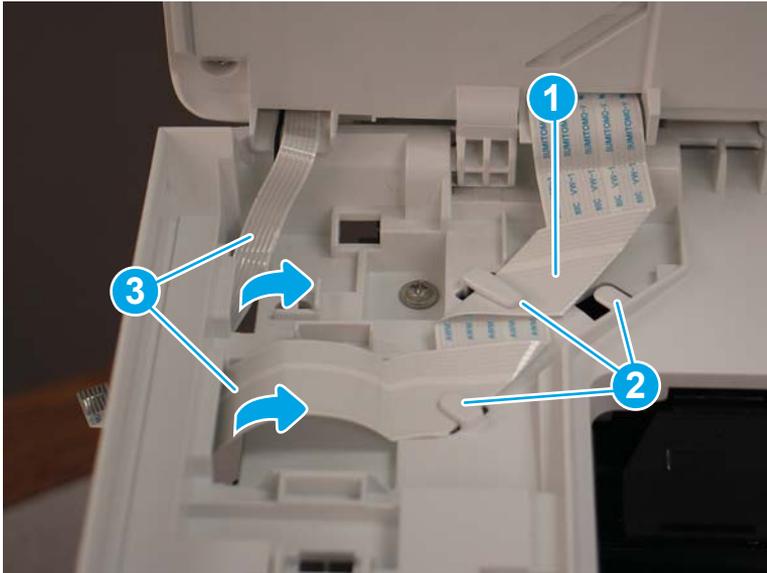

7. Open the scanner assembly fully, slide the assembly to the right (callout 1), and then lift the assembly off of the chassis (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-793 Remove the scanner assembly

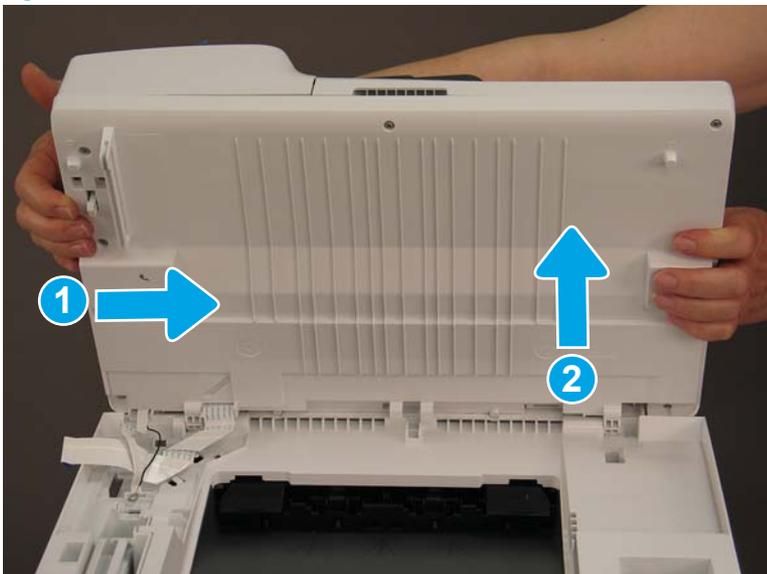

### Step 7: Remove the control panel (M178-M181)

1. Remove one screw (callout 1) to release the grounding wire.

Figure 1-794 Remove one screw

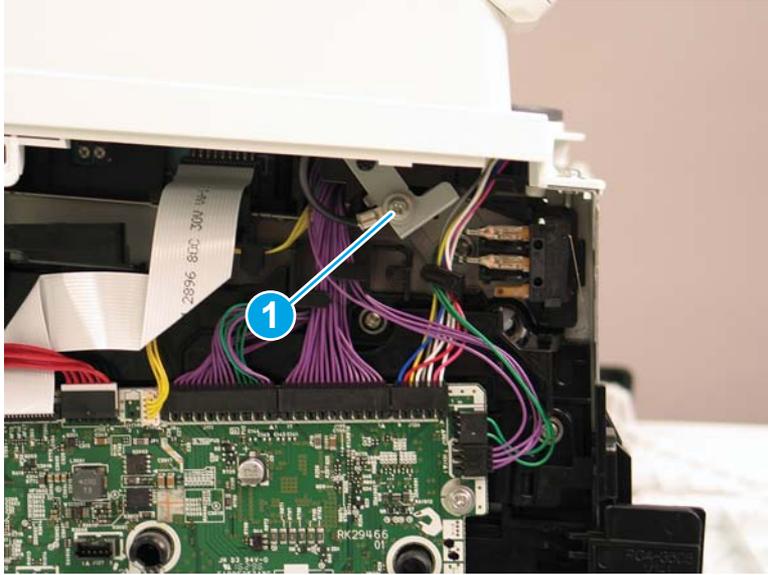

2. Raise the hinge arm.


**⚠ WARNING!** The hinge arm is spring-loaded by a strong spring and might spring up. Be careful not to pinch your fingers between the hinge arm and the top of the printer.

Figure 1-795 Rotate the hinge arm up



3. Release two tabs (callout 1), and then slide the cover (callout 2) away from the control panel to remove it.

Figure 1-796 Remove the cover

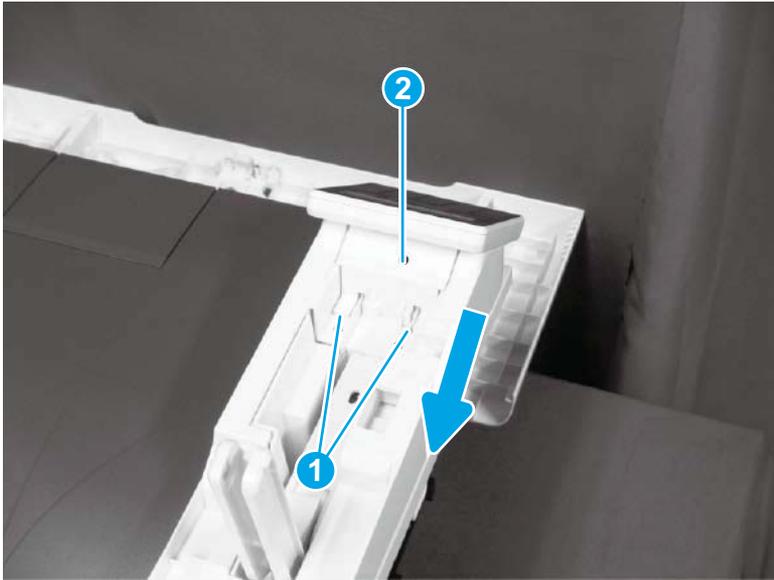


4. Release two tabs (callout 1), and then slide the control panel (callout 2) up to remove it.

---

**⚠ CAUTION:** The control panel is still attached to the printer. Do not remove it completely.

---


Figure 1-797 Remove the control panel

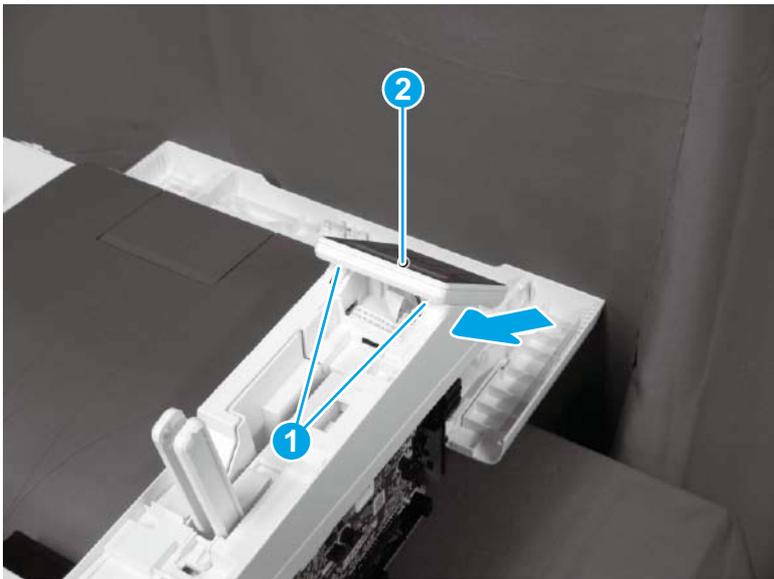

5. On the back of the control panel (callout 1), disconnect one connector (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-798** Disconnect one connector

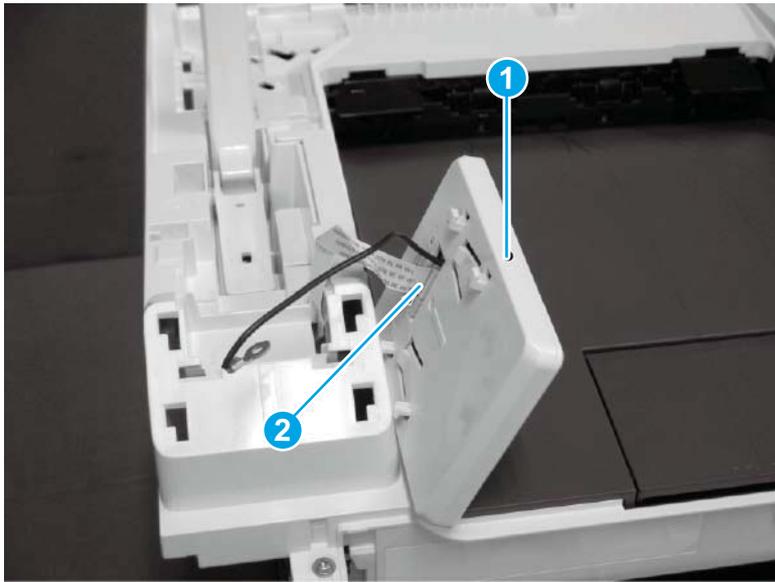

#### Step 8: Remove the top cover (M178-M181)

1. Disconnect one flat cable (callout 1) from the formatter.


**Figure 1-799** Disconnect one cable

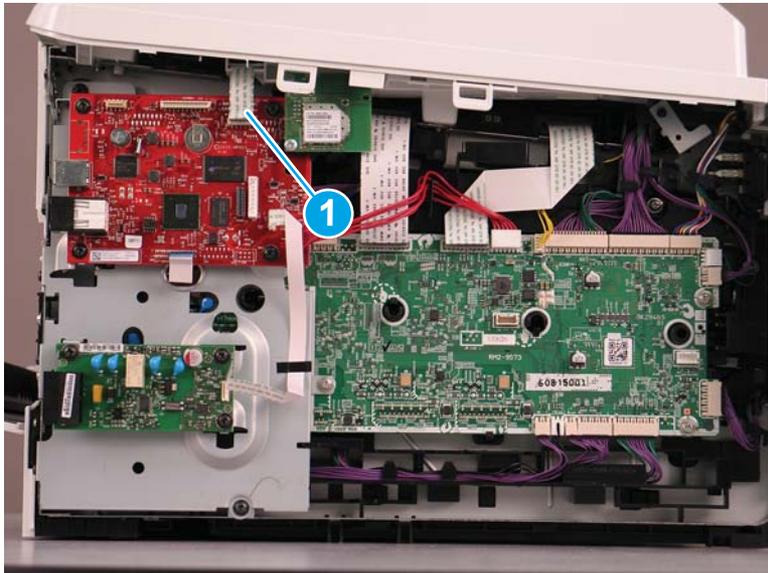

2. Remove seven screws (callout 1), and then remove the top cover (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-800** Remove seven screws and the top cover

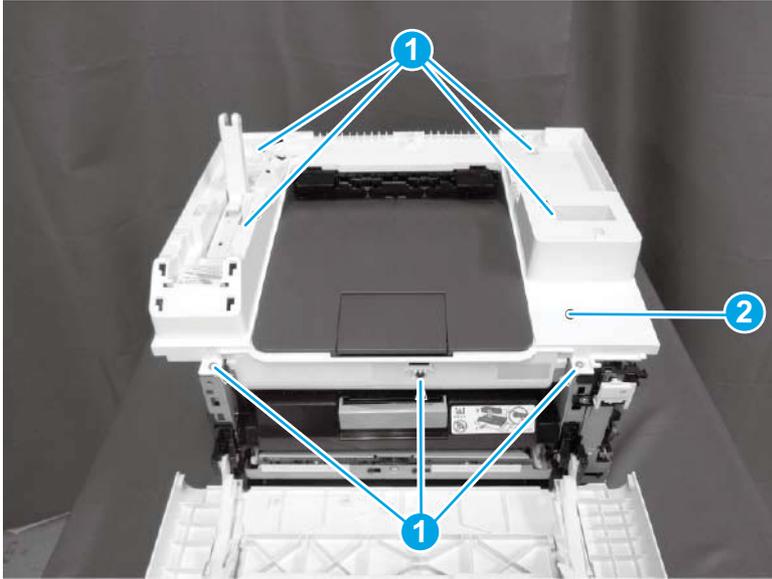


#### Step 9: Remove the output sensor assembly (M178-M181)

- ▲ At the top of the output bin, disconnect one connector (callout 1), release two tabs (callout 2), and then remove the output sensor assembly (callout 3).

 **NOTE:** Unrouting the cable from the cable guides might make disconnecting the connector (callout 1) easier.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-801** Remove the output sensor assembly

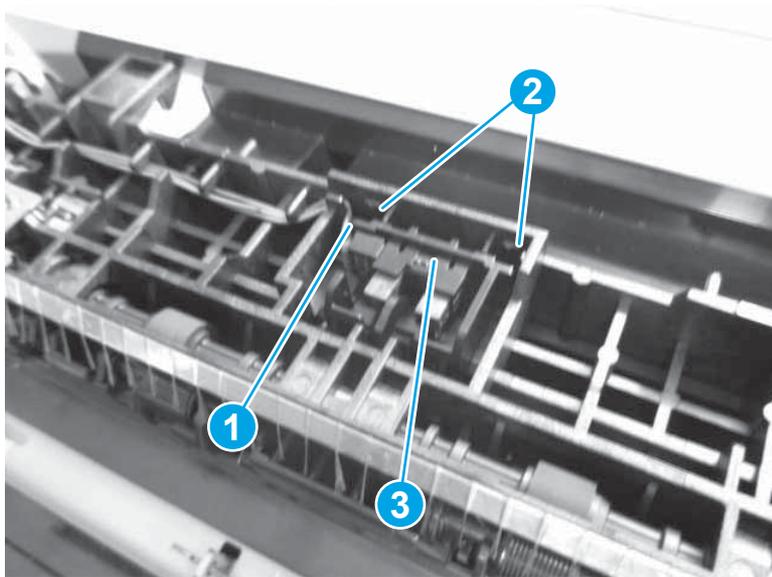

## Step 10: Unpack the replacement assembly

1. Dispose of the defective part.



**NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.



**CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.



**IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.



**NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Power supply switch assembly

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and rear doors](#)
- [Step 3: Remove the right cover \(M153-M154 and M253-M254\)](#)
- [Step 4: Remove the right cover \(M178-M181 and M278-M281\)](#)
- [Step 5: Remove the power supply switch assembly](#)
- [Step 6: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the power supply switch assembly.

---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- 
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- 
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Power supply switch part number	
RM2-5896-000CN	Power supply switch assembly

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Make sure that the printer turns on and initializes to a **Ready** state.

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-802 Remove the cassette tray



### Step 2: Open the front and rear doors


1. Open the front door.

Figure 1-803 Open the front door




2. **Simplex models only:** Open the rear door.

Figure 1-804 Open the rear door

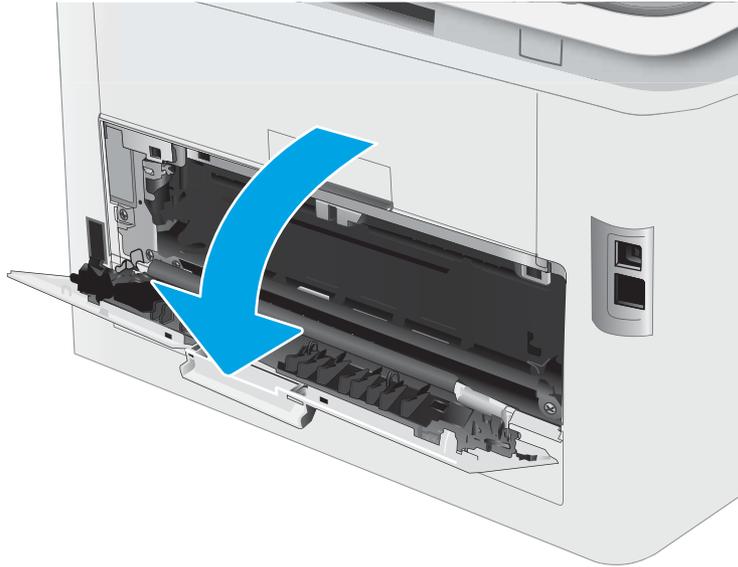

3. **Duplex models only:** Open the duplexer door.

Figure 1-805 Open the duplexer door

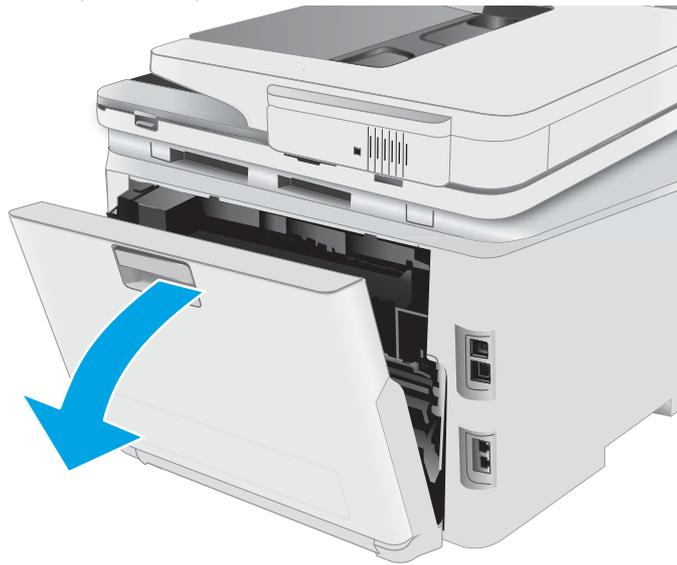


### Step 3: Remove the right cover (M153-M154 and M253-M254)

 **NOTE:** This step is for the M153-M154 and M253-M254 printers. For the M178-M181 and M278-M281 printers, skip this step and go to [Step 4: Remove the right cover \(M178-M181 and M278-M281\) on page 556.](#)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-806 Tab locations

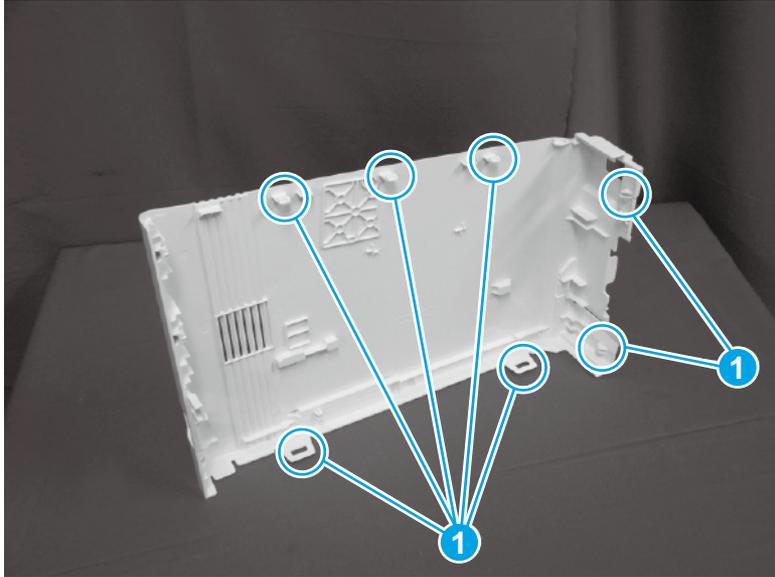


2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

---

Figure 1-807 Remove one screw and release tabs

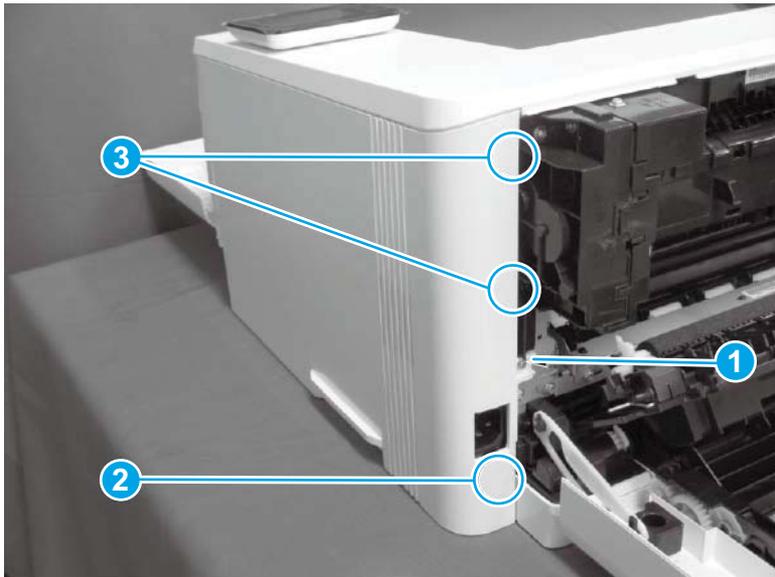

3. Release seven tabs (callout 1) along the top, bottom, and front of the cover. Pull the cover (callout 2) away from the printer to remove it.

---


 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-808** Remove the right cover

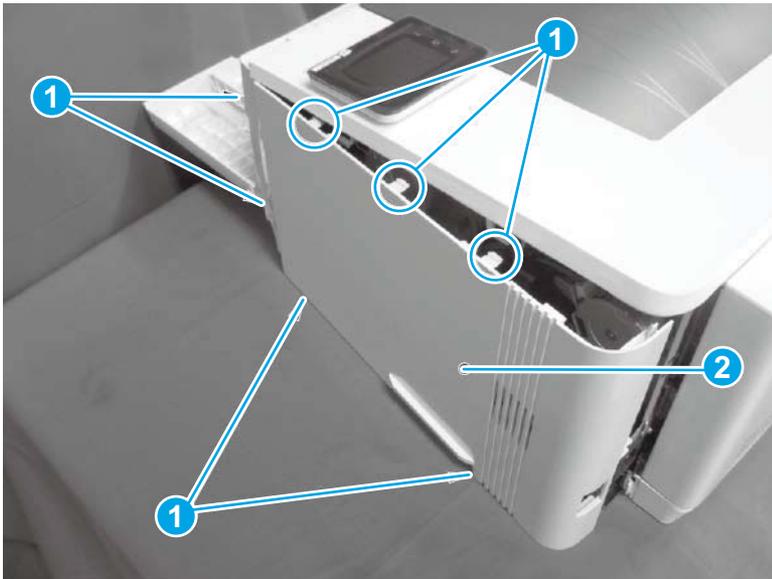

#### Step 4: Remove the right cover (M178-M181 and M278-M281)


---

 **NOTE:** This step is for the M178-M181 and M278-M281 printers. For the M153-M154 and M253-M254 printers, skip this step and go to [Step 5: Remove the power supply switch assembly on page 558](#).

---

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-809 Tab locations

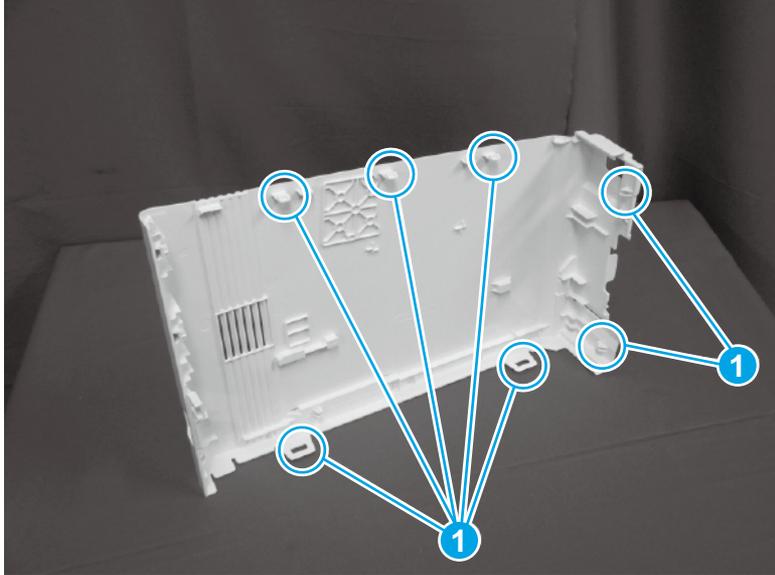


2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

---

Figure 1-810 Remove one screw and release tabs

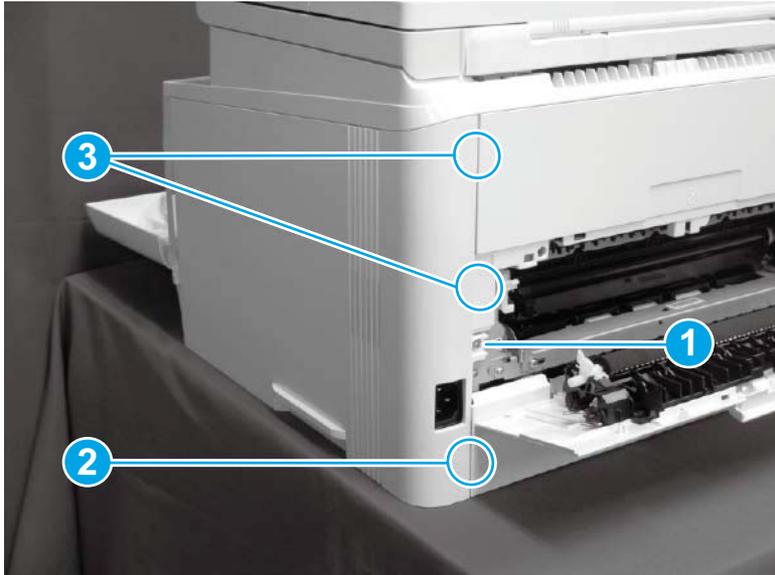

3. Release seven tabs (callout 1) along the top, bottom, and front of the cover. Pull the cover (callout 2) away from the printer to remove it.

---


 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-811** Remove the right cover

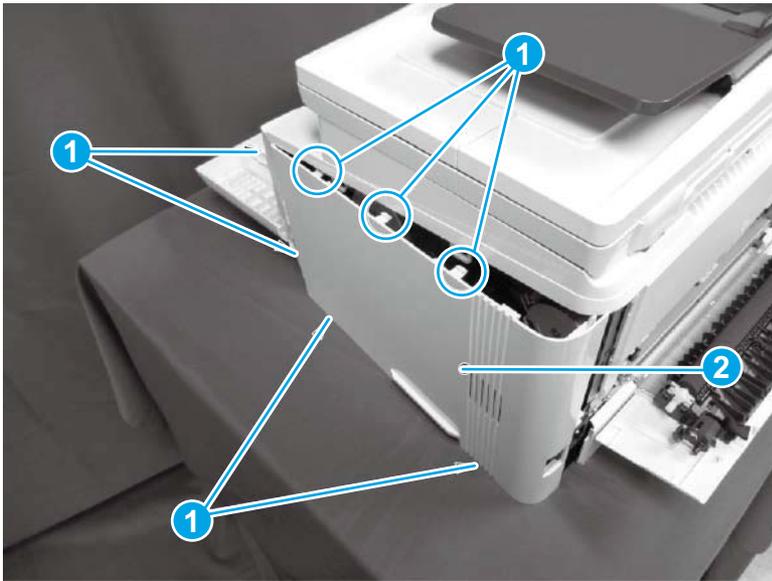

#### Step 5: Remove the power supply switch assembly


- ▲ At the front of the printer, disconnect one connector (callout 1), remove one screw (callout 2), and then pull the power supply switch in the direction indicated to remove it from the printer.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-812 Remove the power supply switch

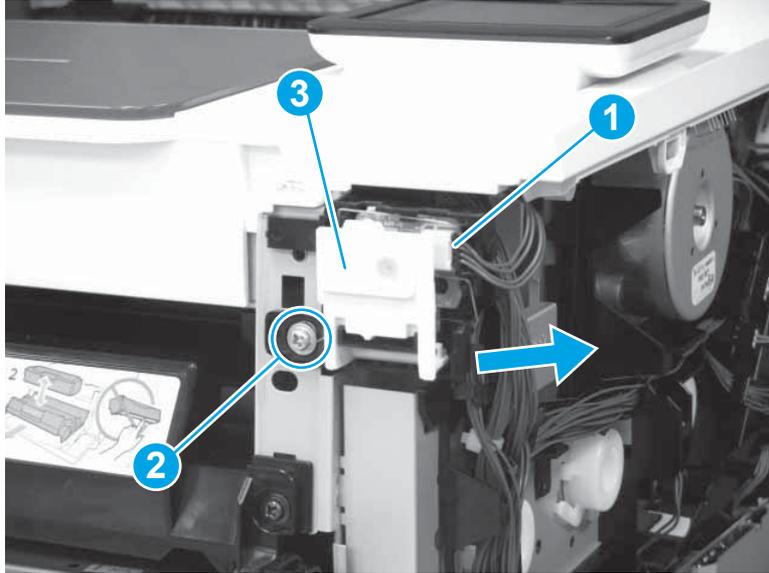

### Step 6: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Low-voltage power supply (LVPS)

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and rear doors](#)
- [Step 3: Remove the right cover \(M153-M154 and M253-M254\)](#)
- [Step 4: Remove the right cover \(M178-M181 and M278-M281\)](#)
- [Step 5: Remove the LVPS](#)
- [Step 6: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the low-voltage power supply (LVPS).

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Low-voltage power supply (LVPS) part number	
RM2-2428-000CN	Low-voltage power supply PCB assembly (110 V)
RM2-2429-000CN	Low-voltage power supply PCB assembly (220 V)

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


Make sure that the printer initializes to a **Ready** state.

Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-813 Remove the cassette tray

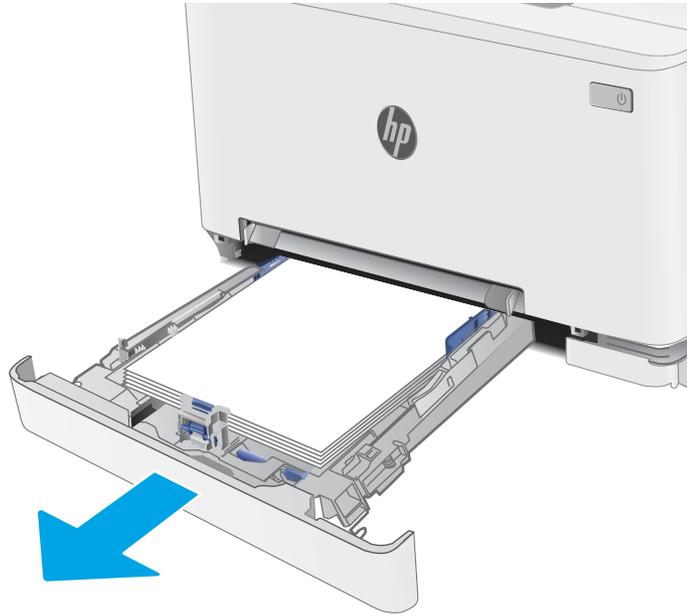

### Step 2: Open the front and rear doors


1. Open the front door.

Figure 1-814 Open the front door



2. **Simplex models only:** Open the rear door.

**Figure 1-815** Open the rear door

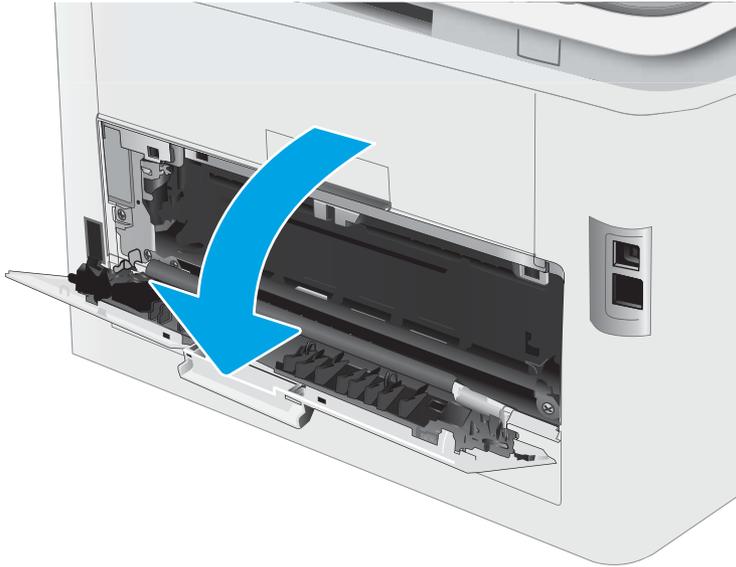

3. **Duplex models only:** Open the duplexer door.

**Figure 1-816** Open the duplexer door




### Step 3: Remove the right cover (M153-M154 and M253-M254)

 **NOTE:** This step is for the M153-M154 and M253-M254 printers. For the M178-M181 and M278-M281 printers, skip this step and go to [Step 4: Remove the right cover \(M178-M181 and M278-M281\) on page 564.](#)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-817 Tab locations

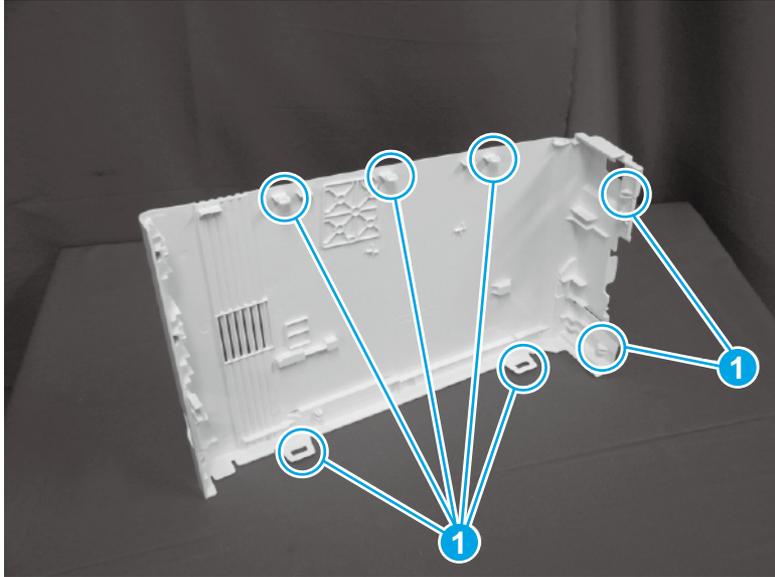


2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

---

Figure 1-818 Remove one screw and release tabs

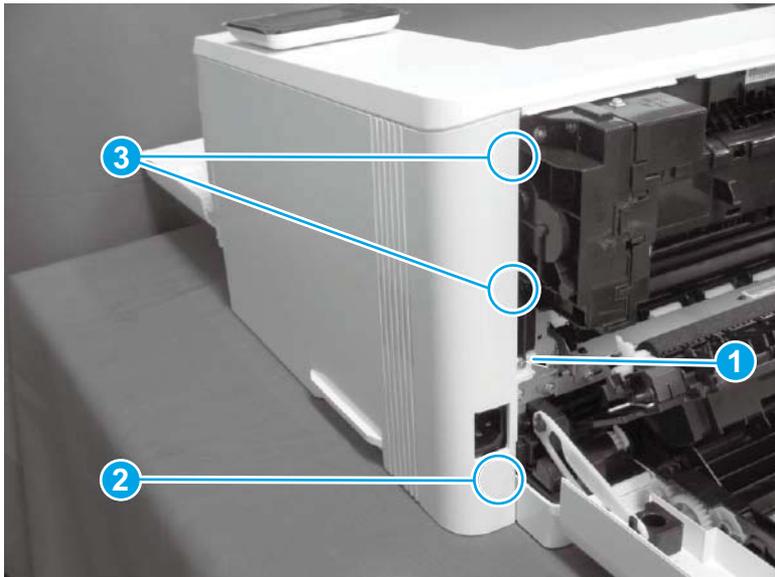

3. Release seven tabs (callout 1) along the top, bottom, and front of the cover. Pull the cover (callout 2) away from the printer to remove it.

---


 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-819** Remove the right cover

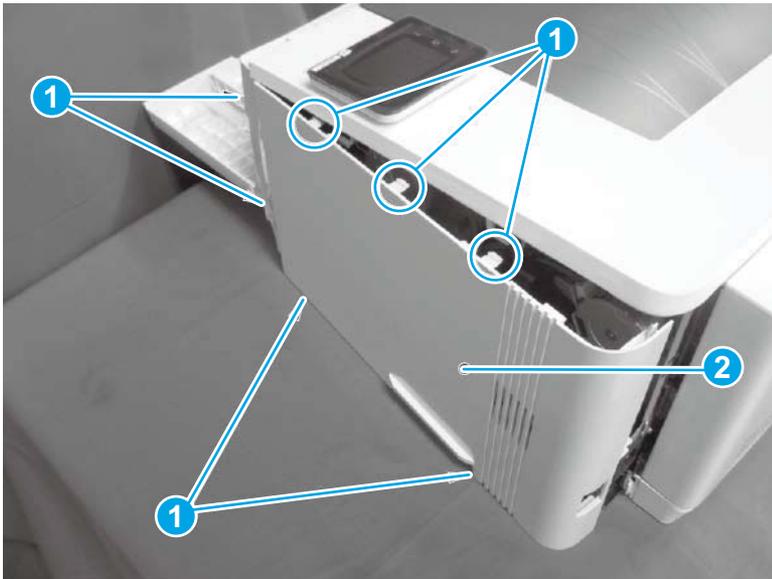

#### Step 4: Remove the right cover (M178-M181 and M278-M281)


---

 **NOTE:** This step is for the M178-M181 and M278-M281 printers. For the M153-M154 and M253-M254 printers, skip this step and go to [Step 5: Remove the LVPS on page 566](#).

---

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-820 Tab locations

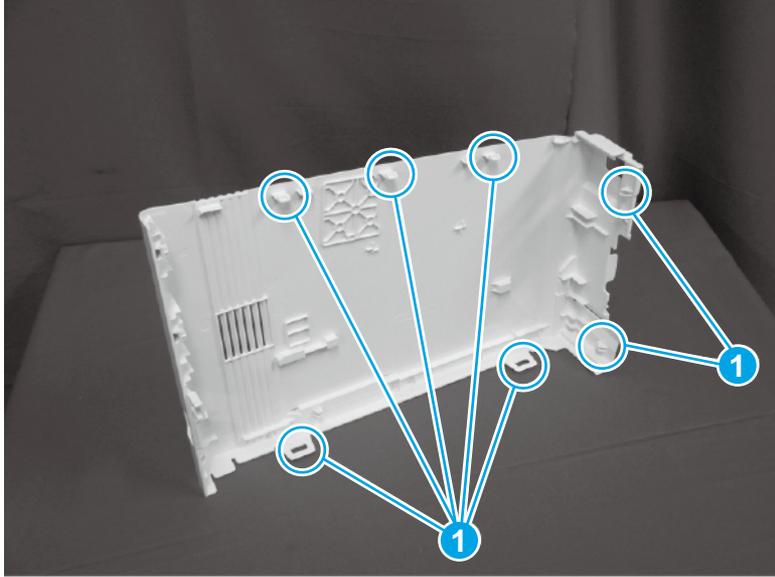


2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

---

Figure 1-821 Remove one screw and release tabs

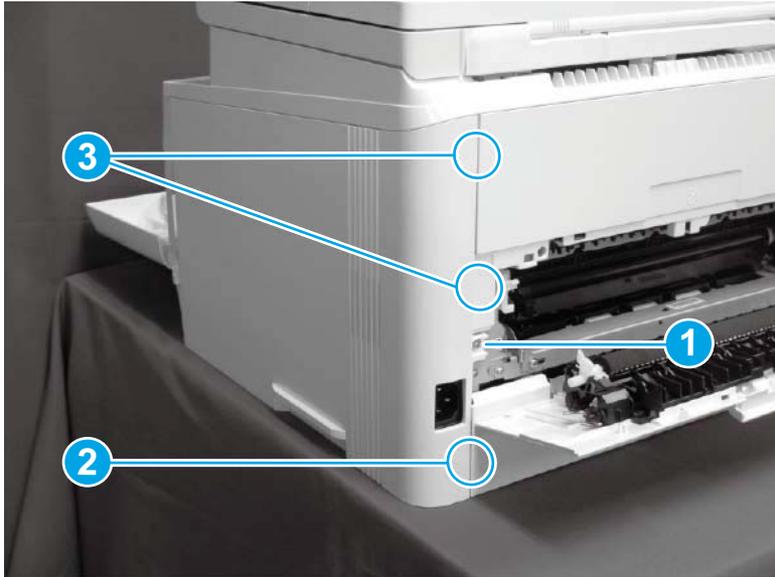


3. Release seven tabs (callout 1) along the top, bottom, and front of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-822** Remove the right cover

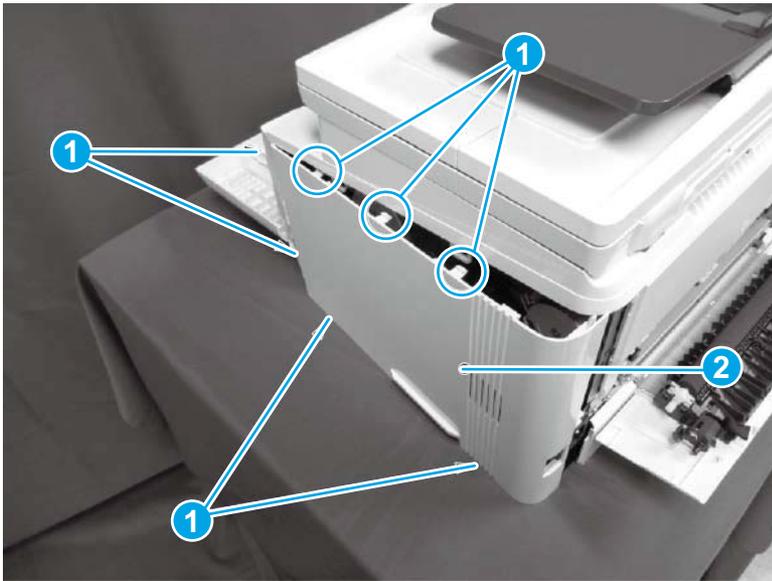

#### Step 5: Remove the LVPS


1. On the right side of the printer, use a small, flat-blade screwdriver to release one tab (callout 1) on the front of the fan duct cover.

**Figure 1-823** Release one tab

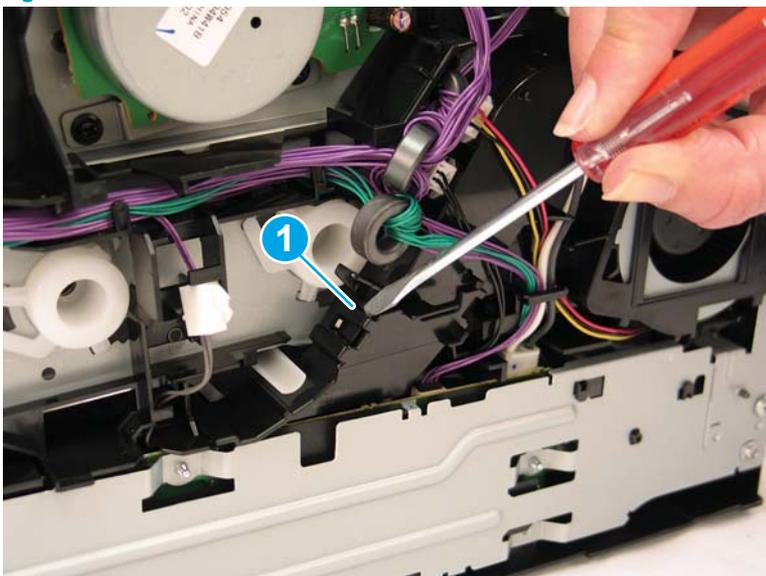


2. Release one tab (callout 1) on the rear of the fan duct cover, and then remove the fan duct cover (callout 2).

Figure 1-824 Remove the duct cover

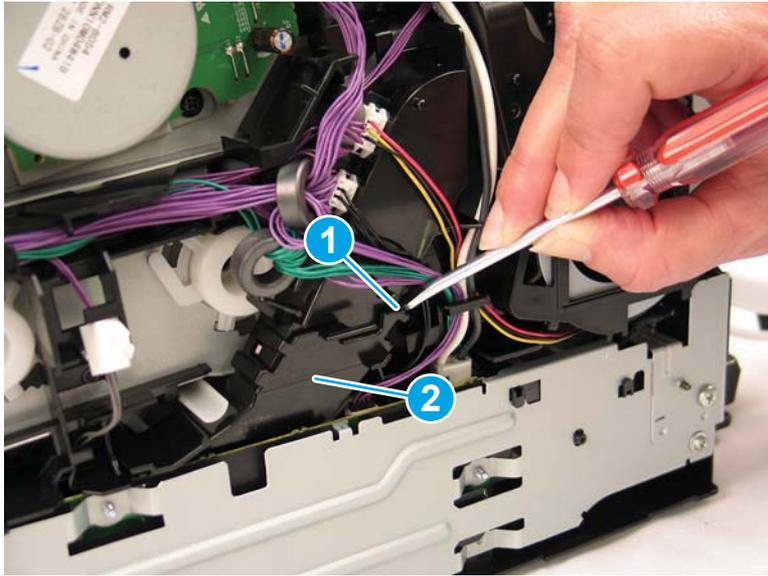


3. Remove one screw (callout 1), and then remove an M4 tapping screw (callout 2).

Figure 1-825 Remove two screws

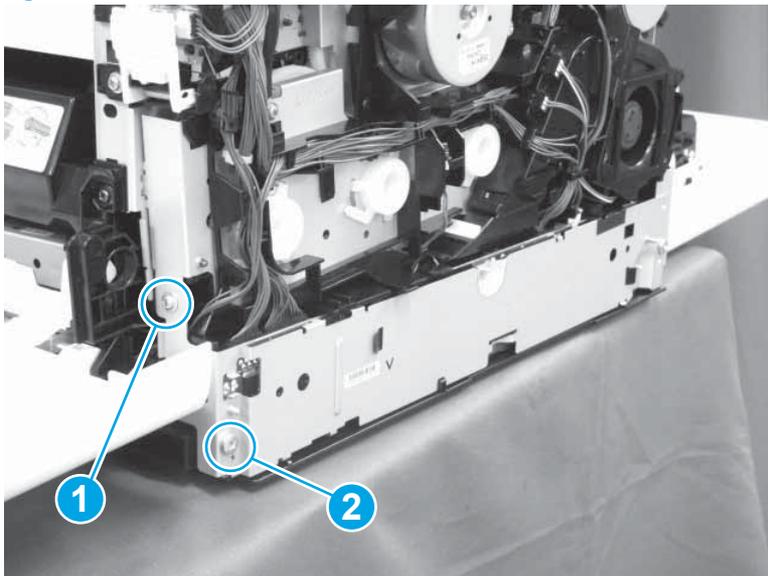

4. At the back of the printer, remove one silver screw (callout 1), one black screw (callout 2), and one M4 tapping screw (callout 3).

Figure 1-826 Remove three screws

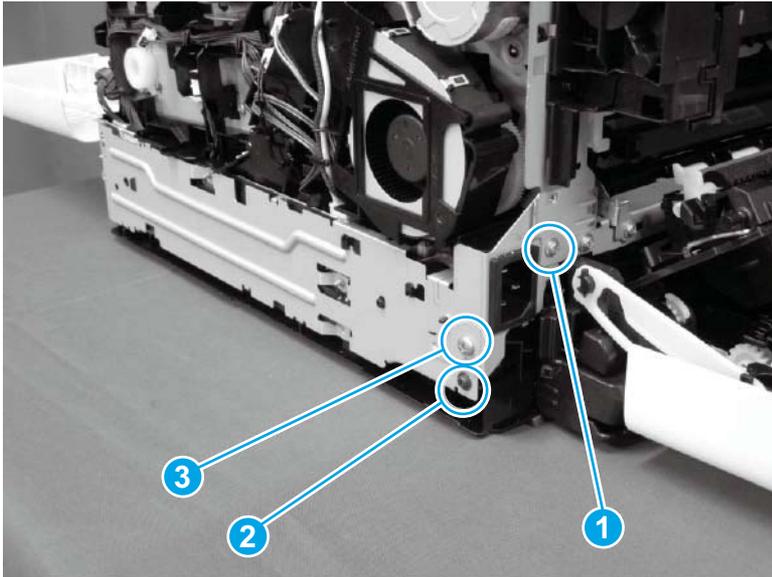


5. Disconnect four connectors (callout 1), and then pull the LVPS (callout 2) away from the chassis.

 **NOTE:** The connector to the far right in the graphic below has a clasp lock that needs to be pressed against the connector body to release it from the LVPS.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-827 Disconnect four connectors and remove the LVPS

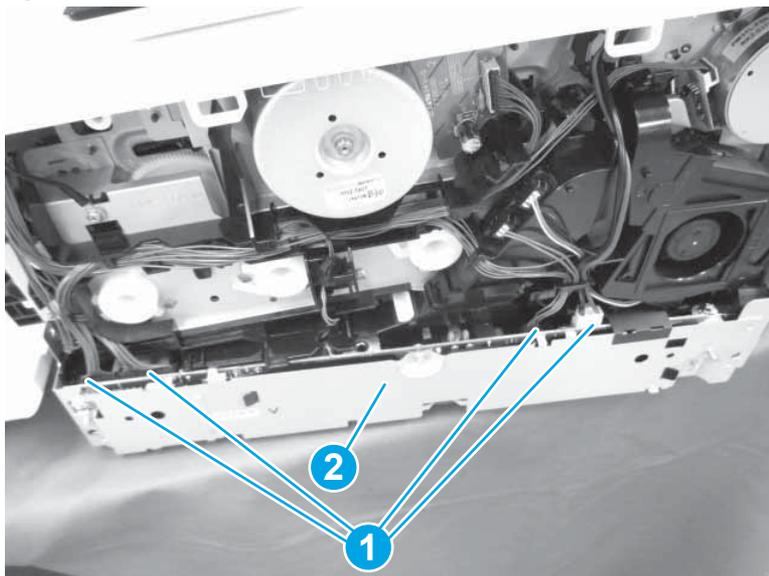

### Step 6: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Fuser

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and rear doors](#)
- [Step 3: Remove the right cover \(M153-M154 and M253-M254\)](#)
- [Step 4: Remove the left cover \(M153-M154 and M253-M254\)](#)
- [Step 5: Remove the right cover \(M178-M181 and M278-M281\)](#)
- [Step 6: Remove the left cover \(M178-M181 and M278-M281\)](#)
- [Step 7: Remove the rear cover \(simplex models\)](#)
- [Step 8: Remove the flatbed scanner assembly \(M180n\)](#)
- [Step 9: Remove the document feeder and scanner assembly \(M180nw and M181 fw\)](#)
- [Step 10: Remove the control panel \(M178-M181\)](#)
- [Step 11: Remove the top cover \(M178-M181\)](#)
- [Step 12: Remove the output sensor assembly \(M178-M181\)](#)
- [Step 13: Remove the control panel \(M278-M281\)](#)
- [Step 14: Remove the document feeder and scanner assembly \(M278-M281\)](#)
- [Step 15: Remove the top cover \(M278-M281\)](#)
- [Step 16: Remove the top cover \(M153-M154 and M253-M254\)](#)
- [Step 17: Remove the duplex drive assembly \(duplex models\)](#)
- [Step 18: Remove the fuser](#)
- [Step 19: Unpack the replacement assembly](#)

## Introduction

This document provides the procedures to remove and replace the fuser.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
  - ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Fuser part numbers	
RM2-5581-000CN	Fuser assembly 110 V (M153-M154, M178-M181)
RM2-5582-000CN	Fuser assembly 220 V (M153-M154, M178-M181)
RM2-2487-000CN	Fuser assembly 110 V duplex (M253-M254, M278-M281)
RM2-1673-000CN	Fuser assembly 220 V duplex (M253-M254, M278-M281)
RM2-2488-000CN	Fuser assembly 220 V simplex (M253-M254, M278-M281)

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Make sure that the printer initializes to a **Ready** state.

Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

**Figure 1-828** Remove the cassette tray



**Step 2: Open the front and rear doors**


1. Open the front door.

**Figure 1-829** Open the front door




2. **Simplex models only:** Open the rear door.

**Figure 1-830** Open the rear door

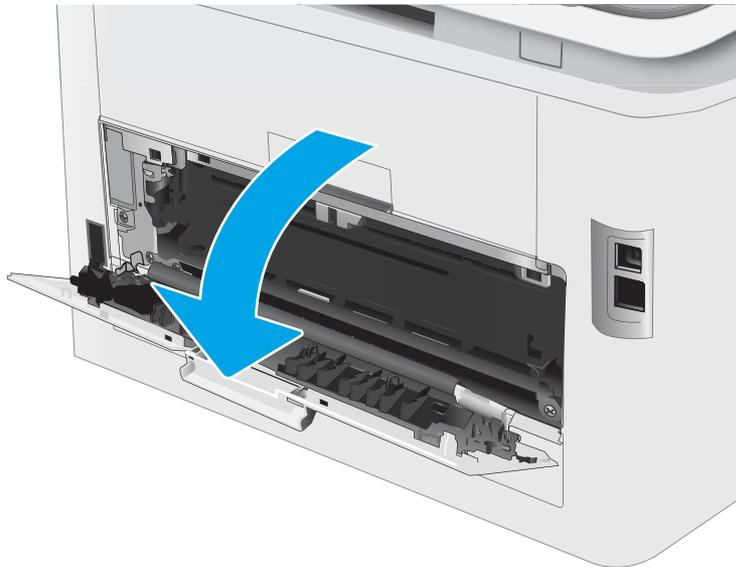

3. **Duplex models only:** Open the duplexer door.

**Figure 1-831** Open the duplexer door

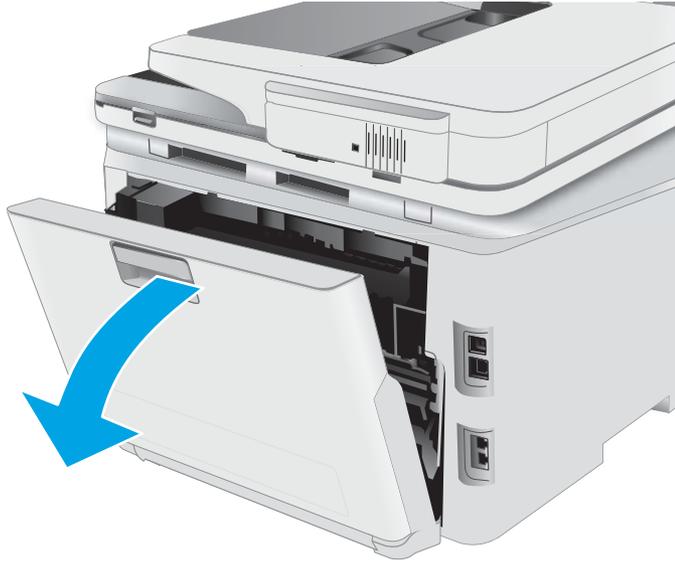


### Step 3: Remove the right cover (M153-M154 and M253-M254)

 **NOTE:** This step is for the M153-M154 and M253-M254 printers. For the M178-M181 and M278-M281 printers, skip this step and go to [Step 5: Remove the right cover \(M178-M181 and M278-M281\) on page 576.](#)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


**Figure 1-832** Tab locations

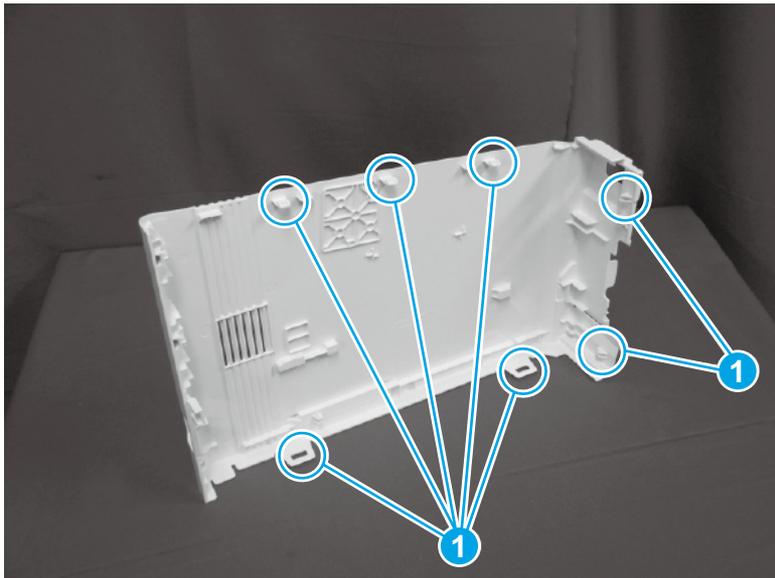

2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

**Figure 1-833** Remove one screw and release tabs

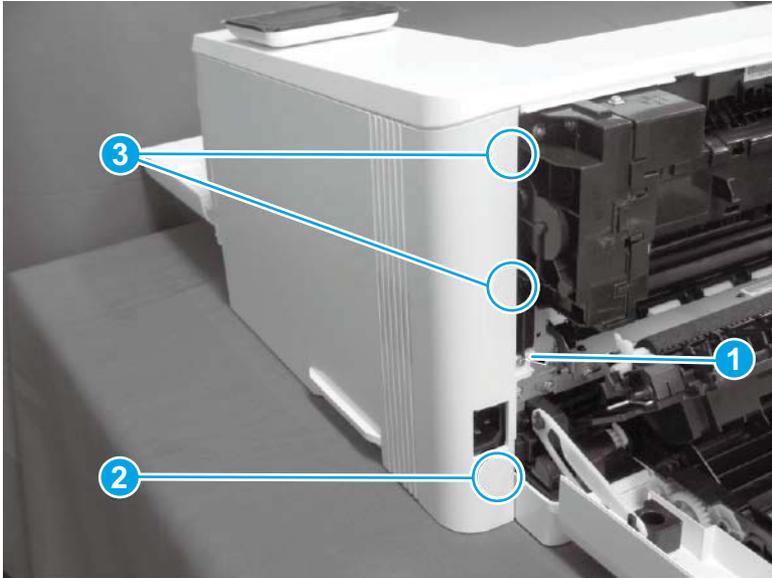


3. Release seven tabs (callout 1) along the top, bottom, and front of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-834** Remove the right cover

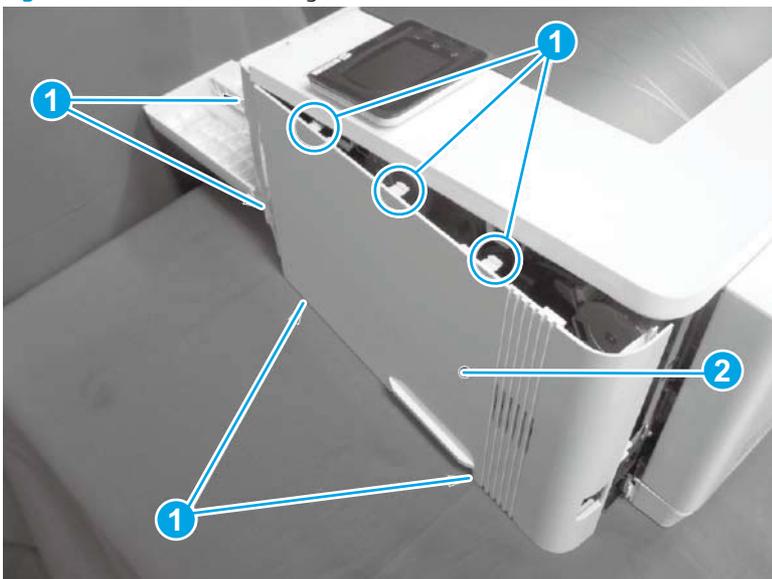


#### Step 4: Remove the left cover (M153-M154 and M253-M254)

 **NOTE:** This step is for the M153-M154 and M253-M254 printers. For the M178-M181 and M278-M281 printers, skip this step and go to [Step 5: Remove the right cover \(M178-M181 and M278-M281\) on page 576](#).

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


**Figure 1-835** Tab locations

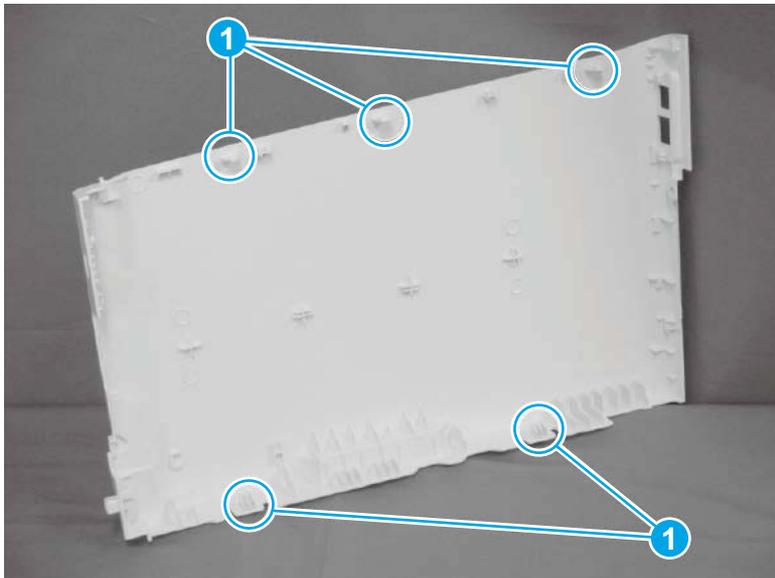

2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

**Figure 1-836** Remove one screw and release tabs

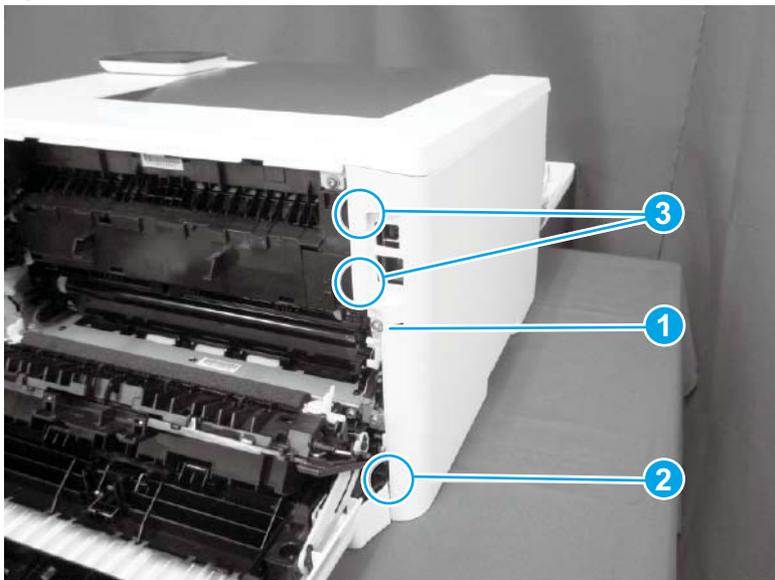

3. Release five tabs (callout 1) along the top and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

---


 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-837** Remove the left cover

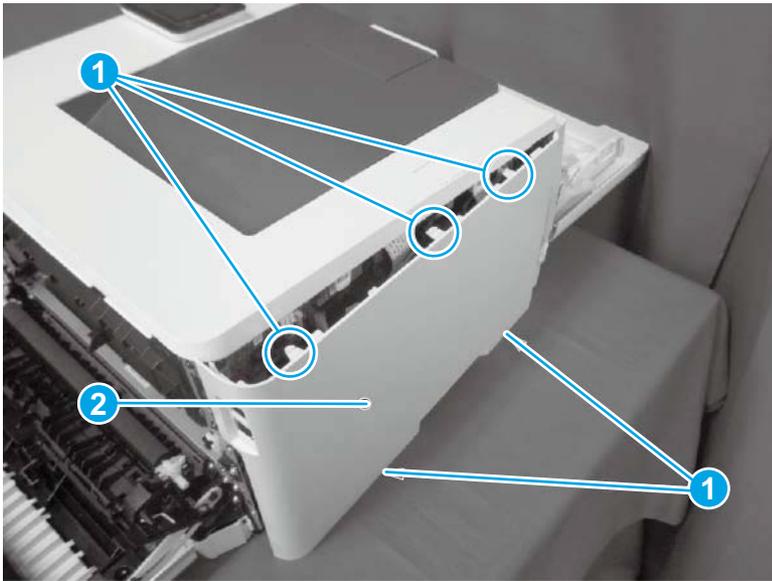

#### Step 5: Remove the right cover (M178-M181 and M278-M281)


---

 **NOTE:** This step is for the M178-M181 and M278-M281 printers. For the M153-M154 and M253-M254 printers, skip this step and go to [Step 7: Remove the rear cover \(simplex models\) on page 580](#).

---

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-838 Tab locations

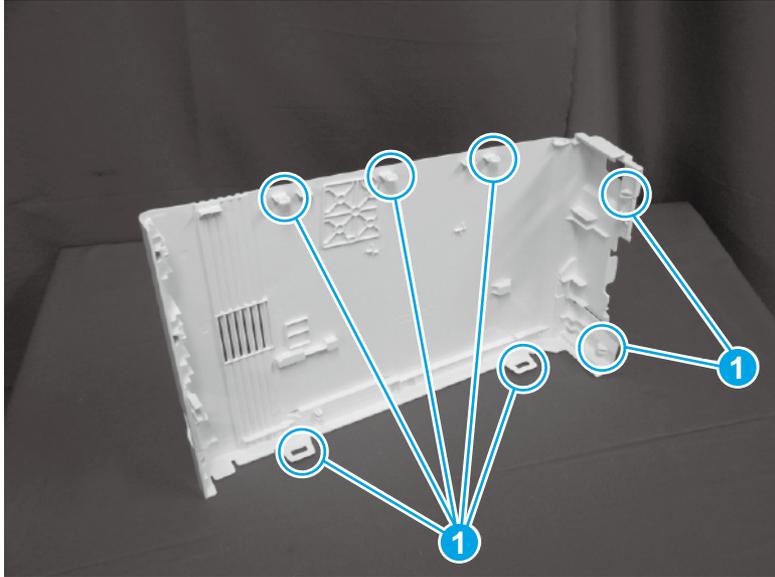


2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

---

Figure 1-839 Remove one screw and release tabs

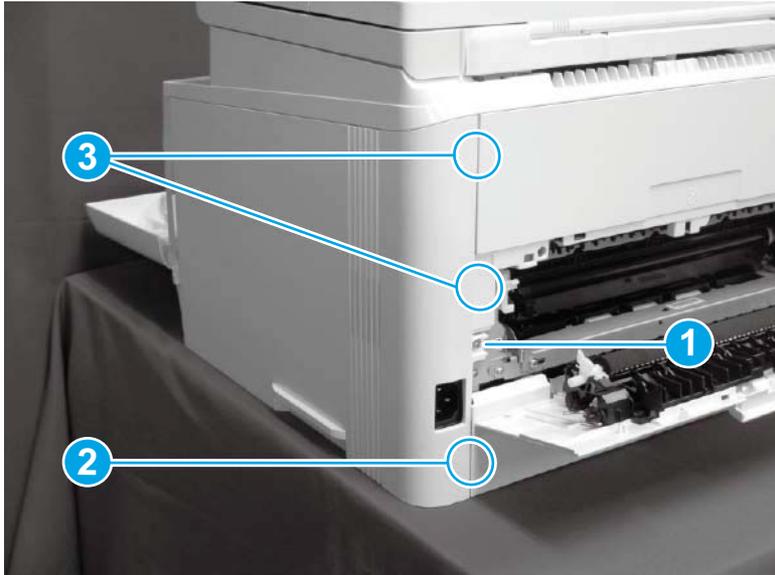

3. Release seven tabs (callout 1) along the top, bottom, and front of the cover. Pull the cover (callout 2) away from the printer to remove it.

---


 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-840** Remove the right cover

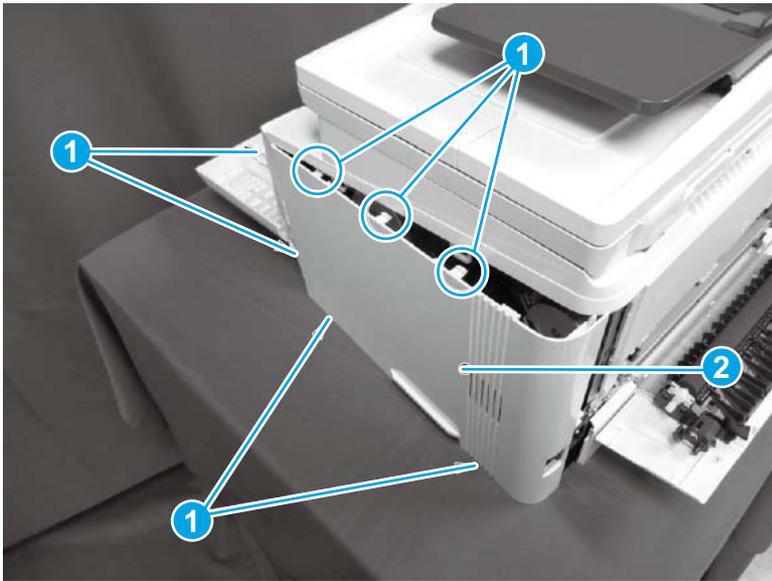

#### Step 6: Remove the left cover (M178-M181 and M278-M281)


---

 **NOTE:** This step is for the M178-M181 and M278-M281 printers. For the M153-M154 and M253-M254 printers, skip this step and go to [Step 7: Remove the rear cover \(simplex models\) on page 580](#).

---

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


Figure 1-841 Tab locations

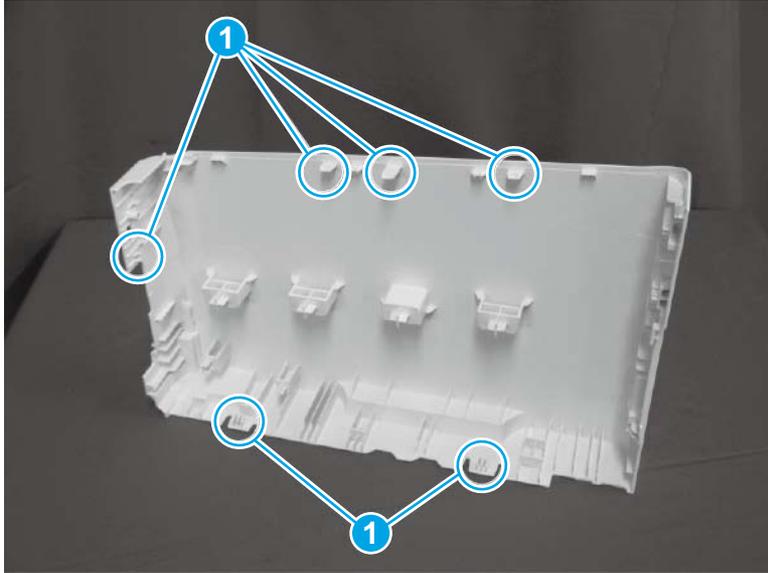

2. At the rear of the printer, remove one screw (callout 1), and then release one tab (callout 2).

 **TIP:** Use a small, flat-blade screwdriver to release the tab.

Figure 1-842 Remove one screw and release tab

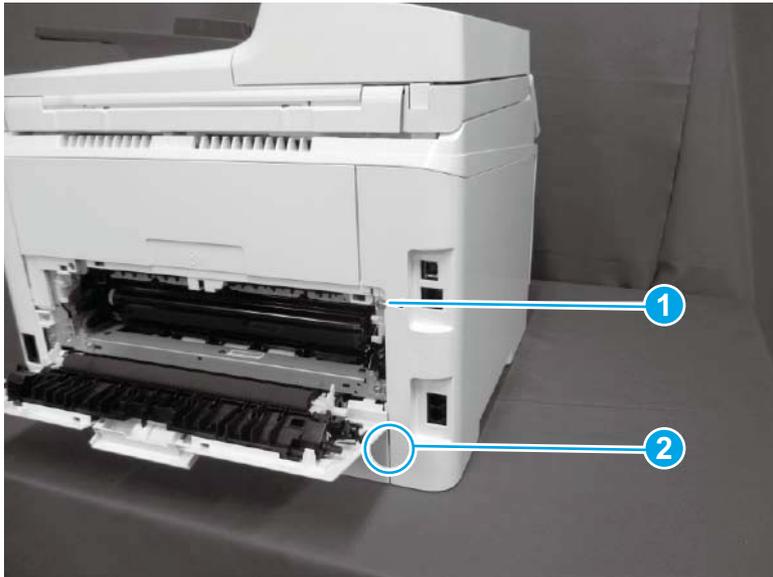

3. Release six tabs (callout 1) along the top, front, and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

---


 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-843** Remove the left cover

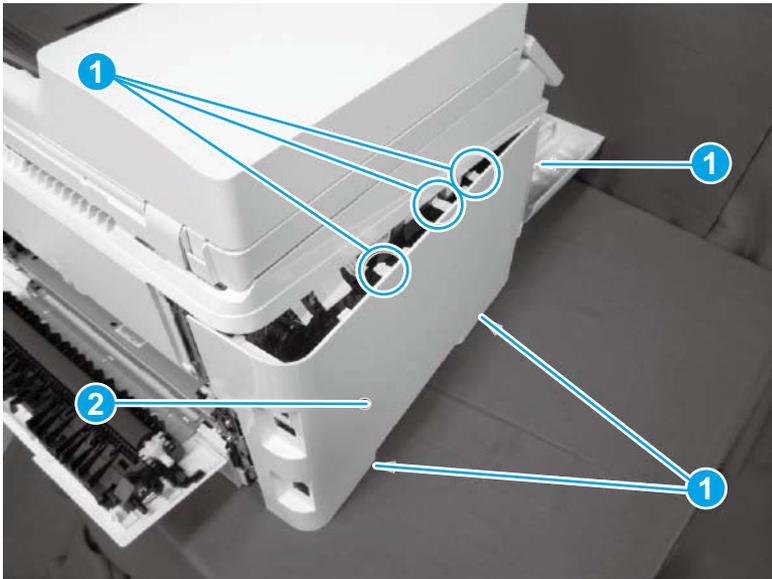

#### Step 7: Remove the rear cover (simplex models)

---

 **NOTE:** This step is for simplex printers. For the M278-M281 duplex printers, skip this step and go to [Step 14: Remove the document feeder and scanner assembly \(M278-M281\) on page 595](#). For the M253-M254 duplex printers, skip this step and go to [Step 16: Remove the top cover \(M153-M154 and M253-M254\) on page 601](#).


---

- ▲ At the back of the printer, use a small flat-blade screwdriver to release three tabs (callout 1) at the bottom of the cover, and then pull the cover down and away from the printer to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-844 Remove the rear cover

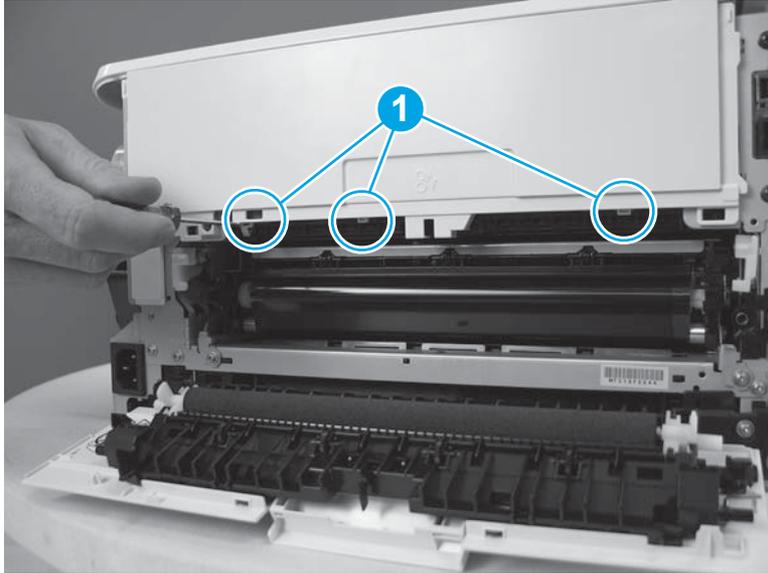


### Step 8: Remove the flatbed scanner assembly (M180n)

 **NOTE:** This step is for the M180n printer. For the M180nw and M181fw printers, skip this step and go to [Step 9: Remove the document feeder and scanner assembly \(M180nw and M181fw\) on page 585](#). For the M278-M281 printers, skip this step and go to [Step 14: Remove the document feeder and scanner assembly \(M278-M281\) on page 595](#). For the M153-M154 and M253-M254 printers, skip this step and go to [Step 16: Remove the top cover \(M153-M154 and M253-M254\) on page 601](#).

1. Disconnect one flat cable (callout 1) from the formatter.


Figure 1-845 Disconnect one flat cable

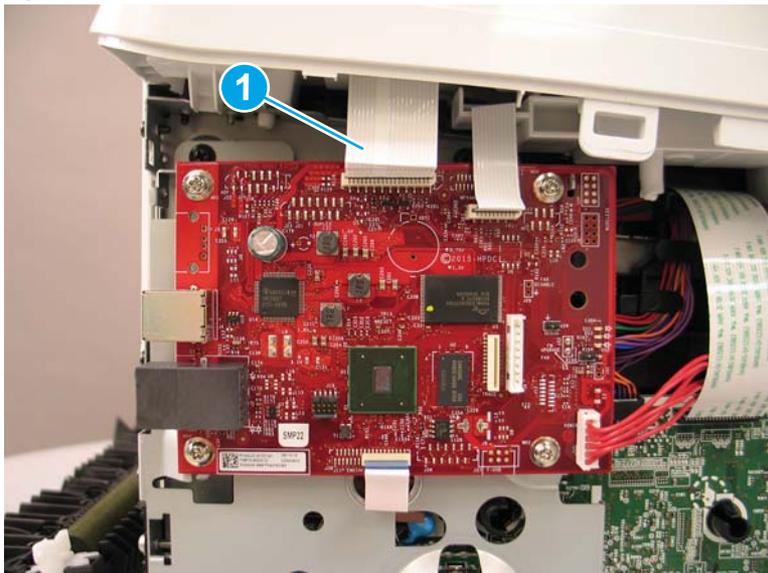

2. Open the scanner. Release one tab (callout 1), and then rotate the slider pin (callout 2) towards the front of the printer to release it.


 **TIP:** Use a Phillips head screwdriver in the end of the slider pin to rotate it.

**Figure 1-846** Release one tab and rotate the slider pin

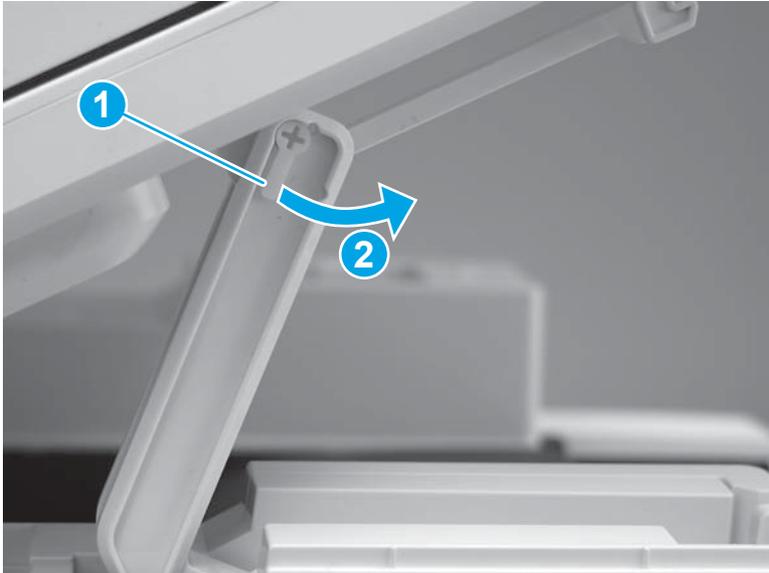

3. Remove the slider pin.

**Figure 1-847** Remove the slider pin

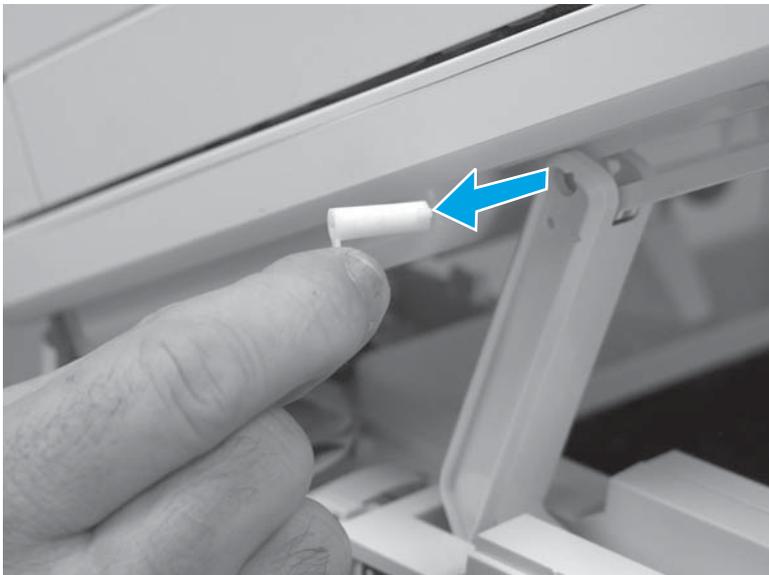

4. Rotate the hinge arm down.


**⚠ WARNING!** The hinge arm is spring-loaded by a strong spring and might snap down suddenly. Be careful not to pinch your fingers between the hinge arm and the top of the printer.

Figure 1-848 Rotate the hinge arm




5. On the scanner bed, use a small, flat-blade screwdriver to release one tab (callout 1), and then remove the scanner cable cover (callout 2).

Figure 1-849 Remove the scanner cable cover

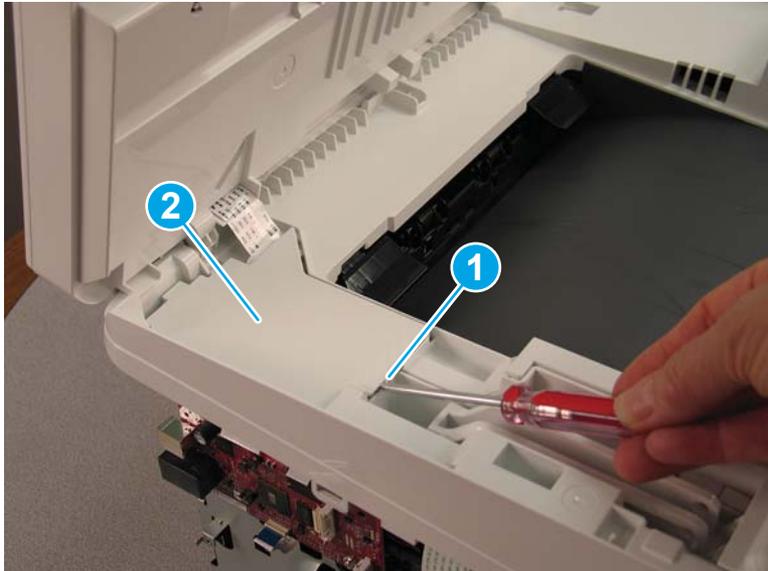

6. Release the flat cable (callout 1) from the guides (callout 2), and then release the flat cable (callout 3) through the opening in the cover.

Figure 1-850 Release the flat cable

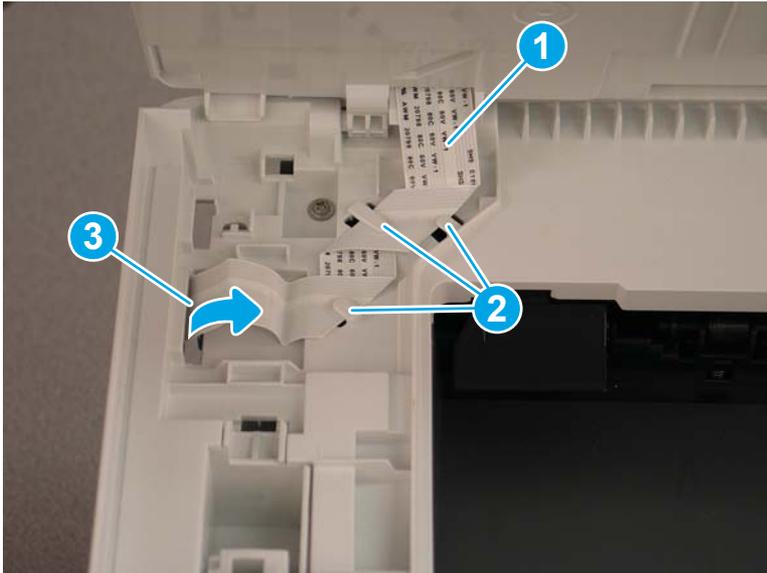


7. Open the scanner assembly fully, slide the assembly to the right (callout 1), and then lift the assembly off of the chassis (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

 **NOTE:** The figure below shows the document feeder scanner. The procedure is also correct for the flatbed scanner.

Figure 1-851 Remove the scanner assembly

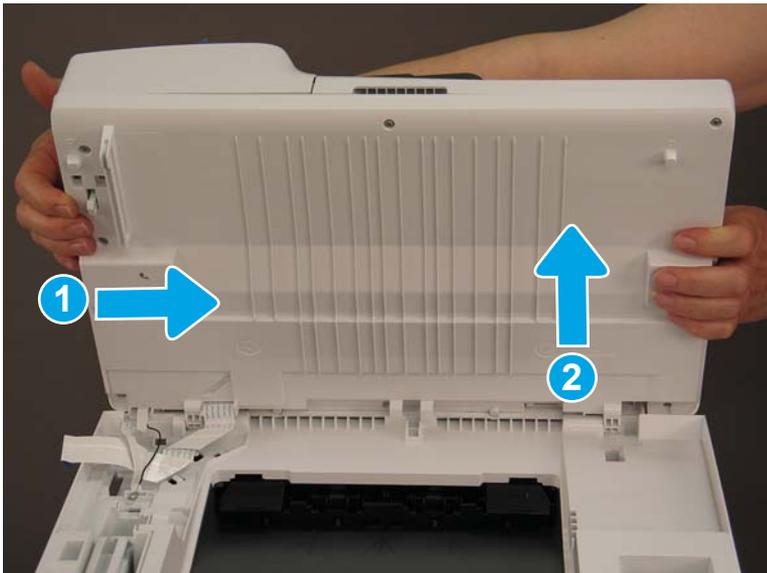


## Step 9: Remove the document feeder and scanner assembly (M180nw and M181fw)

 **NOTE:** This step is for the M180nw and M181fw printers. For the M180n printer, skip this step and go to [Step 10: Remove the control panel \(M178-M181\) on page 588](#). For the M278-M281 printers, skip this step and go to [Step 14: Remove the document feeder and scanner assembly \(M278-M281\) on page 595](#). For the M153-M154 and M253-M254 printers, skip this step and go to [Step 16: Remove the top cover \(M153-M154 and M253-M254\) on page 601](#).

1. Disconnect two flat cables (callout 1) from the formatter, and then remove one screw (callout 2) to release the grounding wire.


**Figure 1-852** Disconnect two cables and remove one screw

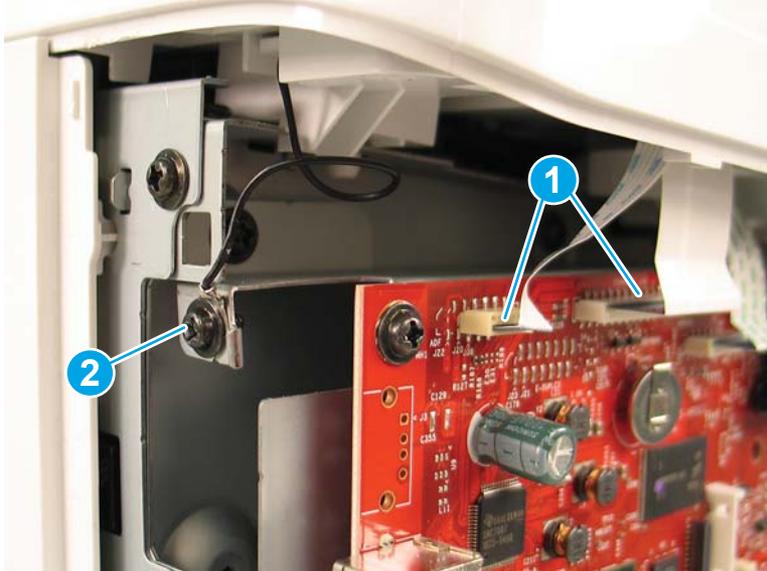

2. Open the scanner. Release one tab (callout 1), and then rotate the ISA slider pin (callout 2) towards the front of the printer to release it.


 **TIP:** Use a Phillips head screwdriver in the end of the slider pin to rotate it.

**Figure 1-853** Release one tab and rotate the slider pin

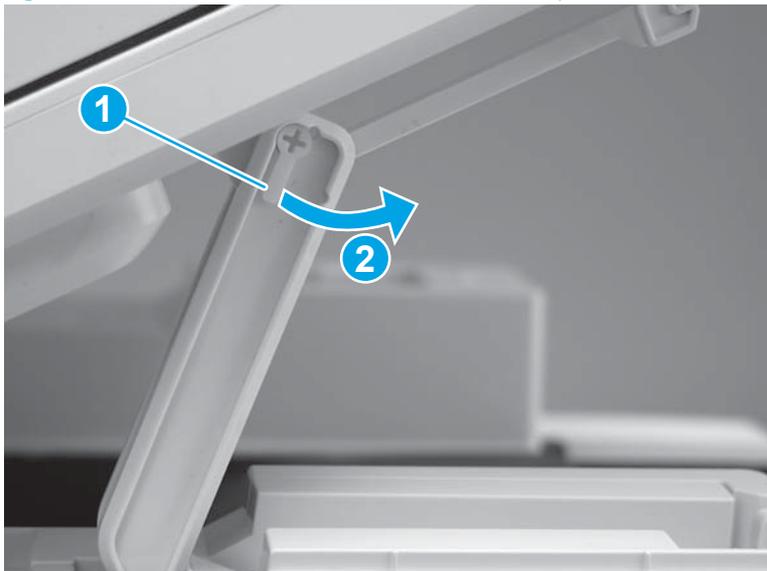

3. Remove the slider pin.

Figure 1-854 Remove the slider pin

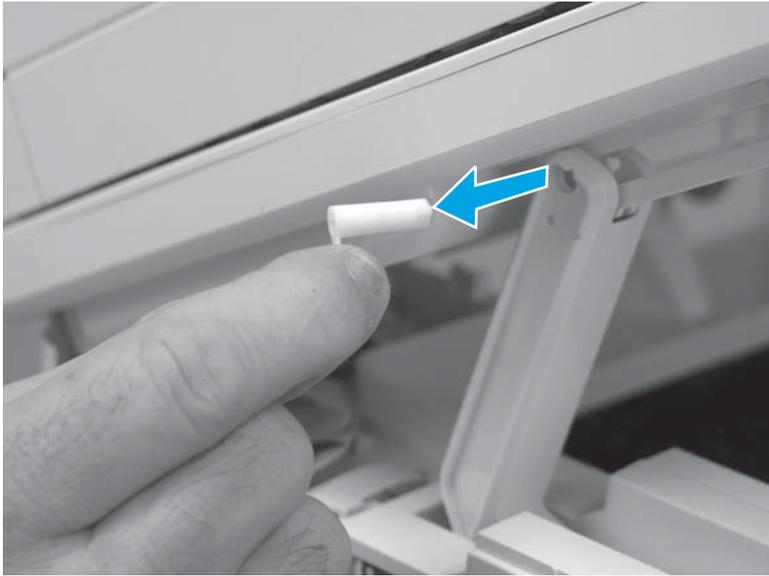

4. Rotate the hinge arm down.

---

**⚠ WARNING!** The hinge arm is spring-loaded by a strong spring and might snap down suddenly. Be careful not to pinch your fingers between the hinge arm and the top of the printer.


---

Figure 1-855 Rotate the hinge arm down




5. On the scanner bed, use a small, flat-blade screwdriver to release one tab (callout 1), and then remove the scanner cable cover (callout 2).

Figure 1-856 Remove the scanner cable cover

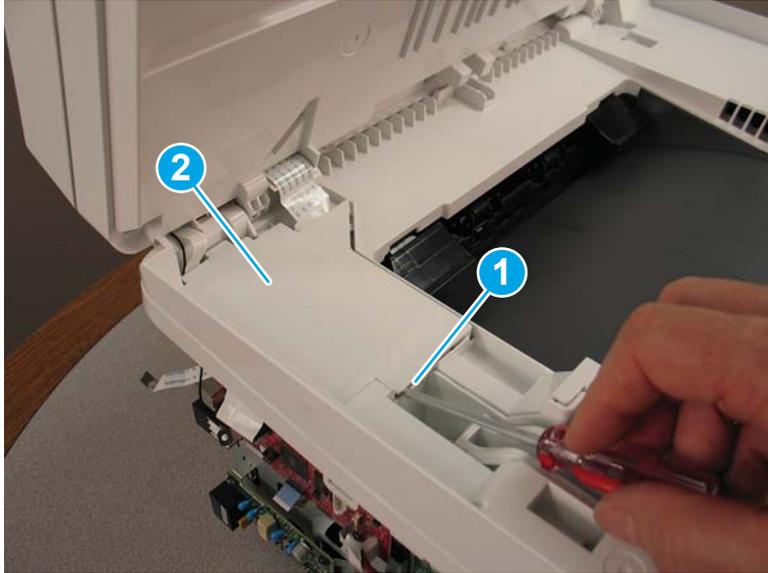

6. Release the flat cable (callout 1) from the guides (callout 2), and then feed the two flat cables (callout 3) through the openings in the scanner.


Figure 1-857 Release the flat cable

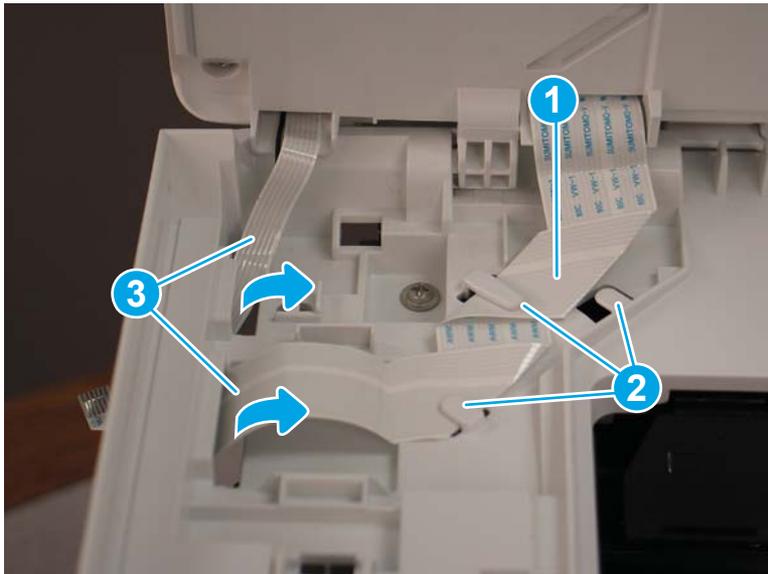

7. Open the scanner assembly fully, slide the assembly to the right (callout 1), and then lift the assembly off of the chassis (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-858** Remove the scanner assembly

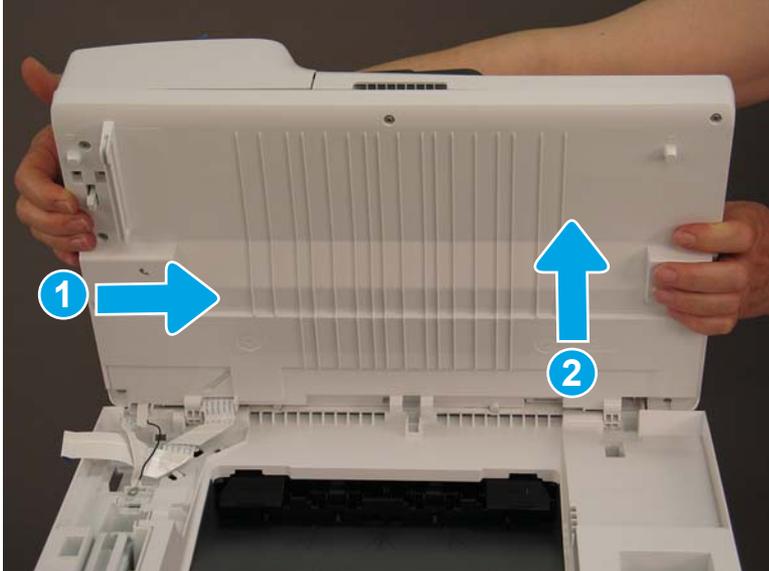


#### Step 10: Remove the control panel (M178-M181)

 **NOTE:** This step is for the M178-M181 printers. For the M278-M281 printers, skip this step and go to [Step 14: Remove the document feeder and scanner assembly \(M278-M281\) on page 595](#). For the M153-M154 and M253-M254 printers, skip this step and go to [Step 16: Remove the top cover \(M153-M154 and M253-M254\) on page 601](#).

1. Remove one screw (callout 1) to release the grounding wire.

**Figure 1-859** Remove one screw

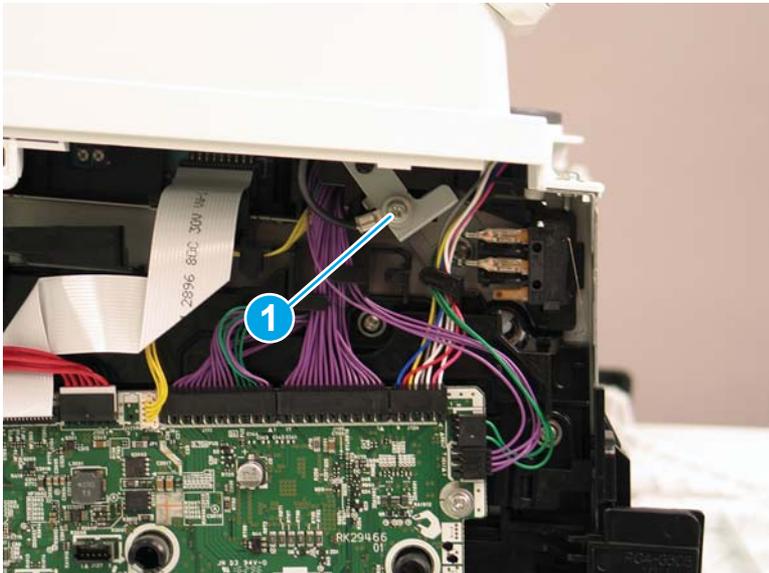

2. Raise the hinge arm.


**⚠ WARNING!** The hinge arm is spring-loaded by a strong spring and might spring up. Be careful not to pinch your fingers between the hinge arm and the top of the printer.

Figure 1-860 Rotate the hinge arm up



3. Release two tabs (callout 1), and then slide the cover (callout 2) away from the control panel to remove it.


Figure 1-861 Remove the cover

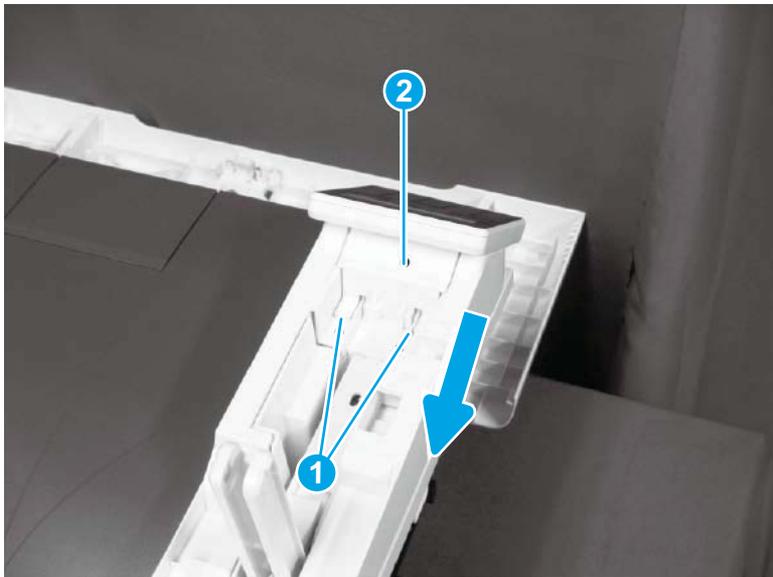

4. Release two tabs (callout 1), and then slide the control panel (callout 2) up to remove it.

**⚠ CAUTION:** The control panel is still attached to the printer. Do not remove it completely.


**Figure 1-862** Remove the control panel

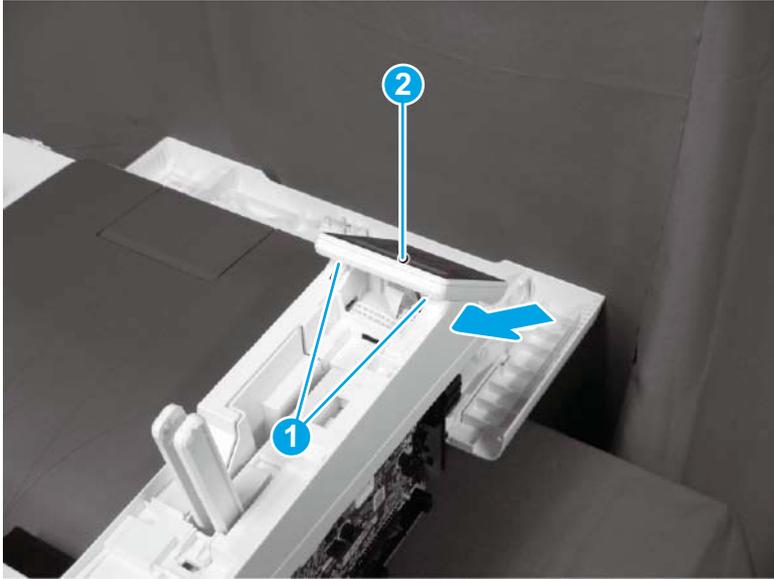

5. On the back of the control panel (callout 1), disconnect one connector (callout 2).

**💡 Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-863** Disconnect one connector

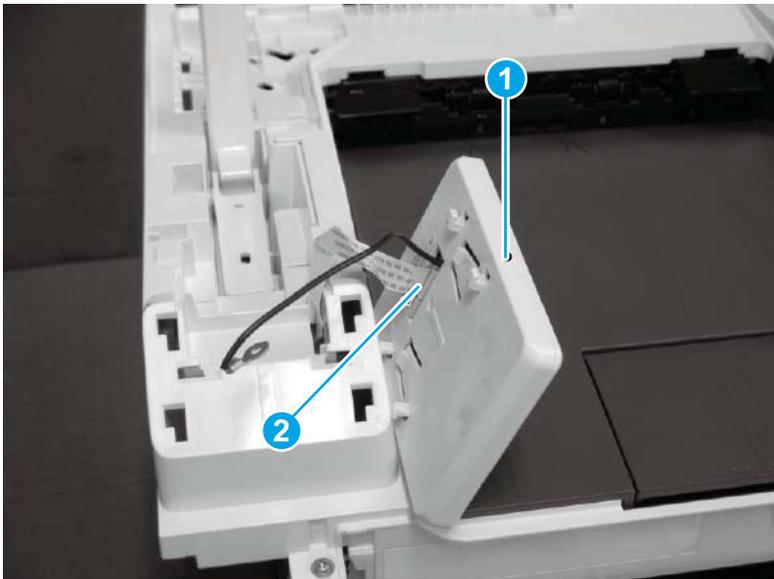


#### Step 11: Remove the top cover (M178-M181)

**📝 NOTE:** This step is for the M178-M181 printers. For the M278-M281 printers, skip this step and go to [Step 14: Remove the document feeder and scanner assembly \(M278-M281\) on page 595](#). For the M153-M154 and M253-M254 printers, skip this step and go to [Step 16: Remove the top cover \(M153-M154 and M253-M254\) on page 601](#).

1. Disconnect one flat cable (callout 1) from the formatter.


Figure 1-864 Disconnect one cable

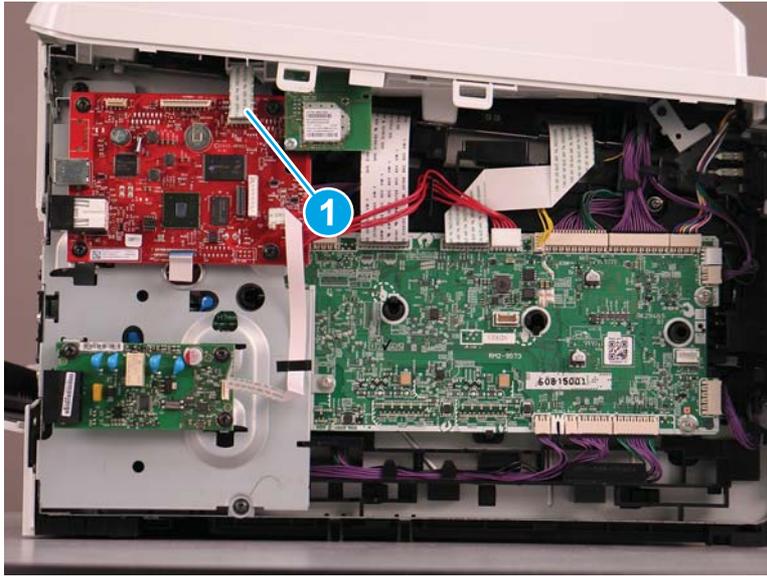

2. Remove seven screws (callout 1), and then remove the top cover (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-865 Remove seven screws and the top cover

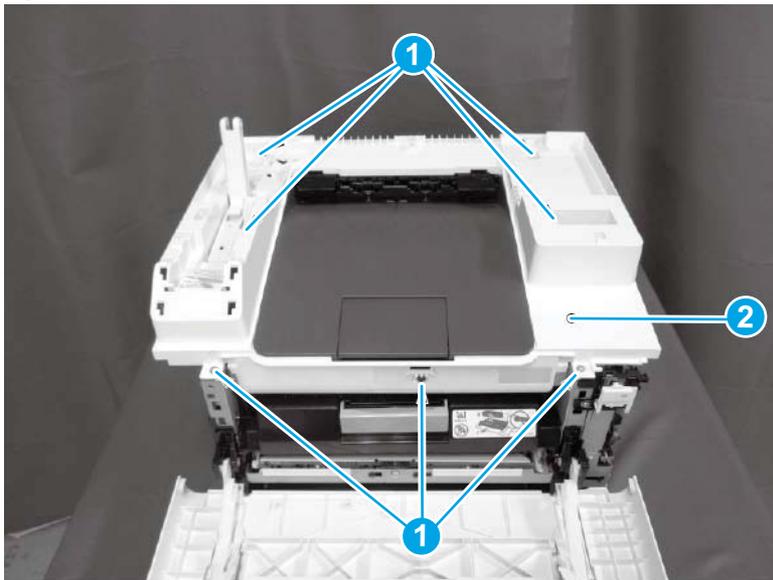

### Step 12: Remove the output sensor assembly (M178-M181)

 **NOTE:** This step is for the M178-M181 printers. For the M278-M281 printers, skip this step and go to [Step 14: Remove the document feeder and scanner assembly \(M278-M281\) on page 595](#). For the M153-M154 and M253-M254 printers, skip this step and go to [Step 16: Remove the top cover \(M153-M154 and M253-M254\) on page 601](#).

- ▲ At the top of the output bin, disconnect one connector (callout 1), release two tabs (callout 2), and then remove the output sensor assembly (callout 3).


---

 **NOTE:** Unrouting the cable from the cable guides might make disconnecting the connector (callout 1) easier.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-866** Remove the output sensor assembly

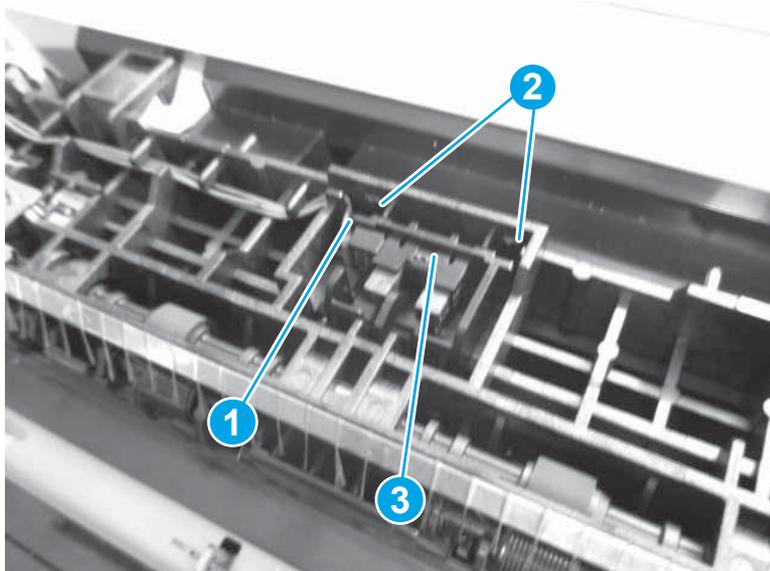

### Step 13: Remove the control panel (M278-M281)

---

 **NOTE:** This step is for the M278-M281 printers. For the M178-M181 printers, skip this step and go to [Step 17: Remove the duplex drive assembly \(duplex models\) on page 603](#). For the M153-M154 and M253-M254 printers, skip this step and go to [Step 16: Remove the top cover \(M153-M154 and M253-M254\) on page 601](#).

---


1. Open the scanner

**Figure 1-867** Open the scanner




2. At the back of the control panel, remove one screw (callout 1), and then use a small flat-blade screwdriver in the two pry points (callout 2) to remove the cover.

Figure 1-868 Remove one screw and the cover

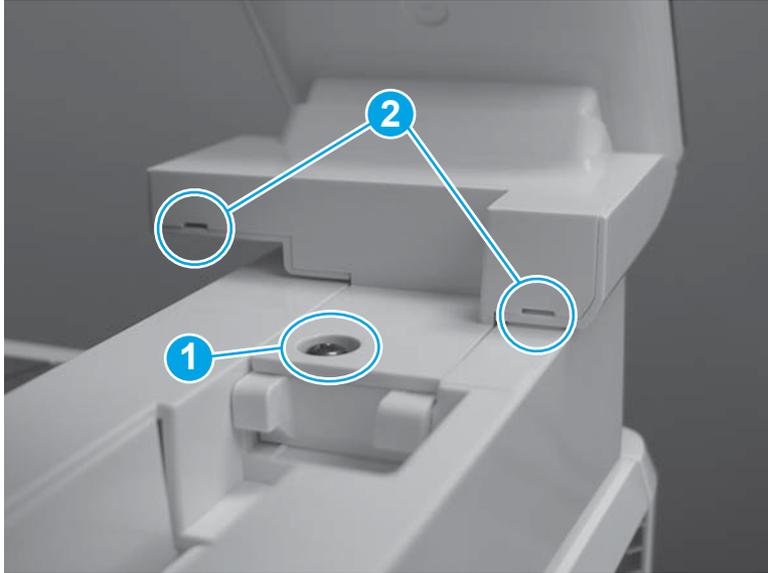


3. Remove the flat cable (callout 1) from the guides, and then remove three screws (callout 2).

Figure 1-869 Remove three screws

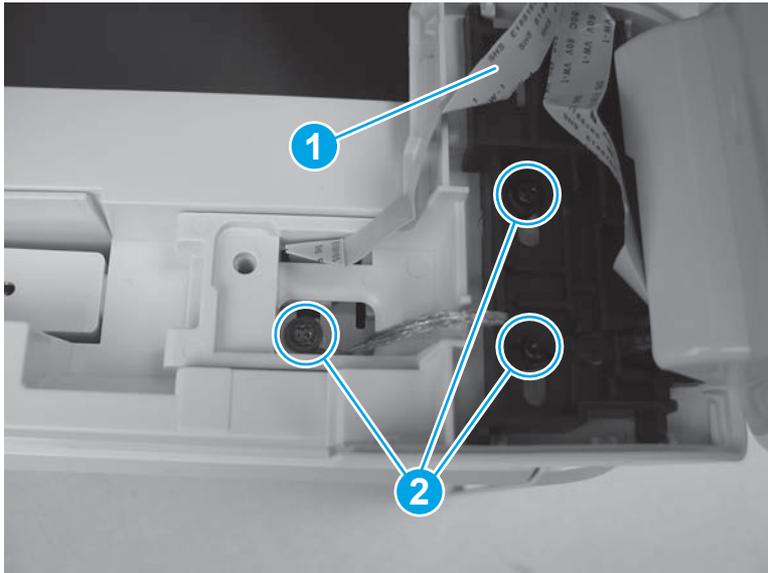

4. Move the control panel to the fully opened position (callout 1), and then rotate it back about 20 degrees (callout 2).

Figure 1-870 Rotate the control panel

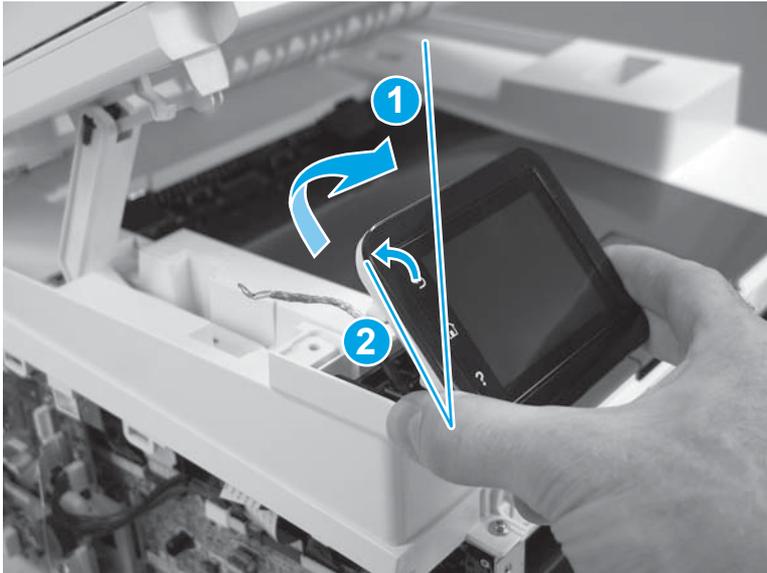

5. Firmly move the assembly to the right 7-8 mm (0.26-0.31 in) (callout 1) to release two tabs from the posts at the base of the control panel.

Figure 1-871 Release two tabs



6. Rotate the control panel forward to release it (callout 1), and then lift it slightly away from the printer.

**CAUTION:** The control panel is still attached to the printer. Do not remove it completely.


Figure 1-872 Release the control panel



7. Use a small, flat-blade screw driver to unclasp the flat cable connector in the control panel.

**Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-873 Disconnect the flat cable

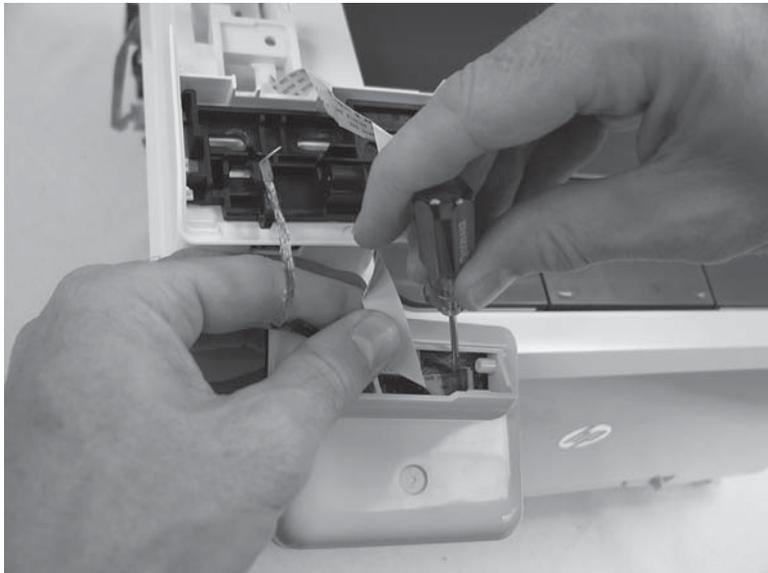


#### Step 14: Remove the document feeder and scanner assembly (M278-M281)

**NOTE:** This step is for the M278-M281 printers. For the M178-M181 printers, skip this step and go to [Step 17: Remove the duplex drive assembly \(duplex models\) on page 603](#). For the M153-M154 and M253-M254 printers, skip this step and go to [Step 16: Remove the top cover \(M153-M154 and M253-M254\) on page 601](#).

1. Disconnect two flat cables (callout 1) from the formatter, and then remove one screw (callout 2) to release the grounding wire.

**Figure 1-874** Disconnect two cables and remove one screw

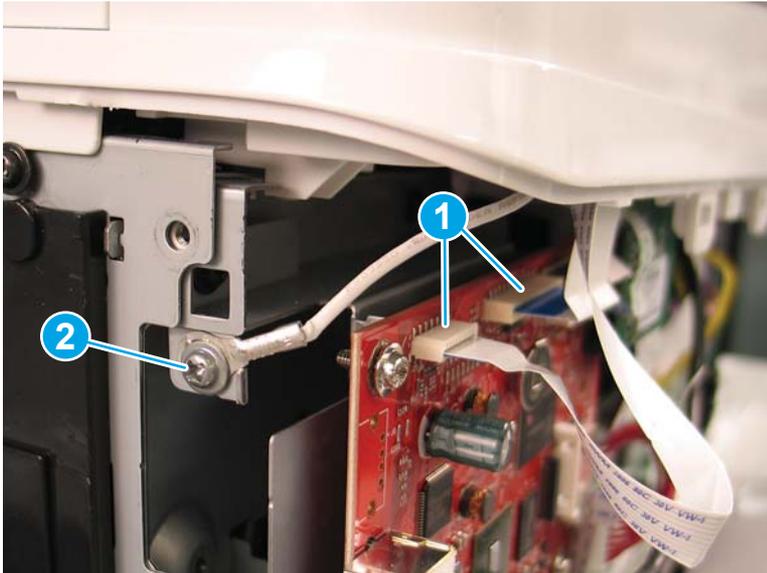


2. Open the scanner. Release one tab (callout 1), and then rotate the slider pin (callout 2) towards the front of the printer to release it.

---

 **TIP:** Use a Phillips head screwdriver in the end of the slider pin to rotate it.


---

**Figure 1-875** Release one tab and rotate the slider pin

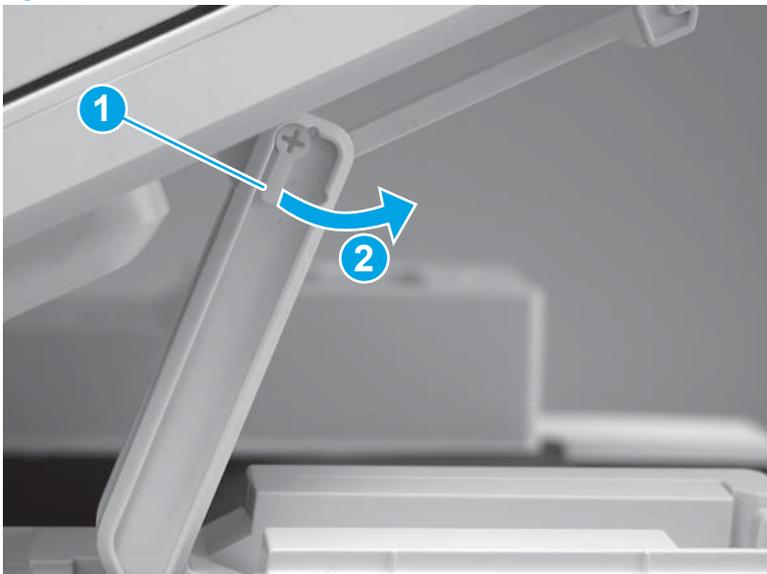

3. Remove the slider pin.


Figure 1-876 Remove the slider pin

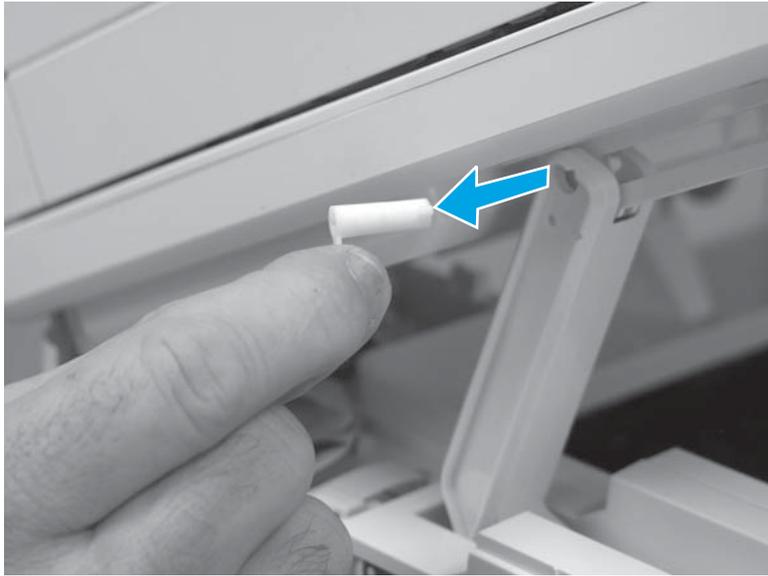

4. Rotate the hinge arm down.


**⚠ WARNING!** The hinge arm is spring-loaded by a strong spring and might snap down suddenly. Be careful not to pinch your fingers between the hinge arm and the top of the printer.

Figure 1-877 Rotate the hinge arm down

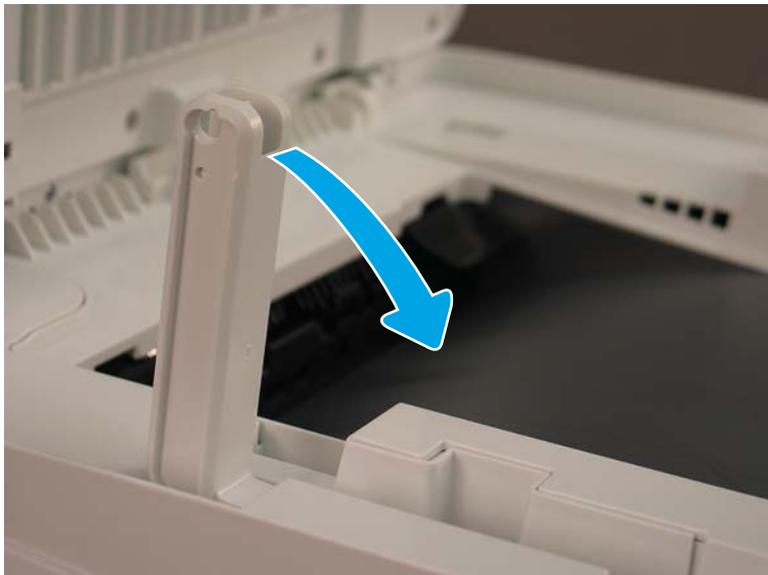


5. On the scanner bed, use a small, flat-blade screwdriver to release one tab (callout 1), and then remove the scanner cable cover (callout 2).

Figure 1-878 Remove the scanner cable cover

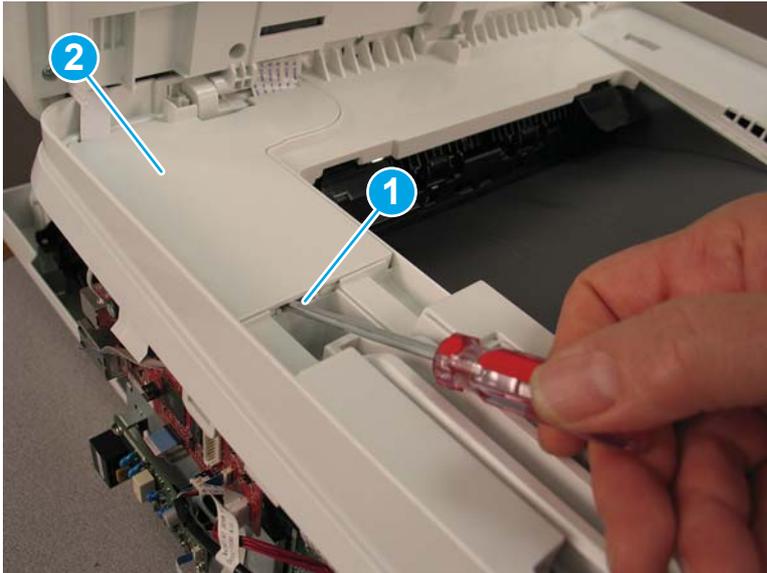

6. Release the flat cable (callout 1) from the guides (callout 2), and then feed the cables (callout 3) through the opening in the scanner.


Figure 1-879 Release the flat cable

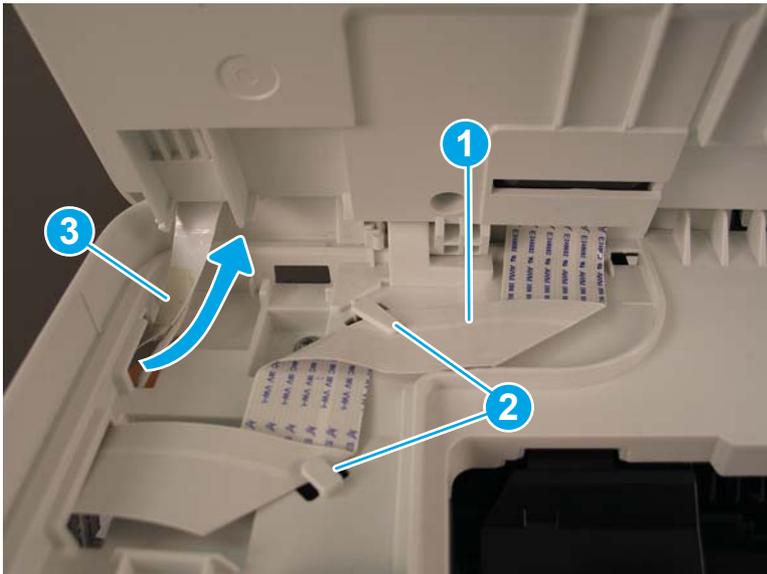

7. Open the scanner assembly fully, slide the assembly to the right (callout 1), and then lift the assembly off of the chassis (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-880** Remove the scanner assembly

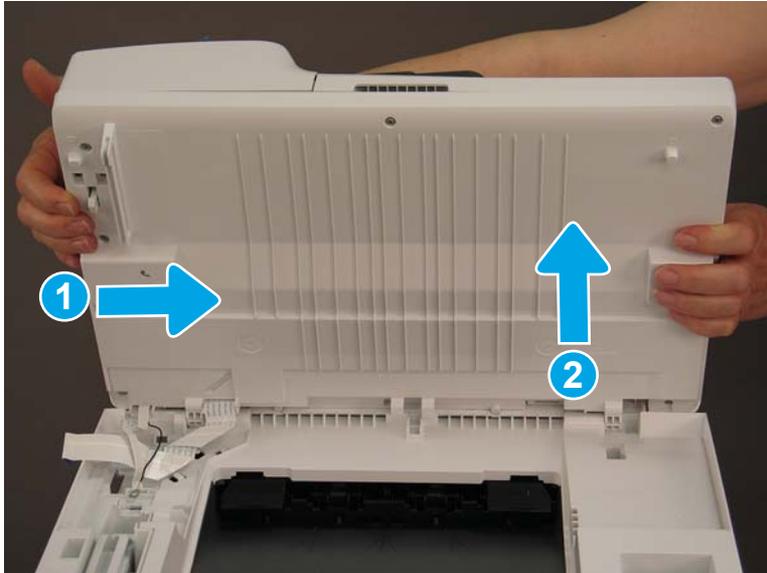


#### Step 15: Remove the top cover (M278-M281)

 **NOTE:** This step is for the M278-M281 printers. For the M178-M181 printers, skip this step and go to [Step 17: Remove the duplex drive assembly \(duplex models\) on page 603](#). For the M153-M154 and M253-M254 printers, skip this step and go to [Step 16: Remove the top cover \(M153-M154 and M253-M254\) on page 601](#).

1. Disconnect two cables (callout 1) from the formatter.


**Figure 1-881** Disconnect two cables

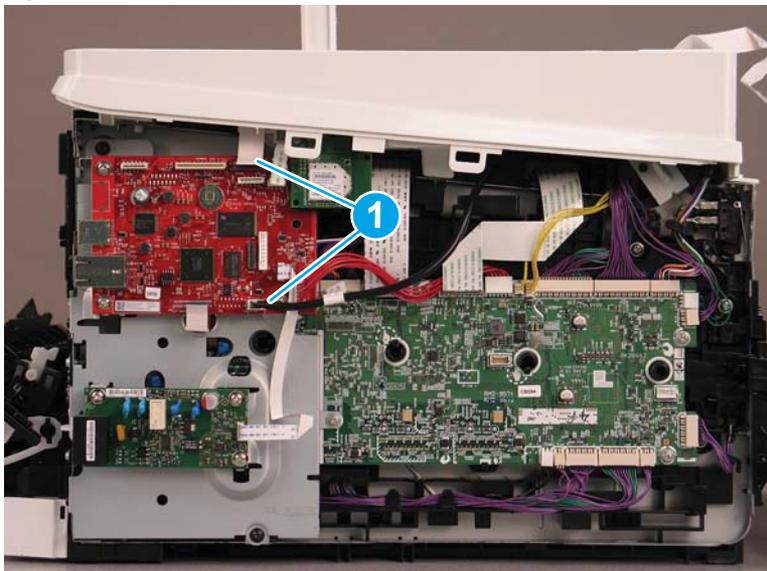

2. At the top of the printer, remove one screw (callout 1) close to the control panel location.


 **Reinstallation tip:** When reinstalling the screw, make sure that the screw opening in the sheet metal bracket under the top cover is aligned with the screw opening in the top cover.

**Figure 1-882** Remove one screw

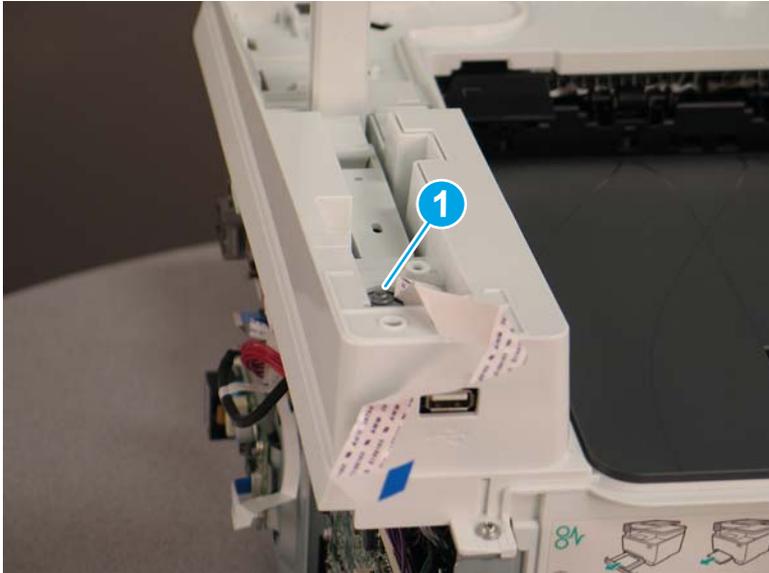

3. At the back of the printer, remove one screw (callout 1).


**Figure 1-883** Remove one screw

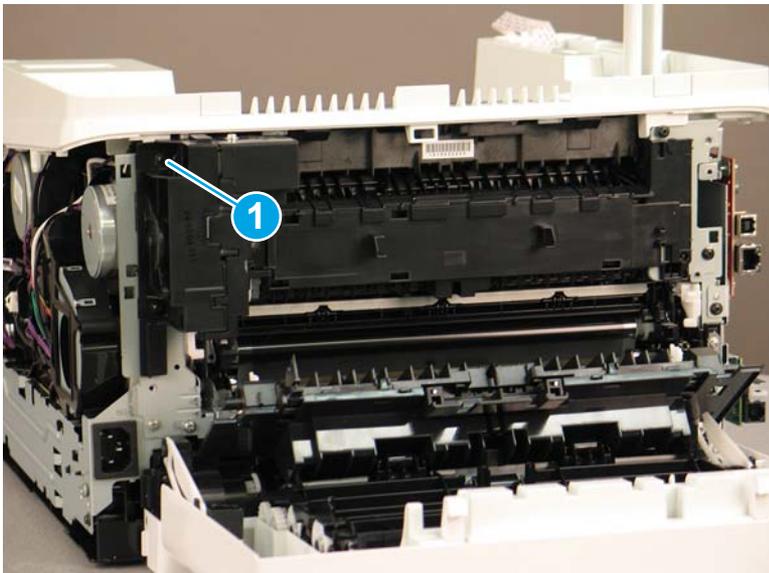

4. Remove seven screws (callout 1), and then remove the top cover (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-884** Remove seven screws and the top cover

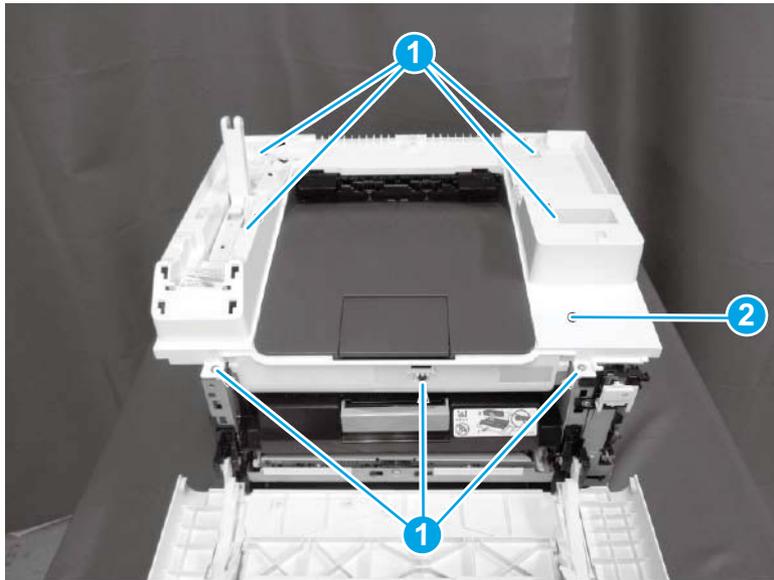


#### Step 16: Remove the top cover (M153-M154 and M253-M254)

 **NOTE:** This step is for the M153-M154 and M253-M254 printers. For the M178-M181 and M278-M281 printers, skip this step and go to [Step 17: Remove the duplex drive assembly \(duplex models\) on page 603](#).


1. On the left side of the printer, on the formatter, disconnect one flat cable (callout 1).

**Figure 1-885** Disconnect one connector

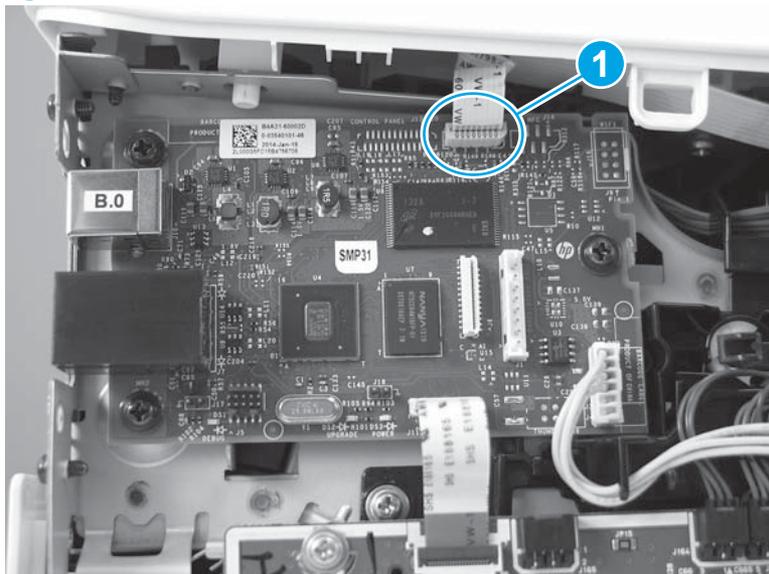


2. **Duplex models only:** Remove one screw (callout 1), and then release the grounding cable. Remove one M4 tapping screw (callout 2), and then pull the guide (callout 3) toward the front of the printer to remove it.

Figure 1-886 Remove two screws and the guide

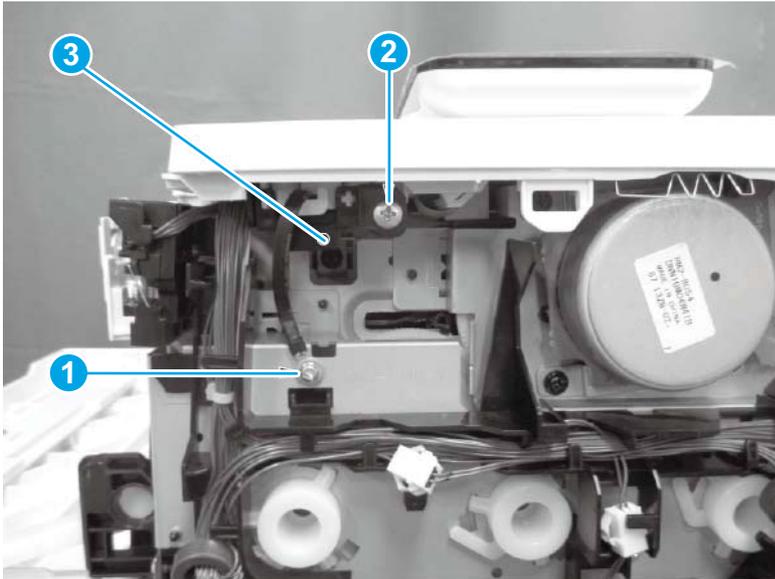

3. Remove two screws (callout 1), and then release one tab (callout 2).

Figure 1-887 Remove two screws

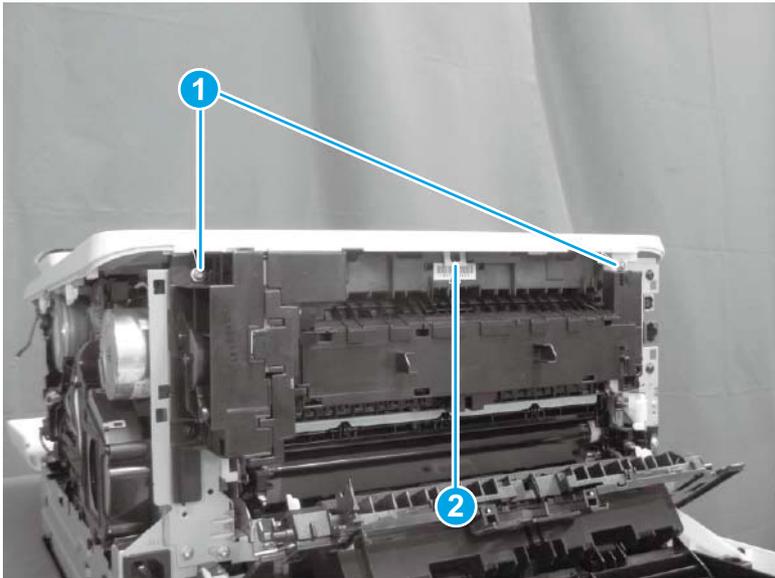


4. Remove three screws (callout 1), and then remove the top cover (callout 2).

---

 **NOTE:** Do not touch the parts around the main motor when removing the top cover

---

**Figure 1-888** Remove three screws and the top cover

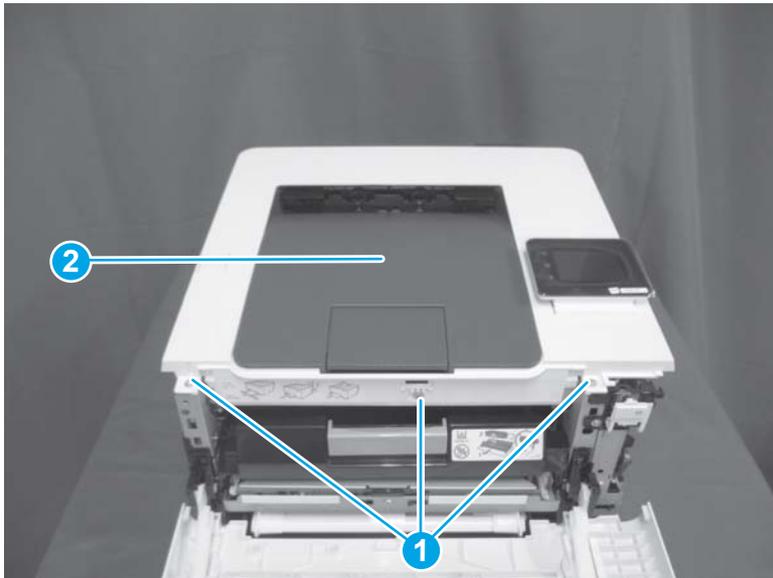

#### Step 17: Remove the duplex drive assembly (duplex models)


---

 **NOTE:** This step is for duplex printers. For simplex printers, skip this step and go to [Step 18: Remove the fuser on page 605](#).

---


1. Use a flat-blade screwdriver to release one tab (callout 1), and then remove the cover (callout 2).

**Figure 1-889** Remove the cover

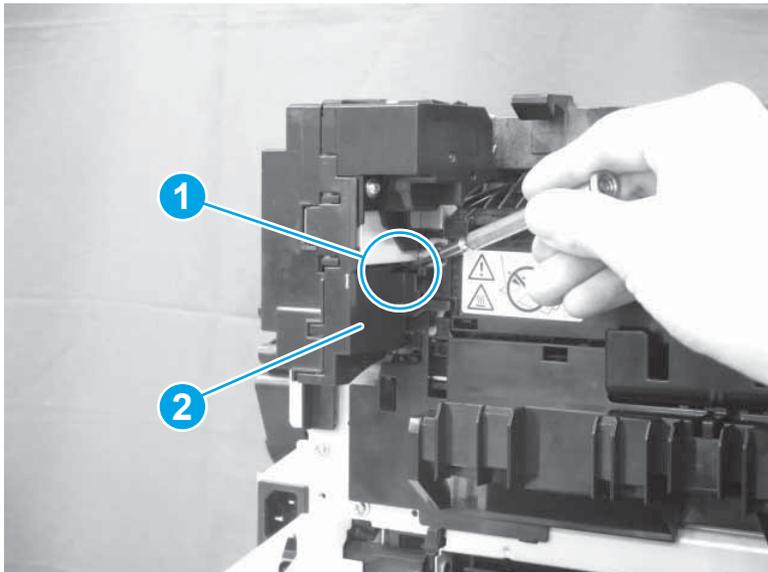


2. Remove two black screws (callout 1).

Figure 1-890 Remove two screws

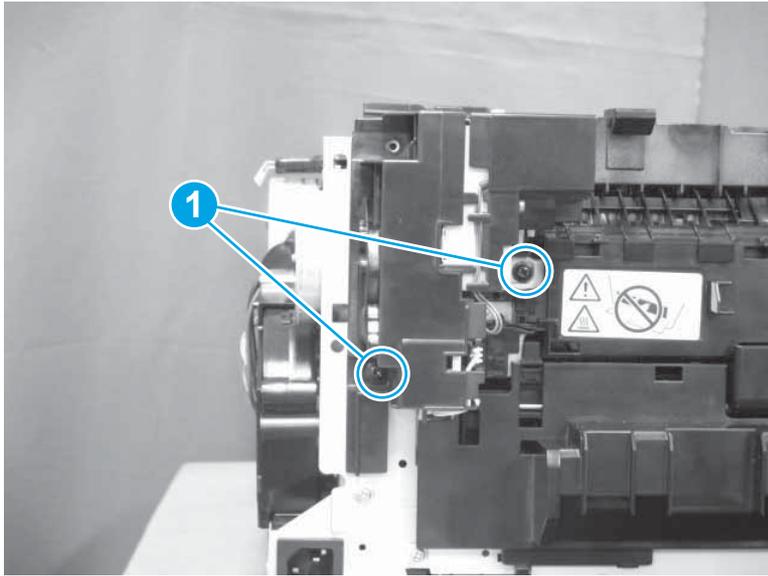

3. Disconnect two connectors (callout 1). Pulling the connectors away from the drive assembly first might make disconnecting them easier.

Figure 1-891 Disconnect two connectors

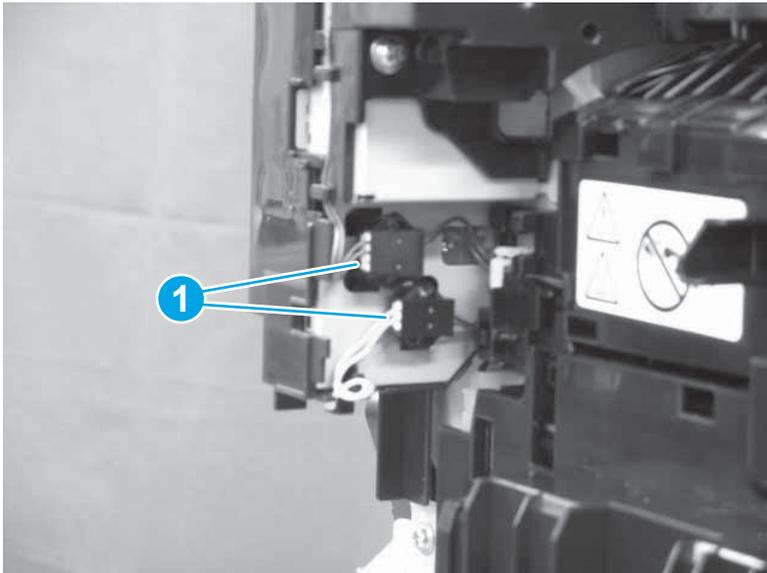


4. On the right side of the printer, just above the fuser motor, release one tab (callout 1), and then pull the duplexing drive assembly away from the chassis in the direction indicated below.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-892** Remove the duplex drive assembly

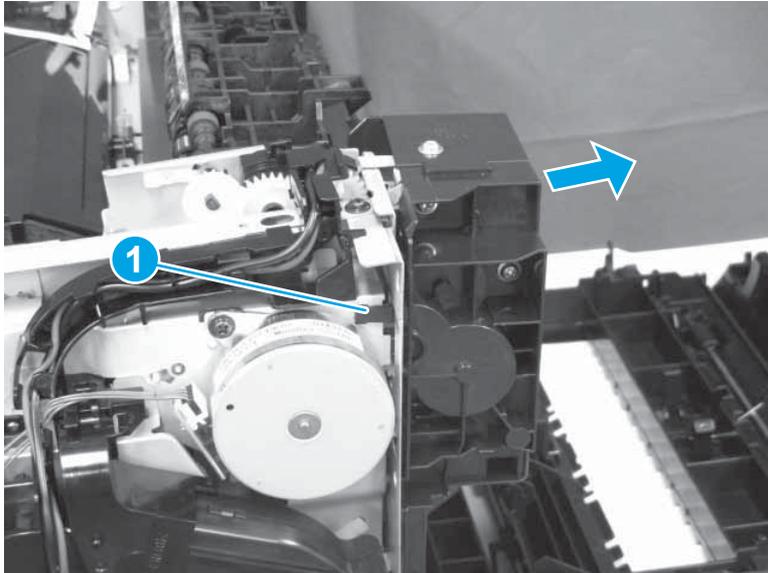

#### Step 18: Remove the fuser


1. On the right side of the printer, release the low-voltage power supply cable (callout 1) and unroute it from the cable guide (callout 2).

---

 **Reinstallation tip:** Loosening the screws that hold the LVPS in place, so that it can be pulled away from the chassis slightly, will help with disconnecting the cable from the LVPS.

---


**Figure 1-893** Release the LVPS cable

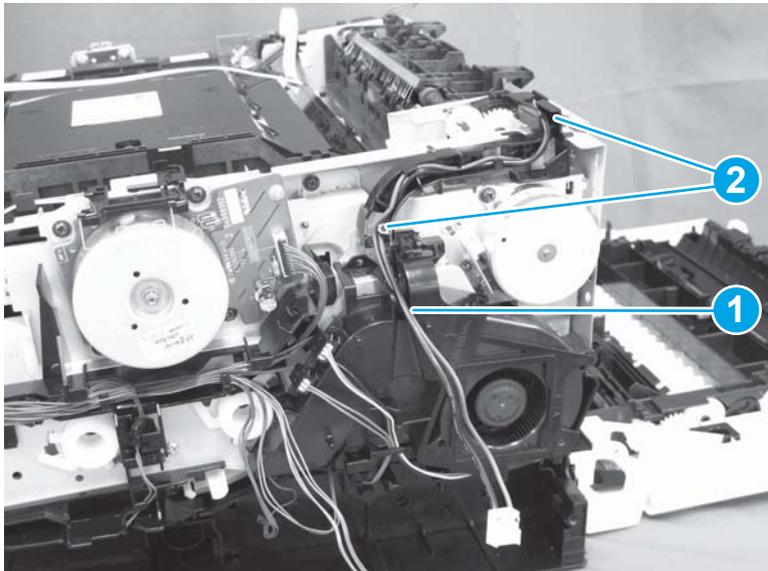

2. On the left side of the printer, disconnect five connectors (callout 1) on the engine controller unit.


 **TIP:** Disconnect the flat cable (callout 2) to allow easier access to the cables.

**Figure 1-894** Disconnect five connectors

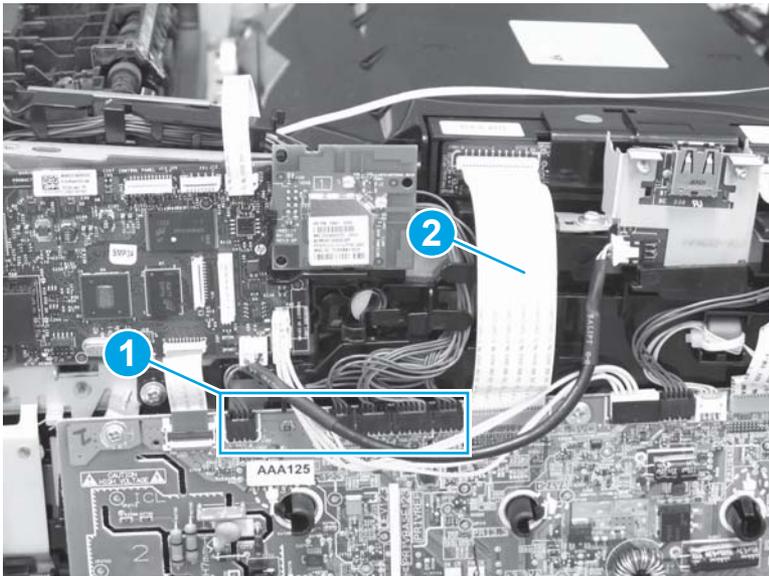

3. Release the engine controller unit cables (callout 1) from the cable guides (callout 2).


**Figure 1-895** Release the cables

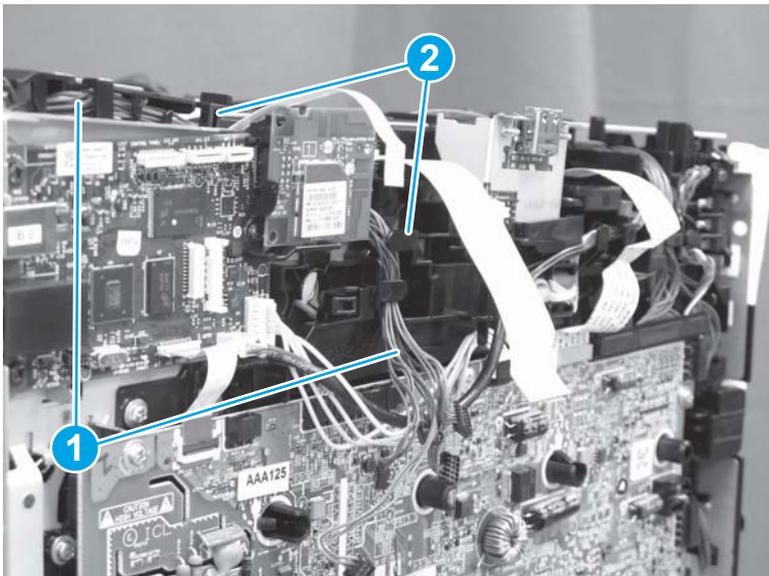

4. Remove four screws (callout 1), and then pull the fuser away from the chassis.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-896** Remove four screws and the fuser

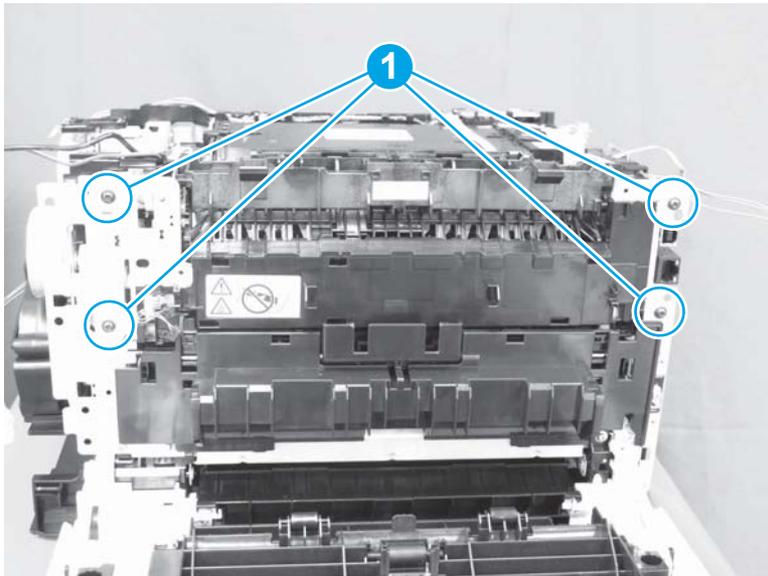

### Step 19: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Main motor

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and rear doors](#)
- [Step 3: Remove the right cover \(M153-M154 and M253-M254\)](#)
- [Step 4: Remove the right cover \(M178-M181 and M278-M281\)](#)
- [Step 5: Remove the main motor](#)
- [Step 6: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the main motor.

---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.

 **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.

---

- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Main motor part number	
RM2-8054-000CN	Main motor assembly

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Make sure that the printer initializes to a **Ready** state.

Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-897 Remove the cassette tray



### Step 2: Open the front and rear doors


1. Open the front door.

Figure 1-898 Open the front door




2. **Simplex models only:** Open the rear door.

**Figure 1-899** Open the rear door

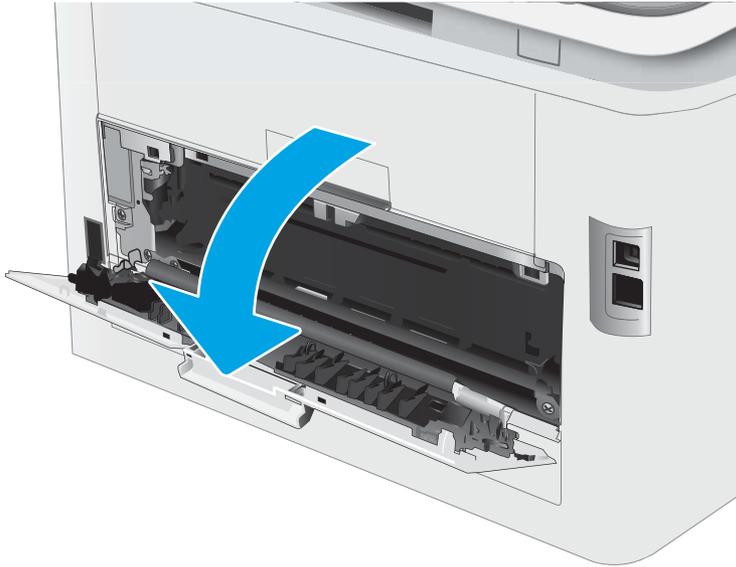

3. **Duplex models only:** Open the duplexer door.

**Figure 1-900** Open the duplexer door

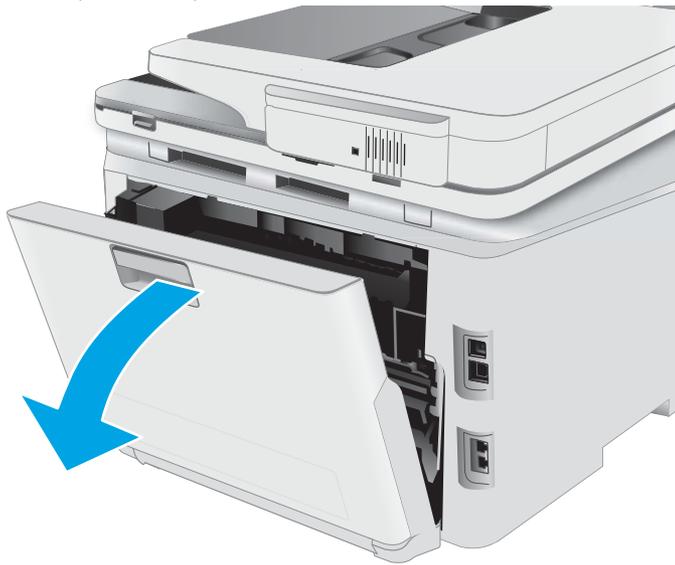


### Step 3: Remove the right cover (M153-M154 and M253-M254)

 **NOTE:** This step is for the M153-M154 and M253-M254 printers. For the M178-M181 and M278-M281 printers, skip this step and go to [Step 4: Remove the right cover \(M178-M181 and M278-M281\) on page 612.](#)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-901 Tab locations

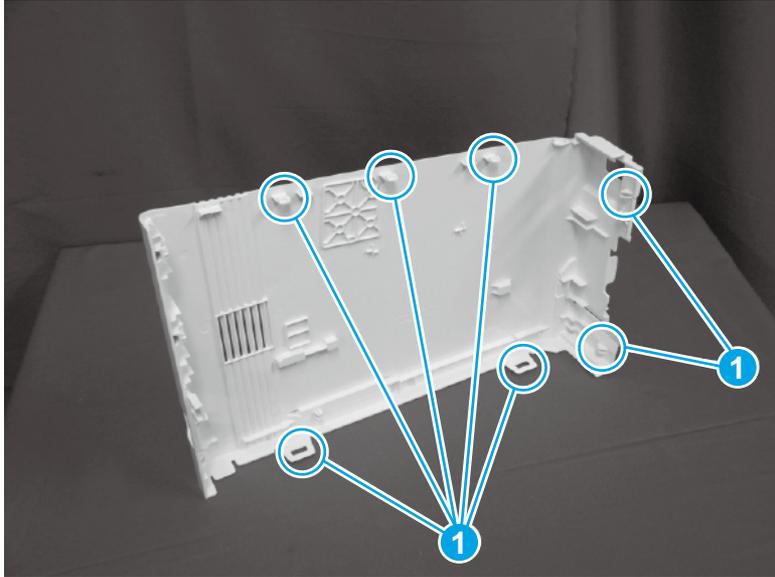


2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

---

Figure 1-902 Remove one screw and release tabs

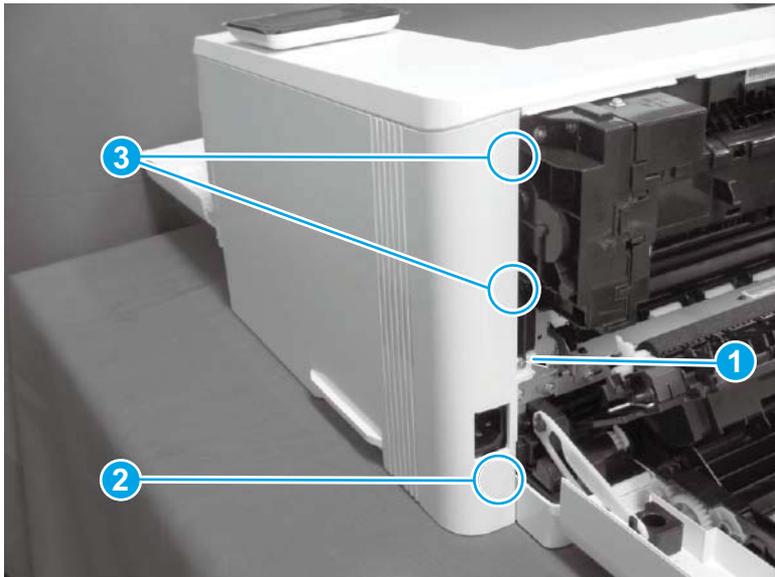

3. Release seven tabs (callout 1) along the top, bottom, and front of the cover. Pull the cover (callout 2) away from the printer to remove it.

---


 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-903** Remove the right cover

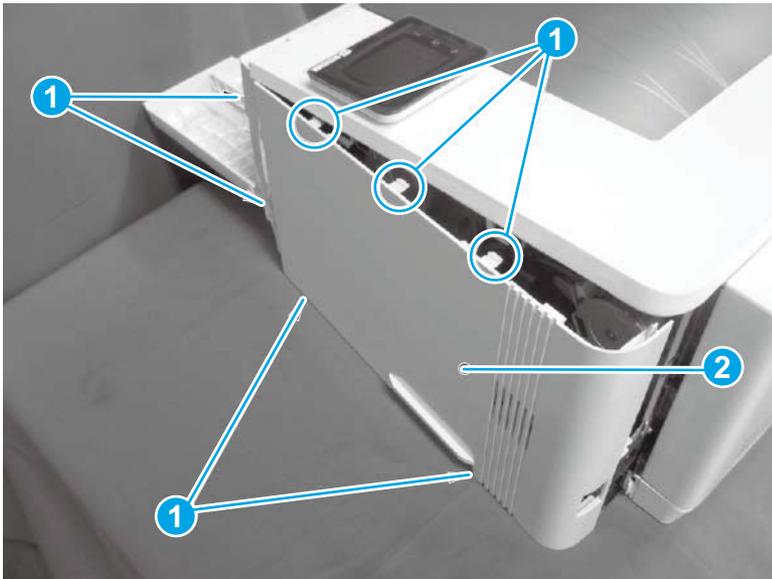

#### Step 4: Remove the right cover (M178-M181 and M278-M281)


---

 **NOTE:** This step is for the M178-M181 and M278-M281 printers. For the M153-M154 and M253-M254 printers, skip this step and go to [Step 5: Remove the main motor on page 614](#).

---

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-904 Tab locations

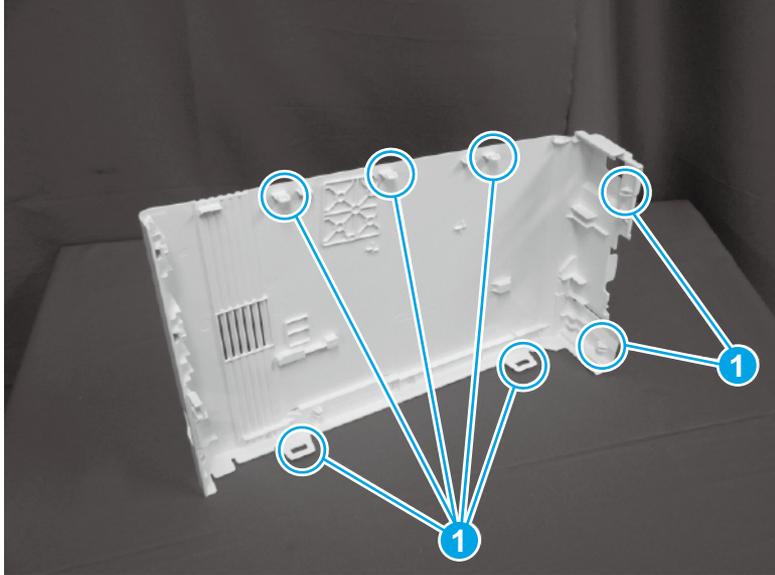


2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

---

Figure 1-905 Remove one screw and release tabs

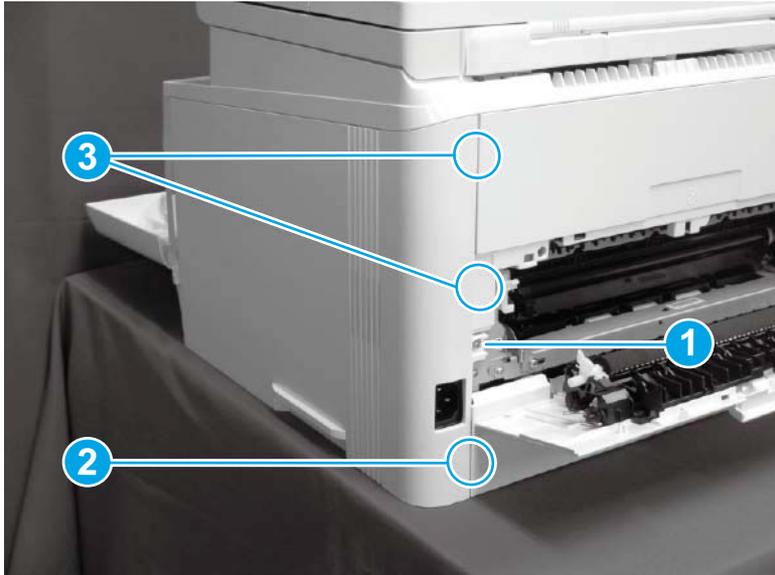

3. Release seven tabs (callout 1) along the top, bottom, and front of the cover. Pull the cover (callout 2) away from the printer to remove it.

---


 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-906** Remove the right cover

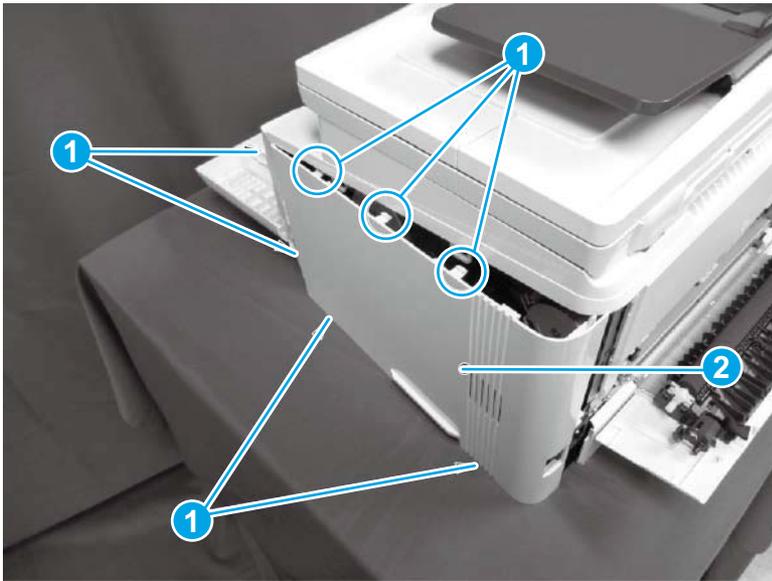

#### Step 5: Remove the main motor


- ▲ On the right side of the printer, disconnect one connector (callout 1), remove four black screws (callout 2), and then pull the main motor (callout 3) away from the chassis.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-907 Remove the main motor

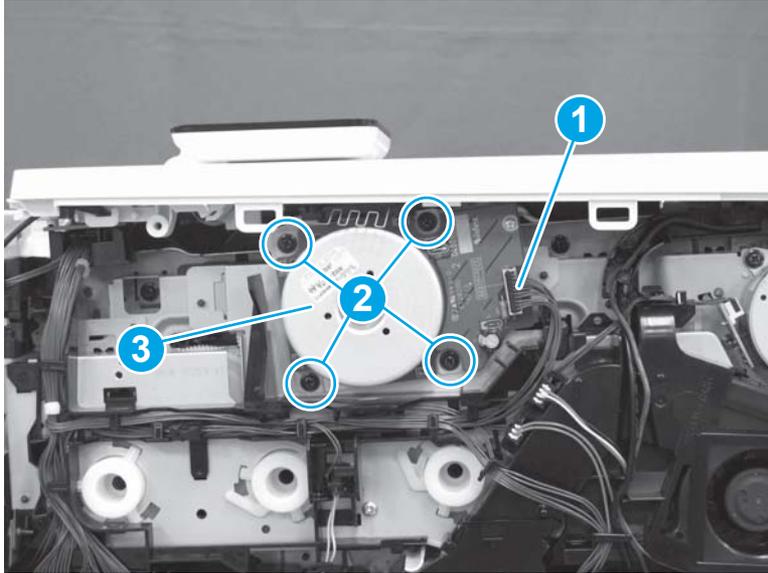

### Step 6: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Fuser motor

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and rear doors](#)
- [Step 3: Remove the right cover \(M153-M154 and M253-M254\)](#)
- [Step 4: Remove the right cover \(M178-M181 and M278-M281\)](#)
- [Step 5: Remove the fuser motor](#)
- [Step 6: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the fuser motor.

---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.

 **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.

---

- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Fuser motor part numbers	
RM2-7409-000CN	Fixing motor assembly (M153-M154, M178-M181)
RK2-9471-000CN	Stepping motor (M253-M254, M278-M281)

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


Make sure that the printer initializes to a **Ready** state.

Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-908 Remove the cassette tray

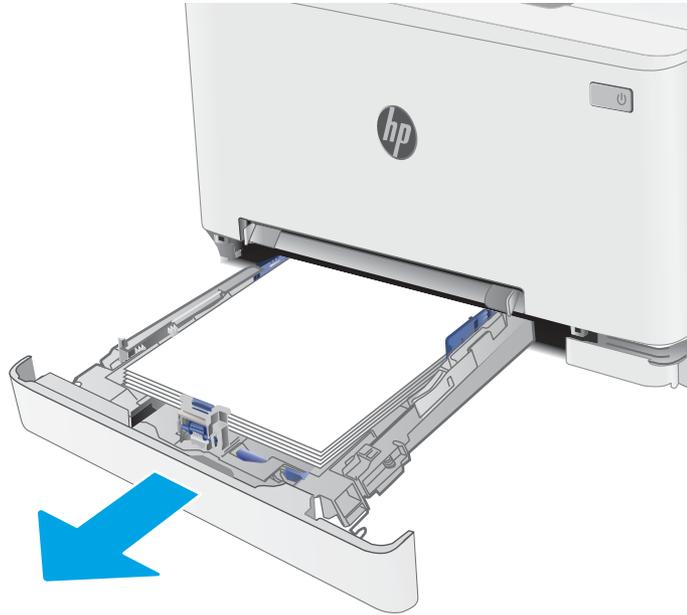

### Step 2: Open the front and rear doors


1. Open the front door.

Figure 1-909 Open the front door




2. **Simplex models only:** Open the rear door.

**Figure 1-910** Open the rear door

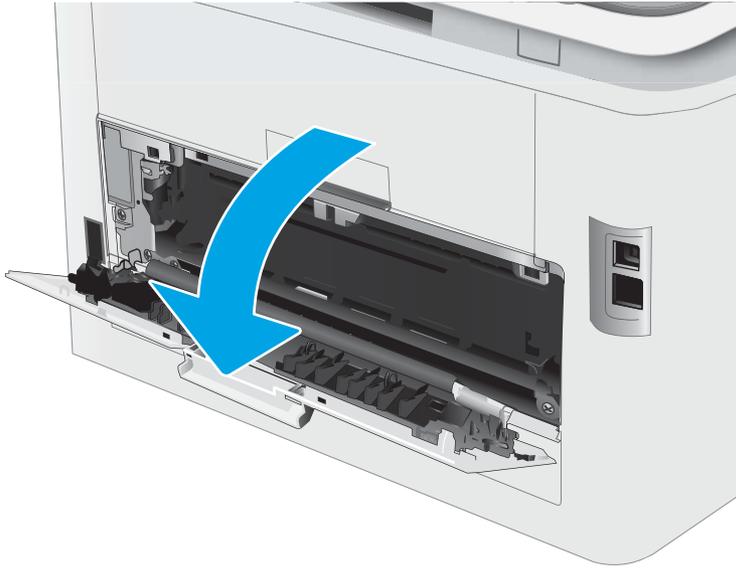

3. **Duplex models only:** Open the duplexer door.

**Figure 1-911** Open the duplexer door

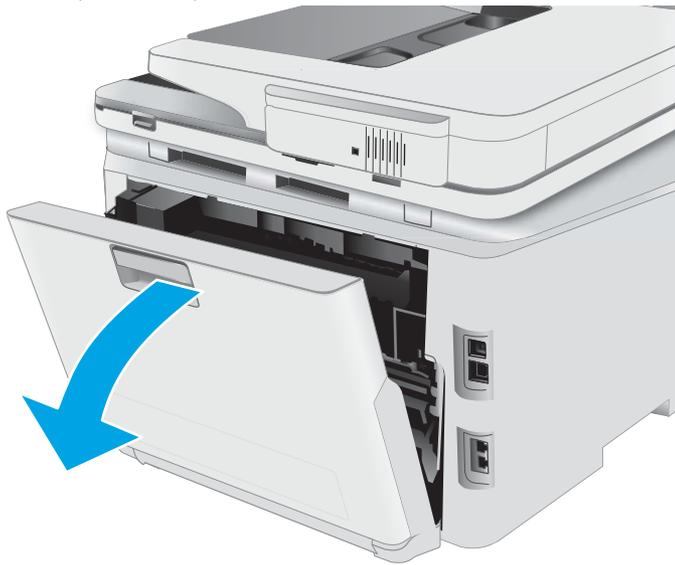


### Step 3: Remove the right cover (M153-M154 and M253-M254)

 **NOTE:** This step is for the M153-M154 and M253-M254 printers. For the M178-M181 and M278-M281 printers, skip this step and go to [Step 4: Remove the right cover \(M178-M181 and M278-M281\) on page 620.](#)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-912 Tab locations

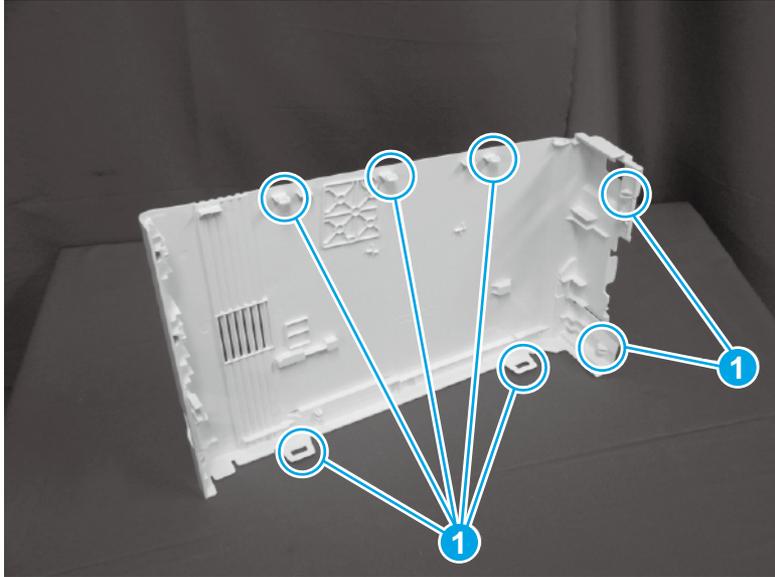


2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

---

Figure 1-913 Remove one screw and release tabs

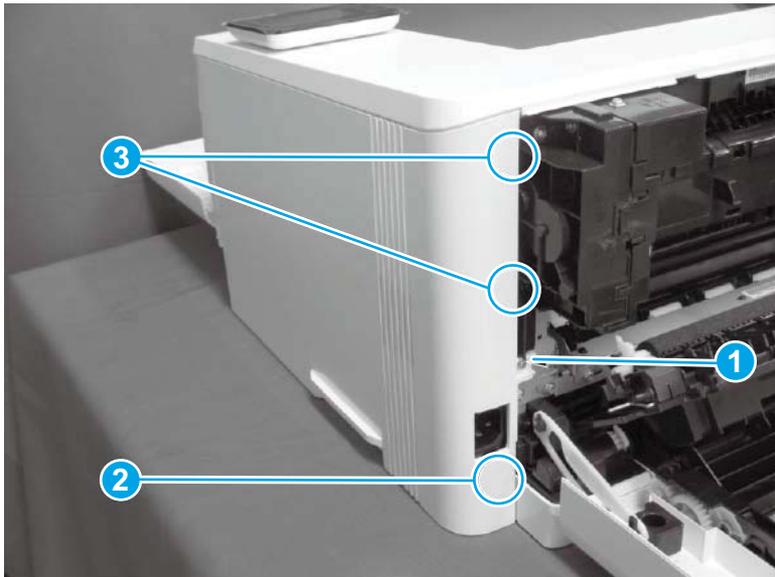

3. Release seven tabs (callout 1) along the top, bottom, and front of the cover. Pull the cover (callout 2) away from the printer to remove it.

---


 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-914** Remove the right cover

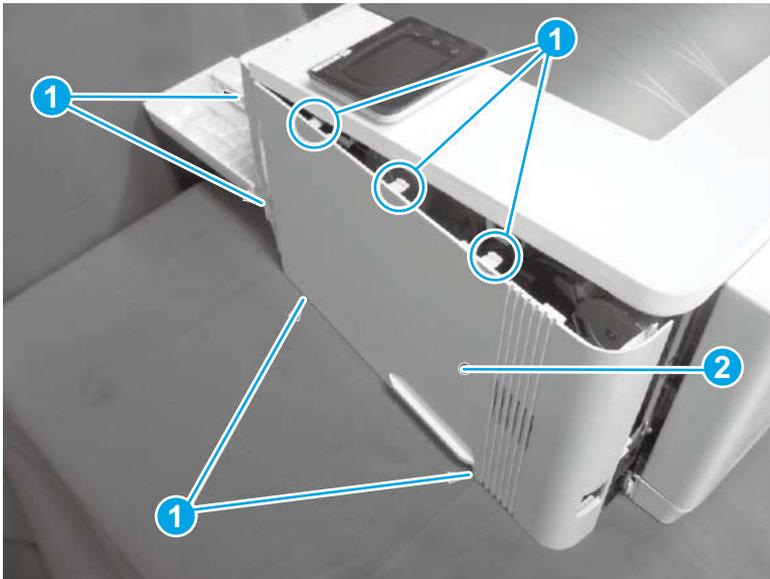

#### Step 4: Remove the right cover (M178-M181 and M278-M281)


---

 **NOTE:** This step is for the M178-M181 and M278-M281 printers. For the M153-M154 and M253-M254 printers, skip this step and go to [Step 5: Remove the fuser motor on page 622](#).

---

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-915 Tab locations

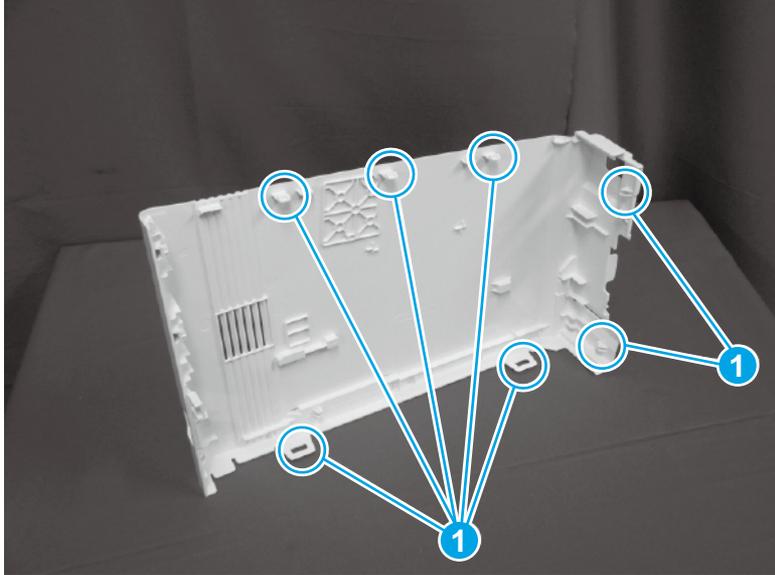


2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

---

Figure 1-916 Remove one screw and release tabs

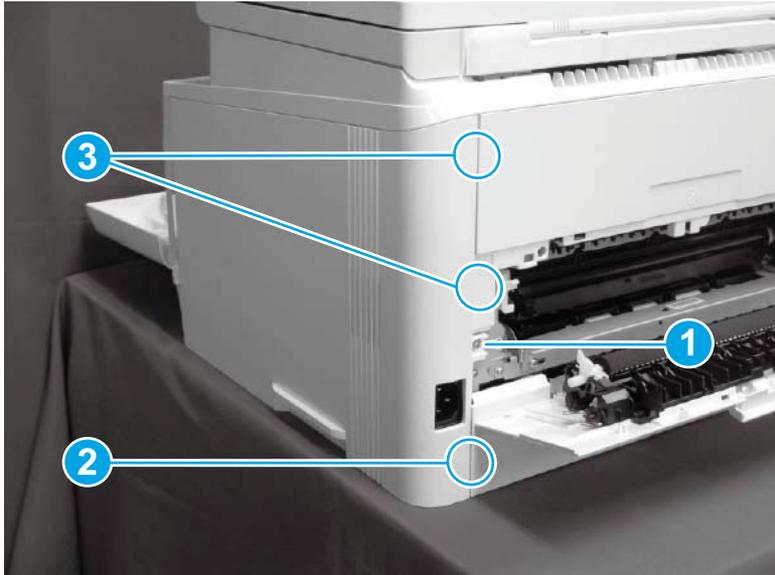

3. Release seven tabs (callout 1) along the top, bottom, and front of the cover. Pull the cover (callout 2) away from the printer to remove it.

---


 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-917** Remove the right cover

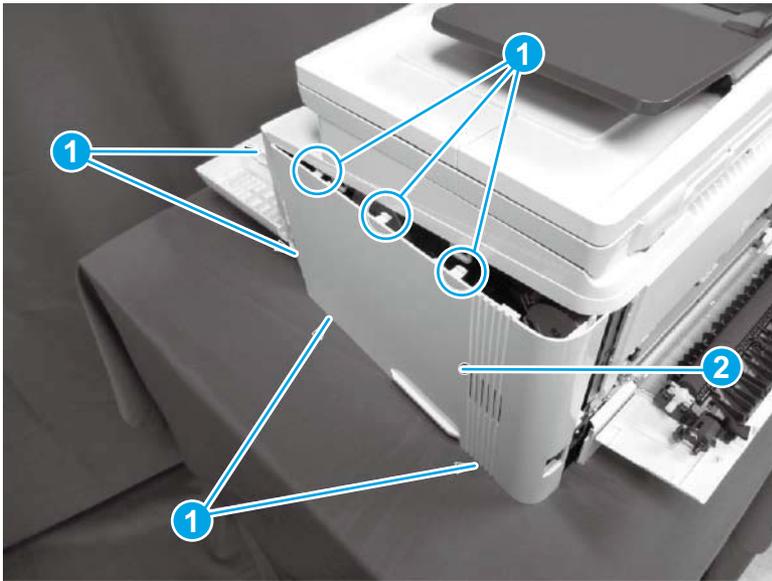

#### Step 5: Remove the fuser motor


- ▲ On the right side of the printer, disconnect one connector (callout 1), remove two black screws (callout 2), and then pull the fuser motor (callout 3) away from the chassis.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-918 Remove the fuser motor

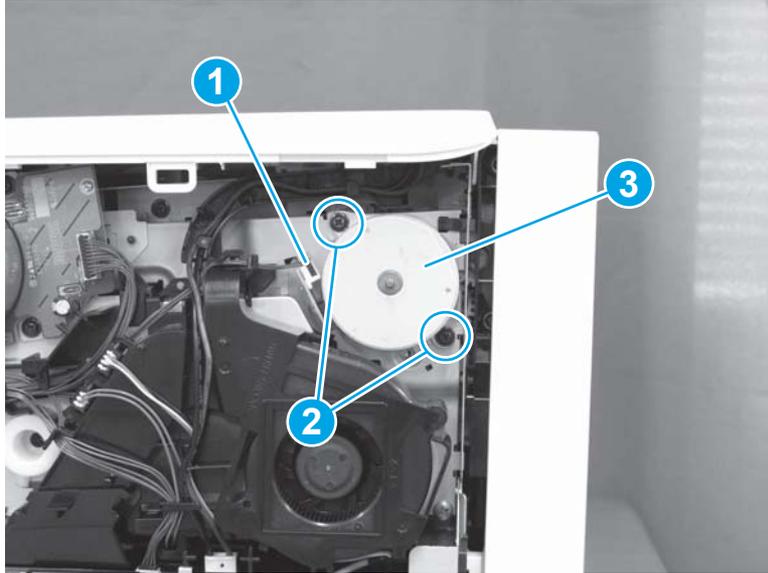

### Step 6: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Pickup motor

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and rear doors](#)
- [Step 3: Remove the right cover \(M153-M154 and M253-M254\)](#)
- [Step 4: Remove the right cover \(M178-M181 and M278-M281\)](#)
- [Step 5: Remove the low-voltage power supply \(LVPS\)](#)
- [Step 6: Remove the pickup motor](#)
- [Step 7: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the pickup motor.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### Pickup motor part numbers

---

RK2-9761-000CN	Stepping motor (M153-M153-M154, M178-M181)
RK2-9730-000CN	Stepping motor (M253-M254, M278-M281)

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

## Post service test


Make sure that the printer initializes to a **Ready** state.

Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-919 Remove the cassette tray

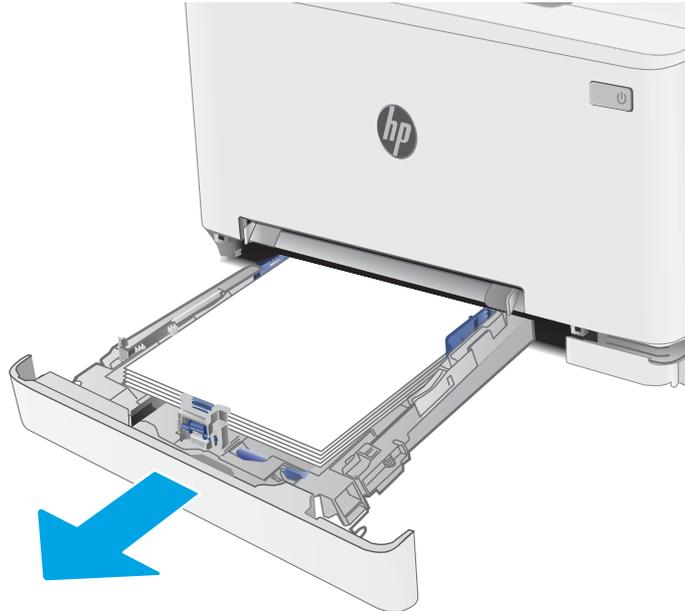

### Step 2: Open the front and rear doors


1. Open the front door.

Figure 1-920 Open the front door




2. **Simplex models only:** Open the rear door.

Figure 1-921 Open the rear door

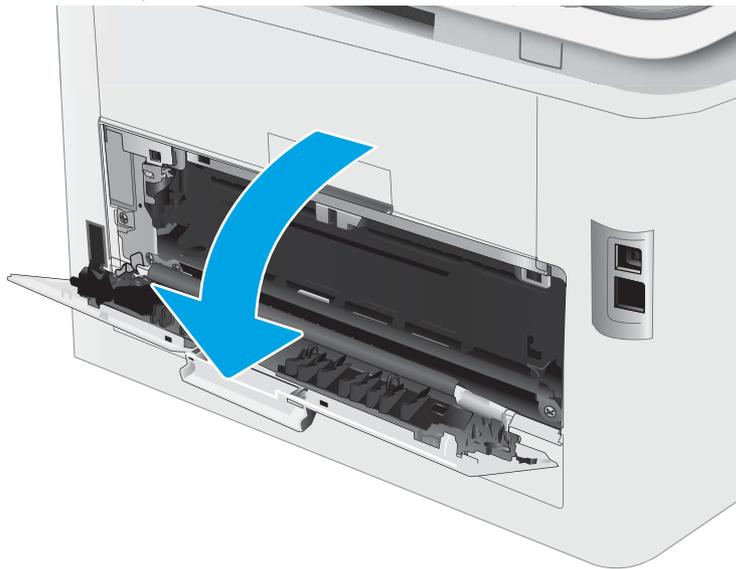

3. **Duplex models only:** Open the duplexer door.

Figure 1-922 Open the duplexer door

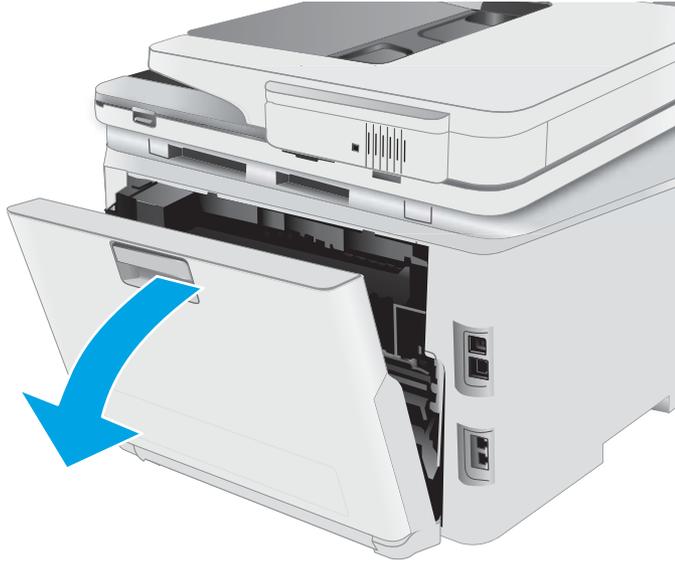


### Step 3: Remove the right cover (M153-M154 and M253-M254)

 **NOTE:** This step is for the M153-M154 and M253-M254 printers. For the M178-M181 and M278-M281 printers, skip this step and go to [Step 4: Remove the right cover \(M178-M181 and M278-M281\) on page 629.](#)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


Figure 1-923 Tab locations

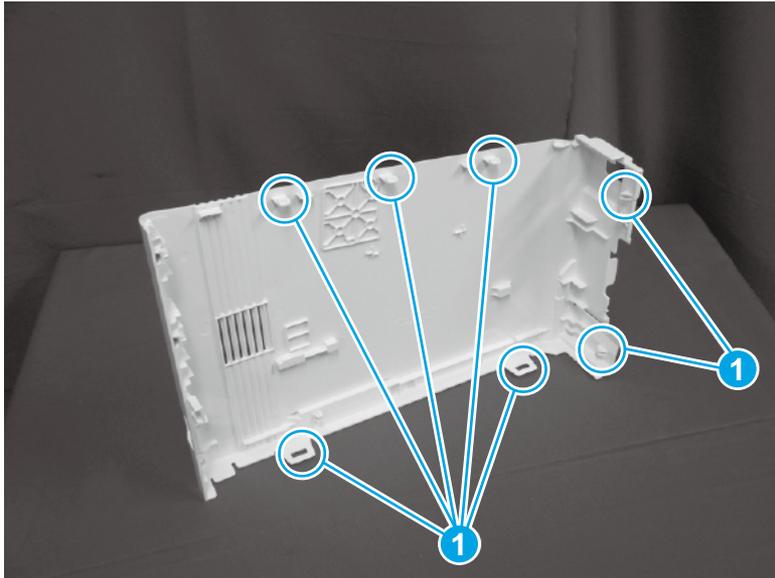

2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

**Figure 1-924** Remove one screw and release tabs

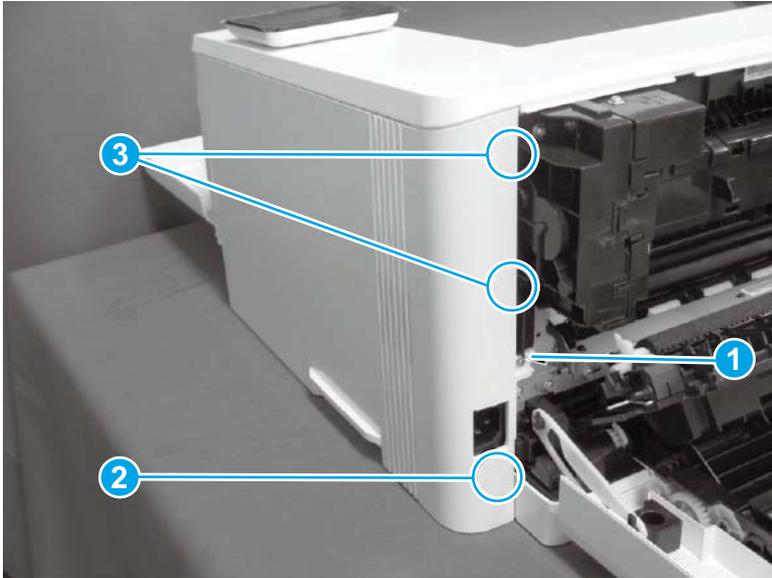


3. Release seven tabs (callout 1) along the top, bottom, and front of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-925** Remove the right cover

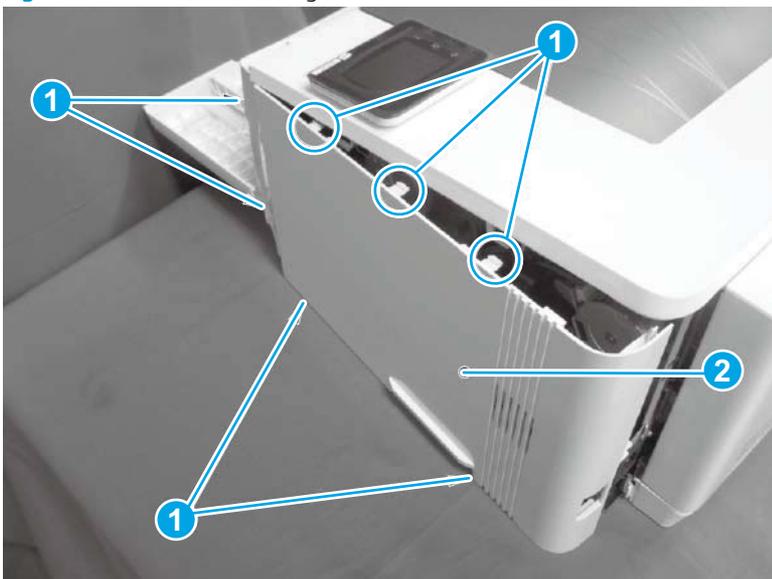


#### Step 4: Remove the right cover (M178-M181 and M278-M281)

 **NOTE:** This step is for the M178-M181 and M278-M281 printers. For the M153-M154 and M253-M254 printers, skip this step and go to [Step 5: Remove the low-voltage power supply \(LVPS\) on page 630](#).

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


Figure 1-926 Tab locations

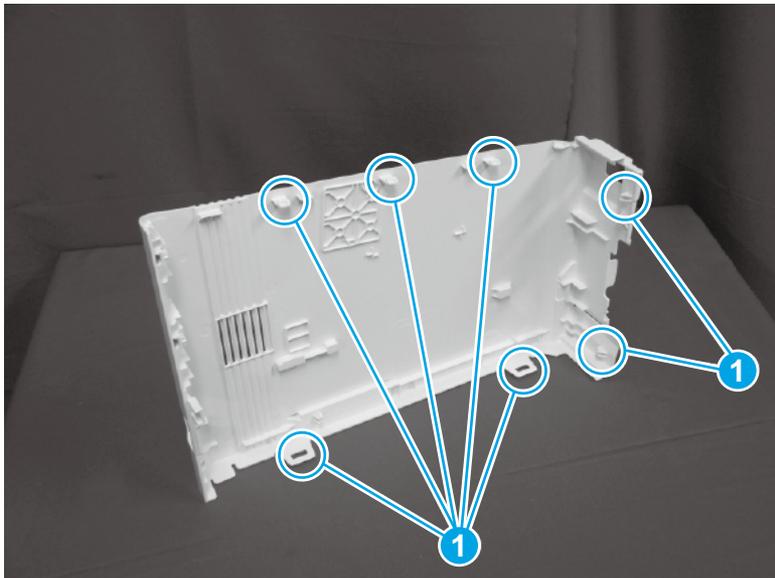

2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

Figure 1-927 Remove one screw and release tabs

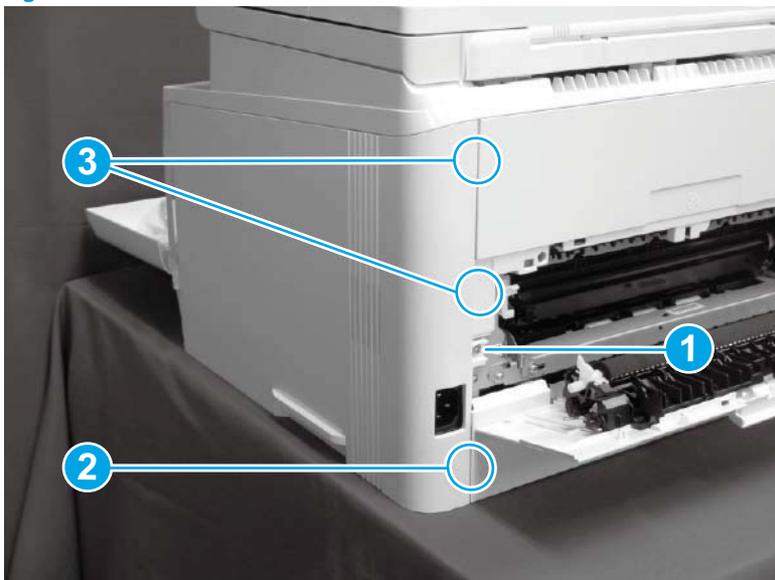


3. Release seven tabs (callout 1) along the top, bottom, and front of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-928** Remove the right cover

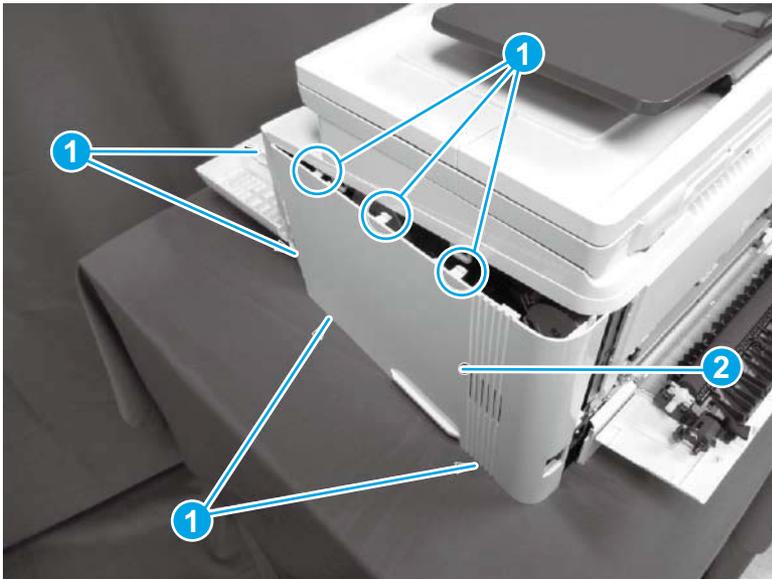

#### Step 5: Remove the low-voltage power supply (LVPS)


1. On the right side of the printer, use a small, flat-blade screwdriver to release one tab (callout 1) on the front of the fan duct cover.

**Figure 1-929** Release one tab

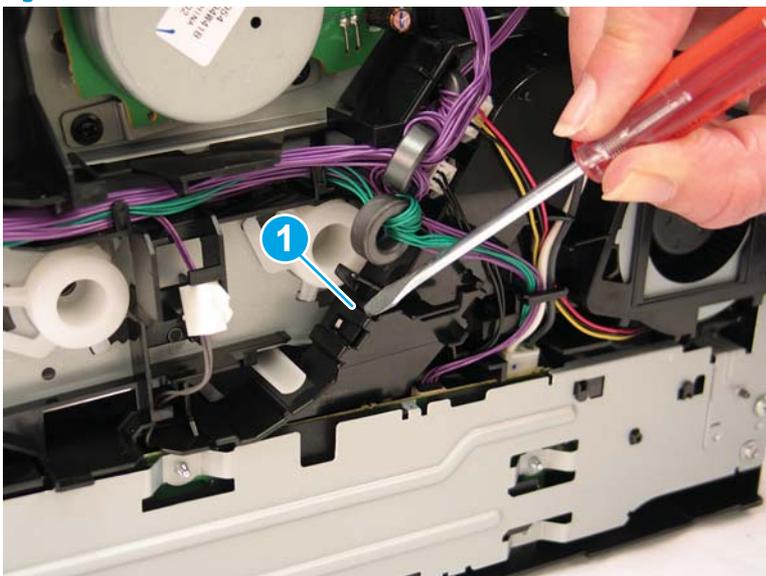


2. Release one tab (callout 1) on the rear of the fan duct cover, and then remove the fan duct cover (callout 2).

Figure 1-930 Remove the duct cover

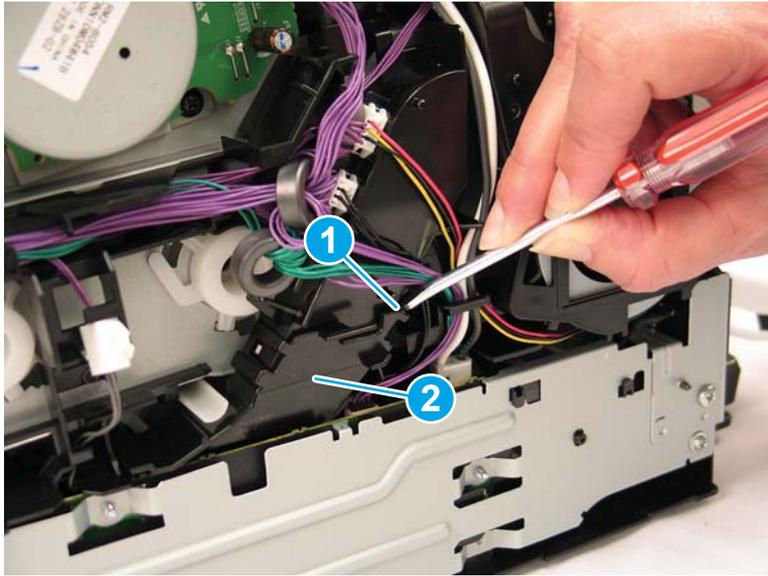


3. Remove one screw (callout 1), and then remove an M4 tapping screw (callout 2).

Figure 1-931 Remove two screws

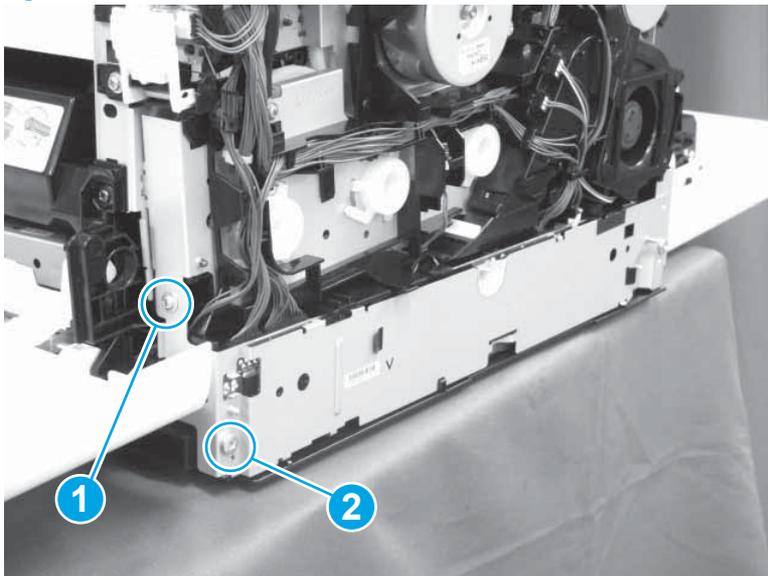

4. At the back of the printer, remove one silver screw (callout 1), one black screw (callout 2), and one M4 tapping screw (callout 3).

Figure 1-932 Remove three screws

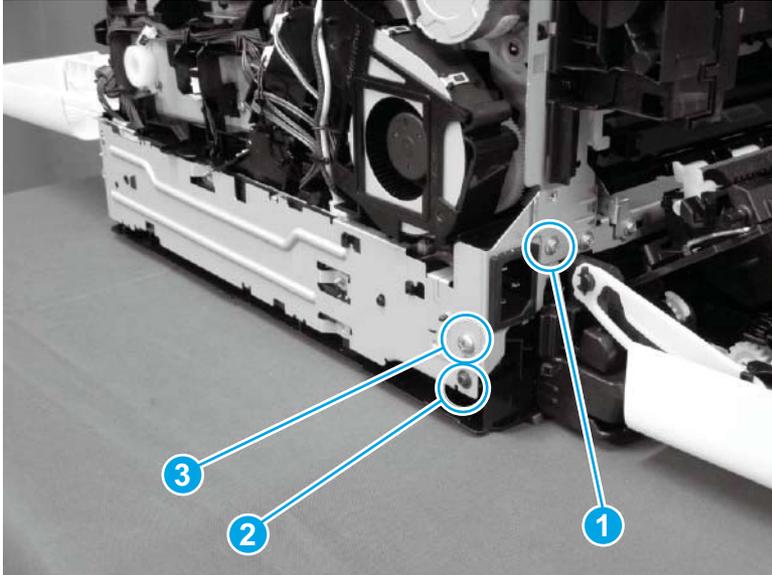


5. Disconnect four connectors (callout 1), and then pull the LVPS (callout 2) away from the chassis.

 **NOTE:** The connector to the far right in the graphic below has a clasp lock that needs to be pressed against the connector body to release it from the LVPS.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-933 Disconnect four connectors and remove the LVPS

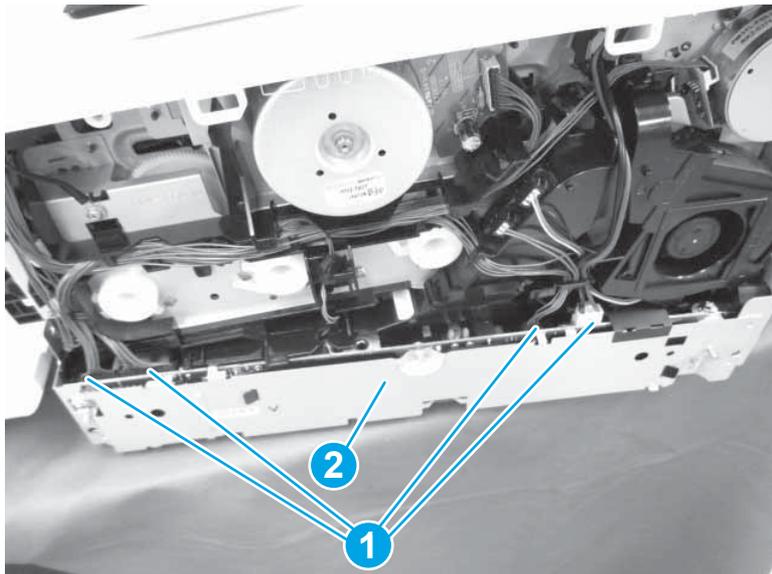

### Step 6: Remove the pickup motor


- ▲ On the right side of the printer, disconnect one connector (callout 1), remove two screws (callout 2), and then pull the pickup motor (callout 3) away from the chassis to remove it.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-934** Remove the pickup motor

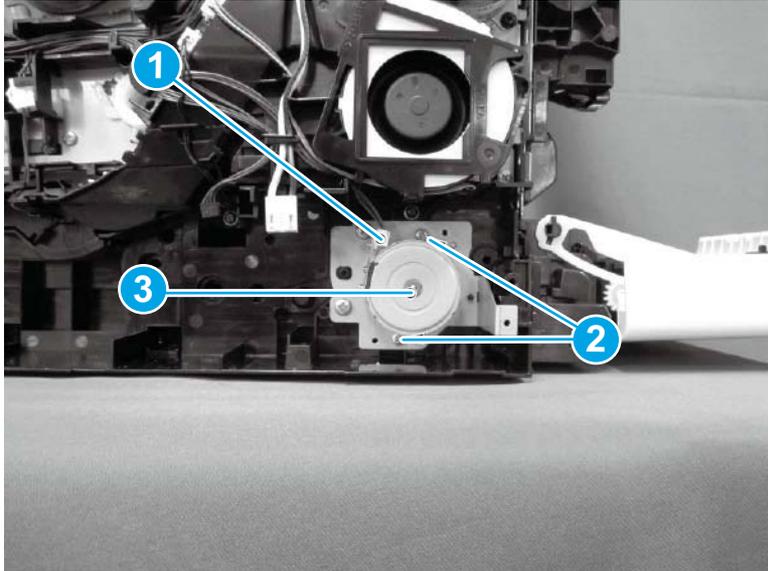

### Step 7: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Main fan (M153-M154 and M253-M254)

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and rear doors](#)
- [Step 3: Remove the right cover \(M153-M154 and M253-M254\)](#)
- [Step 4: Remove the low-voltage power supply](#)
- [Step 5: Remove the main fan \(M153-M154 and M253-M254\)](#)
- [Step 6: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the main fan for the M153-M154 and M253-M254 models.

---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- 
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- 
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Main fan part number	
RK2-6425-000CN	Fan

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


Make sure that the printer initializes to a **Ready** state.

Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-935 Remove the cassette tray

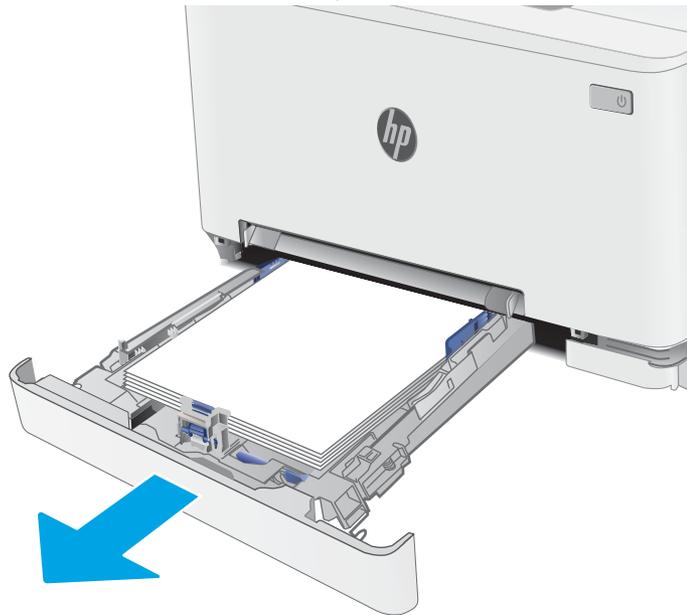

### Step 2: Open the front and rear doors


1. Open the front door.

Figure 1-936 Open the front door




2. **Simplex models only:** Open the rear door.

**Figure 1-937** Open the rear door

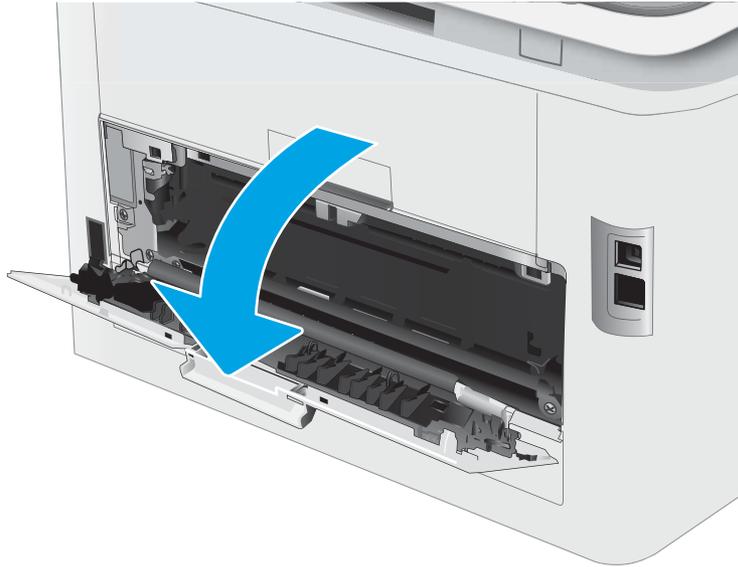

3. **Duplex models only:** Open the duplexer door.


**Figure 1-938** Open the duplexer door

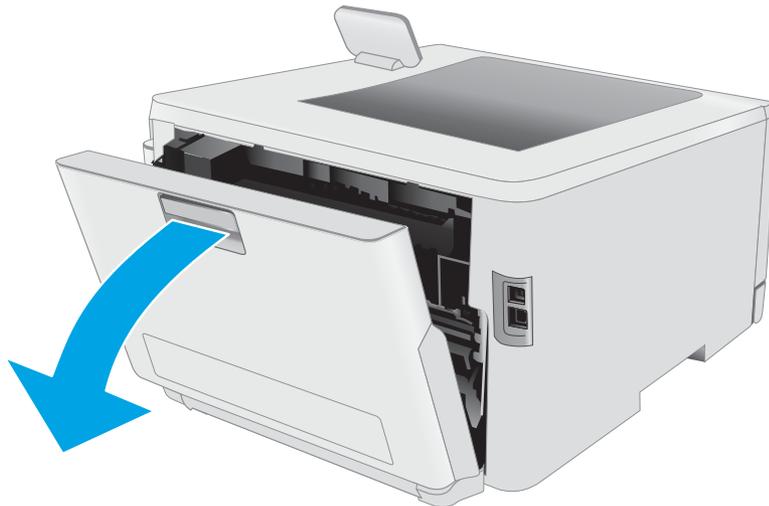

**Step 3: Remove the right cover (M153-M154 and M253-M254)**

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.

Figure 1-939 Tab locations

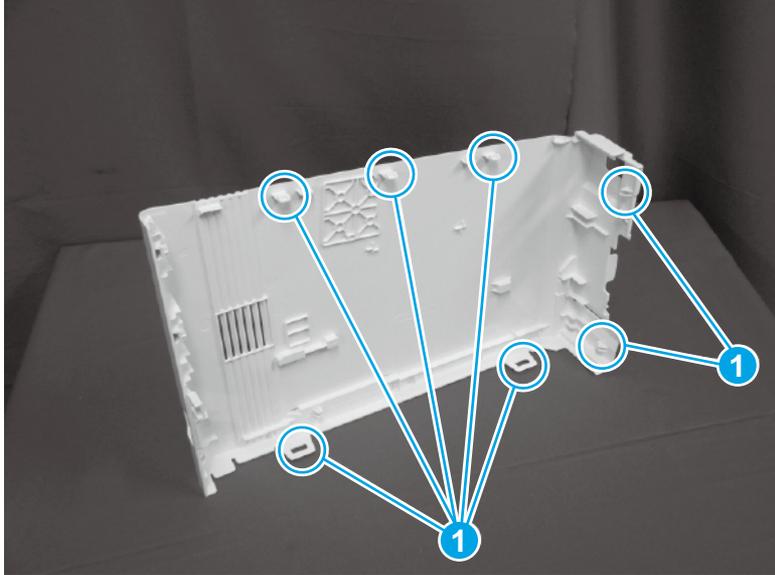


2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

---

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

---

Figure 1-940 Remove one screw and release tabs

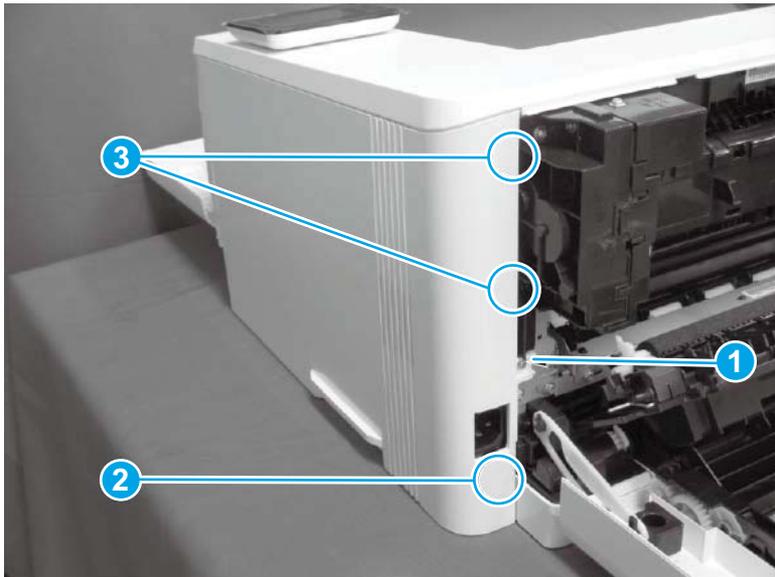


3. Release seven tabs (callout 1) along the top, bottom, and front of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-941** Remove the right cover

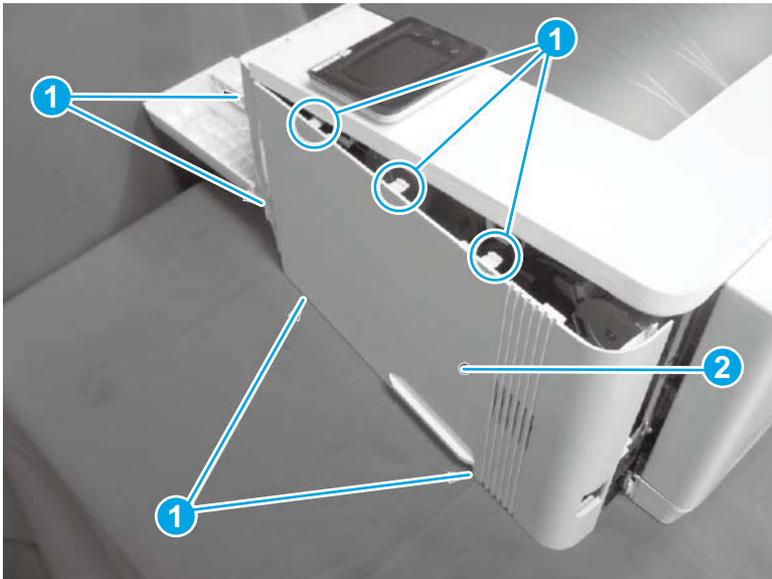

#### Step 4: Remove the low-voltage power supply


1. On the right side of the printer, use a small, flat-blade screwdriver to release one tab (callout 1) on the front of the fan duct cover.

**Figure 1-942** Release one tab

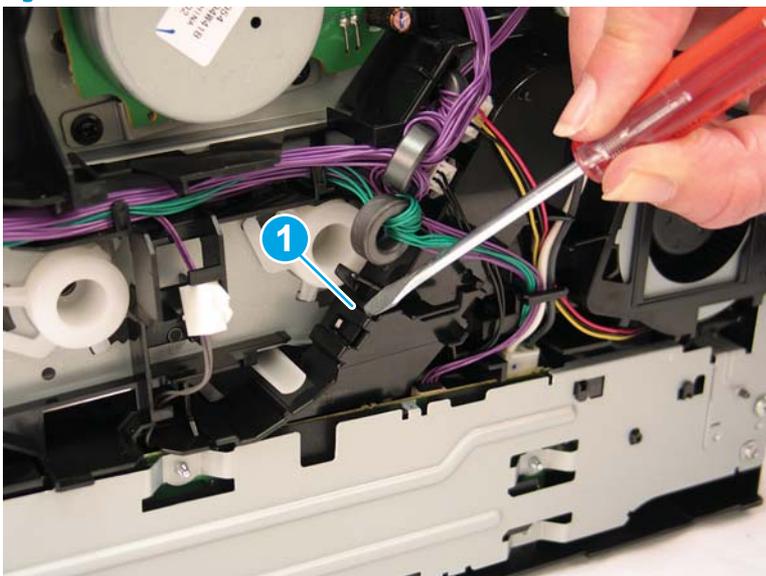


2. Release one tab (callout 1) on the rear of the fan duct cover, and then remove the fan duct cover (callout 2).

Figure 1-943 Remove the duct cover

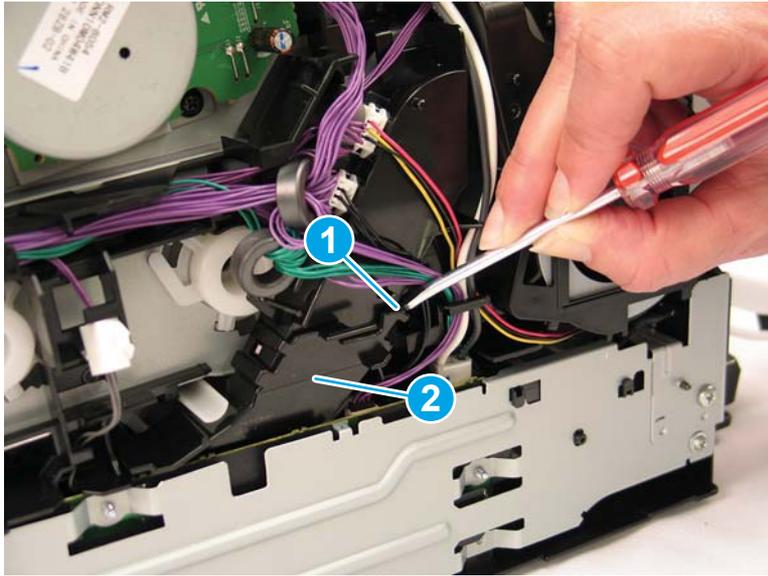


3. Remove one screw (callout 1), and then remove an M4 tapping screw (callout 2).

Figure 1-944 Remove two screws

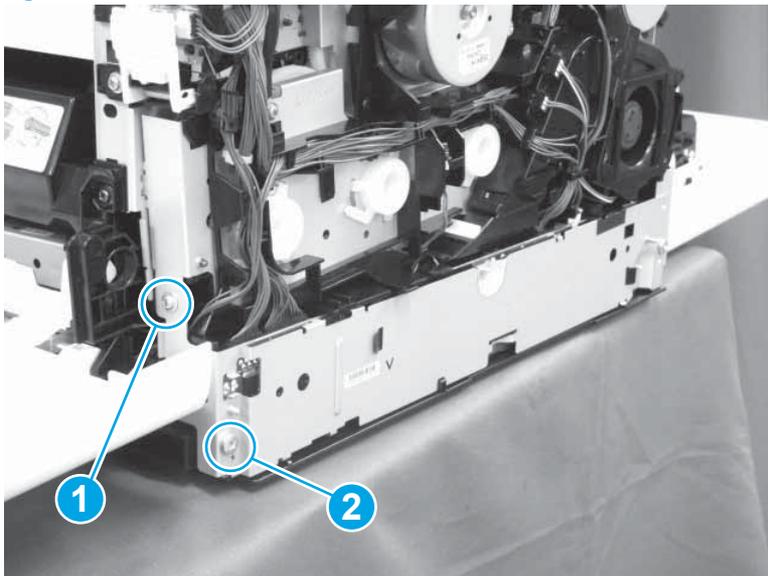

4. At the back of the printer, remove one silver screw (callout 1), one black screw (callout 2), and one M4 tapping screw (callout 3).

Figure 1-945 Remove three screws

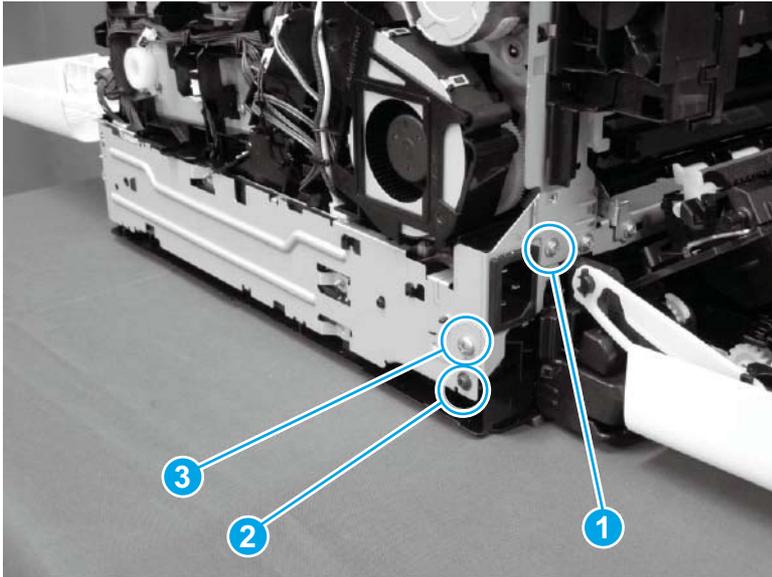


5. Disconnect four connectors (callout 1), and then pull the LVPS (callout 2) away from the chassis.

 **NOTE:** The connector to the far right in the graphic below has a clasp lock that needs to be pressed against the connector body to release it from the LVPS.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-946 Disconnect four connectors and remove the LVPS

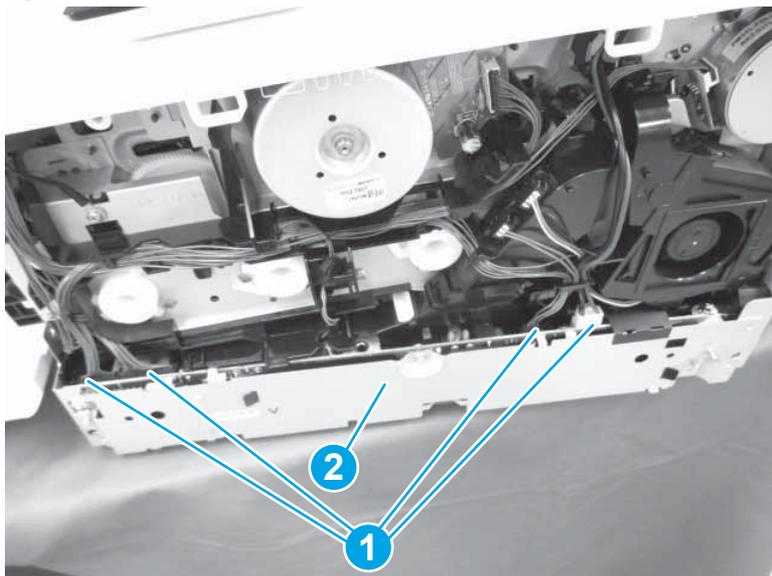

#### Step 5: Remove the main fan (M153-M154 and M253-M254)


1. On the right side of the printer, disconnect three connectors (callout 1), and then release the cables from the cable guides (callout 2).

Figure 1-947 Disconnect three connectors and release the cables

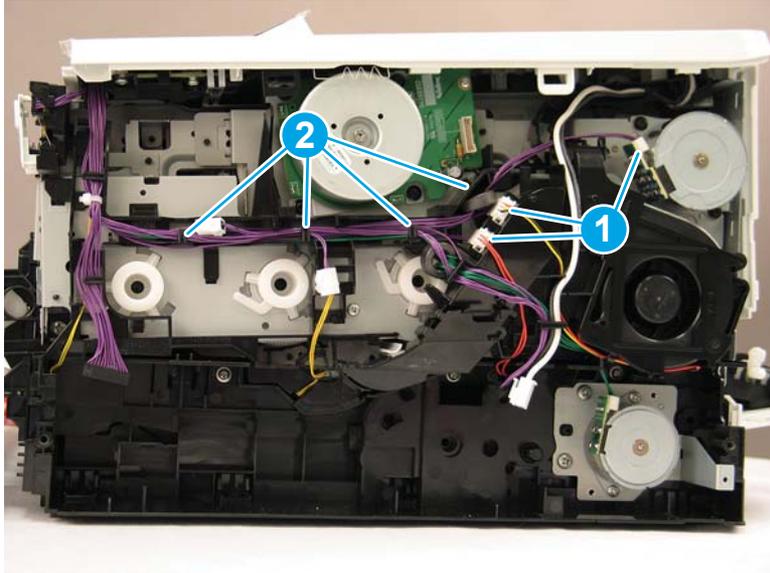

2. Release two tabs (callout 1), and then remove the cover (callout 2).


Figure 1-948 Remove the cover

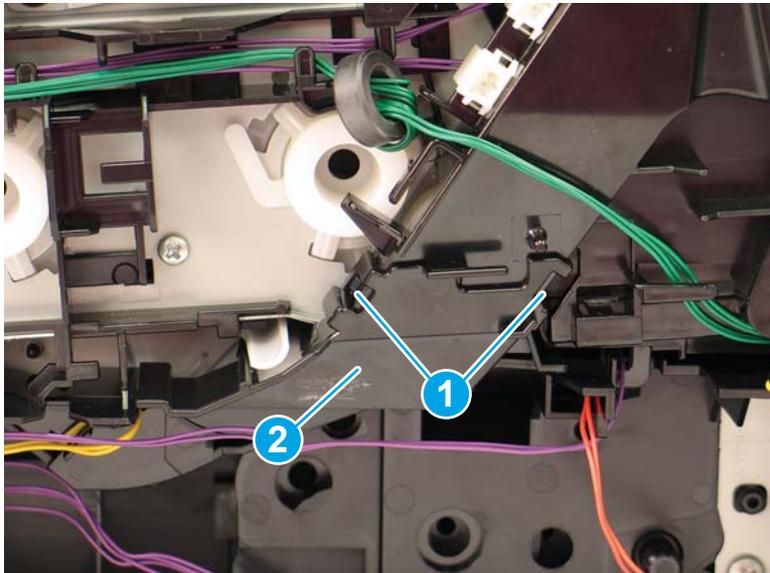

3. Release two tabs (callout 1) on the top, and then release one tab on the bottom (callout 2) to release the main fan and fan guide from the printer.

**⚠ CAUTION:** The main fan is still connected to the printer by two cables. Do not completely remove the main fan and fan guide.


**Figure 1-949** Release the main fan and fan guide

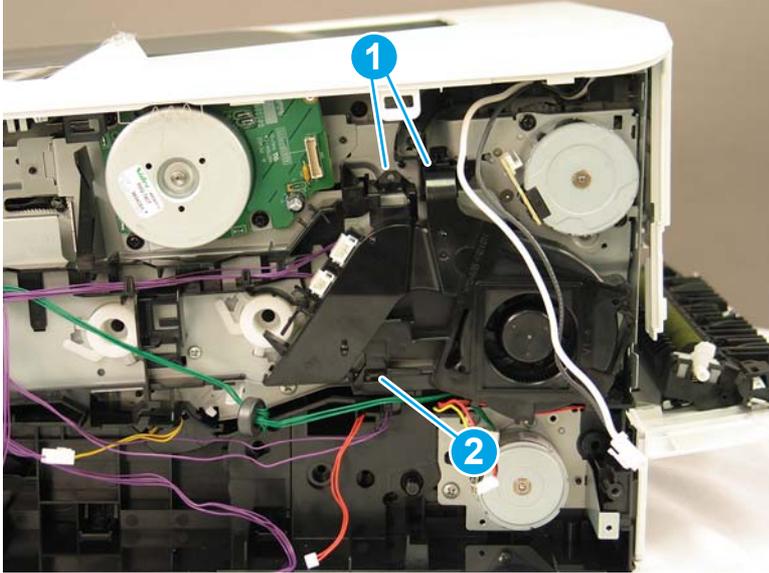

4. Disconnect two connectors (callout 1), remove the fan guide (callout 2) and the main fan (callout 3) together, and then remove the main fan from the fan guide.

**💡 Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-950** Remove the main fan

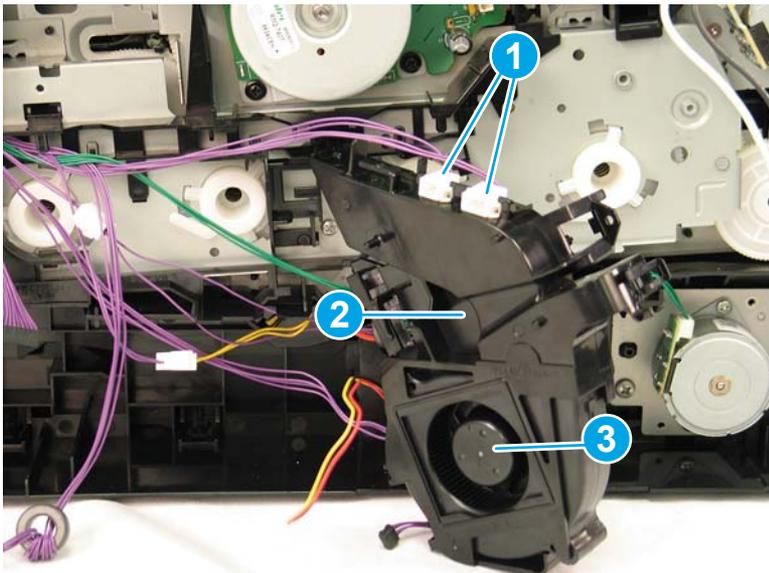

### Step 6: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Main fan (M178-M181 and M278-M281)

- [Introduction](#)
- [Step 1: Remove the cassette tray](#)
- [Step 2: Open the front and rear doors](#)
- [Step 3: Remove the right cover \(M178-M181 and M278-M281\)](#)
- [Step 4: Remove the left cover \(M178-M181 and M278-M281\)](#)
- [Step 5: Remove the rear cover \(simplex models\)](#)
- [Step 6: Remove the flatbed scanner assembly \(M180n\)](#)
- [Step 7: Remove the document feeder and scanner assembly \(M180nw and M181fw\)](#)
- [Step 8: Remove the control panel \(M178-M181\)](#)
- [Step 9: Remove the control panel \(M278-M281\)](#)
- [Step 10: Remove the document feeder and scanner assembly \(M278-M281\)](#)
- [Step 11: Remove the top cover \(M178-M181 and M278-M281\)](#)
- [Step 12: Remove the low-voltage power supply](#)
- [Step 13: Remove the main fan \(M178-M181 and M278-M281\)](#)
- [Step 14: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the main fan for the M178-M181 and M278-M281 models.

---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- 
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Main fan part number	
----------------------	--

---

RK2-6425-000CN
----------------

---

Fan
-----

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


Make sure that the printer initializes to a **Ready** state.

Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the cassette tray

- ▲ Using the handle on the face of the cassette tray, pull the tray completely out of the printer.

Figure 1-951 Remove the cassette tray

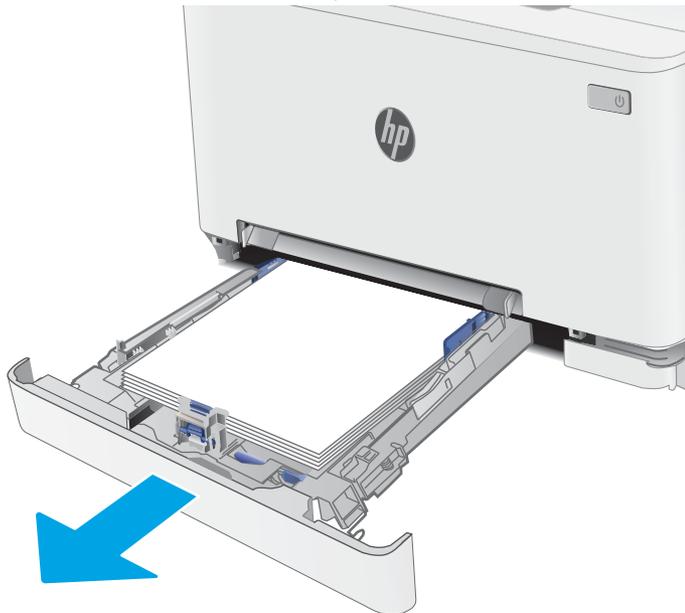

### Step 2: Open the front and rear doors


1. Open the front door.

Figure 1-952 Open the front door



2. **Simplex models only:** Open the rear door.

Figure 1-953 Open the rear door

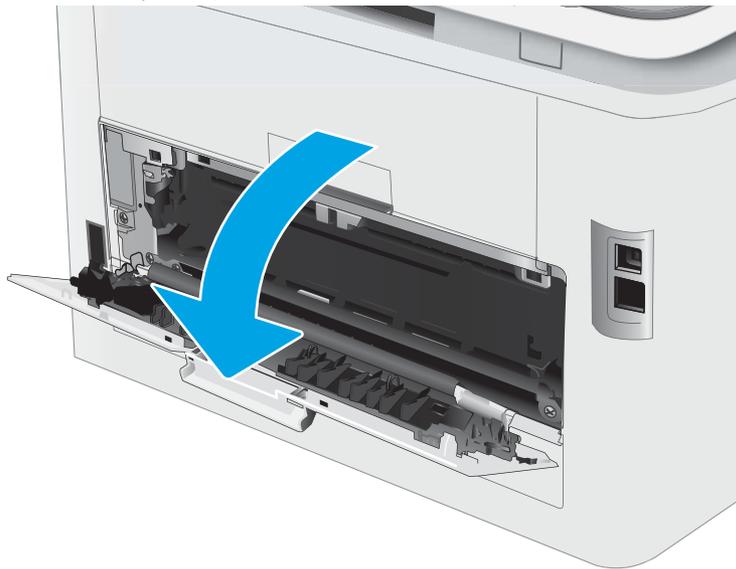

3. **Duplex models only:** Open the duplexer door.


Figure 1-954 Open the duplexer door



### Step 3: Remove the right cover (M178-M181 and M278-M281)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


Figure 1-955 Tab locations

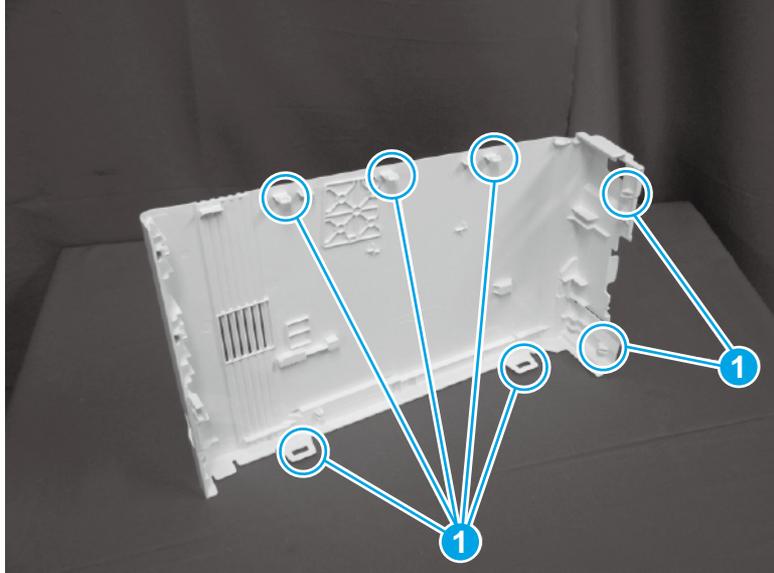

2. At the rear of the printer, remove one screw (callout 1), release one tab (callout 2), and then release two bosses (callout 3).

 **TIP:** Use a small, flat-blade screwdriver to release the tab and bosses.

**Figure 1-956** Remove one screw and release tabs

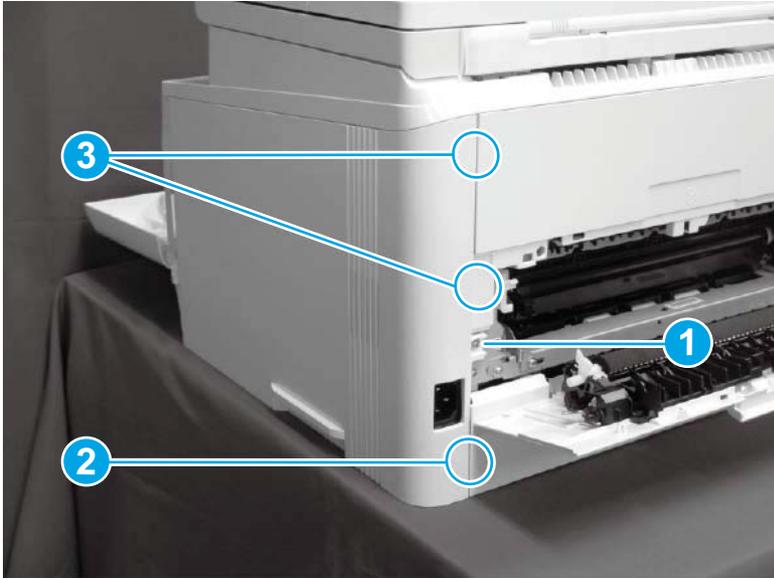


3. Release seven tabs (callout 1) along the top, bottom, and front of the cover. Pull the cover (callout 2) away from the printer to remove it.

 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-957** Remove the right cover

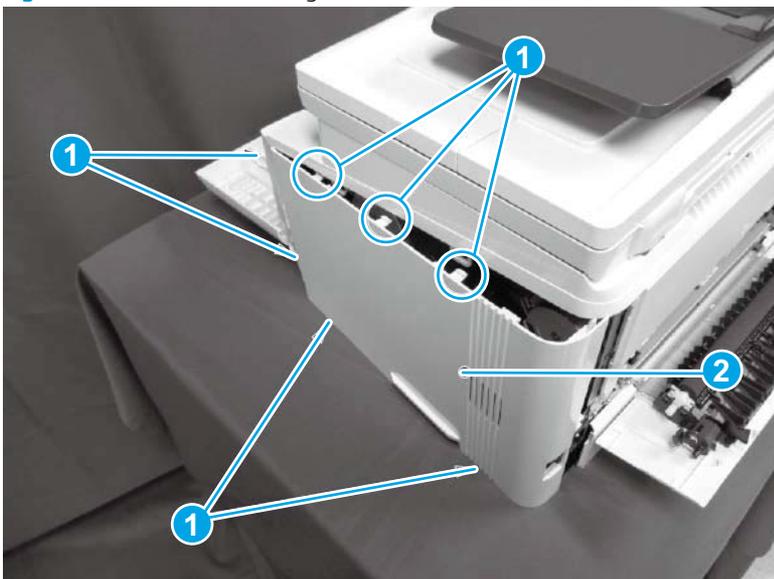

#### Step 4: Remove the left cover (M178-M181 and M278-M281)

1. Before removing the cover, note the locations of the tabs (callout 1) on the cover.


Figure 1-958 Tab locations

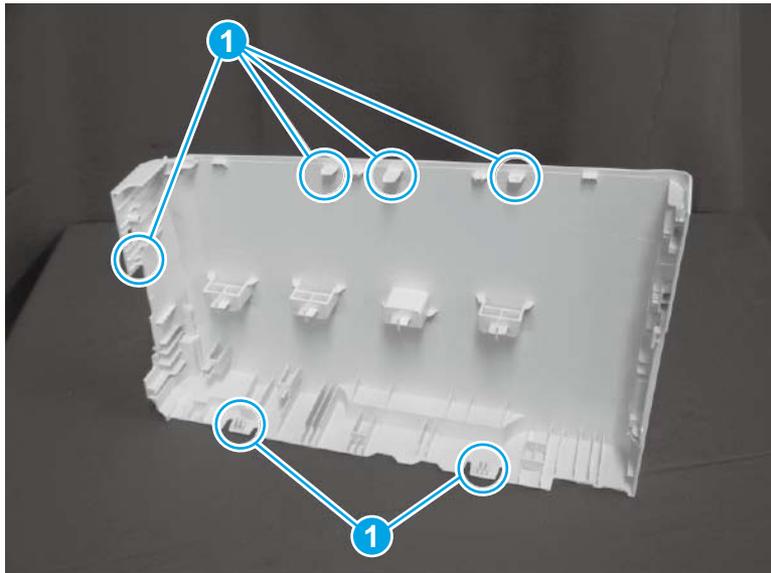

2. At the rear of the printer, remove one screw (callout 1), and then release one tab (callout 2).

 **TIP:** Use a small, flat-blade screwdriver to release the tab.

Figure 1-959 Remove one screw and release tab

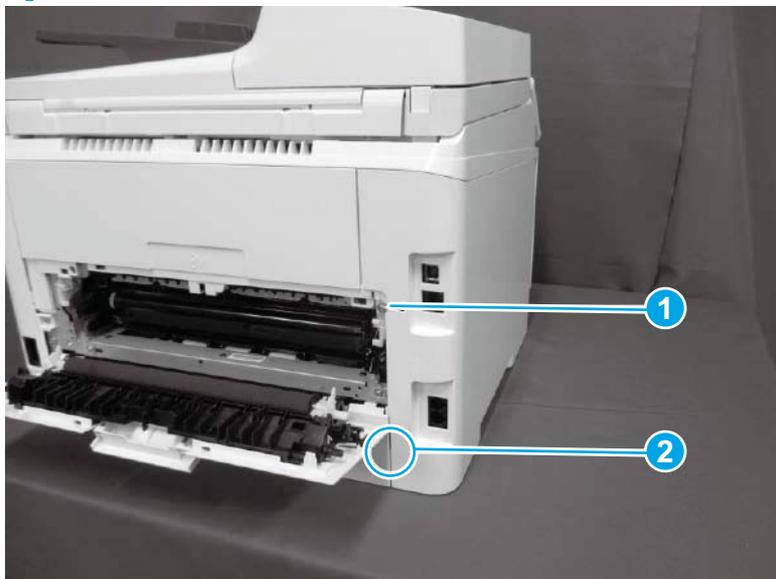

3. Release six tabs (callout 1) along the top, front, and bottom of the cover. Pull the cover (callout 2) away from the printer to remove it.

---


 **TIP:** Release the bottom tabs first. Slide the printer to the edge of a table or tilt it up to more easily release the bottom tabs.

 **CAUTION:** Make sure that the printer does not fall off of the table when releasing the bottom tabs.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-960** Remove the left cover

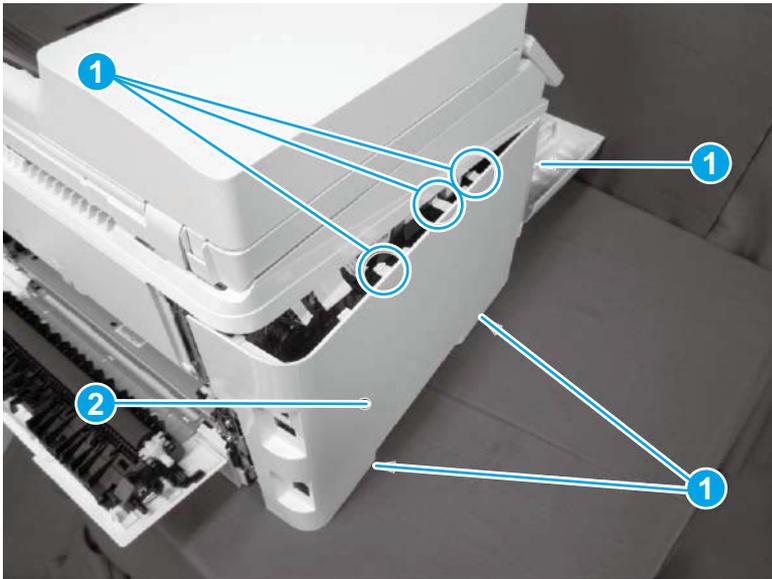

#### Step 5: Remove the rear cover (simplex models)

---

 **NOTE:** This step is for simplex printers. For duplex printers, skip this step and go to [Step 10: Remove the document feeder and scanner assembly \(M278-M281\) on page 664](#).


---

- ▲ At the back of the printer, use a small flat-blade screwdriver to release three tabs (callout 1) at the bottom of the cover, and then pull the cover down and away from the printer to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-961 Remove the rear cover

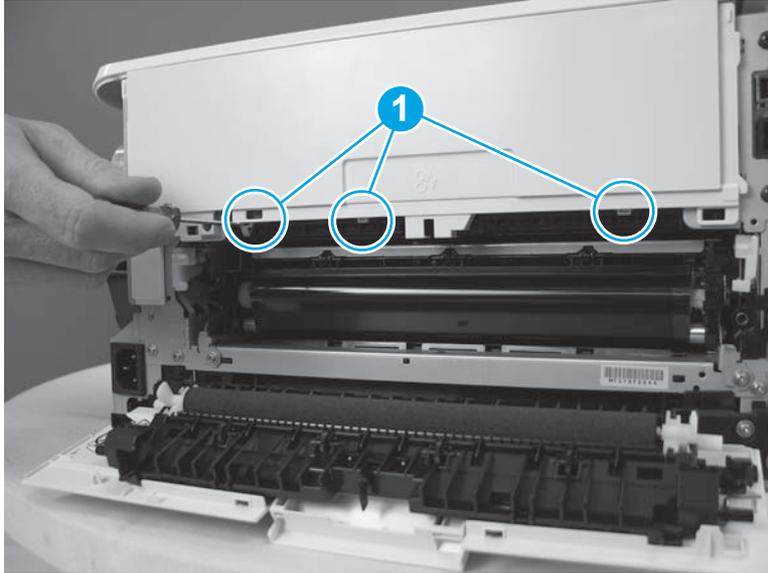


#### Step 6: Remove the flatbed scanner assembly (M180n)

 **NOTE:** This step is for the M180n printer. For the M180nw and M181fw printers, skip this step and go to [Step 7: Remove the document feeder and scanner assembly \(M180nw and M181fw\) on page 655](#). For the M278-M281 printers, skip this step and go to [Step 10: Remove the document feeder and scanner assembly \(M278-M281\) on page 664](#).

1. Disconnect one flat cable (callout 1) from the formatter.


Figure 1-962 Disconnect one flat cable

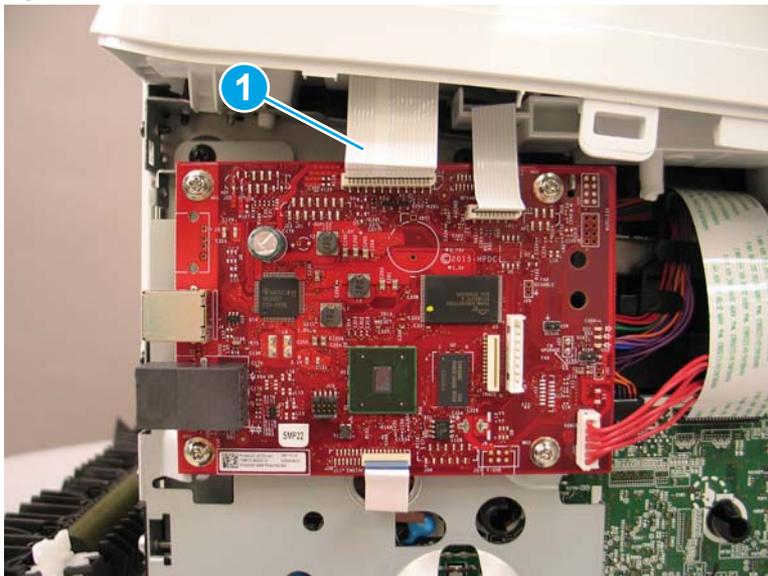

2. Open the scanner. Release one tab (callout 1), and then rotate the slider pin (callout 2) towards the front of the printer to release it.


 **TIP:** Use a Phillips head screwdriver in the end of the slider pin to rotate it.

**Figure 1-963** Release one tab and rotate the slider pin

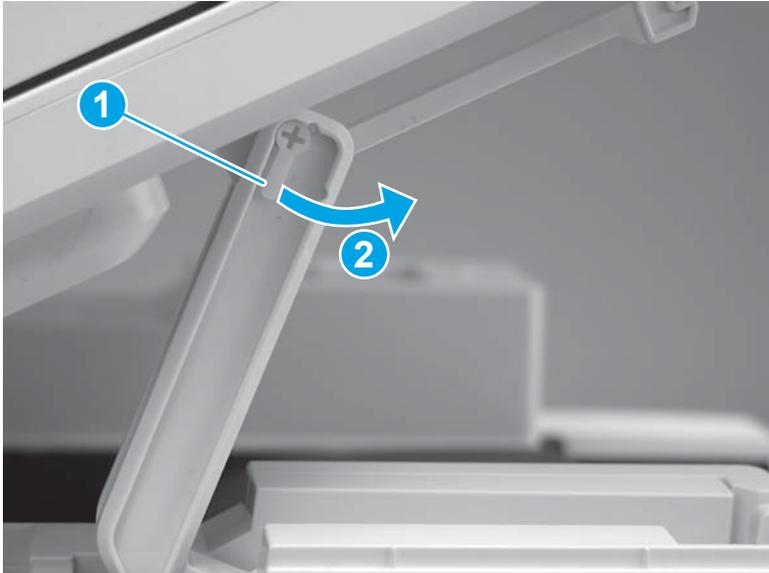

3. Remove the slider pin.


**Figure 1-964** Remove the slider pin

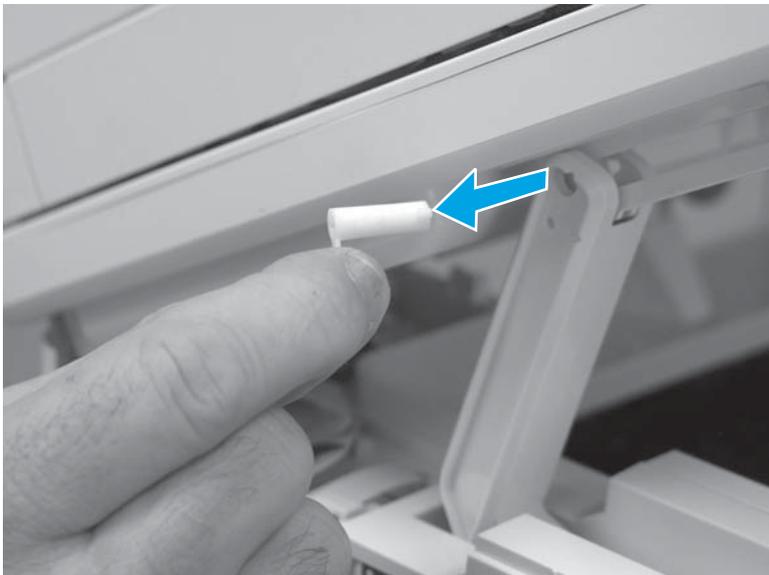

4. Rotate the hinge arm down.


**⚠ WARNING!** The hinge arm is spring-loaded by a strong spring and might snap down suddenly. Be careful not to pinch your fingers between the hinge arm and the top of the printer.

Figure 1-965 Rotate the hinge arm

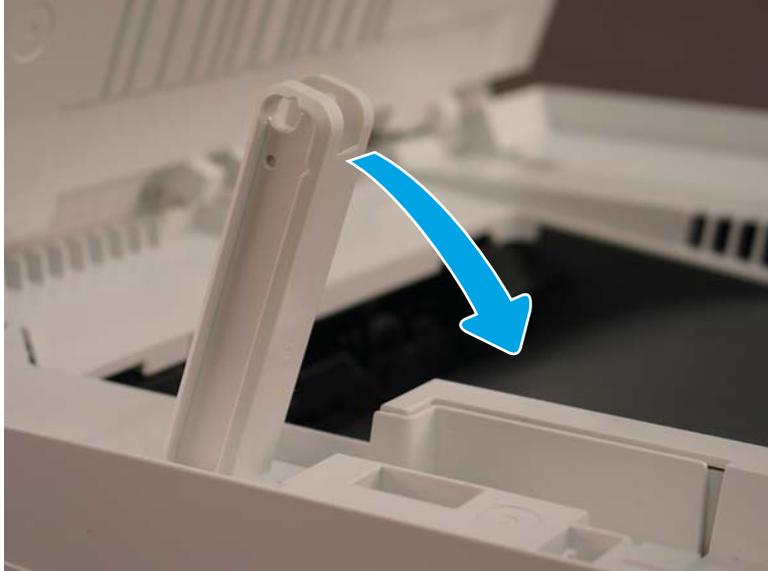


5. On the scanner bed, use a small, flat-blade screwdriver to release one tab (callout 1), and then remove the scanner cable cover (callout 2).

Figure 1-966 Remove the scanner cable cover

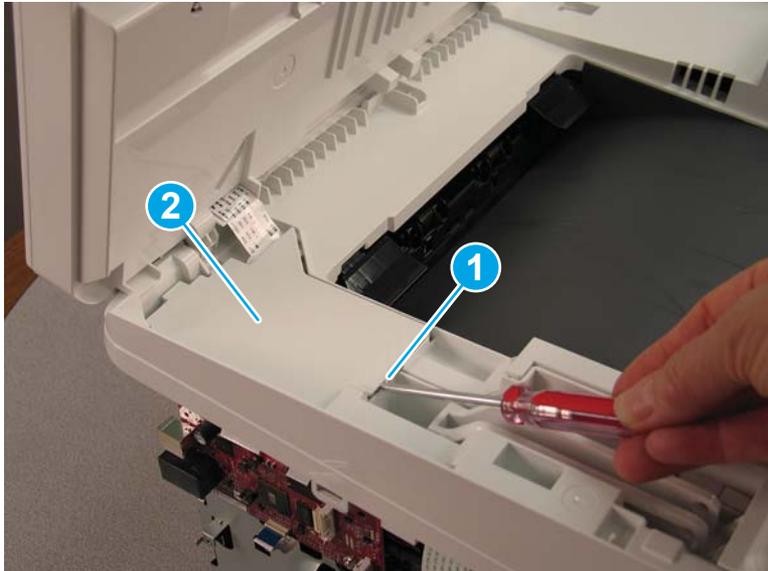

6. Release the flat cable (callout 1) from the guides (callout 2), and then release the flat cable (callout 3) through the opening in the cover.

Figure 1-967 Release the flat cable

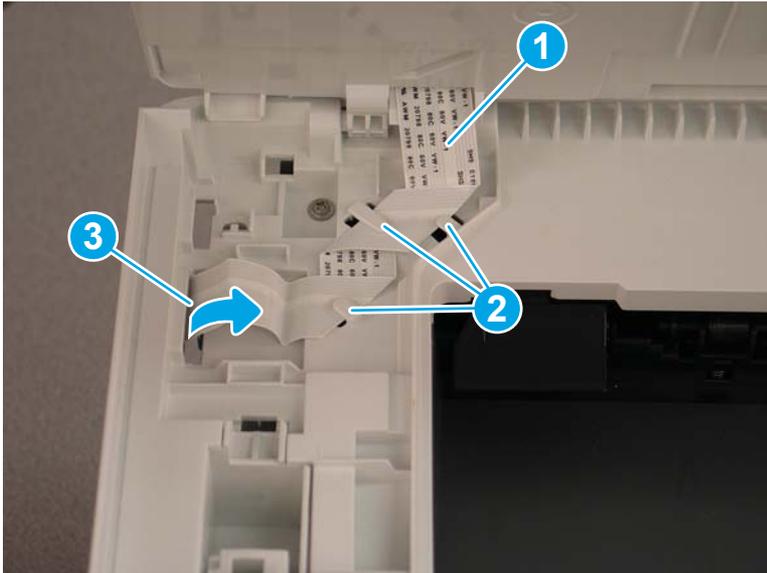


7. Open the scanner assembly fully, slide the assembly to the right (callout 1), and then lift the assembly off of the chassis (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

 **NOTE:** The figure below shows the document feeder scanner. The procedure is also correct for the flatbed scanner.

Figure 1-968 Remove the scanner assembly

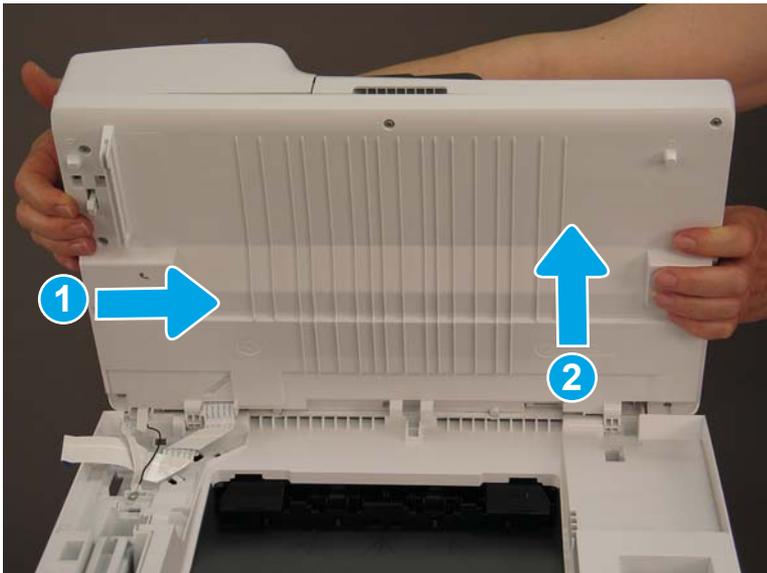


## Step 7: Remove the document feeder and scanner assembly (M180nw and M181fw)

 **NOTE:** This step is for the M180nw and M181fw printers. For the M180n printer, skip this step and go to [Step 8: Remove the control panel \(M178-M181\) on page 658](#). For the M278-M281 printers, skip this step and go to [Step 10: Remove the document feeder and scanner assembly \(M278-M281\) on page 664](#).

1. Disconnect two flat cables (callout 1) from the formatter, and then remove one screw (callout 2) to release the grounding wire.


**Figure 1-969** Disconnect two cables and remove one screw

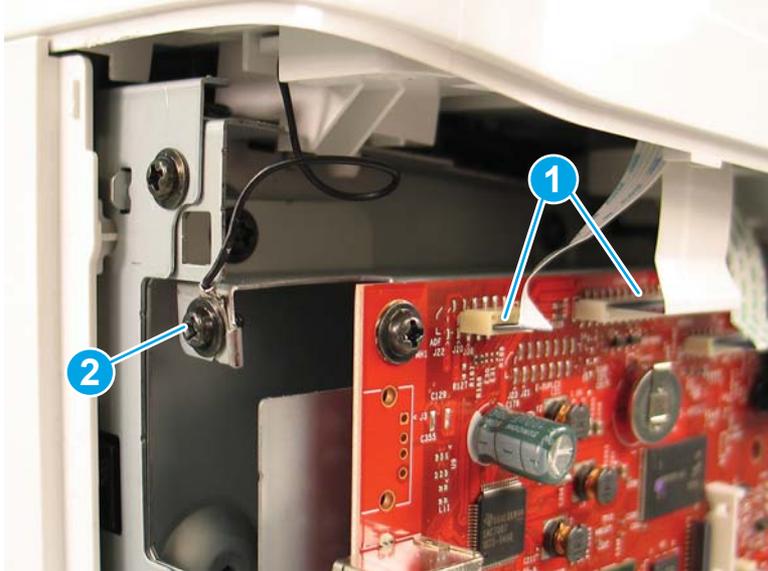

2. Open the scanner. Release one tab (callout 1), and then rotate the ISA slider pin (callout 2) towards the front of the printer to release it.


 **TIP:** Use a Phillips head screwdriver in the end of the slider pin to rotate it.

**Figure 1-970** Release one tab and rotate the slider pin

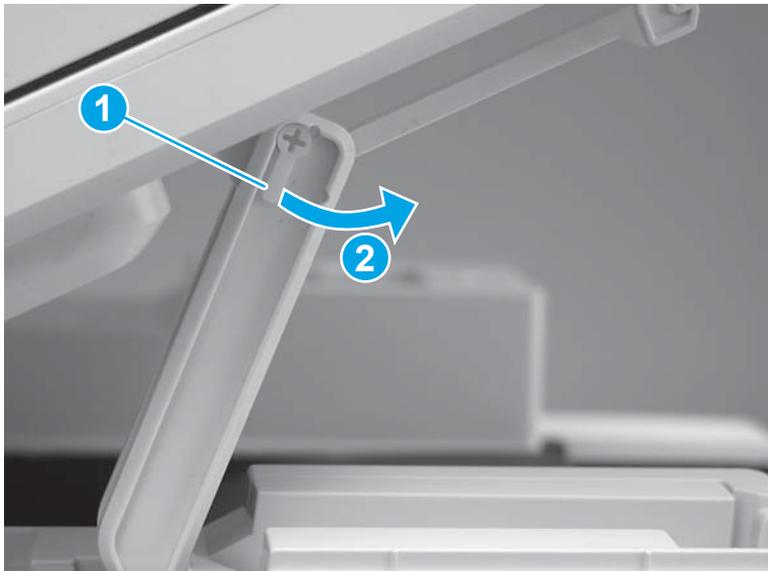

3. Remove the slider pin.

Figure 1-971 Remove the slider pin

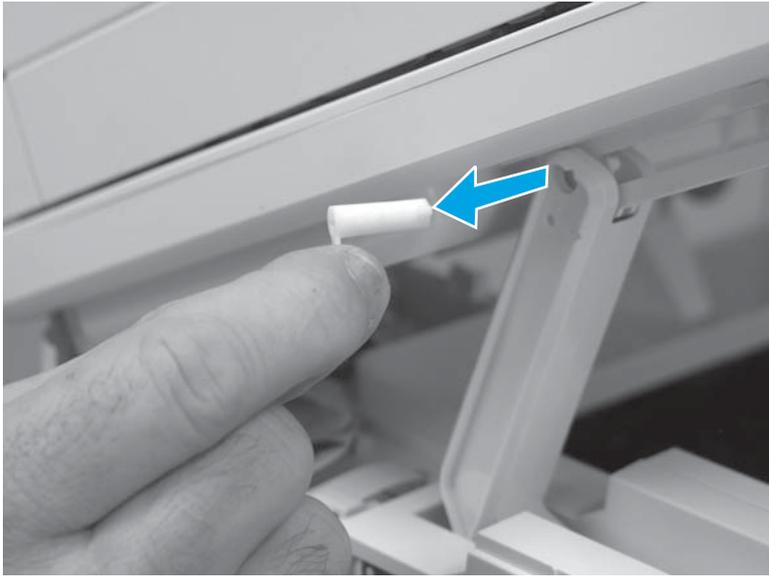

4. Rotate the hinge arm down.

---

**⚠ WARNING!** The hinge arm is spring-loaded by a strong spring and might snap down suddenly. Be careful not to pinch your fingers between the hinge arm and the top of the printer.


---

Figure 1-972 Rotate the hinge arm down




5. On the scanner bed, use a small, flat-blade screwdriver to release one tab (callout 1), and then remove the scanner cable cover (callout 2).

Figure 1-973 Remove the scanner cable cover

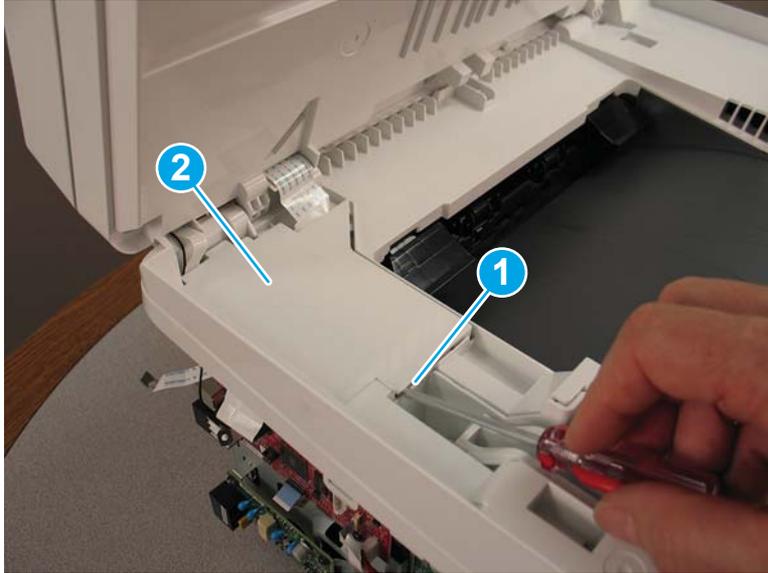

6. Release the flat cable (callout 1) from the guides (callout 2), and then feed the two flat cables (callout 3) through the openings in the scanner.


Figure 1-974 Release the flat cable

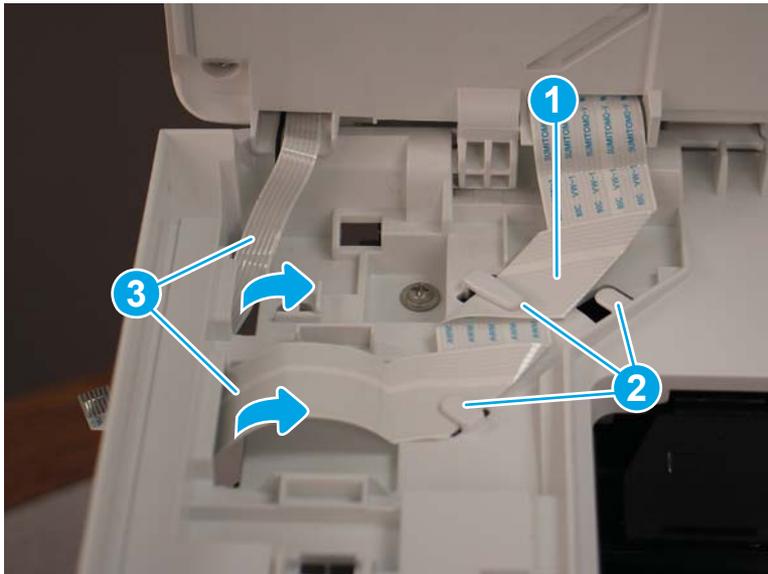

7. Open the scanner assembly fully, slide the assembly to the right (callout 1), and then lift the assembly off of the chassis (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-975** Remove the scanner assembly

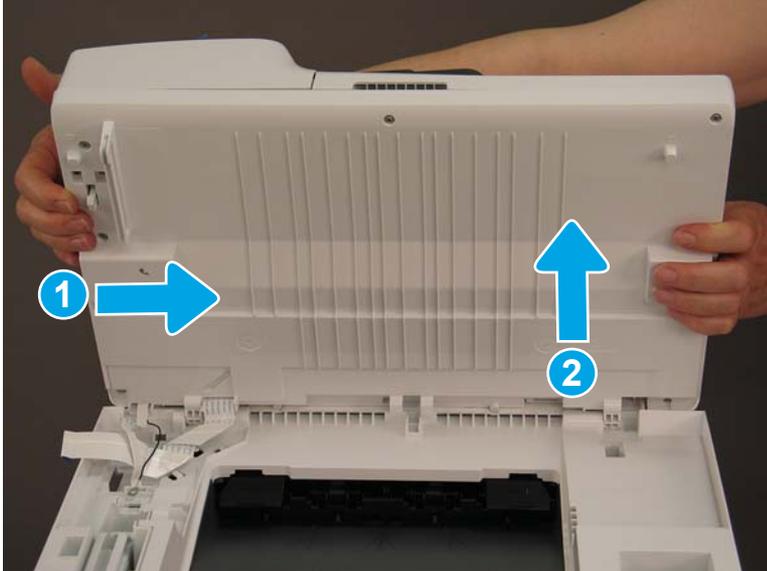


#### Step 8: Remove the control panel (M178-M181)

 **NOTE:** This step is for the M178-M181 printers. For the M278-M281 printers, skip this step and go to [Step 10: Remove the document feeder and scanner assembly \(M278-M281\) on page 664](#).

1. Remove one screw (callout 1) to release the grounding wire.


**Figure 1-976** Remove one screw

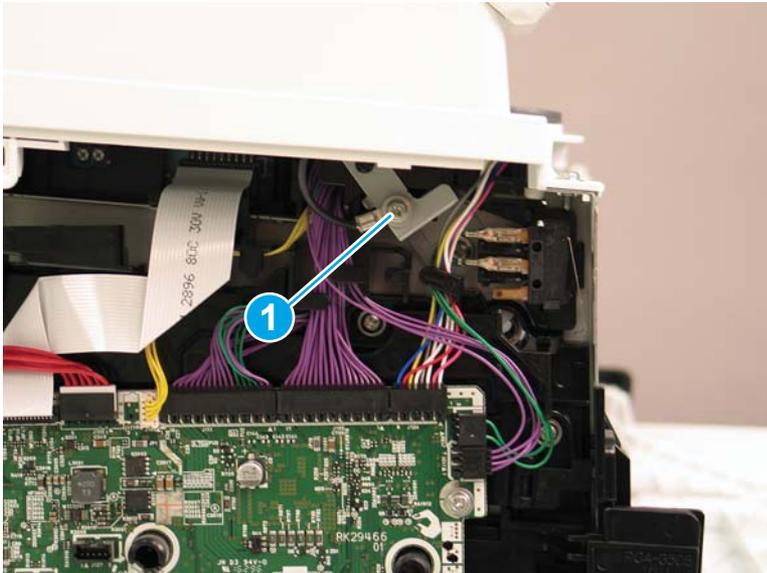

2. Raise the hinge arm.


**⚠ WARNING!** The hinge arm is spring-loaded by a strong spring and might spring up. Be careful not to pinch your fingers between the hinge arm and the top of the printer.

Figure 1-977 Rotate the hinge arm up

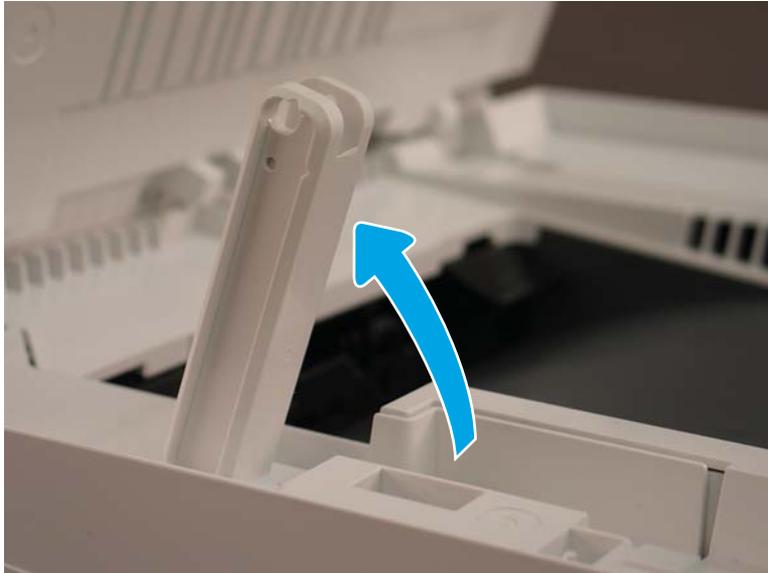

3. Release two tabs (callout 1), and then slide the cover (callout 2) away from the control panel to remove it.


Figure 1-978 Remove the cover

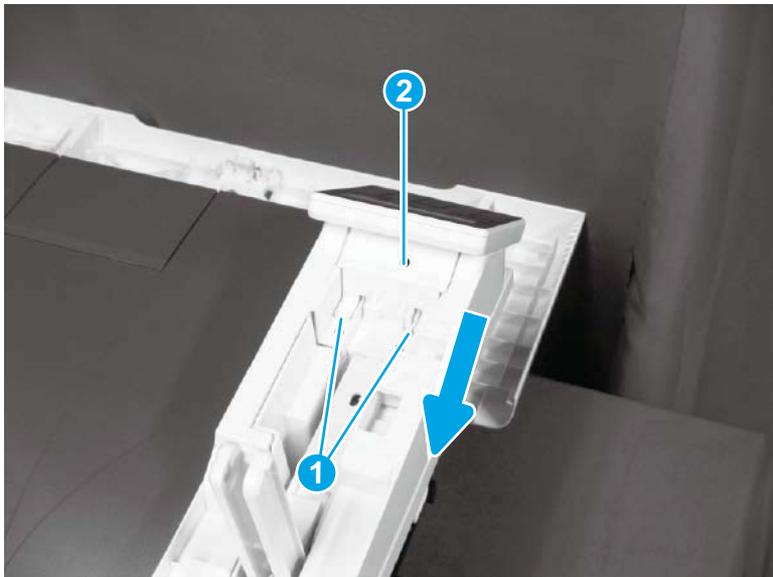

4. Release two tabs (callout 1), and then slide the control panel (callout 2) up to remove it.

**⚠ CAUTION:** The control panel is still attached to the printer. Do not remove it completely.


**Figure 1-979** Remove the control panel

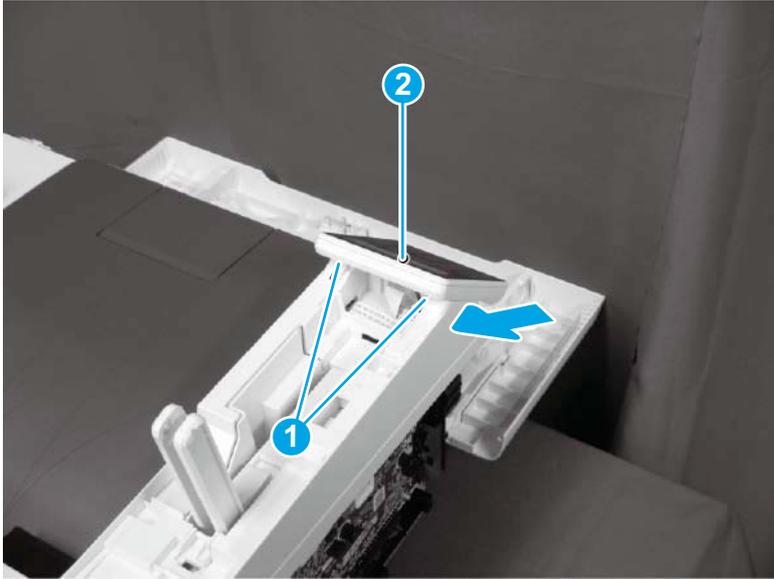

5. On the back of the control panel (callout 1), disconnect one connector (callout 2).

**💡 Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-980** Disconnect one connector

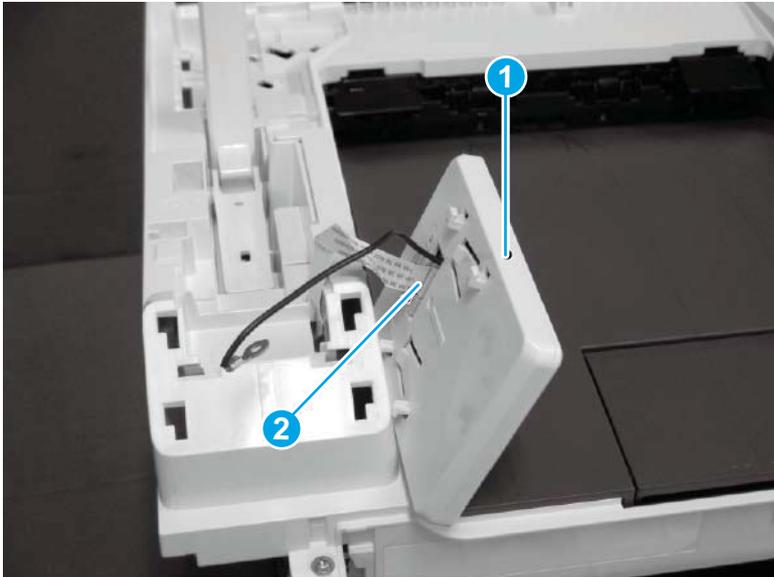

### Step 9: Remove the control panel (M278-M281)

**📝 NOTE:** This step is for the M278-M281 printers. For the M178-M181 printers, skip this step and go to [Step 11: Remove the top cover \(M178-M181 and M278-M281\) on page 667.](#)


1. Open the scanner

Figure 1-981 Open the scanner




2. At the back of the control panel, remove one screw (callout 1), and then use a small flat-blade screwdriver in the two pry points (callout 2) to remove the cover.

Figure 1-982 Remove one screw and the cover

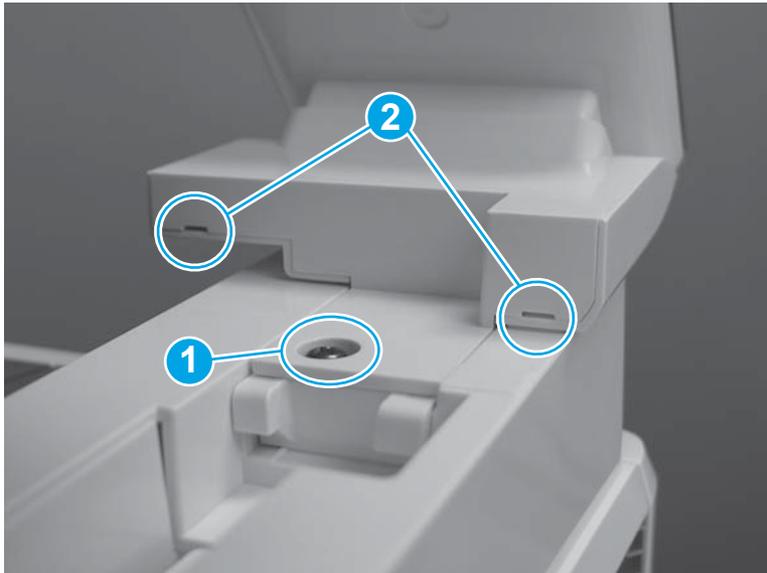


3. Remove the flat cable (callout 1) from the guides, and then remove three screws (callout 2).

Figure 1-983 Remove three screws

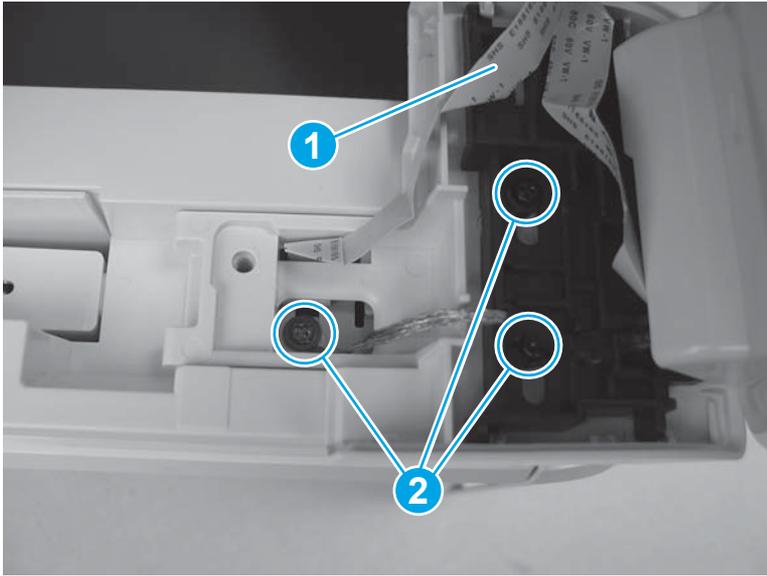

4. Move the control panel to the fully opened position (callout 1), and then rotate it back about 20 degrees (callout 2).

Figure 1-984 Rotate the control panel

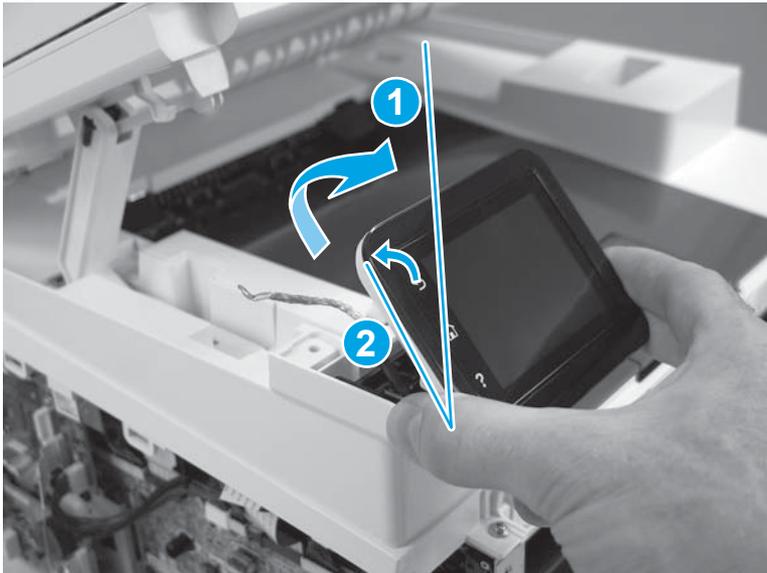

5. Firmly move the assembly to the right 7-8 mm (0.26-0.31 in) (callout 1) to release two tabs from the posts at the base of the control panel.

Figure 1-985 Release two tabs



6. Rotate the control panel forward to release it (callout 1), and then lift it slightly away from the printer.

**⚠ CAUTION:** The control panel is still attached to the printer. Do not remove it completely.


Figure 1-986 Release the control panel



7. Use a small, flat-blade screw driver to unclasp the flat cable connector in the control panel.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-987** Disconnect the flat cable

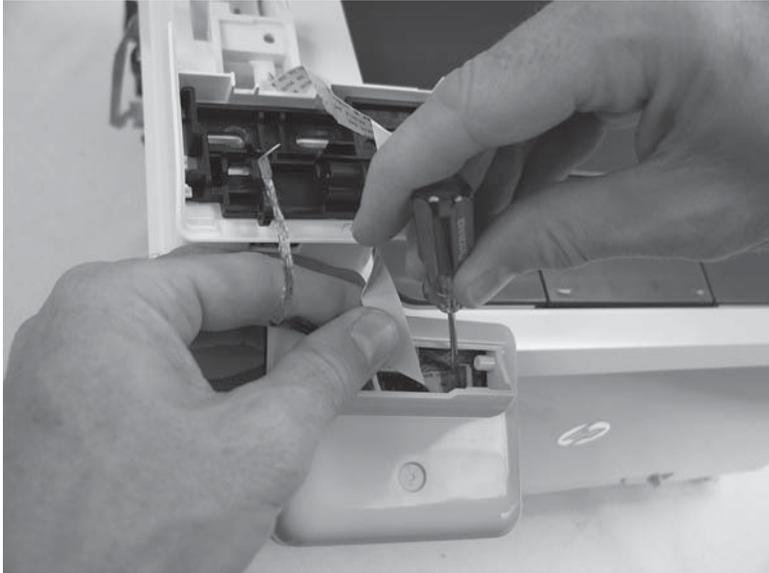


#### Step 10: Remove the document feeder and scanner assembly (M278-M281)

 **NOTE:** This step is for the M278-M281 printers. For the M178-M181 printers, skip this step and go to [Step 11: Remove the top cover \(M178-M181 and M278-M281\) on page 667.](#)

1. Disconnect two flat cables (callout 1) from the formatter, and then remove one screw (callout 2) to release the grounding wire.


**Figure 1-988** Disconnect two cables and remove one screw

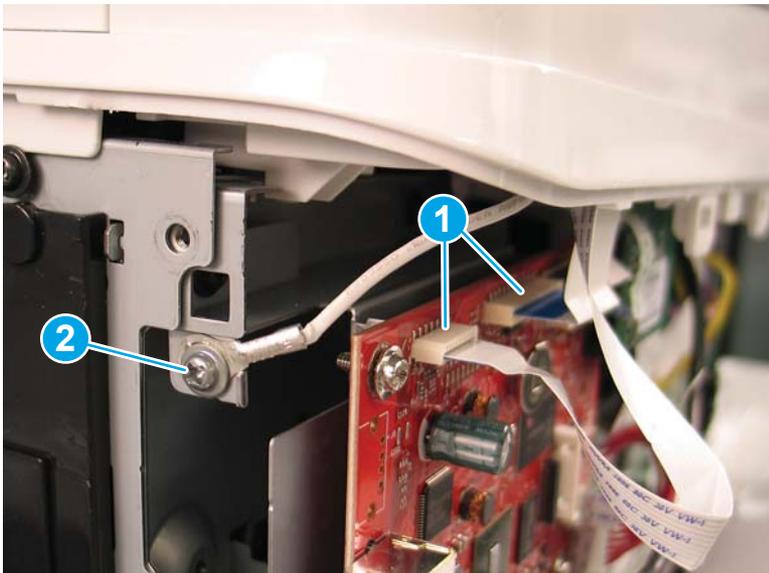

2. Open the scanner. Release one tab (callout 1), and then rotate the slider pin (callout 2) towards the front of the printer to release it.


 **TIP:** Use a Phillips head screwdriver in the end of the slider pin to rotate it.

**Figure 1-989** Release one tab and rotate the slider pin

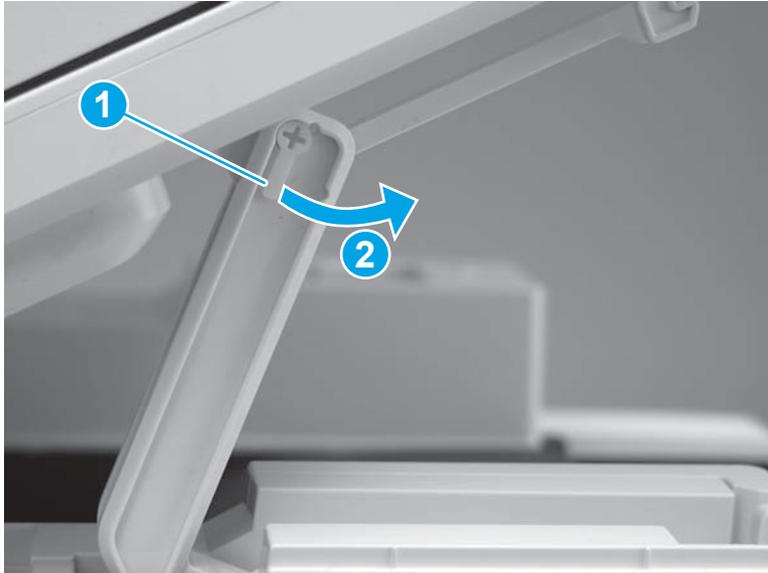

3. Remove the slider pin.


**Figure 1-990** Remove the slider pin

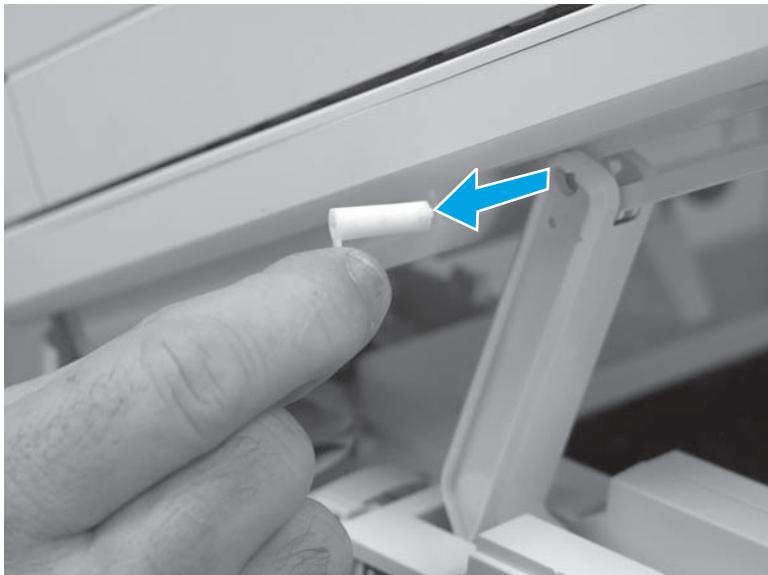

4. Rotate the hinge arm down.


**⚠ WARNING!** The hinge arm is spring-loaded by a strong spring and might snap down suddenly. Be careful not to pinch your fingers between the hinge arm and the top of the printer.

**Figure 1-991** Rotate the hinge arm down

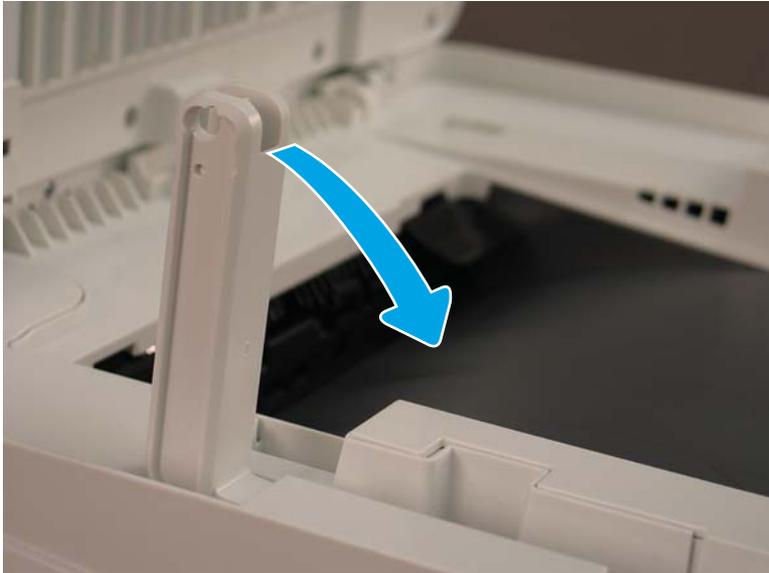


5. On the scanner bed, use a small, flat-blade screwdriver to release one tab (callout 1), and then remove the scanner cable cover (callout 2).

**Figure 1-992** Remove the scanner cable cover

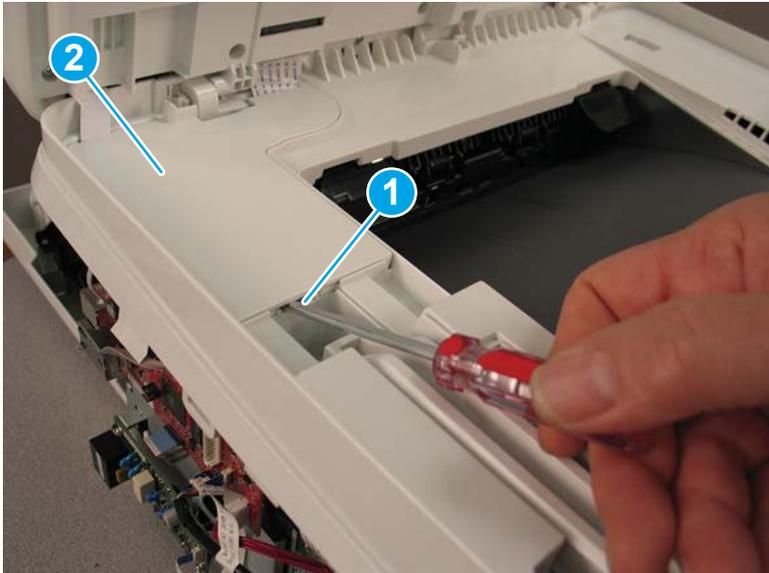

6. Release the flat cable (callout 1) from the guides (callout 2), and then feed the cables (callout 3) through the opening in the scanner.


Figure 1-993 Release the flat cable

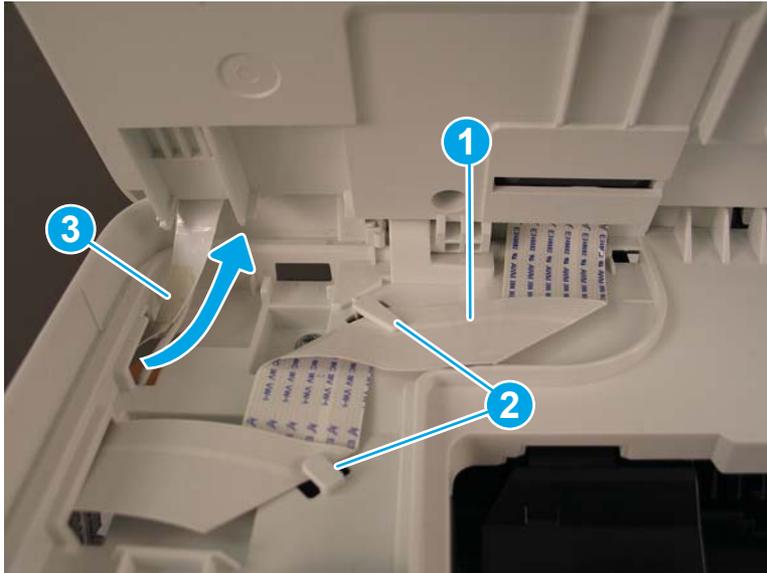

7. Open the scanner assembly fully, slide the assembly to the right (callout 1), and then lift the assembly off of the chassis (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-994 Remove the scanner assembly

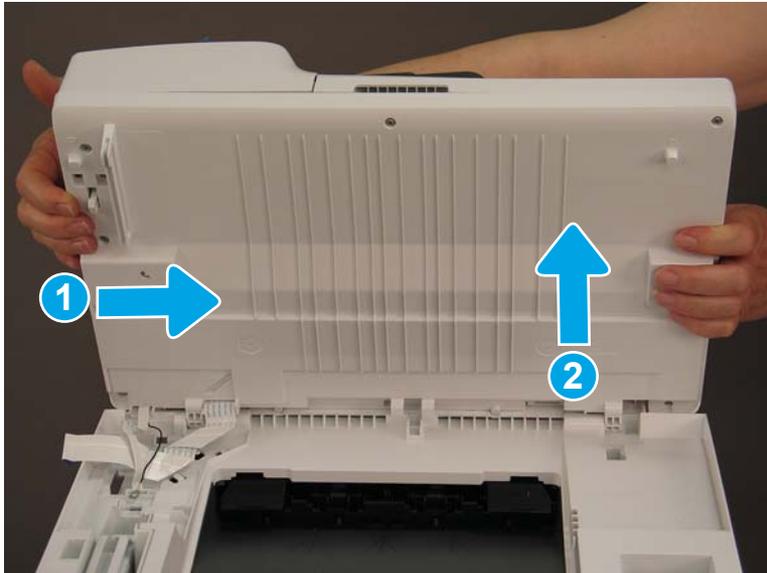

### Step 11: Remove the top cover (M178-M181 and M278-M281)

1. Disconnect one flat cable (callout 1) from the formatter.


Figure 1-995 Disconnect one cable

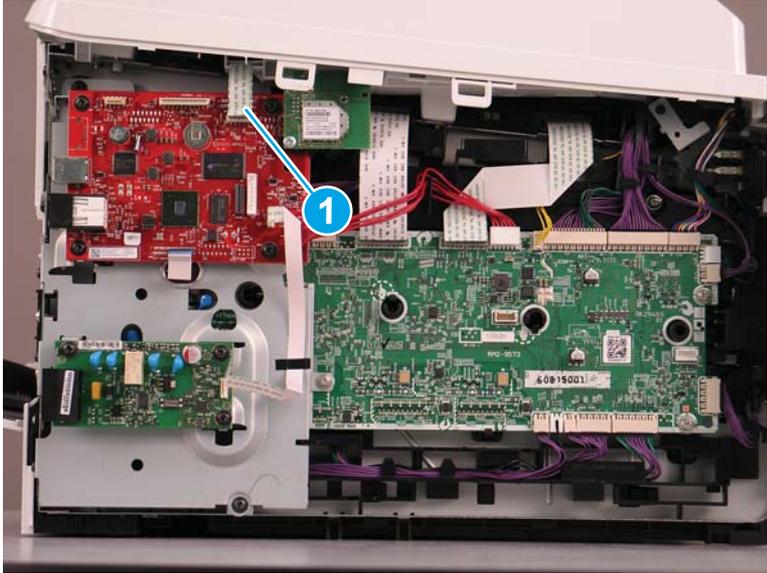

2. Remove seven screws (callout 1), and then remove the top cover (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-996 Remove seven screws and the top cover

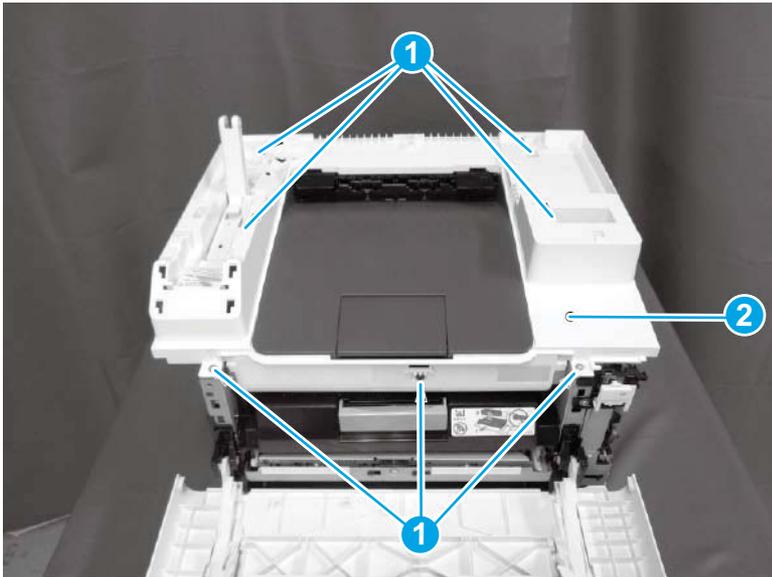

### Step 12: Remove the low-voltage power supply


1. On the right side of the printer, use a small, flat-blade screwdriver to release one tab (callout 1) on the front of the fan duct cover.

Figure 1-997 Release one tab

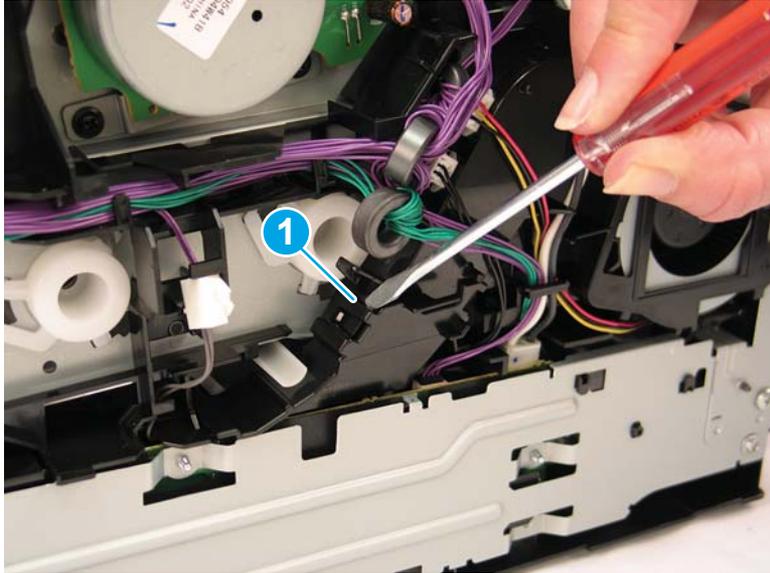


2. Release one tab (callout 1) on the rear of the fan duct cover, and then remove the fan duct cover (callout 2).

Figure 1-998 Remove the duct cover

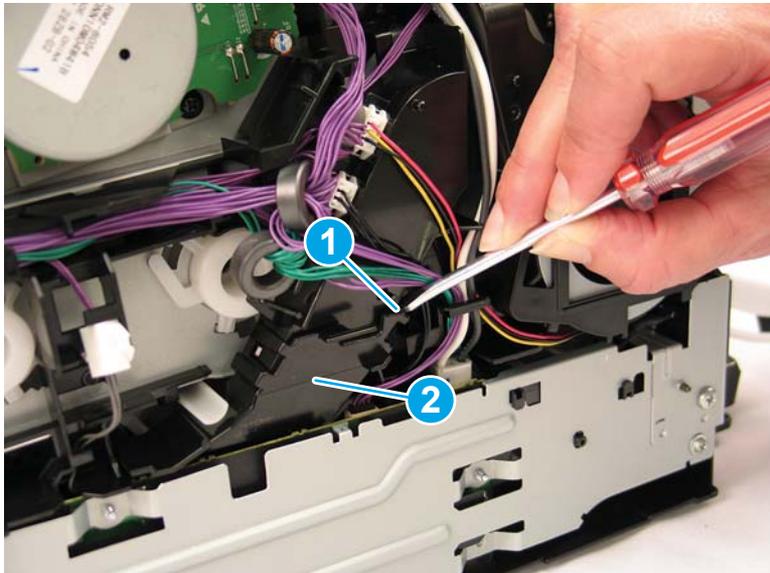


3. Remove one screw (callout 1), and then remove an M4 tapping screw (callout 2).

Figure 1-999 Remove two screws

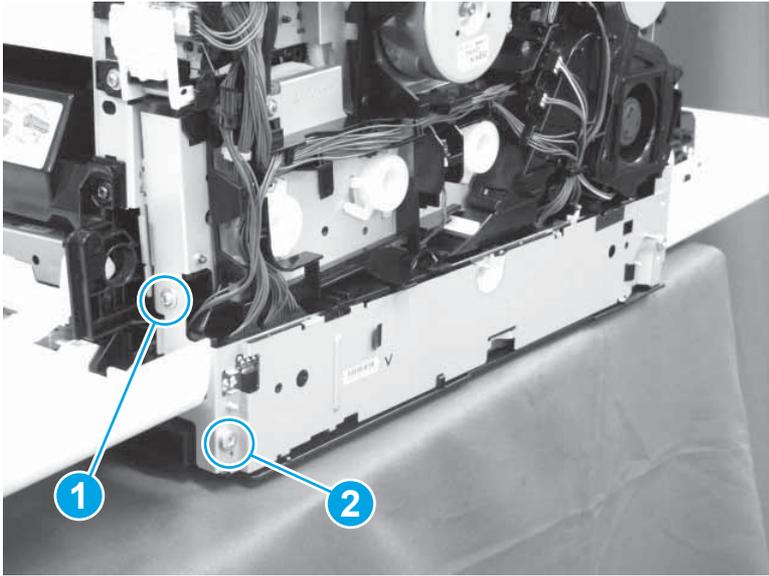

4. At the back of the printer, remove one silver screw (callout 1), one black screw (callout 2), and one M4 tapping screw (callout 3).

Figure 1-1000 Remove three screws

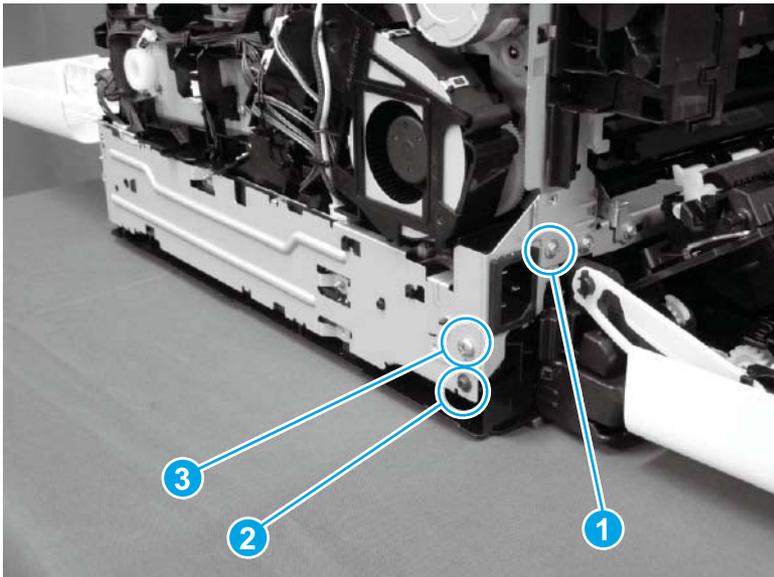


5. Disconnect four connectors (callout 1), and then pull the LVPS (callout 2) away from the chassis.

 **NOTE:** The connector to the far right in the graphic below has a clasp lock that needs to be pressed against the connector body to release it from the LVPS.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-1001** Disconnect four connectors and remove the LVPS

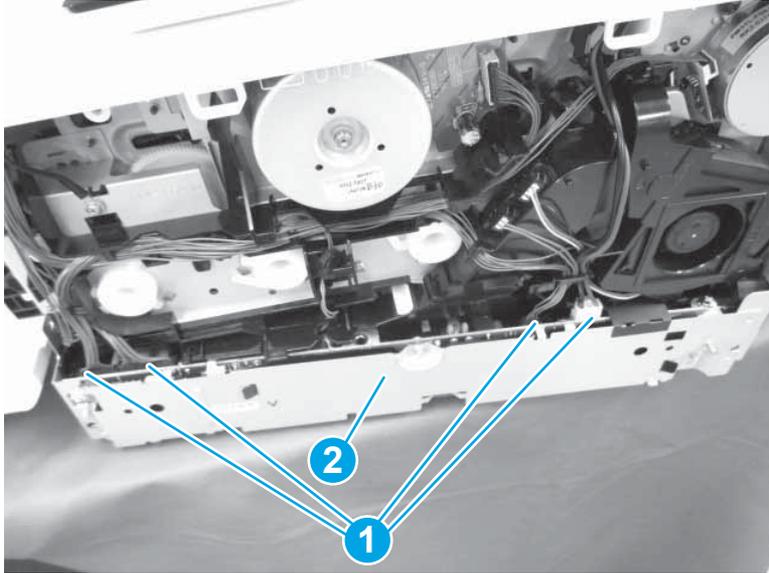

### Step 13: Remove the main fan (M178-M181 and M278-M281)


1. On the right side of the printer, release one tab (callout 1), and lift the fan duct up to remove it.

**Figure 1-1002** Remove the fan duct

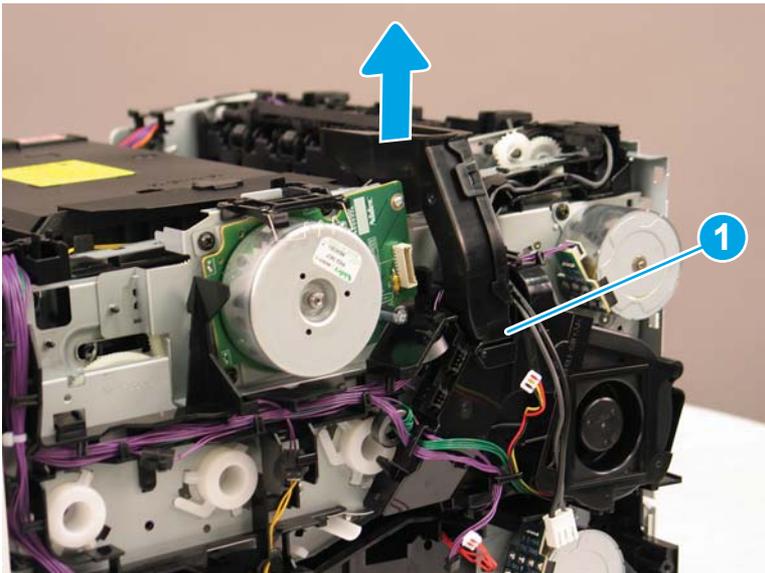


2. Release two tabs (callout 1), and then remove the cover (callout 2).

Figure 1-1003 Remove the cover

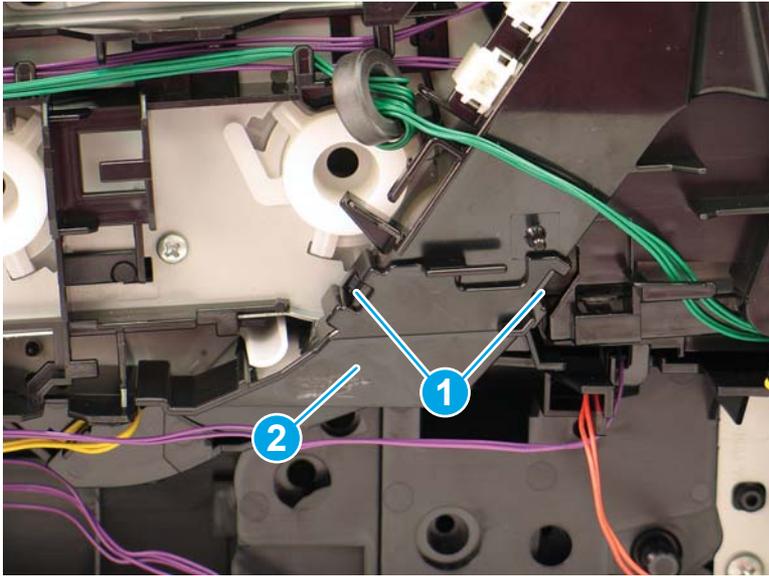

3. Disconnect three connectors (callout 1), and then release the cables from the cable guides (callout 2).


Figure 1-1004 Disconnect three connectors and release the cables

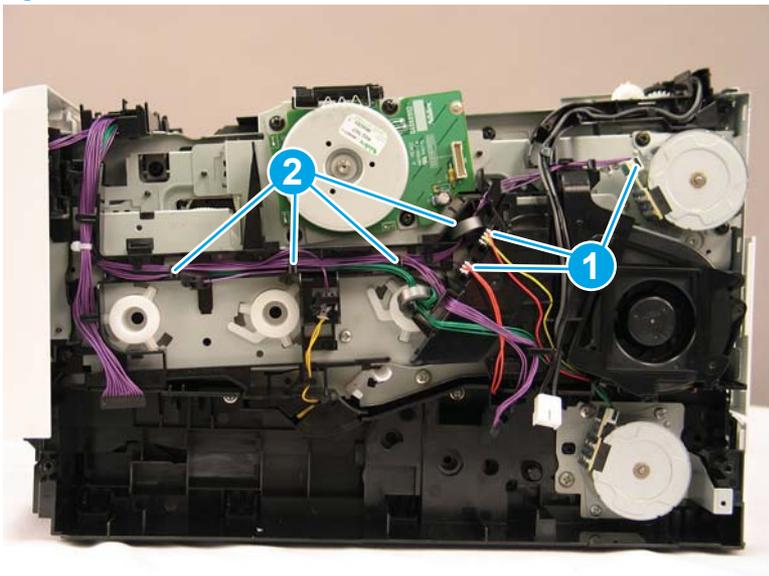

4. Release two tabs (callout 1) on the top, and then release one tab on the bottom (callout 2) to release the main fan and fan guide from the printer.

**CAUTION:** The main fan is still connected to the printer by two cables. Do not completely remove the main fan and fan guide.


Figure 1-1005 Release the main fan and fan guide

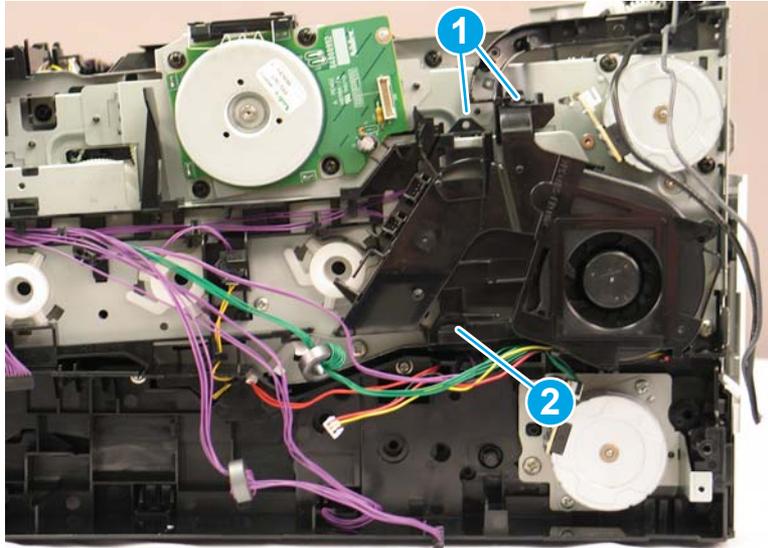

5. Disconnect two connectors (callout 1), remove the fan guide (callout 2) and the main fan (callout 3) together, and then remove the main fan from the fan guide.

**Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1006 Remove the main fan

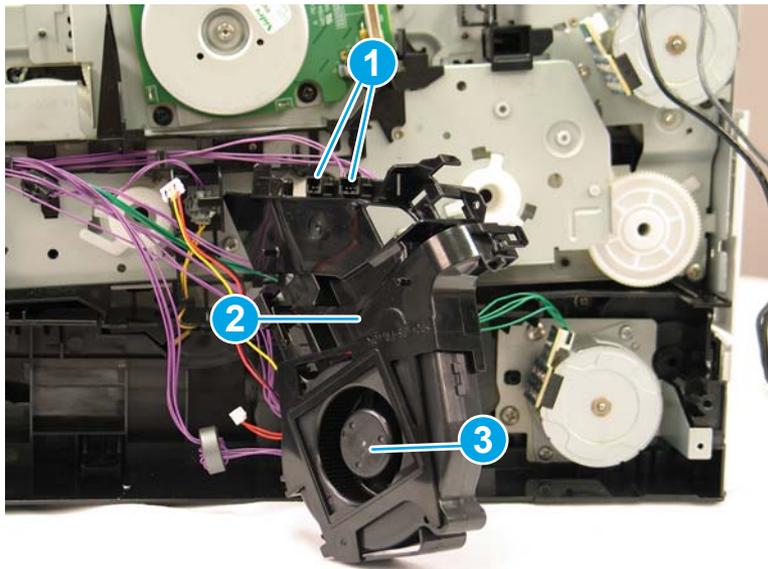

#### Step 14: Unpack the replacement assembly

1. Dispose of the defective part.

---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

---

## 2 Parts and diagrams

- [For additional service and support](#)
- [Assembly locations](#)
- [How to use the parts lists and diagrams](#)
- [Parts and diagrams: Image scanners and document feeders](#)
- [Parts and diagrams: Covers](#)
- [Parts and diagrams: Internal components](#)
- [Alphabetical parts list](#)
- [Numerical parts list](#)

## For additional service and support

HP service personnel, go to one of the following Web-based Interactive Search Engines (WISE) sites:

### AMS

- <https://support.hp.com/wise/home/ams-en>
- <https://support.hp.com/wise/home/ams-es>
- <https://support.hp.com/wise/home/ams-pt>

### APJ

- <https://support.hp.com/wise/home/apj-en>
- <https://support.hp.com/wise/home/apj-ja>
- <https://support.hp.com/wise/home/apj-ko>
- <https://support.hp.com/wise/home/apj-zh-Hans>
- <https://support.hp.com/wise/home/apj-zh-Hant>

### EMEA

- <https://support.hp.com/wise/home/emea-en>

Channel partners, go to HP Channel Services Network (CSN) at [www.hp.com/partners/csn](http://www.hp.com/partners/csn).

At these locations, find information on the following topics:

- Install and configure
- Printer specifications
- Up-to-date control panel message (CPMD) troubleshooting
- Solutions for printer issues and emerging issues
- Remove and replace part instructions and videos
- Service advisories
- Warranty and regulatory information

Channel partners, access training materials in the HP University and Partner Learning Center at <https://content.ext.hp.com/sites/LMS/HPU.page>.

To access HP PartSurfer information from any mobile device, go to <http://partsurfermobile.hp.com/> or scan the Quick Response (QR) code below.



## Assembly locations

- [Product front view \(M153-M154 models\)](#)
- [Product back view \(M153-M154 models\)](#)
- [Product front view \(M178-M181 models\)](#)
- [Product back view \(M178-M181 models\)](#)
- [Product front view \(M253-M254 models\)](#)
- [Product back view \(M253-M254 models\)](#)
- [Product front view \(M278-M281 models\)](#)
- [Product back view \(M278-M281 models\)](#)

## Product front view (M153-M154 models)



1	Standard output bin
2	Front door (access to toner cartridges)
3	Right cover
4	Control panel

## Product back view (M153-M154 models)




1	Rear cover
2	Rear door assembly
3	Rear lower cover
4	Left cover

## Product front view (M178-M181 models)



- |   |   |
|---|---|
| 1 | Icon LCD control panel (M180)           |
| 2 | Standard output bin                     |
| 3 | Front door (access to toner cartridges) |
| 4 | Right cover                             |
| 5 | LCD control panel with keypad (M181)    |

## Product back view (M178-M181 models)

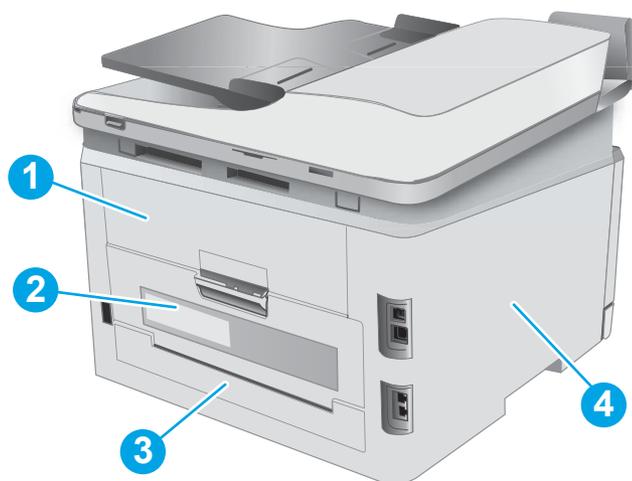


- |   |                    |
|---|--------------------|
| 1 | Rear cover         |
| 2 | Rear door assembly |
| 3 | Rear lower cover   |
| 4 | Left cover         |

## Product front view (M253-M254 models)



1	Standard output bin
2	Front door (access to the toner cartridges)
3	Priority feed tray
4	Right cover
5	LCD control panel with keypad
6	Touchscreen control panel

## Product back view (M253-M254 models)

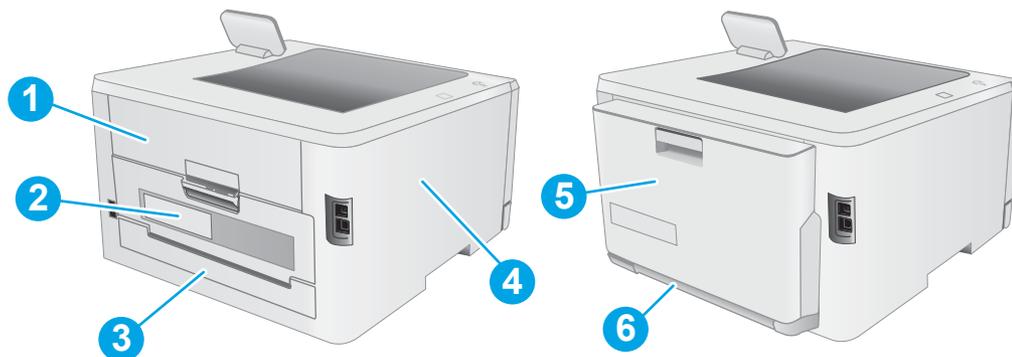


1	Rear upper cover
2	Rear door assembly
3	Rear lower cover (simplex models only)
4	Left cover
5	Duplex rear door assembly
6	Rear lower cover (duplex models only)

## Product front view (M278-M281 models)



1	Touchscreen control panel
2	Standard output bin
3	Front door (access to toner cartridges)
4	Priority feed tray
5	Right cover

## Product back view (M278-M281 models)

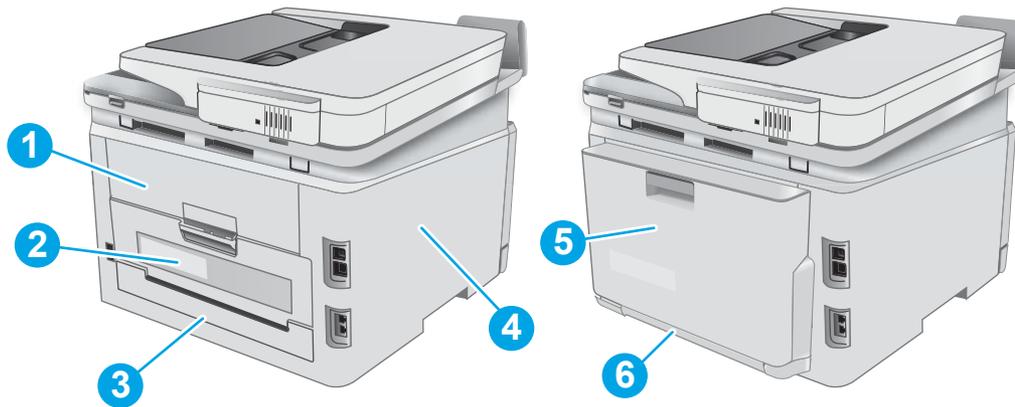

1	Rear upper cover (simplex models)
2	Rear door assembly
3	Rear lower cover (simplex models)
4	Left cover
5	Duplex door assembly (duplex models)
6	Rear lower cover (duplex models)

## How to use the parts lists and diagrams

The figures in this chapter show the major subassemblies in the product and their component parts. A parts list table follows each exploded view assembly diagram. Each table lists the item number, the associated part number, and the description of each part. If a part is not listed in the table, then it is not a field replacement unit (FRU).

---

 **CAUTION:** Be sure to order the correct part. When looking for part numbers for electrical components, pay careful attention to the voltage that is listed in the description column. Doing so will ensure that the part number selected is for the correct model.

 **NOTE:** In this manual, the abbreviation “PCA” stands for “printed circuit-board assembly.” Components described as a PCA might consist of a single circuit board or a circuit board plus other parts, such as cables and sensors.


---



# Parts and diagrams: Image scanners and document feeders

## Flatbed image scanner (M180n model only)

Figure 2-1 Flatbed image scanner (M180n)

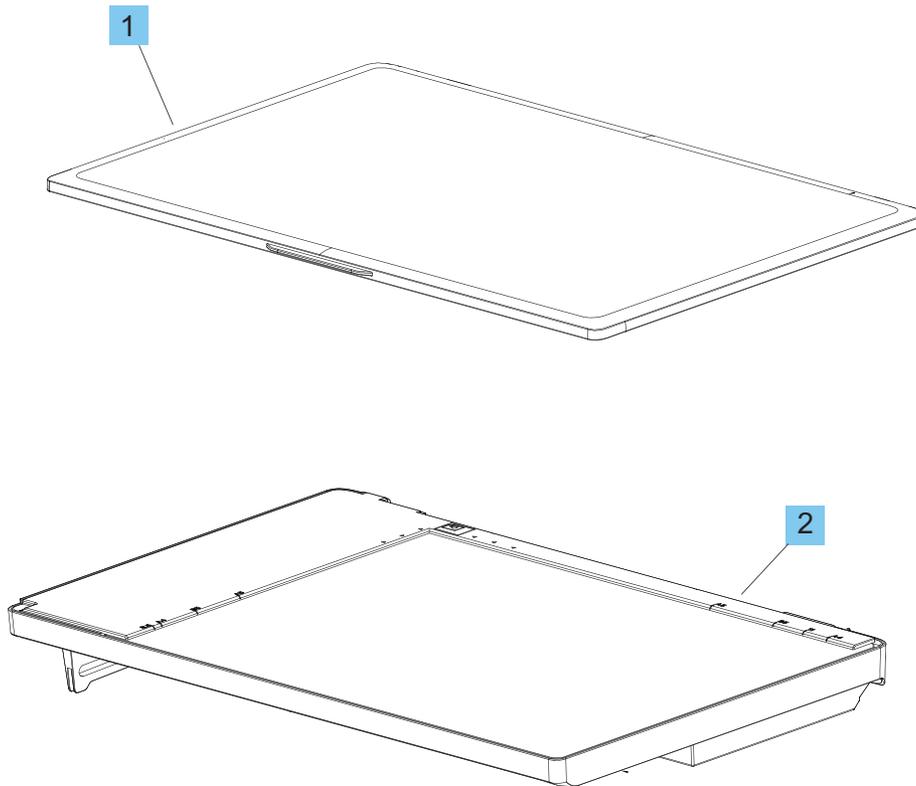


**Table 2-1** Image scanner (flatbed)

Ref	Description	Part number	Qty
1	Document lid assembly	RM2-2411-000CN	1
2	Image scanner assembly	RM2-2412-000CN	1

## Image scanner and document feeder (M180nw and M181fw models only)

Figure 2-2 Image scanner and document feeder (M180nw and M181fw)

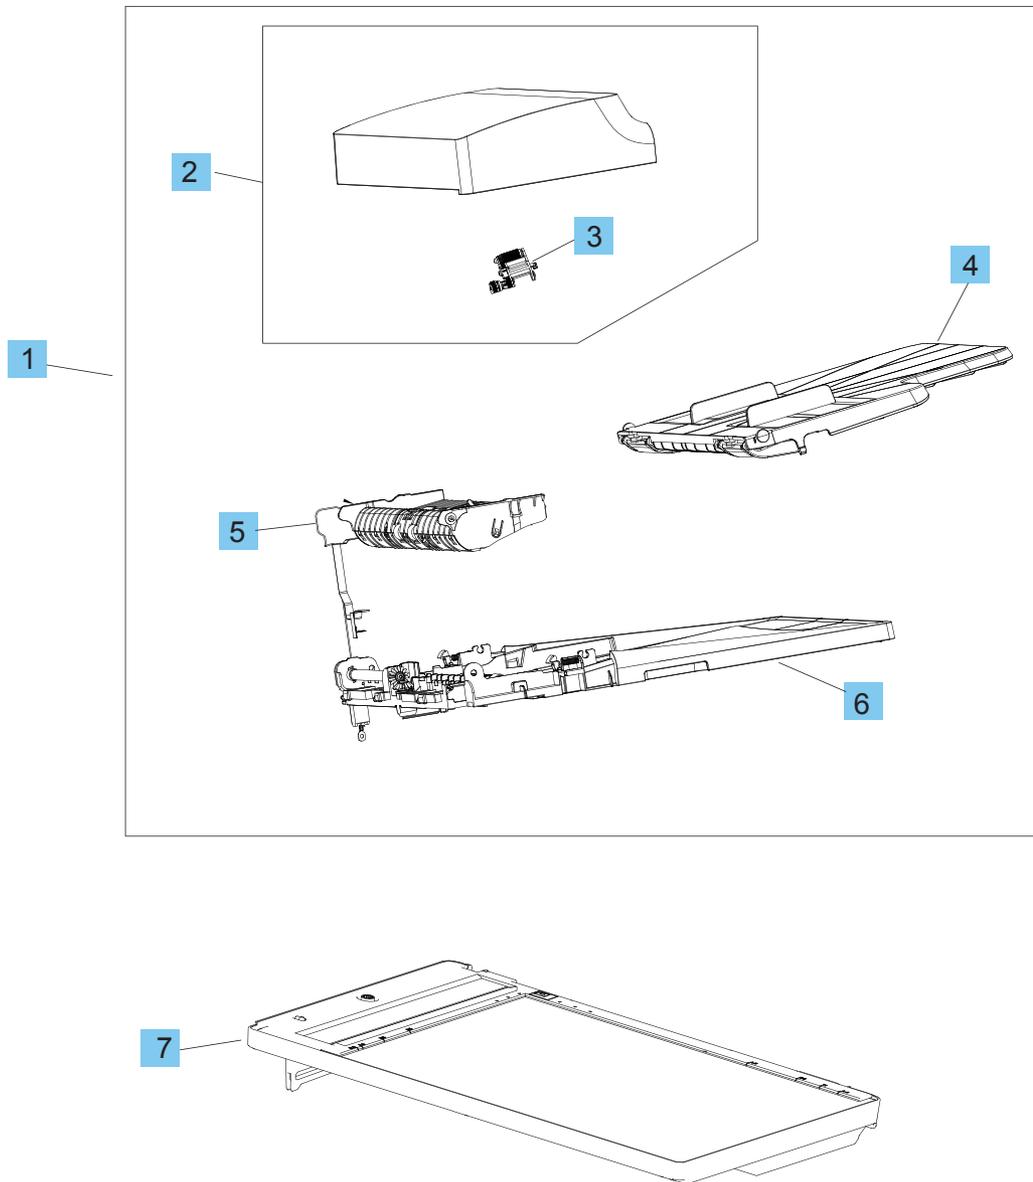


**Table 2-2** Image scanner and document feeder

Ref	Description	Part number	Qty
1	ADF assembly	RM2-2419-000CN	1
2	Top cover	RM2-1180-000CN	1
3	Pre-pick arm assembly	RM2-1187-000CN	1
4	Input tray assembly	RM2-2420-000CN	1
5	ADF core assembly	RM2-2425-000CN	1
6	ADF base assembly	RM2-1183-000CN	1
7	Image scanner assembly	RM2-2416-000CN	1

## Image scanner and document feeder (M278-M281 models only)

Figure 2-3 Image scanner and document feeder (M278-M281)

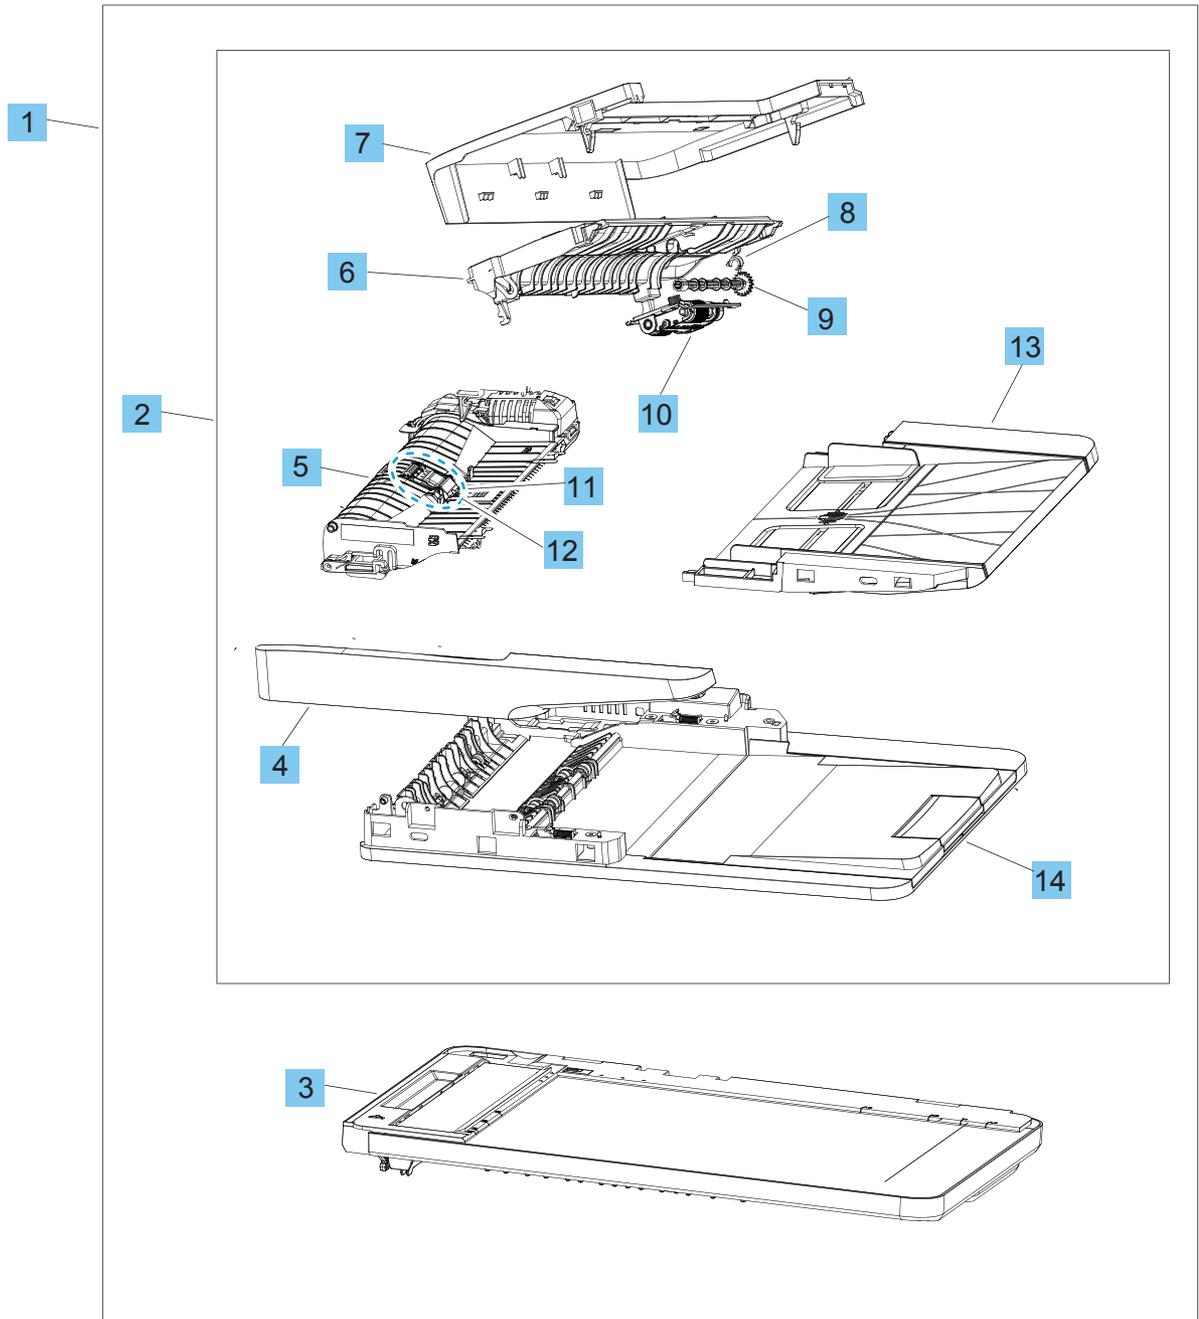


**Table 2-3** Image scanner and document feeder (M278-M281)

Ref	Description	Part number	Qty
1	Integrated scanner assembly (document feeder and scanner)	B3Q10-60174	1
2	ADF simplex assembly	B3Q10-60111	1
3	Scanner assembly	B3Q10-60102	1
4	ADF front cap	B3Q10-40042	1
5	ADF core assembly	B3Q10-60112	1
6	ADF inner cover	B3Q10-40012	1
7	ADF outer cover	B3Q10-40013	1
8	Bearing extension	B3Q10-40074	1
9	ADF pick extension shaft	B3Q10-40081	1
10	ADF pick assembly	B3Q10-60105	1
11	Separation pad	B3Q10-40080	1
12	Separation pad support	B3Q10-40079	1
13	ADF input tray assembly	B3Q10-60164	1
14	ADF base assembly	B3Q10-60116	1
Not shown	Separation pad spring	B3Q10-00019	1
Not shown	ISA lift assembly	B3Q10-60128	1
Not shown	ISA lift slider pin	B3Q10-40041	1
Not shown	ADF lid hinge assembly	B3Q10-60130	1
Not shown	ADF FFC cable assembly	B3Q10-60162	1

# Parts and diagrams: Covers

## Covers (M153-M154)

Figure 2-4 Covers (M153-M154)

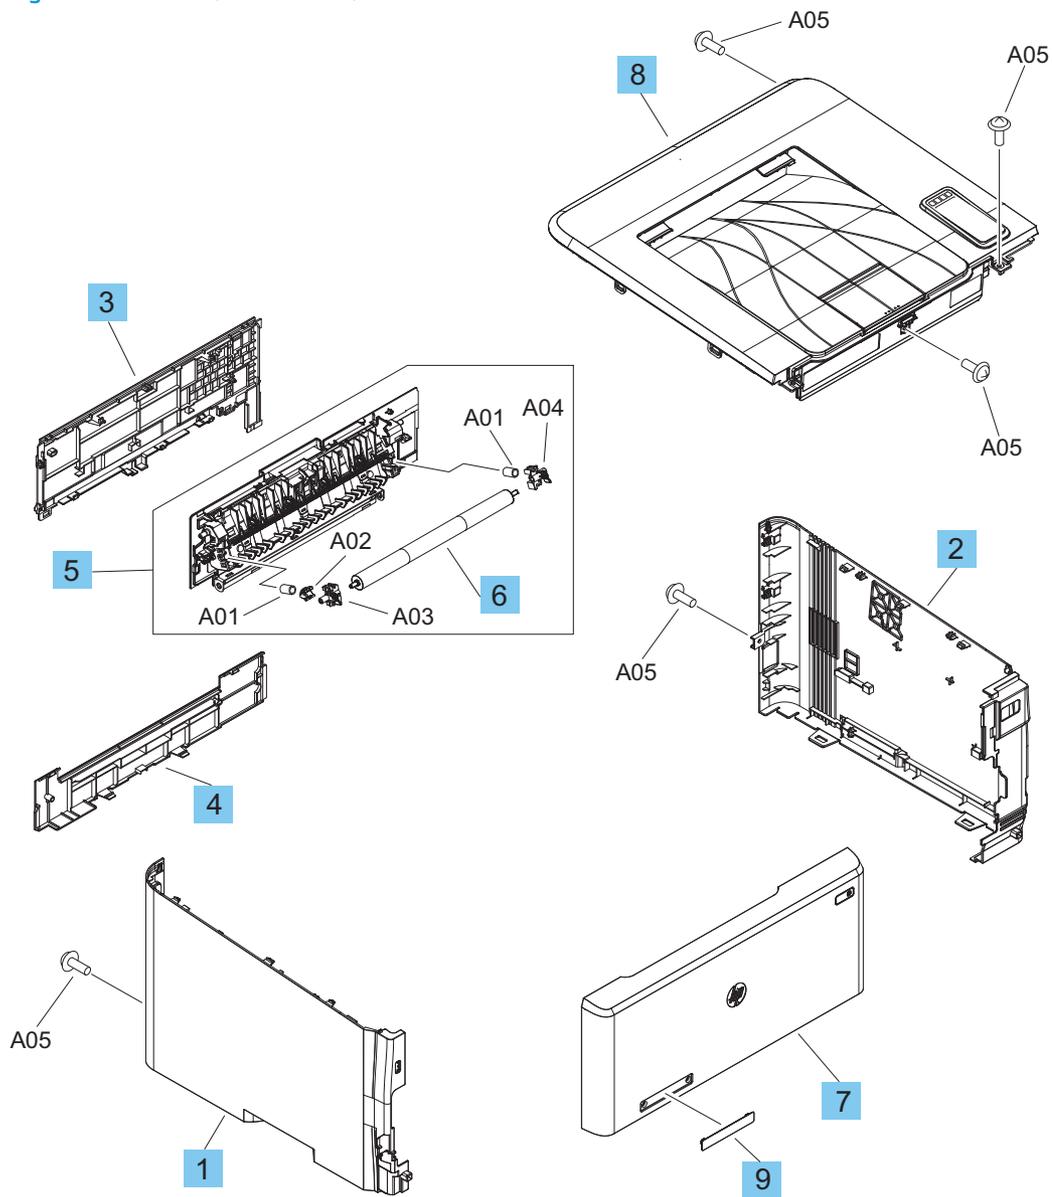


**Table 2-4 Covers (M153-M154)**

Ref	Description	Part number	Qty
1	Cover, left (wireless model)	RC5-2028-000CN	1
1	Cover, left (non-wireless model)	RL2-3224-000CN	1
2	Cover, right	RC5-2029-000CN	1
3	Cover, rear	RC4-3817-000CN	1
4	Cover, lower rear	RC5-3022-000CN	1
5	Rear door assembly	RM2-2489-000CN	1
6	Secondary transfer roller	RM2-5906-000CN	1
7	Front door assembly	RM2-2400-000CN	1
8	Top cover assembly (wireless models)	RM2-2424-000CN	1
8	Top cover assembly (non-wireless models)	RM2-2405-000CN	1
9	Name plate (non-wireless models)	RC5-4047-000CN	1
9	Name plate (wireless models)	RC5-4048-000CN	1
Not shown	Control panel (M154 wireless model)	RM2-9557-000CN	1
Not shown	Control panel (M154 non-wireless model)	RM2-9558-000CN	1

# Covers (M178-M181)

Figure 2-5 Covers (M178-M181)

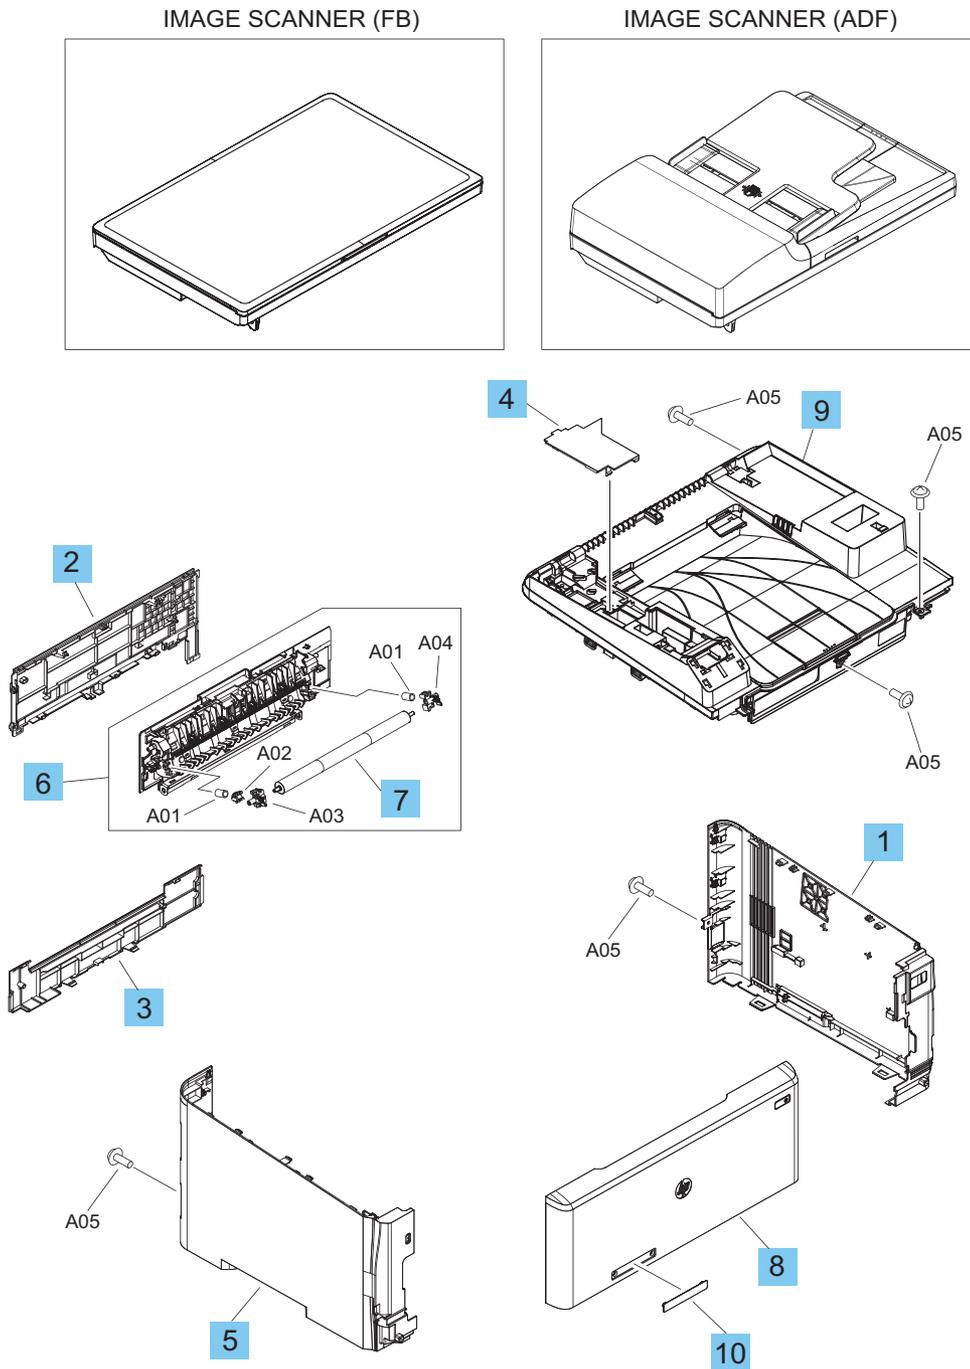


**Table 2-5 Covers (M178-M181)**

Ref	Description	Part number	Qty
1	Cover, right	RC5-2029-000CN	1
2	Cover, rear	RC4-3817-000CN	1
3	Cover, lower rear	RC5-3022-000CN	1
4	Cover, flat cable	RC5-3043-000CN	1
5	Cover, left (4-in-1 models)	RC5-2034-000CN	1
5	Cover, left (3-in-1 and 3-in-1 network wireless models)	RL2-3189-000CN	1
6	Rear door assembly	RM2-2489-000CN	1
7	Secondary transfer roller	RM2-5906-000CN	1
8	Front door assembly	RM2-2401-000CN	1
9	Top cover assembly	RM2-2482-000CN	1
10	Name plate (3-in-1 models)	RC5-4049-000CN	1
10	Name plate (4-in-1 models)	RC5-4050-000CN	1
10	Name plate (3-in-1 network wireless models)	RC5-4051-000CN	1
11	Power button assembly	RM2-2495-000CN	1
Not shown	Control panel, LED (M180n)	T6B70-60106	1
Not shown	Control panel, 2-line LCD (M180nw)	T6B74-60101	1
Not shown	Control panel, 2-line LCD with 10-keys (M181fw)	T6B71-60105	1

# Covers (M253-M254)

Figure 2-6 Covers (M253-M254)

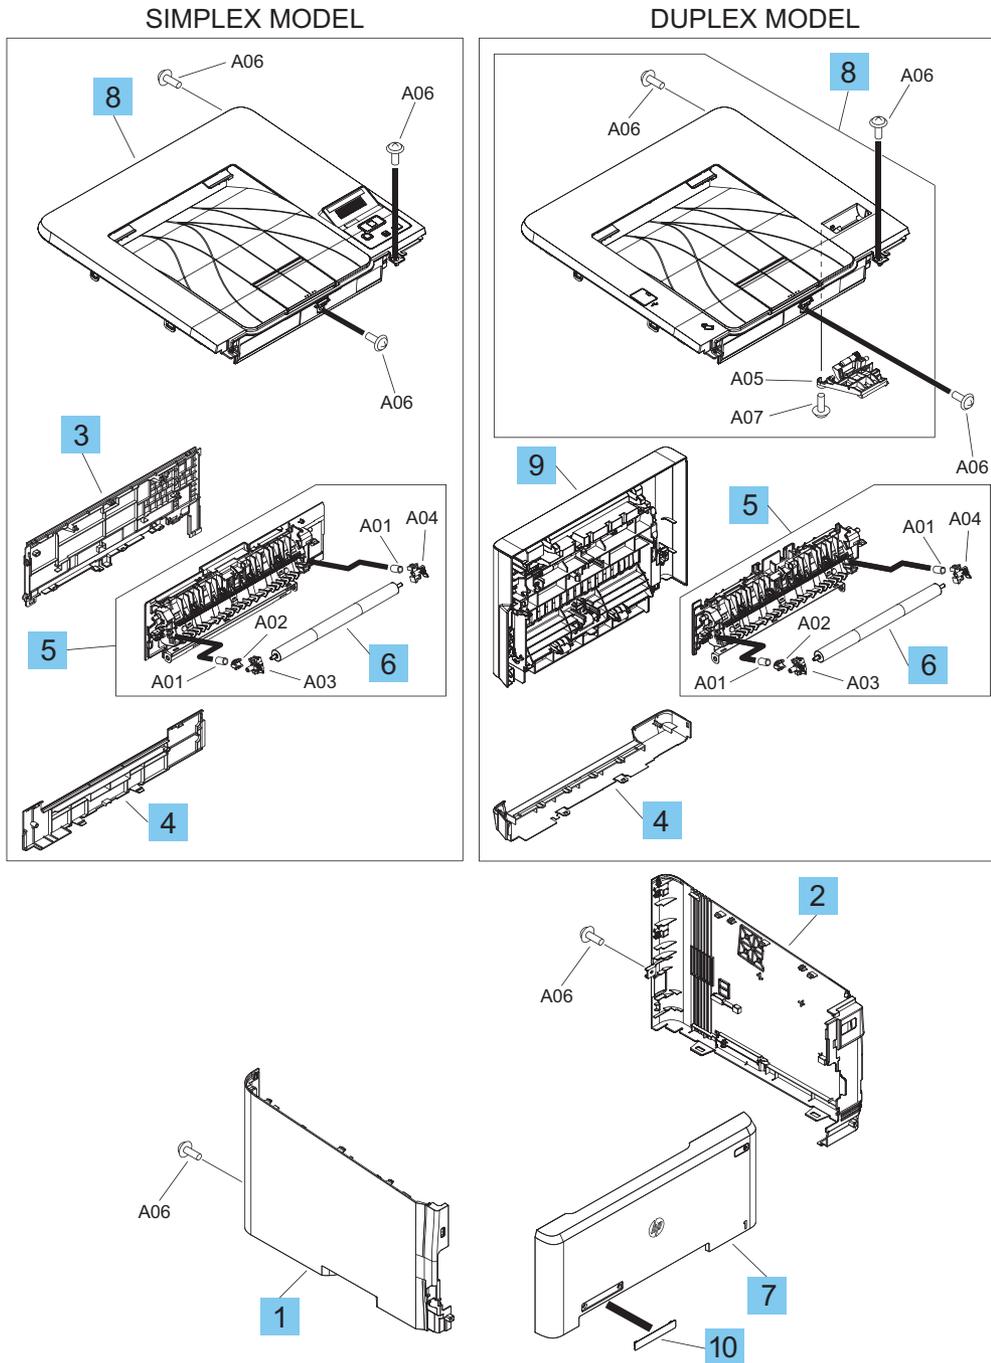


**Table 2-6 Covers (M253-M254)**

Ref	Description	Part number	Qty
1	Cover, left	RC5-2028-000CN	1
2	Cover, right	RC5-2029-000CN	1
3	Cover, rear (simplex models)	RC4-3817-000CN	1
4	Cover, lower rear (duplex models)	RL2-3225-000CN	1
4	Cover, lower rear (simplex models)	RC5-3022-000CN	1
5	Rear door assembly (duplex models)	RM2-5580-000CN	1
5	Rear door assembly (simplex models)	RM2-2489-000CN	1
6	Secondary transfer roller	RM2-5906-000CN	1
7	Front door assembly	RM2-5590-000CN	1
8	Top cover assembly (simplex models)	RM2-2421-000CN	1
8	Top cover assembly (duplex network models)	RM2-2491-000CN	1
8	Top cover assembly (duplex wireless models)	RM2-2496-000CN	1
9	Duplex door assembly (duplex models)	RM2-5867-000CN	1
10	Nameplate (M254nw)	RC5-4044-000CN	1
10	Nameplate (M254dw)	RC5-4045-000CN	1
10	Nameplate (M254dn)	RC5-4046-000CN	1
11	Power button assembly	RM2-2495-000CN	1
Not shown	Control panel (M254dw touchscreen)	T6B59-60101	1
Not shown	Control panel mount base (M254dw touchscreen)	B3Q09-60101	1

# Covers (M278-M281)

Figure 2-7 Covers (M278-M281)

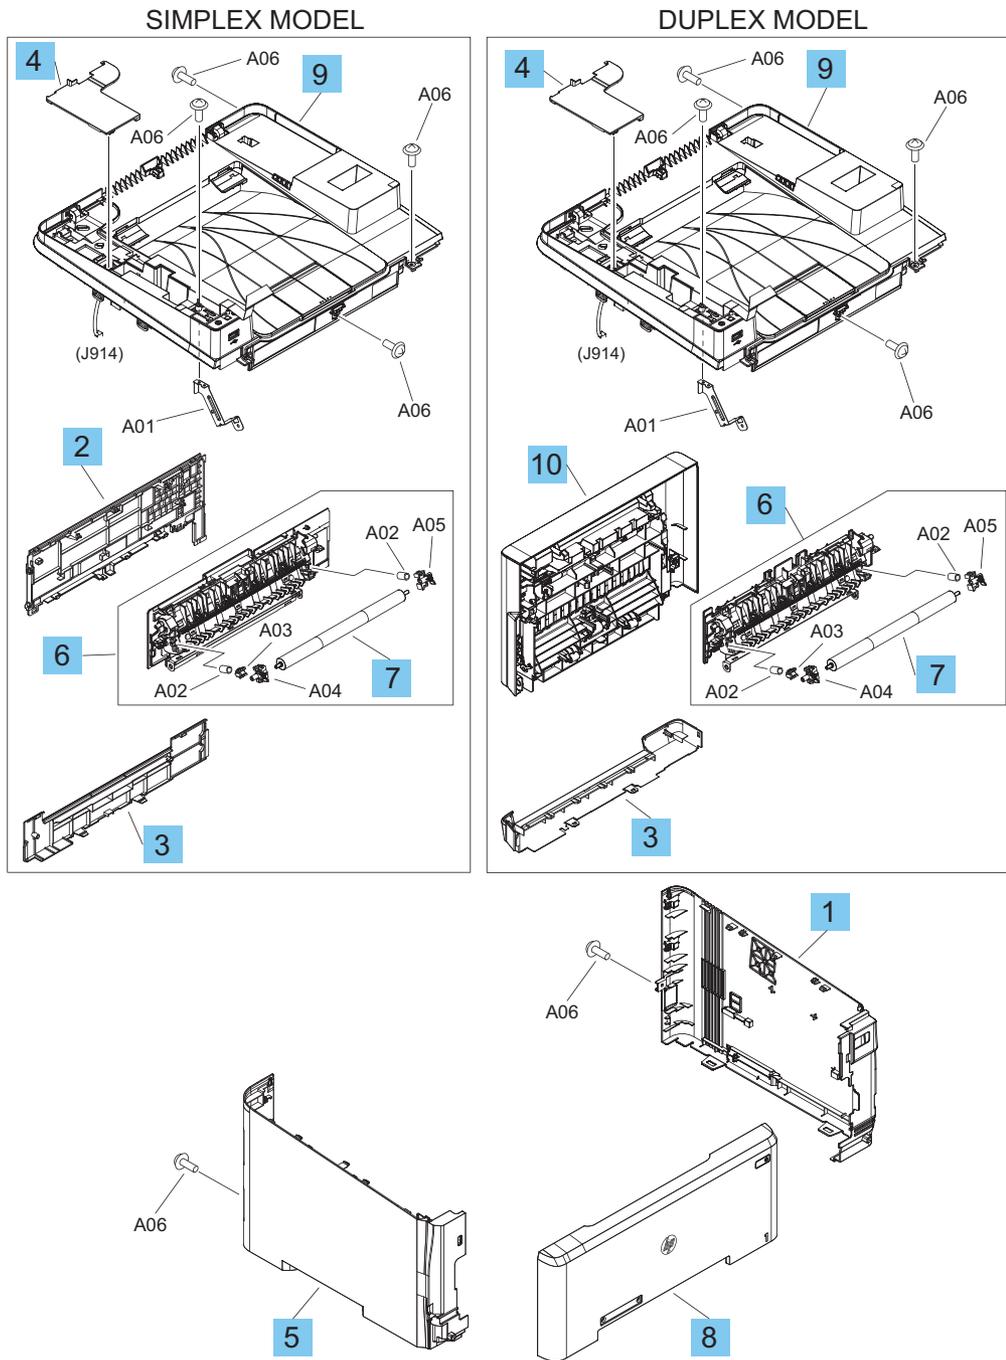


**Table 2-7 Covers (M278-M281)**

Ref	Description	Part number	Qty
1	Cover, right	RC5-2029-000CN	1
2	Cover, rear (simplex models)	RC4-3817-000CN	1
3	Cover, lower rear (duplex models)	RL2-3225-000CN	1
3	Cover, lower rear (simplex models)	RC5-3022-000CN	1
4	Cover, flat cable	RC4-3997-000CN	1
5	Cover, left	RC5-2034-000CN	1
6	Rear door assembly (duplex models)	RM2-5580-000CN	1
6	Rear door assembly (simplex models)	RM2-2489-000CN	1
7	Secondary transfer roller	RM2-5906-000CN	1
8	Front door assembly	RM2-5591-000CN	1
9	Top cover assembly	RM2-2403-000CN	1
10	Duplex door assembly (duplex models)	RM2-5867-000CN	1
11	Power button assembly	RM2-2495-000CN	1
Not shown	Control panel (M278-M281)	T6B80-60101	1

# Parts and diagrams: Internal components

## Internal components (1 of 4)

Figure 2-8 Internal components (1 of 4)

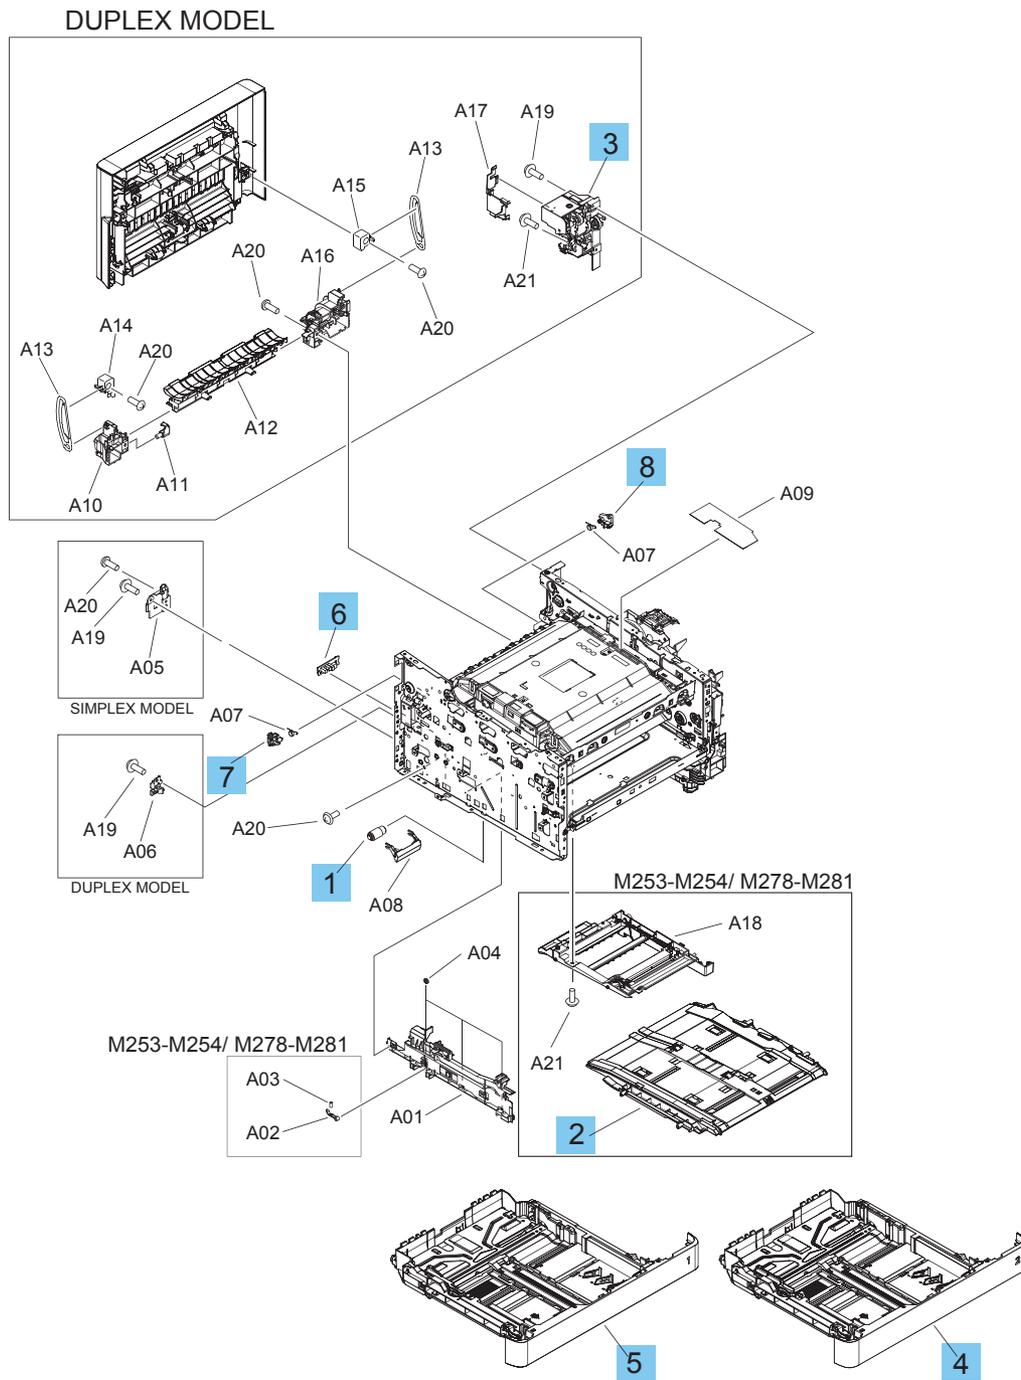


**Table 2-8 Internal components (1 of 4)**

Ref	Description	Part number	Qty
1	Separation roller assembly	RM2-5881-000CN	1
2	Priority feed slot tray (M253-M254, M278-281 models)	RM2-1693-000CN	1
3	Duplex drive assembly (duplex M253-M254, M278-M281 models)	RM2-5872-000CN	1
4	Cassette tray (M253-M254 models)	RM2-1679-000CN	1
4	Cassette tray (M278-M281 models)	RM2-1683-000CN	1
5	Cassette tray (M153-M154 models)	RM2-1684-000CN	1
5	Cassette tray (M178-M181 models)	RM2-1688-000CN	1
6	Environment sensor PCA assembly	RM2-9510-000CN	1
7	Arm lock, left	RC4-3848-000CN	1
8	Arm lock, right	RC4-3847-000CN	XXX

## Internal components (2 of 4)

Figure 2-9 Internal components (2 of 4)

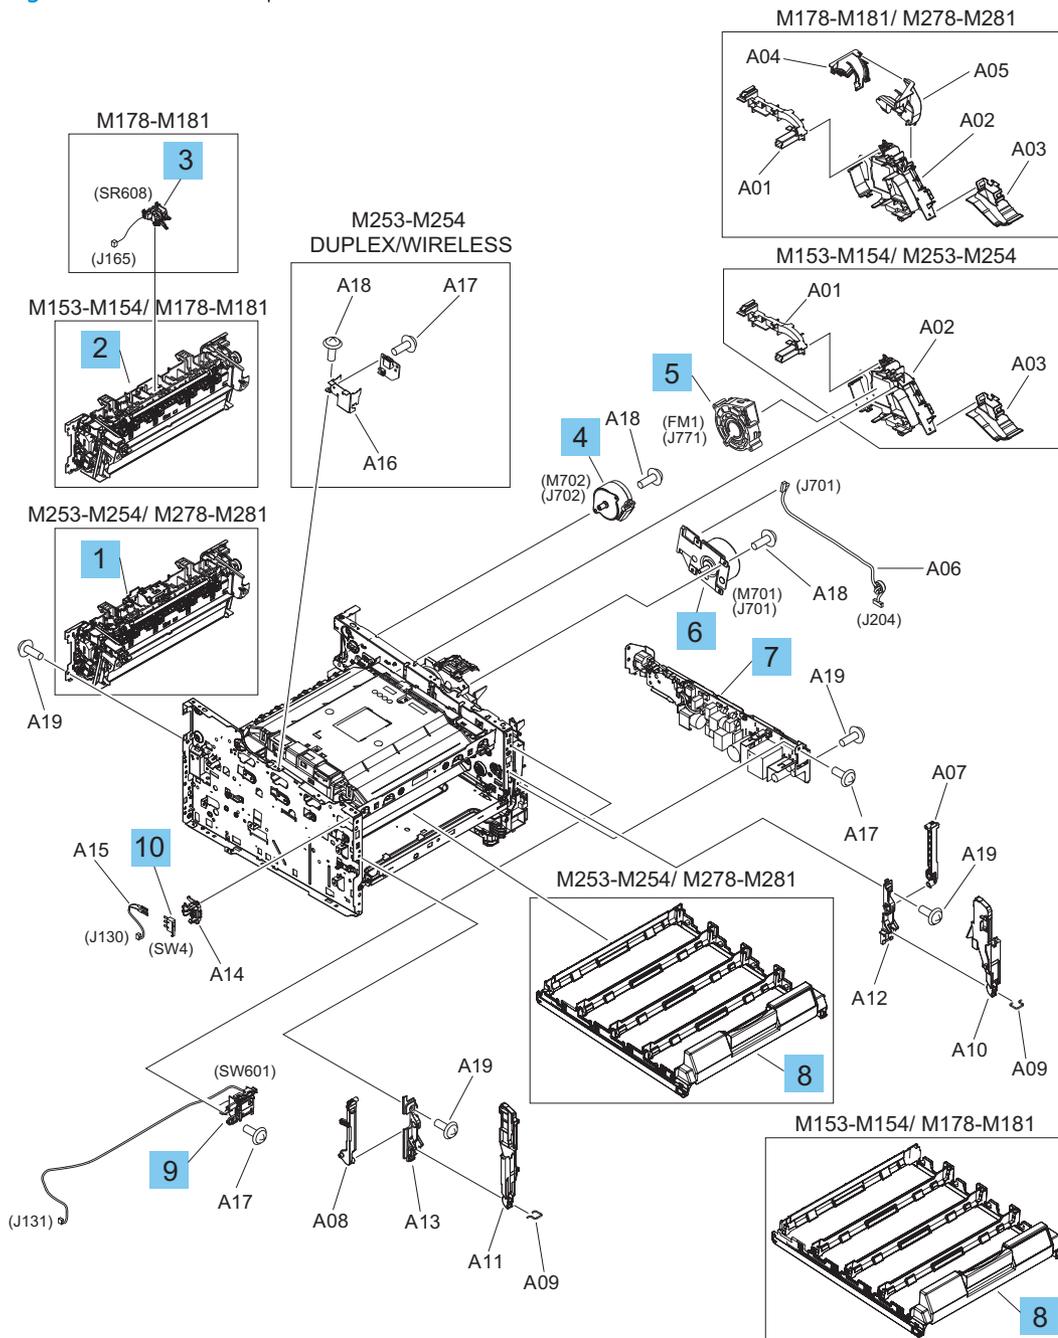


**Table 2-9 Internal components (2 of 4)**

Ref	Description	Part number	Qty
1	Fuser Assembly 110V (duplex M253-M254, M278-M281 models)	RM2-2487-000CN	1
1	Fuser assembly 220V (duplex M253-M254, M278-M281 models)	RM2-1673-000CN	1
1	Fuser assembly 220V (simplex M253-M254, M278-M281 models)	RM2-2488-000CN	1
2	Fuser assembly 110V (M153-M154, M178-M181 models)	RM2-5581-000CN	1
2	Fuser assembly 220V (M153-M154, M178-M181 models)	RM2-5582-000CN	1
3	Paper delivery sensor assembly (M178-M181 models)	RM2-5895-000CN	1
4	Stepping motor (M702) (M253-M254, M278-M281 models)	RK2-9471-000CN	1
4	Fuser motor assembly (M153-M154, M178-M181 models)	RM2-7409-000CN	1
5	Fan (FM1)	RK2-6425-000CN	1
6	Main motor assembly (M701)	RM2-8054-000CN	1
7	LVPS PCA 110V	RM2-2428-000CN	1
7	LVPS PCA 220V	RM2-2429-000CN	1
8	Cartridge tray assembly (M253-M254, M278-M281 models)	RM2-2396-000CN	1
8	Cartridge tray assembly (M153-M154, M178-M181 models)	RM2-2397-000CN	1
9	Power supply switch assembly (SW601)	RM2-5896-000CN	1
10	Microswitch (SW4)	RK2-0534-000CN	1

## Internal components (3 of 4)

Figure 2-10 Internal components (3 of 4)

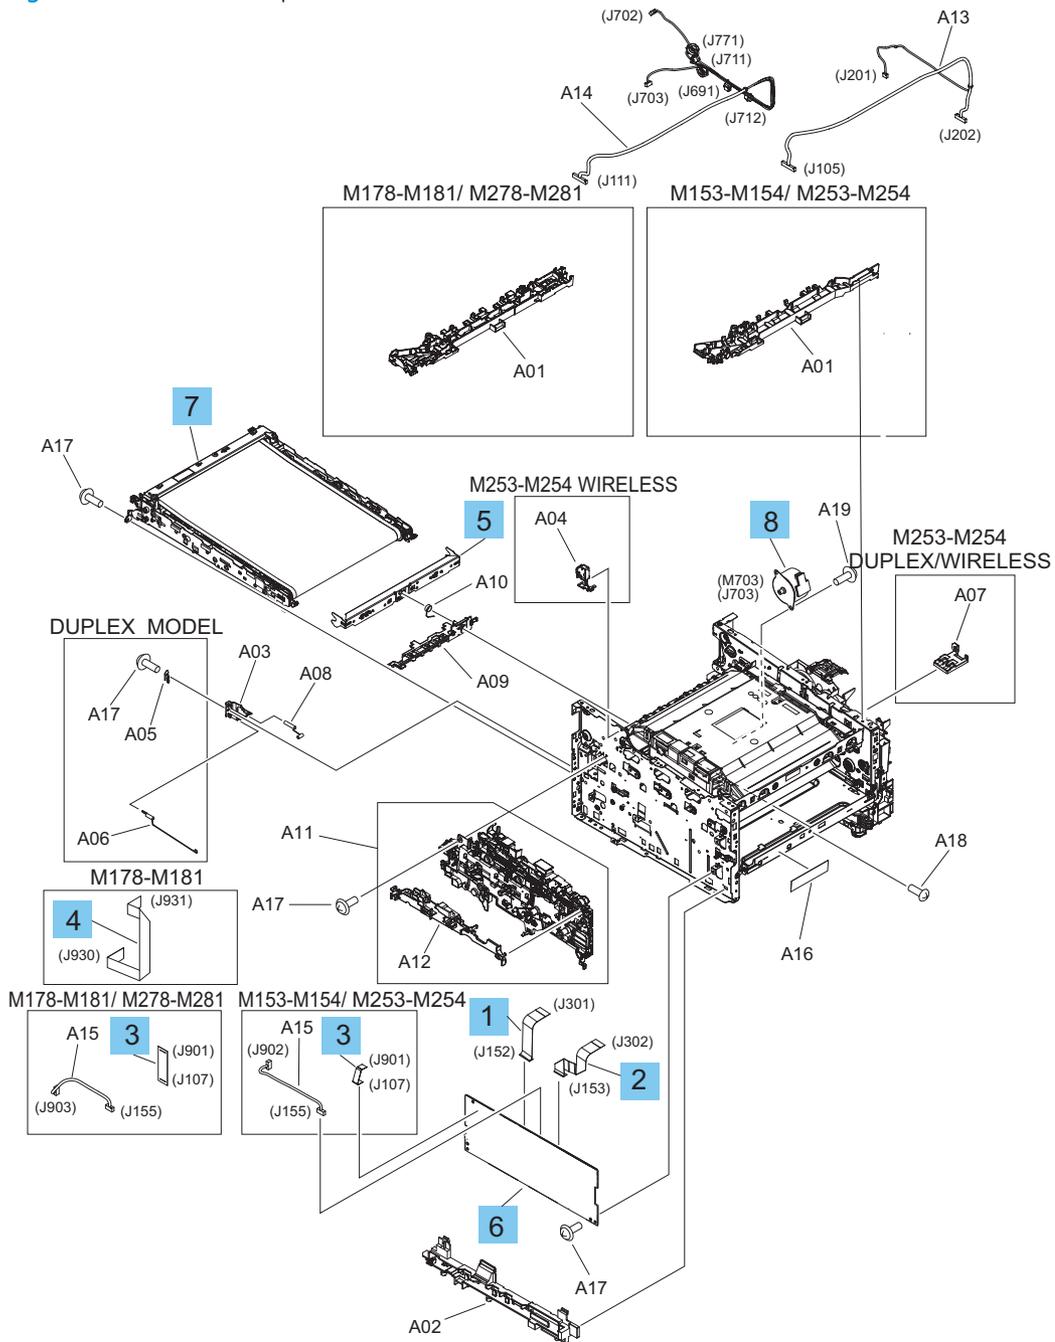


**Table 2-10 Internal components (3 of 4)**

Ref	Description	Part number	Qty
1	Cable, flat flexible	RK2-6383-000CN	1
2	Cable, flat flexible	RK2-8980-000CN	1
3	Cable, flat flexible (M253-M254, M153-M154 models)	RK2-6398-000CN	1
3	Cable, flat flexible (M278-M281, M178-M181 models)	RM3-7106-000CN	1
4	Cable, flat flexible (M178-M181 models)	RK2-9779-000CN	1
5	Density detect sensor assembly	RM2-5874-000CN	1
6	Engine Controller assembly (duplex M253-M254, M278-M281 models)	RM2-9574-000CN	1
6	Engine controller assembly (simplex M253-M254, M278-M281 models)	RM2-9575-000CN	1
6	Engine controller assembly (M153-M154, M178-M181 models)	RM2-9576-000CN	1
7	ITB assembly	RM2-5907-000CN	1
8	Stepping motor (M703) (M253-M254, M278-M281 models)	RK2-9730-000CN	1
8	Stepping motor (M703) (M153-M154, M178-M181 models)	RK2-9761-000CN	1

## Internal components (4 of 4)

Figure 2-11 Internal components (4 of 4)

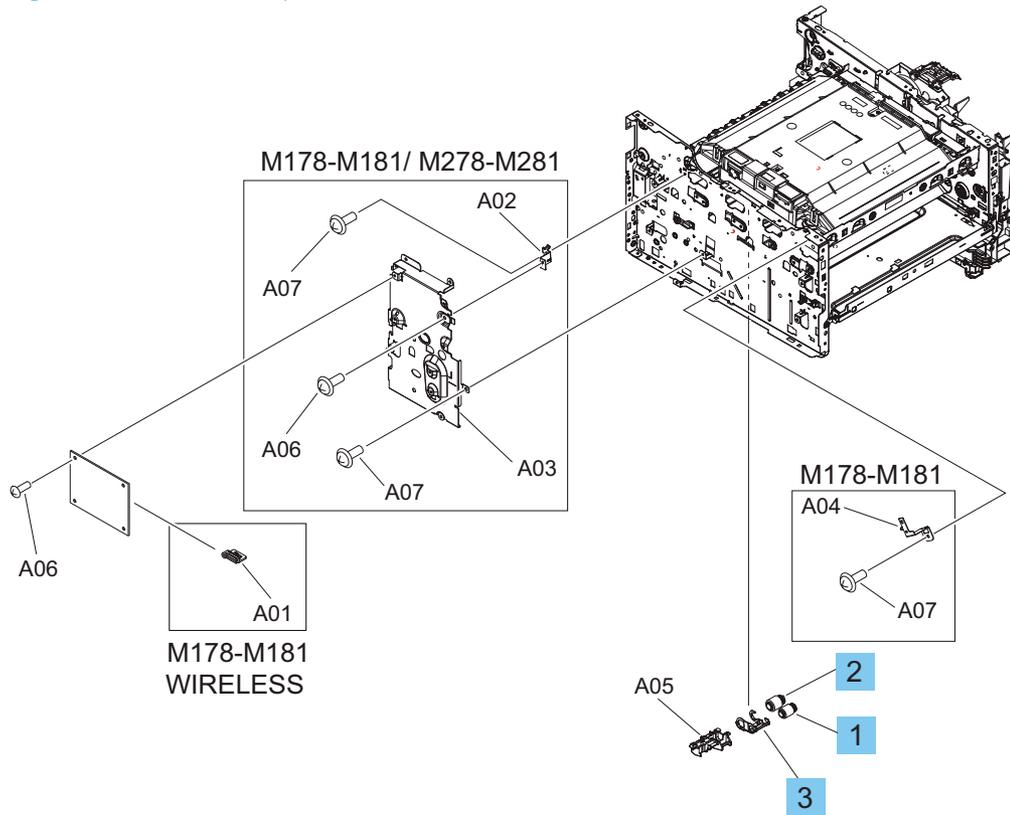

**Table 2-11 Internal components (4 of 4)**

Ref	Description	Part number	Qty
1	Paper pick up roller assembly	RM2-5576-000CN	1
2	Paper feed roller assembly	RM2-5577-000CN	1
3	Roller case	RC5-1975-000CN	1

# Alphabetical parts list

**Table 2-12** Alphabetical parts list

Description	Part number	Table and page
ADF assembly	RM2-2419-000CN	<a href="#">Image scanner and document feeder on page 687</a>
ADF base assembly	RM2-1183-000CN	<a href="#">Image scanner and document feeder on page 687</a>
ADF base assembly	B3Q10-60116	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>
ADF core assembly	RM2-2425-000CN	<a href="#">Image scanner and document feeder on page 687</a>
ADF core assembly	B3Q10-60112	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>
ADF FFC cable assembly	B3Q10-60162	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>
ADF front cap	B3Q10-40042	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>
ADF inner cover	B3Q10-40012	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>
ADF input tray assembly	B3Q10-60164	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>
ADF lid hinge assembly	B3Q10-60130	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>
ADF outer cover	B3Q10-40013	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>
ADF pick assembly	B3Q10-60105	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>
ADF pick extension shaft	B3Q10-40081	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>
ADF simplex assembly	B3Q10-60111	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>
Arm lock, left	RC4-3848-000CN	<a href="#">Internal components (1 of 4) on page 699</a>
Arm lock, right	RC4-3847-000CN	<a href="#">Internal components (1 of 4) on page 699</a>
Bearing extension	B3Q10-40074	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>
Cable, flat flexible	RK2-6383-000CN	<a href="#">Internal components (3 of 4) on page 703</a>
Cable, flat flexible	RK2-8980-000CN	<a href="#">Internal components (3 of 4) on page 703</a>
Cable, flat flexible (M178-M181 models)	RK2-9779-000CN	<a href="#">Internal components (3 of 4) on page 703</a>

**Table 2-12** Alphabetical parts list (continued)

Description	Part number	Table and page
Cable, flat flexible (M253-M254, M153-M154 models)	RK2-6398-000CN	<a href="#">Internal components (3 of 4) on page 703</a>
Cable, flat flexible (M278-M281, M178-M181 models)	RM3-7106-000CN	<a href="#">Internal components (3 of 4) on page 703</a>
Cartridge tray assembly (M153-M154, M178-M181 models)	RM2-2397-000CN	<a href="#">Internal components (2 of 4) on page 701</a>
Cartridge tray assembly (M253-M254, M278-M281 models)	RM2-2396-000CN	<a href="#">Internal components (2 of 4) on page 701</a>
Cassette tray (M153-M154 models)	RM2-1684-000CN	<a href="#">Internal components (1 of 4) on page 699</a>
Cassette tray (M178-M181 models)	RM2-1688-000CN	<a href="#">Internal components (1 of 4) on page 699</a>
Cassette tray (M253-M254 models)	RM2-1679-000CN	<a href="#">Internal components (1 of 4) on page 699</a>
Cassette tray (M278-M281 models)	RM2-1683-000CN	<a href="#">Internal components (1 of 4) on page 699</a>
Control panel (M154 non-wireless model)	RM2-9558-000CN	<a href="#">Covers (M153-M154) on page 691</a>
Control panel (M154 wireless model)	RM2-9557-000CN	<a href="#">Covers (M153-M154) on page 691</a>
Control panel (M254dw touchscreen)	T6B59-60101	<a href="#">Covers (M253-M254) on page 695</a>
Control panel (M278-M281)	T6B80-60101	<a href="#">Covers (M278-M281) on page 697</a>
Control panel mount base (M254dw touchscreen)	B3Q09-60101	<a href="#">Covers (M253-M254) on page 695</a>
Control panel, 2-line LCD (M180nw)	T6B74-60101	<a href="#">Covers (M178-M181) on page 693</a>
Control panel, 2-line LCD with 10-keys (M181fw)	T6B71-60105	<a href="#">Covers (M178-M181) on page 693</a>
Control panel, LED (M180n)	T6B70-60106	<a href="#">Covers (M178-M181) on page 693</a>
Cover, flat cable	RC5-3043-000CN	<a href="#">Covers (M178-M181) on page 693</a>
Cover, flat cable	RC4-3997-000CN	<a href="#">Covers (M278-M281) on page 697</a>
Cover, left	RC5-2028-000CN	<a href="#">Covers (M253-M254) on page 695</a>
Cover, left	RC5-2034-000CN	<a href="#">Covers (M278-M281) on page 697</a>
Cover, left (3-in-1 and 3-in-1 network wireless models)	RL2-3189-000CN	<a href="#">Covers (M178-M181) on page 693</a>

**Table 2-12** Alphabetical parts list (continued)

Description	Part number	Table and page
Cover, left (4-in-1 models)	RC5-2034-000CN	<a href="#">Covers (M178-M181) on page 693</a>
Cover, left (non-wireless model)	RL2-3224-000CN	<a href="#">Covers (M153-M154) on page 691</a>
Cover, left (wireless model)	RC5-2028-000CN	<a href="#">Covers (M153-M154) on page 691</a>
Cover, lower rear	RC5-3022-000CN	<a href="#">Covers (M153-M154) on page 691</a>
Cover, lower rear	RC5-3022-000CN	<a href="#">Covers (M178-M181) on page 693</a>
Cover, lower rear (duplex models)	RL2-3225-000CN	<a href="#">Covers (M253-M254) on page 695</a>
Cover, lower rear (duplex models)	RL2-3225-000CN	<a href="#">Covers (M278-M281) on page 697</a>
Cover, lower rear (simplex models)	RC5-3022-000CN	<a href="#">Covers (M253-M254) on page 695</a>
Cover, lower rear (simplex models)	RC5-3022-000CN	<a href="#">Covers (M278-M281) on page 697</a>
Cover, rear	RC4-3817-000CN	<a href="#">Covers (M153-M154) on page 691</a>
Cover, rear	RC4-3817-000CN	<a href="#">Covers (M178-M181) on page 693</a>
Cover, rear (simplex models)	RC4-3817-000CN	<a href="#">Covers (M253-M254) on page 695</a>
Cover, rear (simplex models)	RC4-3817-000CN	<a href="#">Covers (M278-M281) on page 697</a>
Cover, right	RC5-2029-000CN	<a href="#">Covers (M153-M154) on page 691</a>
Cover, right	RC5-2029-000CN	<a href="#">Covers (M178-M181) on page 693</a>
Cover, right	RC5-2029-000CN	<a href="#">Covers (M253-M254) on page 695</a>
Cover, right	RC5-2029-000CN	<a href="#">Covers (M278-M281) on page 697</a>
Density detect sensor assembly	RM2-5874-000CN	<a href="#">Internal components (3 of 4) on page 703</a>
Document lid assembly	RM2-2411-000CN	<a href="#">Image scanner (flatbed) on page 685</a>
Duplex door assembly (duplex models)	RM2-5867-000CN	<a href="#">Covers (M253-M254) on page 695</a>
Duplex door assembly (duplex models)	RM2-5867-000CN	<a href="#">Covers (M278-M281) on page 697</a>

**Table 2-12 Alphabetical parts list (continued)**

Description	Part number	Table and page
Duplex drive assembly (duplex M253-M254, M278-M281 models)	RM2-5872-000CN	<a href="#">Internal components (1 of 4) on page 699</a>
Engine Controller assembly (duplex M253-M254, M278-M281 models)	RM2-9574-000CN	<a href="#">Internal components (3 of 4) on page 703</a>
Engine controller assembly (M153-M154, M178-M181 models)	RM2-9576-000CN	<a href="#">Internal components (3 of 4) on page 703</a>
Engine controller assembly (simplex M253-M254, M278-M281 models)	RM2-9575-000CN	<a href="#">Internal components (3 of 4) on page 703</a>
Environment sensor PCA assembly	RM2-9510-000CN	<a href="#">Internal components (1 of 4) on page 699</a>
Fan (FM1)	RK2-6425-000CN	<a href="#">Internal components (2 of 4) on page 701</a>
Front door assembly	RM2-2400-000CN	<a href="#">Covers (M153-M154) on page 691</a>
Front door assembly	RM2-2401-000CN	<a href="#">Covers (M178-M181) on page 693</a>
Front door assembly	RM2-5590-000CN	<a href="#">Covers (M253-M254) on page 695</a>
Front door assembly	RM2-5591-000CN	<a href="#">Covers (M278-M281) on page 697</a>
Fuser Assembly 110V (duplex M253-M254, M278-M281 models)	RM2-2487-000CN	<a href="#">Internal components (2 of 4) on page 701</a>
Fuser assembly 110V (M153-M154, M178-M181 models)	RM2-5581-000CN	<a href="#">Internal components (2 of 4) on page 701</a>
Fuser assembly 220V (duplex M253-M254, M278-M281 models)	RM2-1673-000CN	<a href="#">Internal components (2 of 4) on page 701</a>
Fuser assembly 220V (M153-M154, M178-M181 models)	RM2-5582-000CN	<a href="#">Internal components (2 of 4) on page 701</a>
Fuser assembly 220V (simplex M253-M254, M278-M281 models)	RM2-2488-000CN	<a href="#">Internal components (2 of 4) on page 701</a>
Fuser motor assembly (M153-M154, M178-M181 models)	RM2-7409-000CN	<a href="#">Internal components (2 of 4) on page 701</a>
Image scanner assembly	RM2-2412-000CN	<a href="#">Image scanner (flatbed) on page 685</a>
Image scanner assembly	RM2-2416-000CN	<a href="#">Image scanner and document feeder on page 687</a>
Input tray assembly	RM2-2420-000CN	<a href="#">Image scanner and document feeder on page 687</a>
Integrated scanner assembly (document feeder and scanner)	B3Q10-60174	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>
ISA lift assembly	B3Q10-60128	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>

**Table 2-12** Alphabetical parts list (continued)

Description	Part number	Table and page
ISA lift slider pin	B3Q10-40041	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>
ITB assembly	RM2-5907-000CN	<a href="#">Internal components (3 of 4) on page 703</a>
LVPS PCA 110V	RM2-2428-000CN	<a href="#">Internal components (2 of 4) on page 701</a>
LVPS PCA 220V	RM2-2429-000CN	<a href="#">Internal components (2 of 4) on page 701</a>
Main motor assembly (M701)	RM2-8054-000CN	<a href="#">Internal components (2 of 4) on page 701</a>
Microswitch (SW4)	RK2-0534-000CN	<a href="#">Internal components (2 of 4) on page 701</a>
Name plate (3-in-1 models)	RC5-4049-000CN	<a href="#">Covers (M178-M181) on page 693</a>
Name plate (3-in-1 network wireless models)	RC5-4051-000CN	<a href="#">Covers (M178-M181) on page 693</a>
Name plate (4-in-1 models)	RC5-4050-000CN	<a href="#">Covers (M178-M181) on page 693</a>
Name plate (non-wireless models)	RC5-4047-000CN	<a href="#">Covers (M153-M154) on page 691</a>
Name plate (wireless models)	RC5-4048-000CN	<a href="#">Covers (M153-M154) on page 691</a>
Nameplate (M254dn)	RC5-4046-000CN	<a href="#">Covers (M253-M254) on page 695</a>
Nameplate (M254dw)	RC5-4045-000CN	<a href="#">Covers (M253-M254) on page 695</a>
Nameplate (M254nw)	RC5-4044-000CN	<a href="#">Covers (M253-M254) on page 695</a>
Paper delivery sensor assembly (M178-M181 models)	RM2-5895-000CN	<a href="#">Internal components (2 of 4) on page 701</a>
Paper feed roller assembly	RM2-5577-000CN	<a href="#">Internal components (4 of 4) on page 705</a>
Paper pick up roller assembly	RM2-5576-000CN	<a href="#">Internal components (4 of 4) on page 705</a>
Power button assembly	RM2-2495-000CN	<a href="#">Covers (M178-M181) on page 693</a>
Power button assembly	RM2-2495-000CN	<a href="#">Covers (M253-M254) on page 695</a>
Power button assembly	RM2-2495-000CN	<a href="#">Covers (M278-M281) on page 697</a>
Power supply switch assembly (SW601)	RM2-5896-000CN	<a href="#">Internal components (2 of 4) on page 701</a>

**Table 2-12** Alphabetical parts list (continued)

Description	Part number	Table and page
Pre-pick arm assembly	RM2-1187-000CN	<a href="#">Image scanner and document feeder on page 687</a>
Priority feed slot tray (M253-M254, M278-281 models)	RM2-1693-000CN	<a href="#">Internal components (1 of 4) on page 699</a>
Rear door assembly	RM2-2489-000CN	<a href="#">Covers (M153-M154) on page 691</a>
Rear door assembly	RM2-2489-000CN	<a href="#">Covers (M178-M181) on page 693</a>
Rear door assembly (duplex models)	RM2-5580-000CN	<a href="#">Covers (M253-M254) on page 695</a>
Rear door assembly (duplex models)	RM2-5580-000CN	<a href="#">Covers (M278-M281) on page 697</a>
Rear door assembly (simplex models)	RM2-2489-000CN	<a href="#">Covers (M253-M254) on page 695</a>
Rear door assembly (simplex models)	RM2-2489-000CN	<a href="#">Covers (M278-M281) on page 697</a>
Roller case	RC5-1975-000CN	<a href="#">Internal components (4 of 4) on page 705</a>
Scanner assembly	B3Q10-60102	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>
Secondary transfer roller	RM2-5906-000CN	<a href="#">Covers (M153-M154) on page 691</a>
Secondary transfer roller	RM2-5906-000CN	<a href="#">Covers (M178-M181) on page 693</a>
Secondary transfer roller	RM2-5906-000CN	<a href="#">Covers (M253-M254) on page 695</a>
Secondary transfer roller	RM2-5906-000CN	<a href="#">Covers (M278-M281) on page 697</a>
Separation pad	B3Q10-40080	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>
Separation pad spring	B3Q10-00019	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>
Separation pad support	B3Q10-40079	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>
Separation roller assembly	RM2-5881-000CN	<a href="#">Internal components (1 of 4) on page 699</a>
Stepping motor (M702) (M253-M254, M278-M281 models)	RK2-9471-000CN	<a href="#">Internal components (2 of 4) on page 701</a>
Stepping motor (M703) (M153-M154, M178-M181 models)	RK2-9761-000CN	<a href="#">Internal components (3 of 4) on page 703</a>
Stepping motor (M703) (M253-M254, M278-M281 models)	RK2-9730-000CN	<a href="#">Internal components (3 of 4) on page 703</a>

**Table 2-12** Alphabetical parts list (continued)

Description	Part number	Table and page
Top cover	RM2-1180-000CN	<a href="#">Image scanner and document feeder on page 687</a>
Top cover assembly	RM2-2482-000CN	<a href="#">Covers (M178-M181) on page 693</a>
Top cover assembly	RM2-2403-000CN	<a href="#">Covers (M278-M281) on page 697</a>
Top cover assembly (duplex network models)	RM2-2491-000CN	<a href="#">Covers (M253-M254) on page 695</a>
Top cover assembly (duplex wireless models)	RM2-2496-000CN	<a href="#">Covers (M253-M254) on page 695</a>
Top cover assembly (non-wireless models)	RM2-2405-000CN	<a href="#">Covers (M153-M154) on page 691</a>
Top cover assembly (simplex models)	RM2-2421-000CN	<a href="#">Covers (M253-M254) on page 695</a>
Top cover assembly (wireless models)	RM2-2424-000CN	<a href="#">Covers (M153-M154) on page 691</a>

## Numerical parts list

**Table 2-13 Numerical parts list**

Part number	Description	Table and page
B3Q09-60101	Control panel mount base (M254dw touchscreen)	<a href="#">Covers (M253-M254) on page 695</a>
B3Q10-00019	Separation pad spring	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>
B3Q10-40012	ADF inner cover	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>
B3Q10-40013	ADF outer cover	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>
B3Q10-40041	ISA lift slider pin	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>
B3Q10-40042	ADF front cap	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>
B3Q10-40074	Bearing extension	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>
B3Q10-40079	Separation pad support	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>
B3Q10-40080	Separation pad	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>
B3Q10-40081	ADF pick extension shaft	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>
B3Q10-60102	Scanner assembly	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>
B3Q10-60105	ADF pick assembly	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>
B3Q10-60111	ADF simplex assembly	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>
B3Q10-60112	ADF core assembly	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>
B3Q10-60116	ADF base assembly	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>
B3Q10-60128	ISA lift assembly	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>
B3Q10-60130	ADF lid hinge assembly	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>
B3Q10-60162	ADF FFC cable assembly	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>
B3Q10-60164	ADF input tray assembly	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>
B3Q10-60174	Integrated scanner assembly (document feeder and scanner)	<a href="#">Image scanner and document feeder (M278-M281) on page 689</a>

**Table 2-13 Numerical parts list (continued)**

Part number	Description	Table and page
RC4-3817-000CN	Cover, rear	<a href="#">Covers (M153-M154) on page 691</a>
RC4-3817-000CN	Cover, rear	<a href="#">Covers (M178-M181) on page 693</a>
RC4-3817-000CN	Cover, rear (simplex models)	<a href="#">Covers (M253-M254) on page 695</a>
RC4-3817-000CN	Cover, rear (simplex models)	<a href="#">Covers (M278-M281) on page 697</a>
RC4-3847-000CN	Arm lock, right	<a href="#">Internal components (1 of 4) on page 699</a>
RC4-3848-000CN	Arm lock, left	<a href="#">Internal components (1 of 4) on page 699</a>
RC4-3997-000CN	Cover, flat cable	<a href="#">Covers (M278-M281) on page 697</a>
RC5-1975-000CN	Roller case	<a href="#">Internal components (4 of 4) on page 705</a>
RC5-2028-000CN	Cover, left (wireless model)	<a href="#">Covers (M153-M154) on page 691</a>
RC5-2029-000CN	Cover, right	<a href="#">Covers (M153-M154) on page 691</a>
RC5-2029-000CN	Cover, right	<a href="#">Covers (M178-M181) on page 693</a>
RC5-2029-000CN	Cover, right	<a href="#">Covers (M253-M254) on page 695</a>
RC5-2029-000CN	Cover, right	<a href="#">Covers (M278-M281) on page 697</a>
RC5-2034-000CN	Cover, left (4-in-1 models)	<a href="#">Covers (M178-M181) on page 693</a>
RC5-2034-000CN	Cover, left	<a href="#">Covers (M278-M281) on page 697</a>
RC5-3022-000CN	Cover, lower rear	<a href="#">Covers (M153-M154) on page 691</a>
RC5-3022-000CN	Cover, lower rear	<a href="#">Covers (M178-M181) on page 693</a>
RC5-3022-000CN	Cover, lower rear (simplex models)	<a href="#">Covers (M253-M254) on page 695</a>
RC5-3022-000CN	Cover, lower rear (simplex models)	<a href="#">Covers (M278-M281) on page 697</a>
RC5-3043-000CN	Cover, flat cable	<a href="#">Covers (M178-M181) on page 693</a>
RC5-4044-000CN	Nameplate (M254nw)	<a href="#">Covers (M253-M254) on page 695</a>

**Table 2-13 Numerical parts list (continued)**

Part number	Description	Table and page
RC5-4045-000CN	Nameplate (M254dw)	<a href="#">Covers (M253-M254) on page 695</a>
RC5-4046-000CN	Nameplate (M254dn)	<a href="#">Covers (M253-M254) on page 695</a>
RC5-4047-000CN	Name plate (non-wireless models)	<a href="#">Covers (M153-M154) on page 691</a>
RC5-4048-000CN	Name plate (wireless models)	<a href="#">Covers (M153-M154) on page 691</a>
RC5-4049-000CN	Name plate (3-in-1 models)	<a href="#">Covers (M178-M181) on page 693</a>
RC5-4050-000CN	Name plate (4-in-1 models)	<a href="#">Covers (M178-M181) on page 693</a>
RC5-4051-000CN	Name plate (3-in-1 network wireless models)	<a href="#">Covers (M178-M181) on page 693</a>
RC5-2028-000CN	Cover, left	<a href="#">Covers (M253-M254) on page 695</a>
RK2-0534-000CN	Microswitch (SW4)	<a href="#">Internal components (2 of 4) on page 701</a>
RK2-6383-000CN	Cable, flat flexible	<a href="#">Internal components (3 of 4) on page 703</a>
RK2-6398-000CN	Cable, flat flexible (M253-M254, M153-M154 models)	<a href="#">Internal components (3 of 4) on page 703</a>
RK2-6425-000CN	Fan (FM1)	<a href="#">Internal components (2 of 4) on page 701</a>
RK2-8980-000CN	Cable, flat flexible	<a href="#">Internal components (3 of 4) on page 703</a>
RK2-9471-000CN	Stepping motor (M702) (M253-M254, M278-M281 models)	<a href="#">Internal components (2 of 4) on page 701</a>
RK2-9730-000CN	Stepping motor (M703) (M253-M254, M278-M281 models)	<a href="#">Internal components (3 of 4) on page 703</a>
RK2-9761-000CN	Stepping motor (M703) (M153-M154, M178-M181 models)	<a href="#">Internal components (3 of 4) on page 703</a>
RK2-9779-000CN	Cable, flat flexible (M178-M181 models)	<a href="#">Internal components (3 of 4) on page 703</a>
RL2-3189-000CN	Cover, left (3-in-1 and 3-in-1 network wireless models)	<a href="#">Covers (M178-M181) on page 693</a>
RL2-3224-000CN	Cover, left (non-wireless model)	<a href="#">Covers (M153-M154) on page 691</a>
RL2-3225-000CN	Cover, lower rear (duplex models)	<a href="#">Covers (M253-M254) on page 695</a>
RL2-3225-000CN	Cover, lower rear (duplex models)	<a href="#">Covers (M278-M281) on page 697</a>

**Table 2-13 Numerical parts list (continued)**

Part number	Description	Table and page
RM2-1180-000CN	Top cover	<a href="#">Image scanner and document feeder on page 687</a>
RM2-1183-000CN	ADF base assembly	<a href="#">Image scanner and document feeder on page 687</a>
RM2-1187-000CN	Pre-pick arm assembly	<a href="#">Image scanner and document feeder on page 687</a>
RM2-1673-000CN	Fuser assembly 220V (duplex M253-M254, M278-M281 models)	<a href="#">Internal components (2 of 4) on page 701</a>
RM2-1679-000CN	Cassette tray (M253-M254 models)	<a href="#">Internal components (1 of 4) on page 699</a>
RM2-1683-000CN	Cassette tray (M278-M281 models)	<a href="#">Internal components (1 of 4) on page 699</a>
RM2-1684-000CN	Cassette tray (M153-M154 models)	<a href="#">Internal components (1 of 4) on page 699</a>
RM2-1688-000CN	Cassette tray (M178-M181 models)	<a href="#">Internal components (1 of 4) on page 699</a>
RM2-1693-000CN	Priority feed slot tray (M253-M254, M278-281 models)	<a href="#">Internal components (1 of 4) on page 699</a>
RM2-2396-000CN	Cartridge tray assembly (M253-M254, M278-M281 models)	<a href="#">Internal components (2 of 4) on page 701</a>
RM2-2397-000CN	Cartridge tray assembly (M153-M154, M178-M181 models)	<a href="#">Internal components (2 of 4) on page 701</a>
RM2-2400-000CN	Front door assembly	<a href="#">Covers (M153-M154) on page 691</a>
RM2-2401-000CN	Front door assembly	<a href="#">Covers (M178-M181) on page 693</a>
RM2-2403-000CN	Top cover assembly	<a href="#">Covers (M278-M281) on page 697</a>
RM2-2405-000CN	Top cover assembly (non-wireless models)	<a href="#">Covers (M153-M154) on page 691</a>
RM2-2411-000CN	Document lid assembly	<a href="#">Image scanner (flatbed) on page 685</a>
RM2-2412-000CN	Image scanner assembly	<a href="#">Image scanner (flatbed) on page 685</a>
RM2-2416-000CN	Image scanner assembly	<a href="#">Image scanner and document feeder on page 687</a>
RM2-2419-000CN	ADF assembly	<a href="#">Image scanner and document feeder on page 687</a>
RM2-2420-000CN	Input tray assembly	<a href="#">Image scanner and document feeder on page 687</a>
RM2-2421-000CN	Top cover assembly (simplex models)	<a href="#">Covers (M253-M254) on page 695</a>

**Table 2-13 Numerical parts list (continued)**

Part number	Description	Table and page
RM2-2424-000CN	Top cover assembly (wireless models)	<a href="#">Covers (M153-M154) on page 691</a>
RM2-2425-000CN	ADF core assembly	<a href="#">Image scanner and document feeder on page 687</a>
RM2-2428-000CN	LVPS PCA 110V	<a href="#">Internal components (2 of 4) on page 701</a>
RM2-2429-000CN	LVPS PCA 220V	<a href="#">Internal components (2 of 4) on page 701</a>
RM2-2482-000CN	Top cover assembly	<a href="#">Covers (M178-M181) on page 693</a>
RM2-2487-000CN	Fuser Assembly 110V (duplex M253-M254, M278-M281 models)	<a href="#">Internal components (2 of 4) on page 701</a>
RM2-2488-000CN	Fuser assembly 220V (simplex M253-M254, M278-M281 models)	<a href="#">Internal components (2 of 4) on page 701</a>
RM2-2489-000CN	Rear door assembly	<a href="#">Covers (M153-M154) on page 691</a>
RM2-2489-000CN	Rear door assembly	<a href="#">Covers (M178-M181) on page 693</a>
RM2-2489-000CN	Rear door assembly (simplex models)	<a href="#">Covers (M253-M254) on page 695</a>
RM2-2489-000CN	Rear door assembly (simplex models)	<a href="#">Covers (M278-M281) on page 697</a>
RM2-2491-000CN	Top cover assembly (duplex network models)	<a href="#">Covers (M253-M254) on page 695</a>
RM2-2495-000CN	Power button assembly	<a href="#">Covers (M178-M181) on page 693</a>
RM2-2495-000CN	Power button assembly	<a href="#">Covers (M253-M254) on page 695</a>
RM2-2495-000CN	Power button assembly	<a href="#">Covers (M278-M281) on page 697</a>
RM2-2496-000CN	Top cover assembly (duplex wireless models)	<a href="#">Covers (M253-M254) on page 695</a>
RM2-5576-000CN	Paper pick up roller assembly	<a href="#">Internal components (4 of 4) on page 705</a>
RM2-5577-000CN	Paper feed roller assembly	<a href="#">Internal components (4 of 4) on page 705</a>
RM2-5580-000CN	Rear door assembly (duplex models)	<a href="#">Covers (M253-M254) on page 695</a>
RM2-5580-000CN	Rear door assembly (duplex models)	<a href="#">Covers (M278-M281) on page 697</a>
RM2-5581-000CN	Fuser assembly 110V (M153-M154, M178-M181 models)	<a href="#">Internal components (2 of 4) on page 701</a>

**Table 2-13 Numerical parts list (continued)**

Part number	Description	Table and page
RM2-5582-000CN	Fuser assembly 220V (M153-M154, M178-M181 models)	<a href="#">Internal components (2 of 4) on page 701</a>
RM2-5590-000CN	Front door assembly	<a href="#">Covers (M253-M254) on page 695</a>
RM2-5591-000CN	Front door assembly	<a href="#">Covers (M278-M281) on page 697</a>
RM2-5867-000CN	Duplex door assembly (duplex models)	<a href="#">Covers (M253-M254) on page 695</a>
RM2-5867-000CN	Duplex door assembly (duplex models)	<a href="#">Covers (M278-M281) on page 697</a>
RM2-5872-000CN	Duplex drive assembly (duplex M253-M254, M278-M281 models)	<a href="#">Internal components (1 of 4) on page 699</a>
RM2-5874-000CN	Density detect sensor assembly	<a href="#">Internal components (3 of 4) on page 703</a>
RM2-5881-000CN	Separation roller assembly	<a href="#">Internal components (1 of 4) on page 699</a>
RM2-5895-000CN	Paper delivery sensor assembly (M178-M181 models)	<a href="#">Internal components (2 of 4) on page 701</a>
RM2-5896-000CN	Power supply switch assembly (SW601)	<a href="#">Internal components (2 of 4) on page 701</a>
RM2-5906-000CN	Secondary transfer roller	<a href="#">Covers (M153-M154) on page 691</a>
RM2-5906-000CN	Secondary transfer roller	<a href="#">Covers (M178-M181) on page 693</a>
RM2-5906-000CN	Secondary transfer roller	<a href="#">Covers (M253-M254) on page 695</a>
RM2-5906-000CN	Secondary transfer roller	<a href="#">Covers (M278-M281) on page 697</a>
RM2-5907-000CN	ITB assembly	<a href="#">Internal components (3 of 4) on page 703</a>
RM2-7409-000CN	Fuser motor assembly (M153-M154, M178-M181 models)	<a href="#">Internal components (2 of 4) on page 701</a>
RM2-8054-000CN	Main motor assembly (M701)	<a href="#">Internal components (2 of 4) on page 701</a>
RM2-9510-000CN	Environment sensor PCA assembly	<a href="#">Internal components (1 of 4) on page 699</a>
RM2-9557-000CN	Control panel (M154 wireless model)	<a href="#">Covers (M153-M154) on page 691</a>
RM2-9558-000CN	Control panel (M154 non-wireless model)	<a href="#">Covers (M153-M154) on page 691</a>
RM2-9574-000CN	Engine Controller assembly (duplex M253-M254, M278-M281 models)	<a href="#">Internal components (3 of 4) on page 703</a>

**Table 2-13 Numerical parts list (continued)**

Part number	Description	Table and page
RM2-9575-000CN	Engine controller assembly (simplex M253-M254, M278-M281 models)	<a href="#">Internal components (3 of 4) on page 703</a>
RM2-9576-000CN	Engine controller assembly (M153-M154, M178-M181 models)	<a href="#">Internal components (3 of 4) on page 703</a>
RM3-7106-000CN	Cable, flat flexible (M278-M281, M178-M181 models)	<a href="#">Internal components (3 of 4) on page 703</a>
T6B59-60101	Control panel (M254dw touchscreen)	<a href="#">Covers (M253-M254) on page 695</a>
T6B70-60106	Control panel, LED (M180n)	<a href="#">Covers (M178-M181) on page 693</a>
T6B71-60105	Control panel, 2-line LCD with 10-keys (M181fw)	<a href="#">Covers (M178-M181) on page 693</a>
T6B74-60101	Control panel, 2-line LCD (M180nw)	<a href="#">Covers (M178-M181) on page 693</a>
T6B80-60101	Control panel (M278-M281)	<a href="#">Covers (M278-M281) on page 697</a>



# Index

## A

after-service checklist 6

## B

before-service checklist 6

## C

cartridges

removing and replacing 9

cassette tray

removing and replacing 21

cassette tray pickup roller and feed roller

removing and replacing 25

cassette tray separation roller

removing and replacing 29

cautions iii

Channel partners support

HP Channel Services Network (CSN) v, 2, 676

control panel (M153-M154)

removing and replacing 170

control panel (M178-M181)

removing and replacing 180

control panel (M254dw touchscreen)

removing and replacing 206

control panel (M254nw/dn 2-line)

removing and replacing 196

control panel (M278-M281 models)

removing and replacing 217

conventions, document iii

covers

parts lists and diagrams 690

covers (M153-M154)

part numbers 690

covers (M178-M181)

part numbers 692

covers (M253-M254)

part numbers 694

covers (M278-M281)

part numbers 696

covers, doors, and panels

location diagram 38

## D

density detect sensor assembly

removing and replacing 486

document conventions iii

document feeder (M180nw, M181fw)

removing and replacing 235

document feeder (M278-M281)

removing and replacing 295

document feeder and image scanner assembly (M278-M281)

removing and replacing 286

document feeder base (M278-M281)

removing and replacing 374

document feeder base assembly

(M180nw, M181fw)

removing and replacing 265

document feeder core (M278-M281)

removing and replacing 367

document feeder core assembly

(M180nw, M181fw)

removing and replacing 254

document feeder extension bearing (M278-M281)

removing and replacing 351

document feeder flat cable (M278-M281)

removing and replacing 392

document feeder front cover (M278-M281)

removing and replacing 333

document feeder hinge (M278-M281)

removing and replacing 306

document feeder inner cover or outer cover (M278-M281)

removing and replacing 342

document feeder input tray (M180nw, M181fw)

removing and replacing 244

document feeder input tray (M278-M281)

removing and replacing 337

document feeder pick assembly (M278-M281)

removing and replacing 357

document feeder pick extension shaft (M278-M281)

removing and replacing 347

document feeder pre-pick arm (M180nw, M181fw)

removing and replacing 250

document feeder separation pad, support, and spring (M278-M281)

removing and replacing 362

document feeder top cover (M180nw, M181fw)

removing and replacing 247

document lid (M180n)

removing and replacing 223

duplexer door

removing and replacing 117

duplexing drive assembly

removing and replacing 510

## E

electrostatic discharge (ESD) 4

engine controller unit (M153-M154, M253-M254)

removing and replacing 446

engine controller unit (M178-M181, M278-M281)

removing and replacing 453

ESD electrostatic discharge (ESD) 4

**F**

fax PCA (M181, M281)  
removing and replacing 425

field-replaceable units (FRUs)  
replacing 3

formatter PCA (M153-M154, M253-M254)  
removing and replacing 431

formatter PCA (M178-M181, M278-M281)  
removing and replacing 438

front door assembly  
removing and replacing 167

FRUs (field-replaceable units)  
replacing 3

fuser  
removing and replacing 570

fuser motor  
removing and replacing 616

**H**

HP Channel Services Network (CSN)  
Channel partners support v, 2, 676

**I**

image scanner (flatbed) (M180n model)  
part numbers 684

image scanner (M180n)  
removing and replacing 225

image scanner (M180nw, M181fw)  
removing and replacing 276

image scanner (M278-M281)  
removing and replacing 317

image scanner and document feeder (M180nw and M181fw)  
part numbers 686

image scanner and document feeder (M278-M281)  
part numbers 688

image scanner lift assembly and slider pin (M278-M281)  
removing and replacing 328

Image scanners and document feeder  
parts lists and diagrams 684

installation 5  
screws 5  
*See also* replacing parts

intermediate transfer belt (ITB)  
removing 463

internal components, product  
parts lists and diagrams 698

ITB  
removing 463

**K**

kit  
instructions, power supply switch assembly 552  
instructions, secondary transfer roller 33  
instructions, toner cartridges 9

**L**

laser scanner  
warnings for servicing 3

left cover  
removing and replacing 50

location diagram  
covers, doors, and panels 38

low-voltage power supply (LVPS)  
removing and replacing 560

**M**

main fan (M153-M154 and M253-M254)  
removing and replacing 634

main fan (M178-M181 and M278-M281)  
removing and replacing 644

main motor  
removing and replacing 608

**N**

notes iii

**O**

output sensor assembly (M178-M181)  
removing and replacing 534

**P**

part numbers  
covers (M153-M154) 690  
covers (M178-M181) 692  
covers (M253-M254) 694  
covers (M278-M281) 696  
image scanner (flatbed) M180n model) 684

image scanner and document feeder (M180nw and M181fw) 686

image scanner and document feeder (M278-M281) 688

parts lists and diagrams 675  
covers 690  
document feeder and scanner whole units 684  
internal components, product 698  
using 682

pickup motor  
removing and replacing 624

power supply switch assembly  
removing and replacing 552

priority feed slot tray (M253-M254 and M278-M281)  
removing and replacing 17

**R**

rear cover (simplex models)  
removing and replacing 58

rear door assembly (duplex)  
removing and replacing 150

rear door assembly (simplex)  
removing and replacing 141

rear lower cover (duplex)  
removing and replacing 129

rear lower cover (simplex)  
removing and replacing 122

removal orientation  
removing orientation 7

removal strategy  
removing and replacing 3

removing and replacing  
cassette tray 21  
cassette tray pickup roller and feed roller 25  
cassette tray separation roller 29

control panel (M153-M154) 170

control panel (M178-M181) 180

control panel (M254dw touchscreen) 206

control panel (M254nw/dn 2-line) 196

control panel (M278-M281 models) 217

density detect sensor assembly 486

document feeder (M180nw, M181fw) 235

document feeder (M278-M281) 295

document feeder and image scanner assembly (M278-M281) 286

document feeder base (M278-M281) 374

document feeder base assembly (M180nw, M181fw) 265

document feeder core (M278-M281) 367

document feeder core assembly (M180nw, M181fw) 254

document feeder extension bearing (M278-M281) 351

document feeder flat cable (M278-M281) 392

document feeder front cover (M278-M281) 333

document feeder hinge (M278-M281) 306

document feeder inner cover or outer cover (M278-M281) 342

document feeder input tray (M180nw, M181fw) 244

document feeder input tray (M278-M281) 337

document feeder pick assembly (M278-M281) 357

document feeder pick extension shaft (M278-M281) 347

document feeder pre-pick arm (M180nw, M181fw) 250

document feeder separation pad, support, and spring (M278-M281) 362

document feeder top cover (M180nw, M181fw) 247

document lid (M180n) 223

duplexer door 117

duplexing drive assembly 510

engine controller unit (M153-M154, M253-M254) 446

engine controller unit (M178-M181, M278-M281) 453

fax PCA (M181, M281) 425

formatter PCA (M153-M154, M253-M254) 431

formatter PCA (M178-M181, M278-M281) 438

front door assembly 167

fuser 570

fuser motor 616

image scanner (M180n) 225

image scanner (M180nw, M181fw) 276

image scanner (M278-M281) 317

image scanner lift assembly and slider pin (M278-M281) 328

left cover 50

low-voltage power supply (LVPS) 560

main fan (M153-M154 and M253-M254) 634

main fan (M178-M181 and M278-M281) 644

main motor 608

output sensor assembly (M178-M181) 534

pickup motor 624

power supply switch assembly 552

priority feed slot tray (M253-M254 and M278-M281) 17

rear cover (simplex models) 58

rear door assembly (simplex) 141, 150

rear lower cover (duplex) 129

rear lower cover (simplex) 122

right cover 42

rollers 24

secondary transfer roller 33

toner cartridges 9

top cover (M153-M153-M154 and M253-M253-M254) 69

top cover (M178-M181) 83

top cover (M278-M281) 101

wireless PCA (M153-M154, M253-M254, M278-M281) 411

wireless PCA (M178-M181) 419

removing parts

- after-service checklist 6
- before-service checklist 6
- tools, required 4

replacing parts

- about 3
- after-service checklist 6

before-service checklist 6

screws 5

tools, required 4

right cover

- removing and replacing 42

rollers

- removing and replacing 24
- transfer, secondary, removing and replacing 33

**S**

screwdrivers, required 4

screws

- installing 5
- types of 5

secondary transfer roller, removing and replacing 33

service and support information WISE and CSN v, 2, 676

service approach

- removing and replacing 6

static, precautions for 4

**T**

tips iii

toner cartridges

- removing and replacing 9

tools, required 4

top cover (M153-M154 and M253-M254)

- removing and replacing 69

top cover (M178-M181)

- removing and replacing 83

top cover (M278-M281)

- removing and replacing 101

transfer roller

- removing and replacing 33

**W**

warnings iii

Web-based Interactive Search Engine WISE v, 2, 676

wireless PCA (M153-M154, M253-M254, M278-M281)

- removing and replacing 411

wireless PCA (M178-M181)

- removing and replacing 419

WISE

- Web-based Interactive Search Engine v, 2, 676

